



1985

BMW 524TD

Electrical

Troubleshooting

Manual

BMW of North America, Inc.
Montvale, New Jersey


FOREWORD

In the interests of continuing technical development work we reserve the right to modify designs and equipment.

Printed in USA

©Copyright BMW of North America, Inc.

Not to be reproduced wholly or in part
without written permission of BMW of
North America, Inc.
PN 89 89 1 000 162

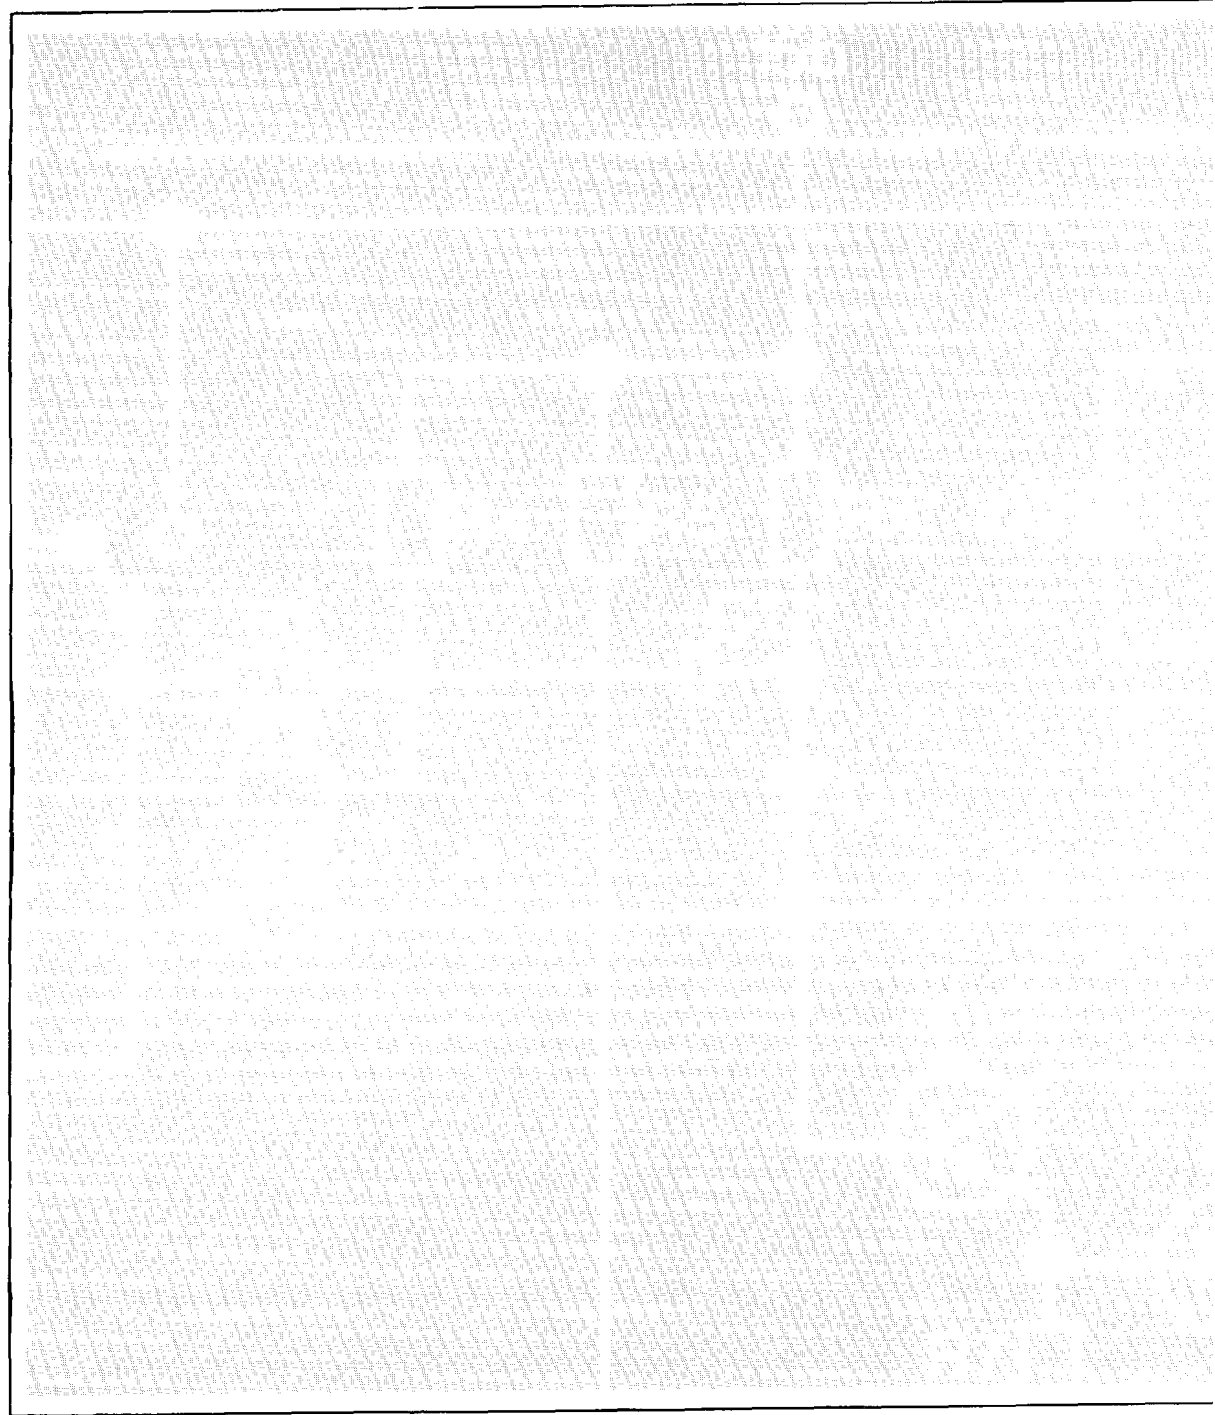

**1985
BMW 524TD
Electrical
Troubleshooting
Manual**

CONTENTS

Index	2
How To Use This Manual	3
Symbols	4
Wire Size Conversion Chart	5
Systematic Troubleshooting	6
Power Distribution Box	102
Accessory Connector	103
Diagnostic Connector	104
Schematic Diagrams	105
Component Charts and Figures	201

Index — Alphabetical Listing of Electrical Circuits

	PAGE		PAGE		PAGE
Active Check Control	128	— “Brake Lights” Fault	129	— Rear Marker	145
Air Conditioning		— “Brake Lining” Wear	132	— Stop Light	138
— Blower	156	— “Brake” Warning	126	— Tail	135
— Temperature Control	157	— “Charge”	124	— Transmission Range	140
Auto Charging Flashlight	144	— “Coolant” Level Fault	130	— Turn	136
Auxiliary Fan	158	— “Engine Oil” Fault	130	— Trunk	145
Brake Lining Warning	132	— Fasten Seatbelts	130	Light Switch Details	112
Central Locking	150	— Foglights	126	Power Antenna	155
Charging System	118	— Fuel Filter	130	Power Distribution	105
Cigar Lighter	144	— Highbeam	126	Power Distribution Box	106A
Connectors		— Injection	130	Power Mirrors	154
— Accessory	103	— Inspection	127	Power Seats	152
— Diagnostic	104	— LH Turn	126	Power Windows	148
Cruise Control	138	— “License Plate” Fault	129	Radio	155
Engine Block Diagrams	114	— “Low Beam” Fault	128	Rear Defogger	146
Evaporative Control	119	— Low Fuel Warning	125	Seatbelt Warning	131
Fuel Control	119	— Oil Pressure Warning	125	Service Internal Indicator	127
Fuel Delivery	120	— Oil Service	127	Speedometer	124
Fuel Gauge	125	— “Park Brake”	125	Splice Locations	164
Fuse Data	106B	— Pre-Heating	126	Start	
Fuse Details		— “Rear Lights” Fault	129	— Automatic	116
— Fuse 4	111	— RH Turn	126	— Manual	117
— Fuse 5	110	— Start	126	Sunroof	147
— Fuse 6	107	— “Washer Fluid” Fault	130	Temperature Gauge	125
— Fuse 11	108	Lights		Warnings	
— Fuse 12	109	— Ash Tray	141	— Ignition Key	131
— Fuse 13	111	— Backup	143	— Seatbelt	131
— Fuse 14	109	— Dash	140	Washer Jet Heaters	156
— Fuse 17	111	— Dome	142	Wiper/Washer	156
Gauges	124	— Fog	133		
Glow Plug Control	121	— Front Marker	135		
Ground Distribution	160	— Front Park	135		
Heated Door Lock	146	— Glove Box	144		
Heating		— Hazard Warning	136		
— Blower	156	— Headlights	133		
— Temperature Controls	157	— Heater A/C Panel	141		
Horn	147	— Interior	142		
Ignition Key Warning	131	— Instrument Cluster	140		
Indicators		— License	145		

The purpose of this manual is to show electrical schematics in a manner that makes electrical troubleshooting easier. Electrical components which work together are shown together on one schematic. The Wiper-Washer schematic, for example, shows all of the electrical components in one diagram. At the top of the page is the fuse (positive) that powers the circuit. The flow of current is shown through all wires, connectors, switches, and motors to ground (negative) at the bottom of the page.

Within the schematic, all switches and sensors are shown "at rest," as though the Ignition Switch were off. For identification, component names are underlined and placed next to or above each component. Notes are included, describing how switches and other components work.

The power distribution schematic shows the current feed through all the connections from the Battery and Alternator to each fuse and the Ignition and Light Switches. If the Power Distribution schematic is combined with any other circuit schematic, a complete picture is made of how that circuit works. The Ground Distribution schematics show how several circuits are connected to common grounds.

All wiring between components is shown exactly as it exists in the vehicle; however, the wiring is not drawn to scale. To aid in understanding electrical operation, wiring inside complicated components has been simplified. The "Solid State" label designates electronic components.

WIRE SIZE CONVERSION CHART	
METRIC (CROSSSECTIONAL AREA IN MM ²)	AWG (AMERICAN WIRE GAUGE)
.5	20
.75	18
1	16
1.5	14
2	14
2.5	12
4	10
6	8
8	8
16	4
20	4
25	2
32	2

WIRE INSULATION	
ABBREVIATIONS	COLOR
BK	BLACK
BR	BROWN
RD	RED
YL	YELLOW
GN	GREEN
BU	BLUE
VI	VIOLET
GY	GRAY
WT	WHITE
PK	PINK


4 SYMBOLS




ENTIRE COMPONENT SHOWN




PART OF A COMPONENT SHOWN

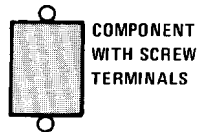


COMPONENT WITH SCREW TERMINALS

 


SOLID STATE (INCLUDES ONLY ELECTRONIC PARTS)

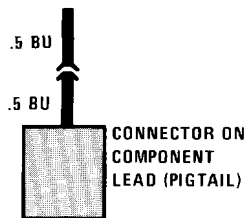


CONNECTOR ON COMPONENT LEAD (PIGTAIL)

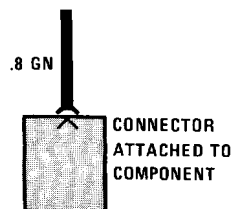


CONNECTOR ATTACHED TO COMPONENT

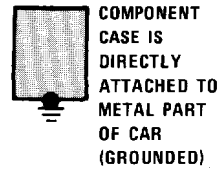



COMPONENT CASE IS DIRECTLY ATTACHED TO METAL PART OF CAR (GROUNDED)

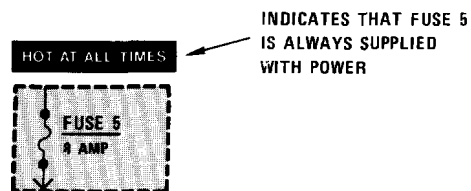

INDICATES THAT FUSE 5 IS ALWAYS SUPPLIED WITH POWER


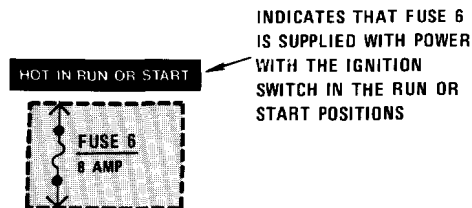


INDICATES THAT FUSE 6 IS SUPPLIED WITH POWER WITH THE IGNITION SWITCH IN THE RUN OR START POSITIONS

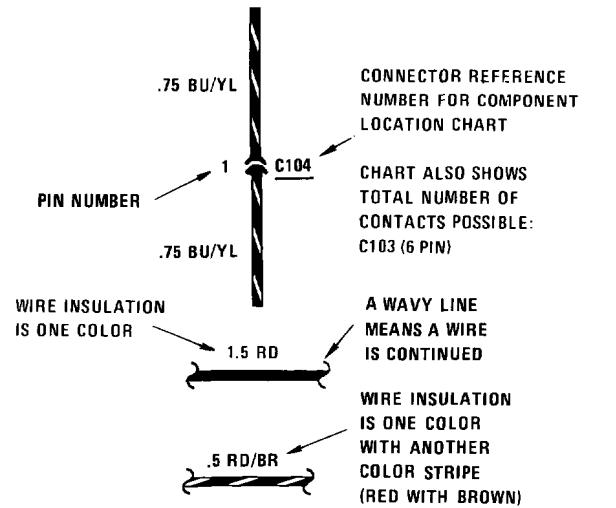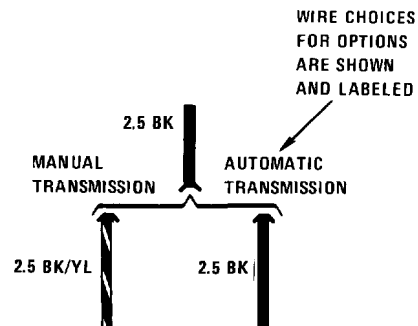


CONNECTOR REFERENCE NUMBER FOR COMPONENT LOCATION CHART

CHART ALSO SHOWS TOTAL NUMBER OF CONTACTS POSSIBLE: C103 (6 PIN)

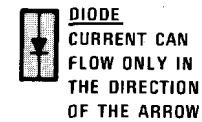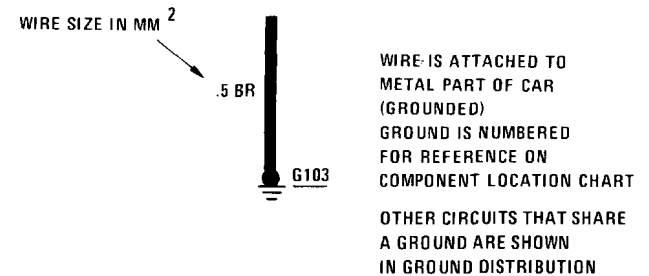

DIODE CURRENT CAN FLOW ONLY IN THE DIRECTION OF THE ARROW

CIRCUIT REFERENCE - A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT

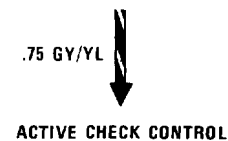




ONE POLE,
TWO POSITION
SWITCH




SWITCHES THAT
MOVE TOGETHER
DASHED LINE SHOWS
A MECHANICAL
CONNECTION
BETWEEN SWITCHES

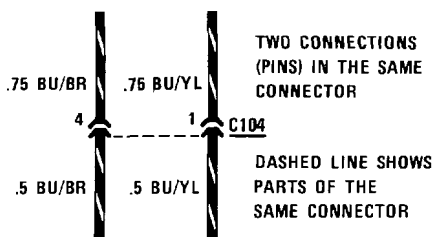


TWO CONNECTIONS
(PINS) IN THE SAME
CONNECTOR

 DASHED LINE SHOWS
PARTS OF THE
SAME CONNECTOR





WHEN COIL IS
ENERGIZED, SWITCH
IS PULLED CLOSED

 RELAY SHOWN
WITH NO
CURRENT
FLOWING
THROUGH
COIL






RESISTOR ACROSS COIL
IS FOR NOISE
SUPPRESSION

RELAY SHOWN
WITH RESISTOR
ACROSS COIL

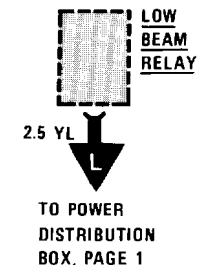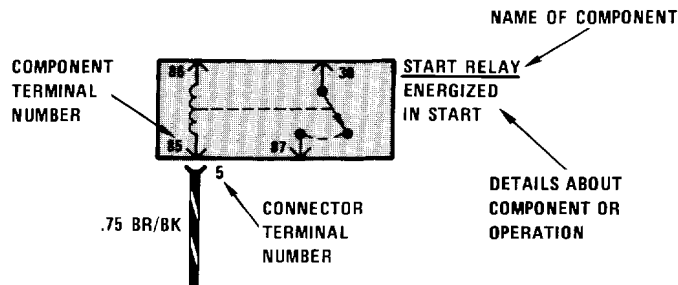


CURRENT PATH
IS CONTINUED
AS LABELED.
THE ARROW SHOWS
DIRECTION OF CURRENT
FLOW AND IS REPEATED
WHERE CURRENT
PATH CONTINUES.

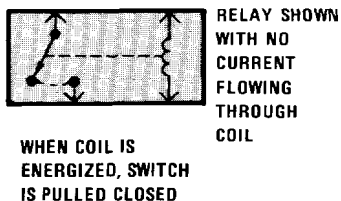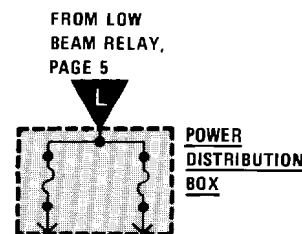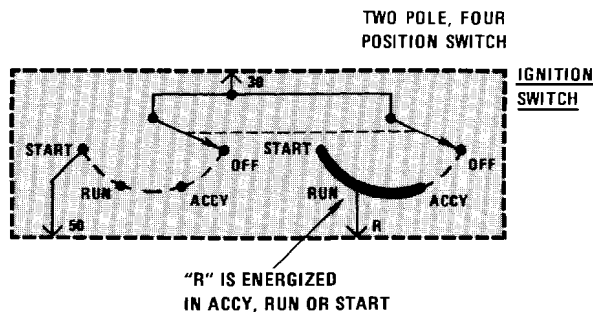


WHEN COIL IS
ENERGIZED, SWITCH
IS PULLED CLOSED

 RELAY SHOWN
WITH NO
CURRENT
FLOWING
THROUGH
COIL



RESISTOR ACROSS COIL
IS FOR NOISE
SUPPRESSION

RELAY SHOWN
WITH RESISTOR
ACROSS COIL

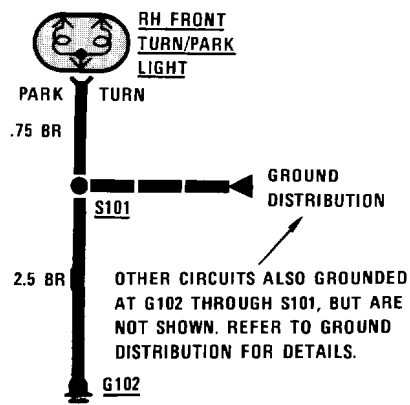

LIGHT
EMITTING
DIODE

6 SYSTEMATIC TROUBLESHOOTING

TROUBLESHOOTING PROCEDURE

1. Verify the Problem

Operate the problem circuit to check the accuracy of the complaint. Note the symptoms of the inoperative circuit.

2. Analyze the Problem

Refer to the schematic of the problem circuit in the ETM. Determine how the circuit is supposed to work by tracing the current path(s) from the power feed through the circuit components to ground. Then based on the symptoms you noted in step 1 and your understanding of circuit operation, identify one or more possible causes of the problem.

3. Isolate the Problem

Make circuit tests to prove or disprove the preliminary diagnosis made in step 2. Keep in mind that a logical simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points which are easily accessible.

4. Repair the Problem

Once the specific problem is identified, make the repair using the proper tools and safe procedures.

5. Check the Problem

Operate the circuit to check for satisfactory circuit operation. Good repair practice calls for rechecking all circuits you have worked on.

TROUBLESHOOTING TOOLS


Isolating the problem (Step 3 of TROUBLESHOOTING PROCEDURES) requires the use of a **voltmeter** and/or **ohmmeter**. A voltmeter measures voltage at selected points in a circuit. An ohmmeter measures a circuit's resistance to current flow. It has an internal battery that provides current to the circuit under test. Disconnect the car battery when using an ohmmeter because the battery voltage will cause the ohmmeter to give false readings. Also, do not use an ohmmeter on solid-state components. The voltage that the ohmmeter applies to the circuit could damage these components.

TROUBLESHOOTING TESTS

Voltage Test

This test measures voltage in a circuit. By taking measurements at several points (terminals or connectors) along the circuit, you can isolate the problem.

To take a voltage measurement, connect the negative lead of the voltmeter to the battery's negative terminal or other known good ground. Then connect the positive lead of the voltmeter to the point you want to test. The voltmeter will measure the voltage present at that point in the circuit.

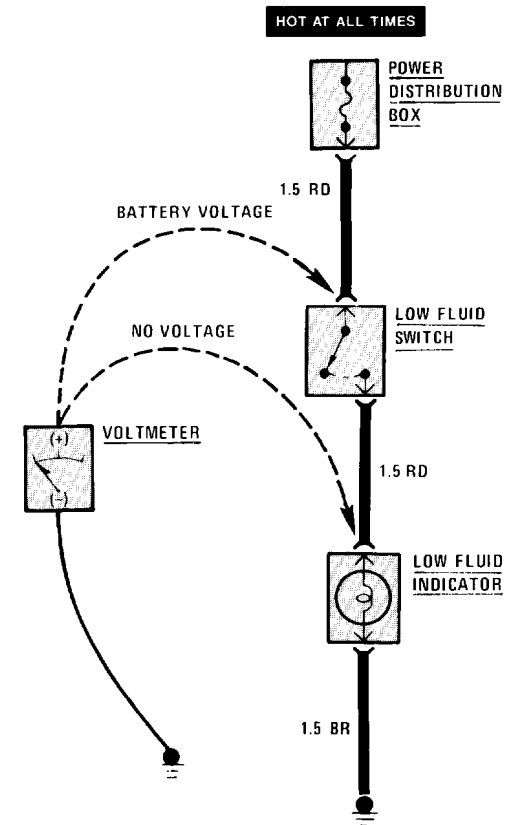


Voltage Test

Voltage Drop Test

Wires, connectors, and switches are designed to conduct current with a minimum loss of voltage. A voltage drop of more than one volt indicates a problem.


To test for voltage drop, connect the voltmeter leads to connectors at either end of the circuit's suspected problem area. The positive lead should be connected to the connector closest to the power source. The voltmeter will show the voltage drop between these two points.

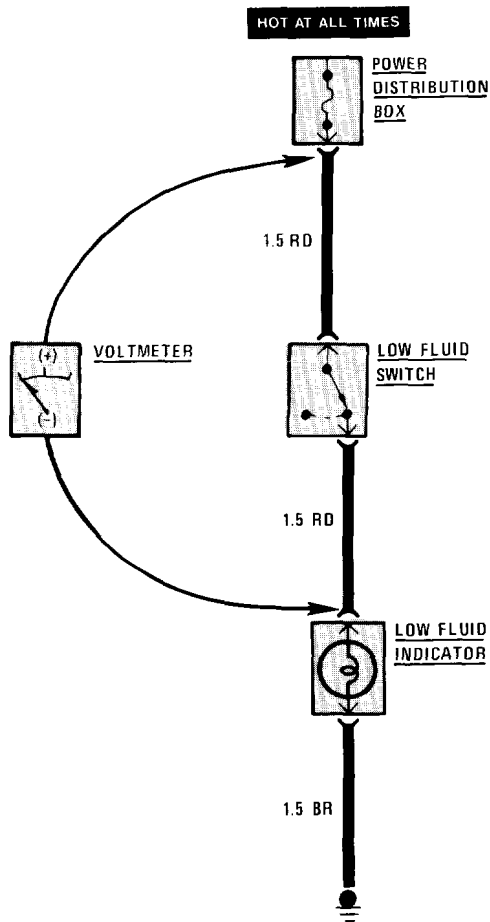

Voltage Drop Test

Continuity Test

To perform a continuity test, first disconnect the car battery. Then adjust the ohmmeter to read zero while holding the leads together. Connect the ohmmeter leads to connector or terminals at either end of the circuit's suspected problem area. The ohmmeter will show the resistance across that part of the circuit.

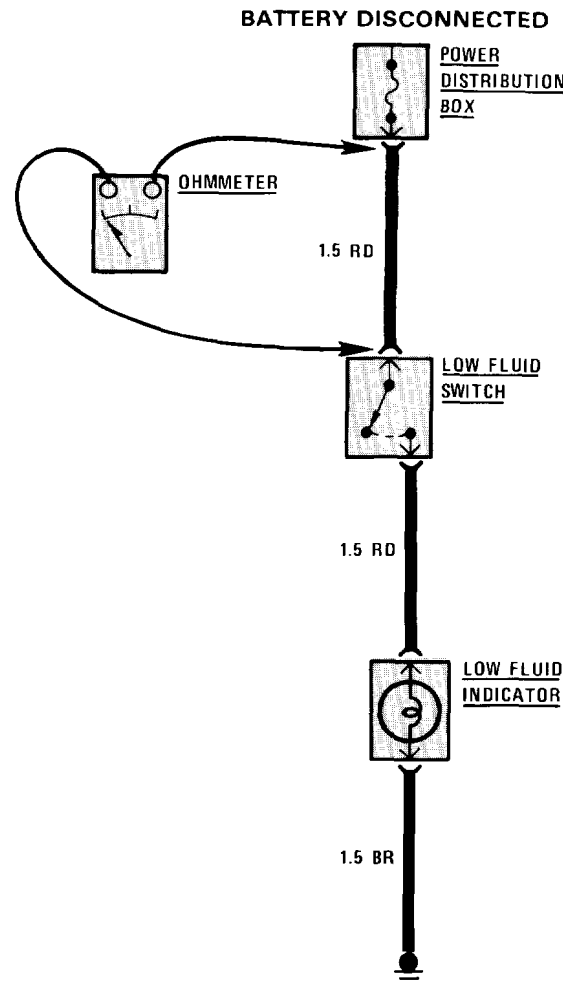


Continuity Test

Short Test Using Voltmeter

Remove the blown fuse and disconnect the load. Connect the voltmeter leads to the fuse terminals. The positive lead should be connected to the terminal closest to the power source.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the voltmeter reading. If the voltmeter registers a reading, there is a short to ground in the wiring. Somewhere in the area of the harness being moved, the wire insulation is worn away and the circuit is grounding.

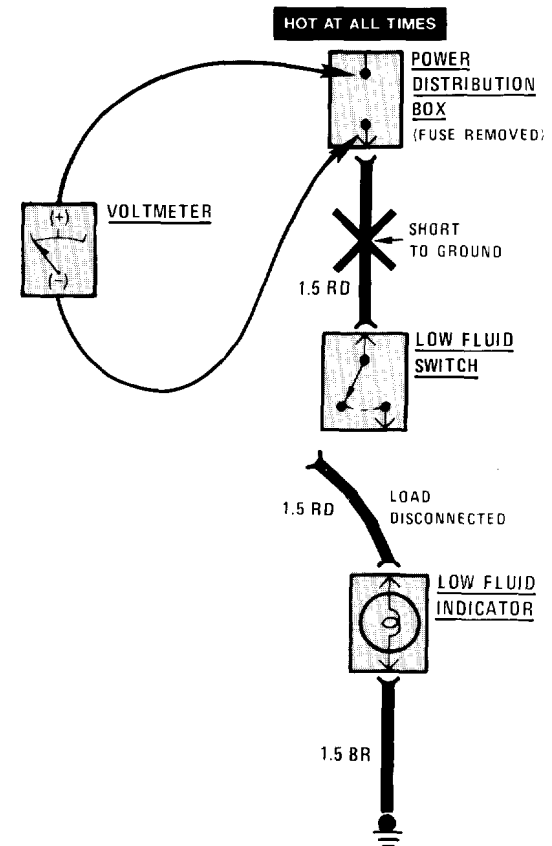


Short Test Using Voltmeter

8 SYSTEMATIC TROUBLESHOOTING**Short Test Using Ohmmeter**

Disconnect the battery. Adjust the ohmmeter to read zero while holding the leads together. Remove the blown fuse and disconnect the load. Connect one lead of the ohmmeter to the fuse terminal that is closest to the load. Connect the other lead to a known good ground.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the ohmmeter reading. Low or no resistance indicates a short to ground in the wiring. Infinitely high resistance indicates no short.

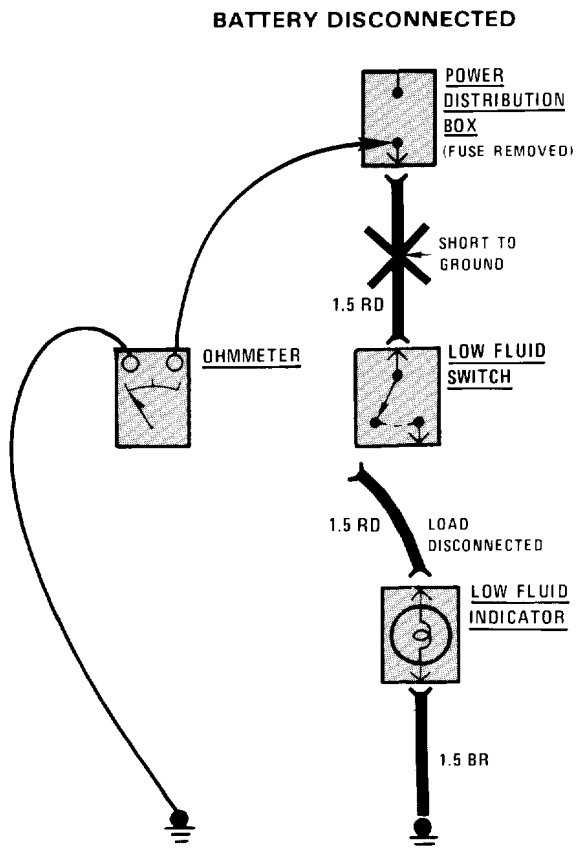

Short Test Using Ohmmeter