

WIRING DIAGRAMS

Article Text

1990 Mitsubishi Galant

For (095) 723-1791 Kirill

Copyright © 1998 Mitchell Repair Information Company, LLC

Thursday, December 16, 1999 01:10PM

ARTICLE BEGINNING

1990 Wiring Diagrams
Mitsubishi

Galant

COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE

AA

Component (Figure No.) Location

| | | |
|------------------------------------|----|--------------|
| A/C SYSTEM | 10 | (A-B 36-39) |
| ABS CONTROL UNIT (2WD) | 7 | (A-B 24) |
| ABS CONTROL UNIT (4WD) | 7 | (D-E 24) |
| ABS HYDRAULIC UNIT (2WD) | 7 | (A-B 27) |
| ABS HYDRAULIC UNIT (4WD) | 7 | (D-E 27) |
| ABS POWER RELAY (2WD) | 7 | (C 27) |
| ABS POWER RELAY (4WD) | 7 | (D 27) |
| ABS PRES SW (4WD) | 7 | (D 27) |
| ALTERNATOR | 1 | (D 3) |
| ALTERNATOR RELAY | 1 | (E 3) |
| ANTENNA RELAY | 12 | (A 46) |
| AUTO SEAT BELTS | 8 | (D-E 28-31) |
| BACK-UP LT SW (M/T) | 9 | (D 32) |
| BATTERY | 1 | (A 2) |
| CIG LIGHTER | 8 | (C 28) |
| CLOCK | 11 | (D 40) |
| COLUMN SW | 10 | (E 36-39) |
| COMP RELAY | 6 | (A 21) |
| CONDENSER FAN RLY (HI) | 4 | (A 14) |
| CONDENSER FAN RLY (LO) | 4 | (A 14) |
| CRUISE CONTROL DIODE | 9 | (A 33) |
| CRUISE CONTROL SW (COLUMN SW) | 9 | (A 33-34) |
| CRUISE CONTROL UNIT | 9 | (B 32) |
| DEFOG RELAY | 11 | (E 41) |
| DEFOG SW | 11 | (E 41) |
| DIAG CONN (2.0L DOHC) | 3 | (E 6) |
| DIAG CONN (2.0L SOHC) | 3 | (E 11) |
| DIR/HAZ FLASHER | 10 | (B 37) |
| DOME LT | 8 | (C 28) |
| DOME LT & SUNROOF SW | 8 | (A 28) |
| DOOR SWS & LTS | 8 | (B-C 29-31) |
| ECS CONTROL UNIT | 6 | (B-E 20) |
| ECS INDICATORS | 6 | (C-E 23) |
| ECS POWER RELAY | 6 | (B 23) |
| ELECT A/T CONTROL SYS | 9 | (A-B 35) |
| ELECT POWER STEERING | 9 | (A-B 35) |
| ENGINE COOLANT TEMP SW (2.0L DOHC) | 2 | (A 7) |
| ENGINE FUSE/RELAY (F/R) BOX | 4 | (B-E 13, 15) |
| ETACS CONTROL UNIT | 10 | (B-C 36) |