

# 1997 ACURA INTEGRA TYPE R

TECHNICAL INFORMATION GUIDE



**ACURA**  
*Advantage*

**Introduction and General Information**



**Engine**



**Fuel and Emissions**



**Transaxle**



**Chassis/Suspension**



**Brakes**



**Body Electrical**



**Introduction and General Information**

Introduction . . . . .	1
Overview of Changes from Integra GS-R . . . . .	2
Dimensions . . . . .	3

**Engine**

Introduction . . . . .	4
Camshaft/Valve Timing . . . . .	7
Valve Springs . . . . .	8
Intake Valves . . . . .	8
Single Port Tuned Intake Manifold . . . . .	9
Pistons . . . . .	11
Connecting Rods . . . . .	12
Engine Stiffener . . . . .	14
Crankshaft . . . . .	14
Exhaust System . . . . .	15
Engine Oil Cooler . . . . .	15

**Fuel and Emissions**

Vacuum Connection Diagram . . . . .	16
Idle Speed Adjustment . . . . .	17

**Transaxle**

Introduction . . . . .	19
Gear Ratio Comparison . . . . .	19
Helical Gear Type Limited Slip Differential . . . . .	20

**Chassis/Suspension**

Body Rigidity . . . . .	26
Center of Gravity . . . . .	26
Suspension Tuning . . . . .	27
Wheels . . . . .	29
Tires . . . . .	29
Rear Wheel Bearings . . . . .	30
Weight Reduction Measures . . . . .	30