

Operating manual

E

AMMANN



AV 110 X
Cummins Tier 2

© 7 / 2006


We preserve the right for changes at pictures and data for improving the manual's quality. Overprint and copying of any kind and also individual paragraphs is conditioned by our written approval only.

Congratulations on your purchase of an AMMANN road roller. This modern compaction device is characterised by simple operation and maintenance and is the product of many years of AMMANN experience in the field of road roller engineering. In order to avoid faults due to improper operation and maintenance we request that you read this operating manual with great care and keep it for later reference.

With kind regards,



Verdichtung AG, CH-4900 Langenthal
☎ 0041 (0)62 916 63 56 FAX: 0041 (0)62 916 64 03

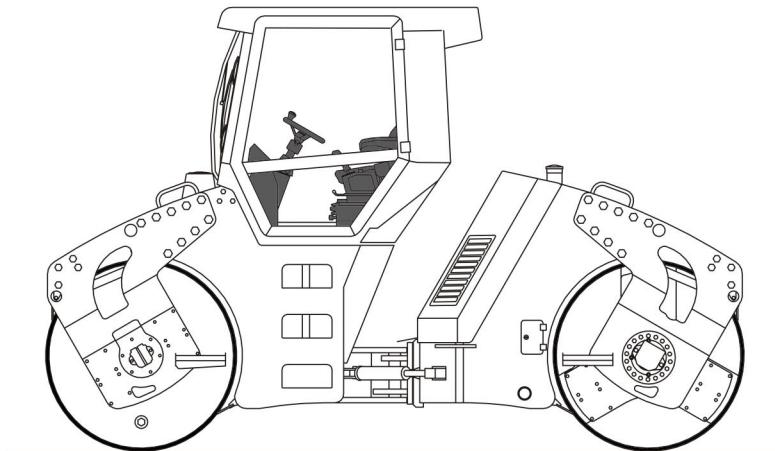

401100

This manual consists of:

- | | |
|----------------------------|-------------------------|
| I. Specification manual | III. Maintenance manual |
| II. Operating instructions | |

The following explanations serve to familiarise the machinist (operator) with the roller and to support him during handling and maintenance. It is therefore absolutely necessary to provide the operator with these instructions and to ensure that he reads them carefully before using the road roller. This aids training comprehension during the first use of the road roller.

Subsequent faults due to improper operating are avoided.

Adherence to maintenance instructions increases the reliability and lifetime of the machinery. It reduces repair costs and down time.


AMMANN accepts no liability for continued safe functioning of the road roller if it is incorrectly operated and / or operating modes are employed which represent improper use.

Spare parts must meet AMMANN technical specifications. These requirements are fulfilled if only original AMMANN spare parts are used.

These instructions must always be kept available on the equipment.

! NOTICE !

As used in this operating manual, the terms „right“, „left“, „front“ and „rear“ indicate the sides of the machine moving forward.

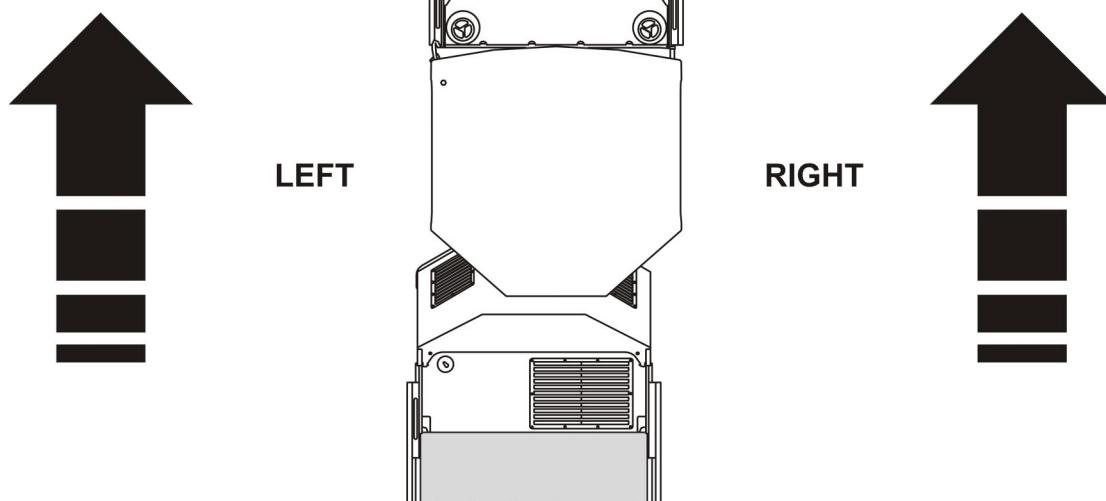

401101A

Content

Content	8
1. SPECIFICATION MANUAL	13
1.1. Basic specification	14
1.1.1. Machine description	14
1.1.2. Area of use	14
1.1.3. Machine design	15
1.2. Machine dimension scheme	16
1.3.1. Weights	18
1.3.2. Riding characteristics	18
1.3.3. Vibration	18
1.3. Technical data	18
1.3.4. Engine	19
1.3.5. The Brakes	19
1.3.6. Steering	19
1.3.7. Travel hydrostatic drive	20
1.3.8. Vibration hydrostatic drive	20
1.3.9. Pumps drive gear box	20
1.3.10. Hydraulic tank and cooling	20
1.3.11. Tilting engine hood / emergency braking	21
1.3.12. Fills	21
1.3.13. Watering	21
1.3.14. Electrical installation	21
1.3.15. Safety equipment	22
1.3.16. Hygienic parameters	22
1.3.17. Requirements for meeting the traffic regulations	23
1.3.18. Auxiliary devices, Option	23

2. OPERATING INSTRUCTIONS	27
2.1. Receiving Inspection & Dewaxing of New Machine	28
2.2. Major Safety Precautions	29
2.2.1. Safety Measures during Machine Operation	29
2.2.1.1. Compaction Work Commencement	29
2.2.1.2. Work Safety Secured by User	29
2.2.2. ROPS Cab	30
2.2.3. Requirements on Driver's Qualification	30
2.2.4. Driver's Liabilities	30
2.2.5. Banned Operations	32
2.2.6. Hand Signals	33
2.2.7. Safety Markings & Signs Used on the Machine	36
2.3. Ecological & Hygienic Principles	40
2.3.1. Hygienic Principles	40
2.3.2. Ecological Principles	40
2.4. Preservation & Storage	41
2.4.1. Short-Term Preservation & Storage for the Period of 1 ÷ 2 Months	41
2.4.2. Machine Preservation & Storage for the Period Over 2 Months Long	41
2.5. Machine Disposal Following Its Life Termination	42
2.6. Machine Description	43
2.7. Controls & Control Apparatuses	44
2.8. Machine Control	56
2.8.1. Engine Start	56
2.8.2. Drive	59
2.8.3. Emergency Stop	62
2.8.4. Sprinkling	63
2.8.5. Machine Parking, Shutdown	63
2.8.6. How to tilt the bonnet	64
2.9. How to transport the Roller	65
2.9.1. Loading the Roller	66
2.10. Special Conditions for the Machine Use	67
2.10.1. Machine Towing	67
2.10.2. Vibrations on compacted and hard materials	70
2.10.3. Work at higher temperatures and moisture	70
2.10.4. Work at higher altitudes	70
2.10.5. Work at very dusty environment	70

Content

3. MAINTENANCE MANUAL	73
3.1. Safety Standards at Lubrication and Maintenance	75
3.1.1. Safety during maintenance	75
3.1.2. Fire safety during changing contents	75
3.1.3. Environmental and health regulations	76
3.1.3.1. Health regulations	76
3.1.3.2. Environmental principles	76
3.2. Specification of fluids	77
3.2.1. Engine oil	77
3.2.2. Fuel	78
3.2.3. Coolant.....	78
3.2.4. Hydraulic oil	79
3.2.5. Gearbox oil	80
3.2.6. Lubricating grease.....	80
3.2.7. Windshield washer liquid.....	80
3.3. Fills	81
3.4. Lubrication and Maintenance Chart	82
3.5. Lubrication Chart	84
3.6. Individual Operations of Maintenance	85
Every 20 Hours or Daily	86
3.6.1. Checking the amount of oil in the engine	86
3.6.2. Checking cooling liquid of the engine	87
3.6.3. Hydraulic tank oil level checking	88
3.6.4. Crankcase breather tube	89
3.6.5. Checking the condition of the ventilator	89
3.6.6. Checking the engine belt.....	90
3.6.7. Checking the engine inlet piping	91
3.6.8. Checking the vacuum valve of the air cleaner	92
3.6.9. Fuel level checking	93
3.6.10. Cleaning the water separator	94
3.6.11. Watering tank filling	95
3.6.12. Warning and control devices checking	96
Every 250 Hours or Once in 3 Months	98
3.6.13. Engine oil exchange	98
3.6.14. Checking the injection pump	100
3.6.15. Checking the cooling circuit of the engine	101
3.6.16. Checking battery	102
3.6.17. Air filter vacuum switch function checking	104
3.6.18. Lubrication of the machine	106
3.6.19. Checking oil in gearboxes	108
3.6.20. Watering filter and sprinkler screens	109
Every 500 Hours or Once in 6 Month	110
3.6.21. Engine fuel filter exchange	110
3.6.22. Checking cooling liquid	112