


# Manual (EN)

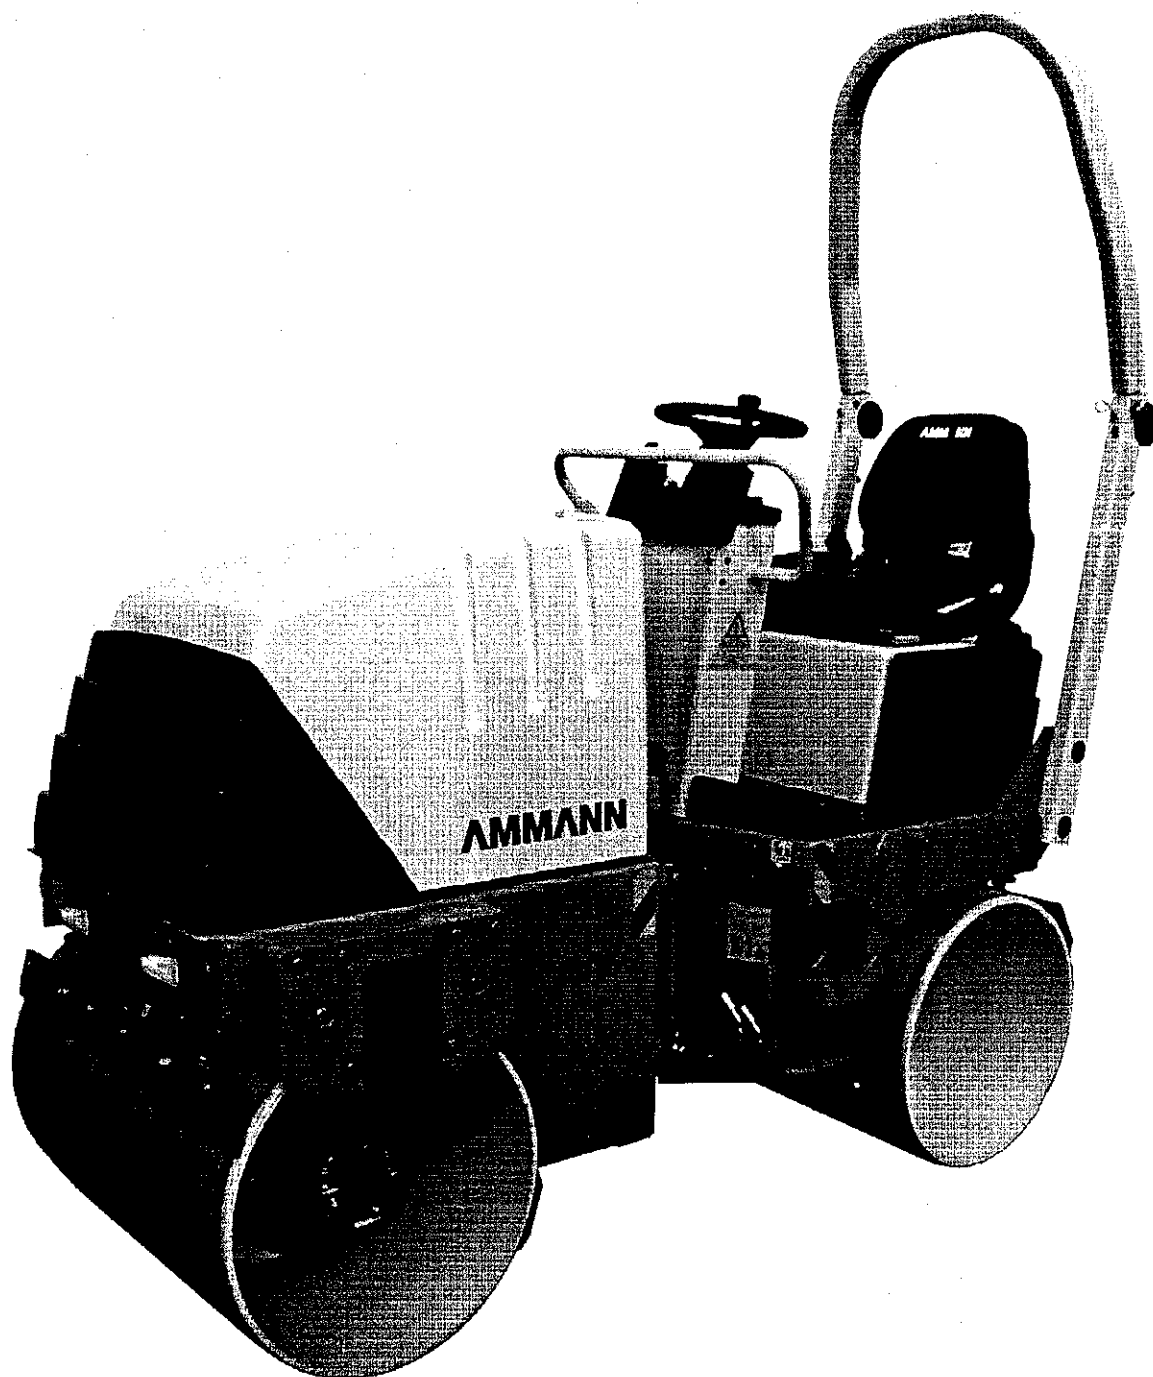

AV12-2, AV16-2, AV20-2  
AV16-2K  
Yanmar

Serial Nr. 10'000-

## Preface

---

Congratulations on your purchase of an AMMANN vibration roller. This quality of this compaction device is characterized by simple operation and maintenance and is the product of many years of AMMANN experience in the field of road roller engineering. In order to avoid faults due to improper operation and maintenance we request that you read this operating manual with great care and **keep it for future reference.**

With kind regards


**AMMANN**

Ammann Schweiz AG - Verdichtung  
Eisenbahnstrasse 25  
CH-4901 Langenthal

[www.ammann-group.ch](http://www.ammann-group.ch)

☎ 0041 (0)62 916 61 61

FAX 0041 (0)62 916 68 04

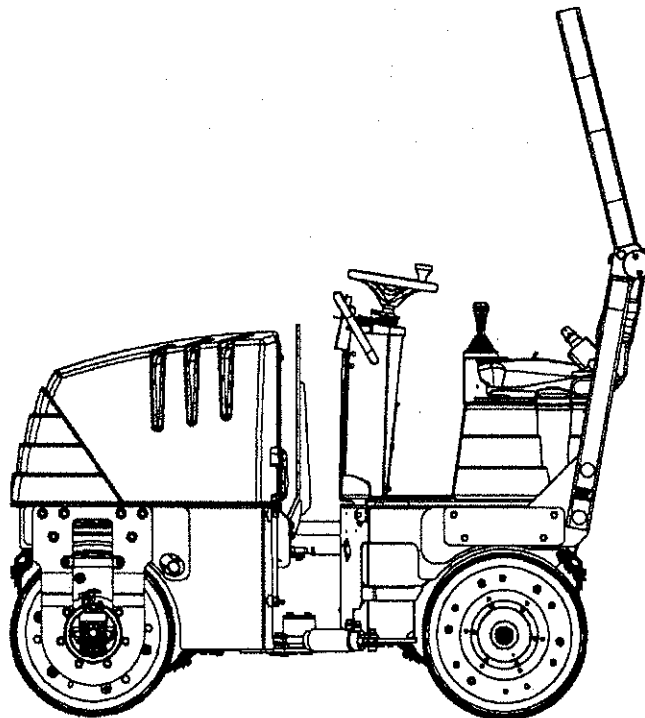

300054610005

## Index

---

Preface .....	1
Index .....	2
<b>Structure of the Manual .....</b>	<b>5</b>
Structure of the manual .....	6
<b>Identification .....</b>	<b>9</b>
Identification .....	10
Identification plate .....	11
Scope of delivery .....	12
<b>Transport / commissioning / storage .....</b>	<b>13</b>
Transport .....	14
Joint protection .....	16
Commissioning .....	17
Long-term storage .....	18
<b>Safety .....</b>	<b>19</b>
General work safety .....	20
Roller operation .....	21
Roll-over bar (ROPS) .....	23
Safety labels .....	24
Noise levels .....	26
Safety (maintenance) .....	27
Notes .....	30
<b>Overview .....</b>	<b>31</b>
Product description .....	32
Component overview .....	34
Dashboard (switches) .....	36
Dashboard (control lights) .....	37
Operation check .....	38
Notes .....	40
<b>Operation .....</b>	<b>41</b>
Driver's seat .....	42
Starting the engine, driving and braking .....	44
Turning off the engine .....	49
Emergency stop and emergency stop reset .....	50
Sprinkling .....	51
Simple / double vibration .....	52
<b>Options .....</b>	<b>53</b>
Revolving warning light .....	54
Reverse alarm .....	56
Battery cut-off switch .....	57
Lights .....	58
Interval sprinkler .....	59
Loxam .....	60

**Index**

<b>Maintenance</b> .....	<b>61</b>
Important notes .....	62
Roller maintenance .....	63
Yanmar engine maintenance .....	64
Opening the hood .....	66
Inspections overview .....	67
Inspections (engine oil level, coolant) .....	68
Inspections (fuel tank, hydraulic oil tank) .....	69
Inspections (sprinkler, scraper) .....	70
Removing the rear water tank .....	73
Changing hydraulic oil and filter .....	74
Lubricant table .....	76
Consumables, tightening toques .....	77
Winterization .....	78
Water tank, sprinkler, frost hazard .....	79
Draining diesel .....	81
Draining and topping up engine oil .....	82
<b>Practical tips</b> .....	<b>83</b>
Replacing the front bulbs .....	84
Replacing the rear bulbs .....	86
Replacing the fuses .....	87
Battery .....	89
Notes .....	90
<b>Hydraulic layout</b> .....	<b>91</b>
Hydraulic diagram AV12-AV20 .....	92
AV12-AV20 hydraulics diagram legend .....	93
Hydraulic diagram AV16K .....	94
AV16K hydraulics diagram legend .....	95
Notes .....	96
<b>Wiring diagram</b> .....	<b>97</b>
Wiring diagram (multifunction display) .....	98
Wiring diagram (engine start/stop) .....	99
Wiring diagram (emergency stop / oil cooler, diesel pump) .....	100
Wiring diagram (sprinkler) .....	101
Wiring diagram (vibration) .....	102
Wiring diagram (horn, indicators) .....	103
Wiring diagram (lights) .....	104
Wiring diagram (options) .....	105
Wiring diagram (Loxam) .....	106
Wiring diagram key .....	107
Notes .....	110
<b>Technical specifications</b> .....	<b>111</b>
Dimensions .....	112
Technical specifications .....	113



# **STRUCTURE OF THE MANUAL**

---