



Service Data

SD-23-7550

AIR DISC BRAKE (SB-6™ and SB-7™)

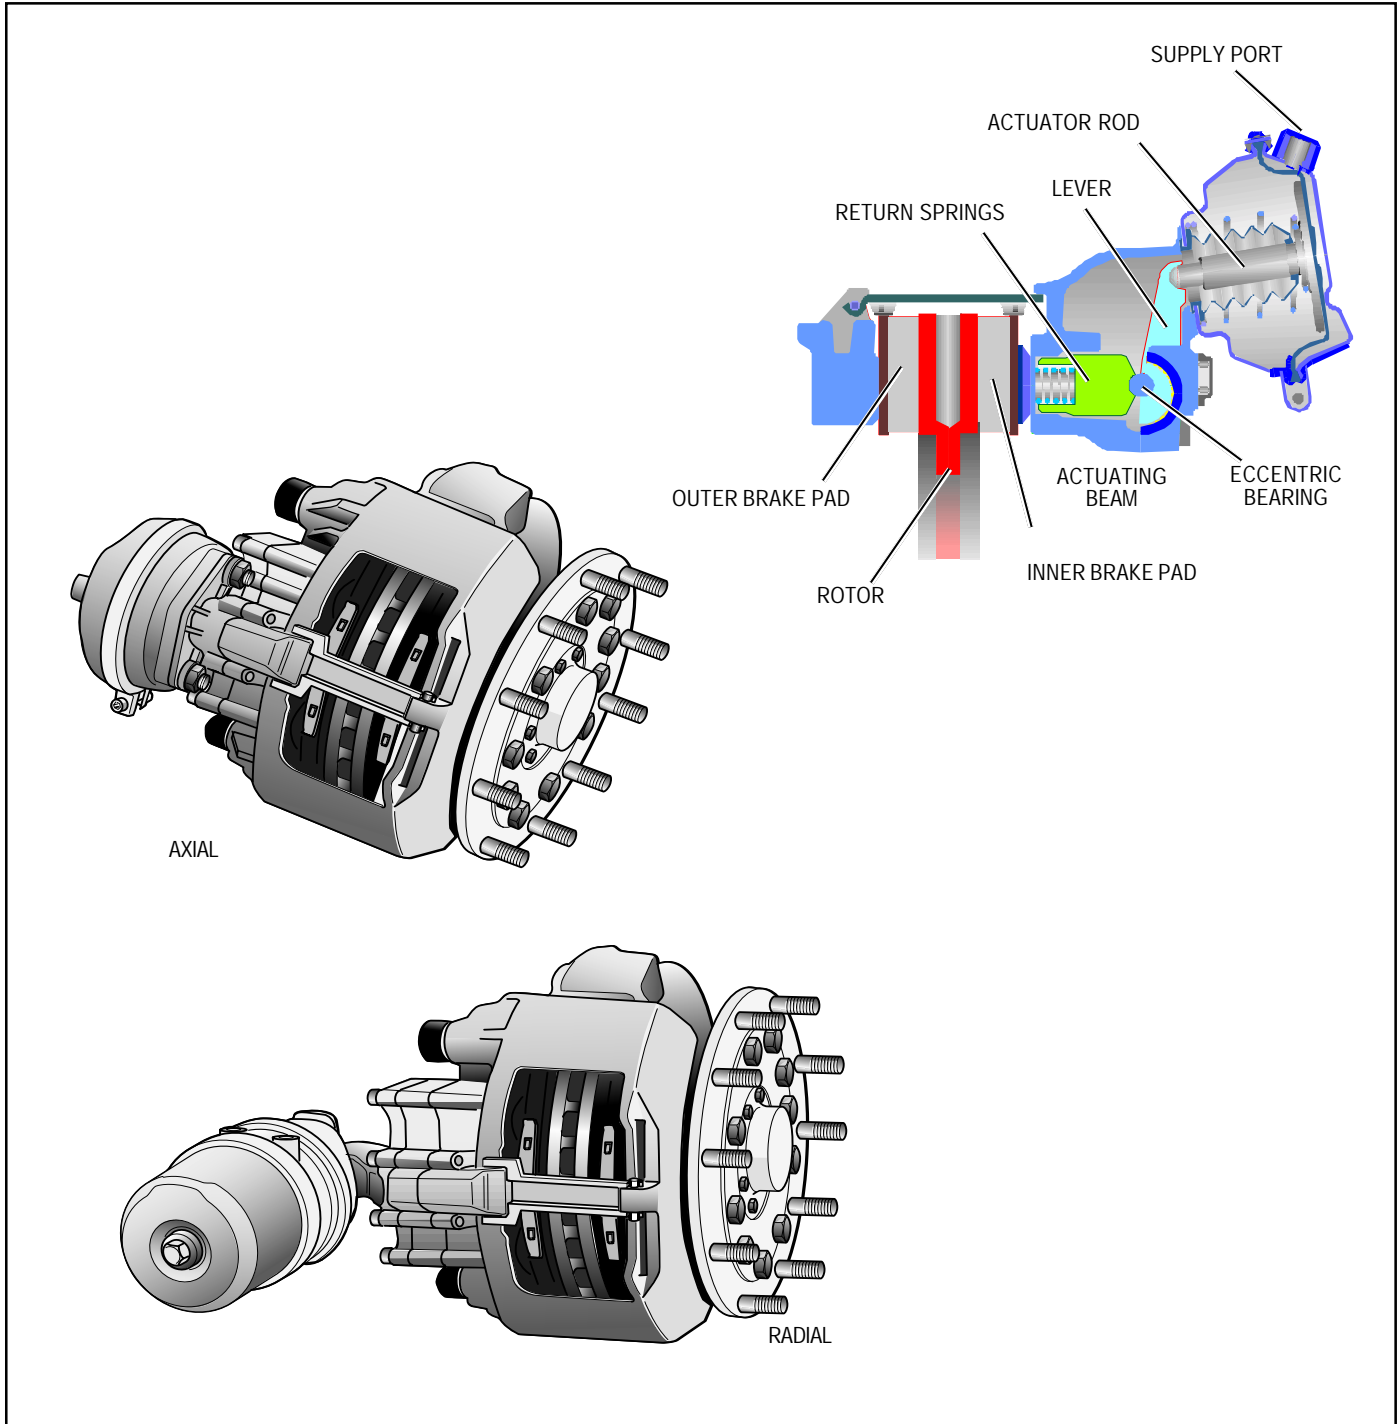


FIGURE 1 - BENDIX AIR DISC BRAKE

Index

Page

1	Exploded view of brake	
1.1	Axial Disc Brake Components	4
1.2	Axial Disc Brake Repair Kits	5
1.2.1	Axial Disc Brake Wear Indicator Kits	5
1.3	Radial Disc Brake Components	6
1.4	Radial Disc Brake Repair Kits	7
1.4.1	Radial Disc Brake Wear Indicator Kits	7
1.5	Brake Disc Rotor	8
2	General information (for "Axial- and Radial Disc Brake")	
2.1	Service Tools	9
2.2	Diagnostic Equipment	9
2.3	Lubrication	9
2.4	Torque requirements	9
3	Description and Function	
3.1	Axial Disc Brake Sectioned View	10
3.2	Description of operation	11
3.2.1	Brake actuation	11
3.2.2	Brake release	11
3.2.3	Brake adjustment (automatic)	11
3.3	Radial Disc Brake Sectioned View	12
3.4	Description of operation	13
3.4.1	Brake actuation	13
3.4.2	Brake release	13
3.4.3	Brake adjustment (automatic)	13
4	Safety instructions for service work (for "Axial- and Radial Disc Brake")	13
5	Brake Testing (for "Axial- and Radial Disc Brake")	
5.1	Troubleshooting procedure	14
5.2	Adjuster check	15
5.3	Wear limits of Brake Pads and Rotor	16
5.3.1	Brake wear check using Guide Pin (for Calipers with standard Guide Pins)	18
5.3.2	Brake wear check using Guide Pin (for Calipers with long Guide Pins)	19
5.3.3	Wear Indicators	20
5.4	Diagnostic-Equipment - Hand held device ZB9031	21
5.5	Diagnostic-Equipment - Vehicle mounted device ZB9033	21
6	Pad replacement (for "Axial- and Radial Disc Brake")	
6.1	Pad removal	22
6.1.1	Tappet Boot check	22
6.1.2	Caliper floatation check	23
6.2	Pad fitting	23
7	Tappet with Boot replacement (for "Axial- and Radial Disc Brake")	
7.1	Tappet with Boot removal	24
7.1.1	Adjuster thread inspection	25
7.2	Tappet with Boot fitting	25
8	Caliper Suspension Sealing (for "Axial- and Radial Disc Brake")	27

Bendix Air Disc Brake Service Data

Full download: <http://manualplace.com/download/bendix-air-disc-brake-service-data/>

9	Guide Pin Bushing replacement (for "Axial- and Radial Disc Brake")	28
9.1	Brass Bushing replacement	28
9.2	Rubber Bushing replacement	28
10	Caliper replacement (for "Axial- and Radial Disc Brake")	
10.1	Caliper removal	29
10.2	Caliper fitting	30
10.2.1	Caliper with Rubber Boot (10)	30
10.2.2	Caliper with Steel Cap (10a)	31
11	Carrier replacement (for "Axial- and Radial Disc Brake")	32
12	Actuation cylinder replacement (for "Axial- and Radial Disc Brake")	
12.1	Brake Chamber removal	33
12.2	Brake Chamber fitting	33
12.3	Spring Brake removal	34
12.4	Spring Brake fitting	34
13	Additional Information	
13.1	Service Video	35
13.2	Service Tool Kit	35
13.3	Diagnostic Equipment	35
13.4	General Safety Guidelines	36

Personal Notes