

1999

**BMW E36 Coupe
and Convertible
318is/C, 323is/C,
328is/C, M3**

**Electrical
Troubleshooting
Manual**

Vehicles produced 9/98 to 8/99



ELECTRICAL TROUBLESHOOTING MANUAL

SERIES 3 – E36 (318i, 323i, 328i, M3, COUPE AND CONVERTIBLE)

SCHEMATICS

MODEL YEAR 1999

0100.0	INDEX	5116.0	POWER MIRRORS
0110.0	INTRODUCTION	5120.0	ZKE DOOR LOCK HEATING (TSH)
0140.0	SYMBOLS	5126.0	ZKE CENTRAL LOCKING (ZV)
0670.0	POWER DISTRIBUTION CHART	5133.1	POWER WINDOWS (FH)
0670.1	FUSE CHART	5200.0	POWER SEATS
0670.2	POWER DISTRIBUTION	5203.0	HEATED SEATS
0670.3	FUSE DETAILS	5410.1	POWER TILT/SLIDE SUNROOF (SHD)
0670.4	GROUND DISTRIBUTION	5430.1	ELECTRICAL CONVERTIBLE TOP
0670.5	DATA LINK	6100.0	CENTRAL BODY ELECTRONICS (ZKE IV)
1210.17	ENGINE CONTROL SYSTEM MS41.1 (6-CYLINDER M52)	6133.0	HORN
1210.20	ENGINE CONTROL SYSTEM (DME M5.2, 4-CYLINDER M44)	6135.0	DRIVE-AWAY PROTECTION (EWS II)
1230.0	CHARGING SYSTEM	6160.1	WIPER/WASHER MODULE (WWM)
1240.0	START	6167.1	HEADLIGHT WASHER (SRA)
2460.2	ELECTRONIC TRANSMISSION CONTROL (EGS A4S 270R)	6169.0	WINDSHIELD WASHER JET HEATERS
2460.4	ELECTRONIC TRANSMISSION CONTROL (EGS A5S 310Z)	6211.0	INSTRUMENT CLUSTER
3234.0	SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)	6213.1	ANALOG CLOCK
3450.1	SLIP CONTROL (ABS/ASC)	6213.2	MULTI-FUNCTION CLOCK
		6214.0	ON-BOARD DISPLAY

6300.0	LIGHT SWITCH DETAILS	6424.0	REAR WINDOW DEFOGGER/ ANTENNA
6312.0	HEADLIGHTS/FOG LIGHTS	6450.7	INTEGRATED CLIMATE REGULATION (IHKA E36)
6313.0	TURN/HAZARD LIGHTS	6510.0	RADIO/STEREO
6314.0	PARK/TAIL LIGHTS	6510.1	RADIO/HIFI/TOP HIFI
6320.0	LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS	6561.0	CELLULAR TELEPHONE (PROVISIONS)
6322.0	BACK UP LIGHTS	6571.0	CRUISE CONTROL (TEMPOMAT)
6325.0	BRAKE LIGHTS	6575.2	ANTI-THEFT SYSTEM (ALPINE)
6330.3	INTERIOR LIGHTS	6581.2	ON-BOARD COMPUTER (BC V)
6332.1	GLOVE BOX LIGHT/CASSETTE BOX/ASHTRAY LIGHT/CHARGING SOCKET/CIGAR LIGHTER	7000.0	COMPONENT LOCATION CHART
6350.0	CRASH CONTROL MODULE	7100.0	COMPONENT LOCATION VIEWS
6410.5	HEATING CONTROL (HR)	8000.0	SPLICE LOCATION VIEWS
6412.10	PARK VENTILATION WITH HR	8500.0	CONNECTOR VIEWS
6412.20	PARK VENTILATION WITH IHKA E36		



0100.0 INDEX

ABS HYDRAULIC UNIT, Y1	3450.1-06
ABS HYDRAULIC UNIT, Y1w	3450.1-01
ABS PEDAL TRAVEL SENSOR, S123	3450.1-01
ABS PUMP MOTOR RELAY, TIMED, K125	3450.1-00
ABS PUMP MOTOR RELAY, TIMED, K125	3450.1-05
ABS RELAY, K10	3450.1-00
AIR BAG GAS GENERATOR, DRIVER'S, G5	3234.0-00
AIR BAG GAS GENERATOR, LEFT SIDE, G14	3234.0-01
AIR BAG GAS GENERATOR, PASSENGER'S, G6	3234.0-00
AIR BAG GAS GENERATOR, RIGHT SIDE, G15	3234.0-01
AIR CONDITIONING COMPRESSOR, Y2	6450.7-04
AIR PUMP, Y6133	1210.17-05
AIR PUMP, Y6133	1210.20-09
ANALOG CLOCK	6213.1-00
ANALOG CLOCK, N5	6213.1-00
ANTENNA AMPLIFIER AM/FM, N8	6424.0
ANTI-THEFT CONTROL MODULE (ALPINE), N12w	6575.2
ANTI-THEFT HORN (ALPINE), H1w	6575.2-02
ANTI-THEFT SYSTEM (ALPINE)	6575.2
ASC DIODE, V7	3450.1-00
ASC SWITCH, S6	3450.1-02
ASC SWITCH, S6	3450.1-07
ASHTRAY LIGHT, FRONT, E25	6300.0-01
ASHTRAY LIGHT, REAR, E28y	6300.0-01
AUTOMATIC CLIMATE CONTROL MODULE, A115	6450.7
AUTOMATIC TRANSMISSION RANGE SWITCH, S3	2460.
AUXILIARY FAN MOTOR, M9	6450.7

AUXILIARY FUSE BOX IN LUGGAGE COMPARTMENT, P96	0670.2
AUXILIARY FUSE BOX, P95	0670.2-03
AUXILIARY FUSE BOX, P97	0670.2
AUXILIARY THROTTLE POSITION MOTOR (ADS), M93	3450.1-02
AUXILIARY THROTTLE POSITION MOTOR (ADS), M93	3450.1-07
AUXILIARY THROTTLE POSITION SENSOR, R31	3450.1-04
AUXILIARY TURN LIGHT, LEFT FRONT, H9	6313.0-02
AUXILIARY TURN LIGHT, RIGHT FRONT, H8	6313.0-02
B+ JUMP START JUNCTION POINT, G6430	0670.2
BACK UP LIGHT, LEFT, H27	6322.0-00
BACK UP LIGHT, RIGHT, H28	6322.0-00
BACK UP LIGHTS	6322.0
BATTERY, G1	0670.2
BLOWER MOTOR, M30	6410.5-01
BLOWER MOTOR, M30	6412.10-01
BLOWER MOTOR, M30	6412.20-00
BLOWER MOTOR, M30	6450.7-00
BLOWER RELAY, K4	6410.5-00
BLOWER RELAY, K4	6412.10-00
BLOWER RELAY, K4	6412.20-00
BLOWER RELAY, K4	6450.7-00
BLOWER RESISTORS, R11	6410.5-01
BLOWER RESISTORS, R11	6412.10-01
BLOWER SWITCH, S75	6410.5-01
BLOWER SWITCH, S75	6412.10-00
BODY ELECTRONICS CONTROL MODULE (ZKE IV), A104	6100.0



BRAKE FLUID LEVEL SWITCH, B18 6211.0-00
BRAKE LIGHT SWITCH, S29 6325.0-00
BRAKE LIGHT SWITCH, S30 6325.0-01
BRAKE LIGHT, LEFT, H24 6325.0
BRAKE LIGHT, RIGHT, H31 6325.0
BRAKE LIGHTS 6325.0
BRAKE PAD SENSOR, LEFT FRONT, B16 6211.0-01
BRAKE PAD SENSOR, RIGHT REAR, B17 6211.0-01
CAMSHAFT POSITION SENSOR
(CYLINDER IDENTIFICATION), B6204 1210.17-06
CARBON CANISTER VALVE, Y199 1210.17-10
CARBON CANISTER VALVE, Y199 1210.20-09
CASSETTE BOX LIGHT, E45y 6300.0-00
CD CHANGER, N22 6510.1
CELLULAR TELEPHONE (PROVISIONS) 6561.0
CENTRAL BODY ELECTRONICS (ZKE IV) 6100.0
CENTRAL LOCKING SWITCH, S302 5126.0-02
CENTRAL POWER WINDOW SWITCH, S40y 5133.1-02
CHARGING SOCKET, X779 6332.1-01
CHARGING SYSTEM 1230.0
CHECK CONTROL MODULE, A4 6581.2
CHIME MODULE, H10 6581.2-01
CIGAR LIGHTER LIGHT, FRONT, E29 6300.0-01
CIGAR LIGHTER, FRONT, E28 6332.1-00
CLUTCH SWITCH, S32 6571.0-01
COMBINATION SWITCH, S7 6312.0-00
COMBINATION SWITCH, S7 6313.0-00
COMPONENT LOCATION CHART 7000.0

COMPONENT LOCATION VIEWS 7100.0
COMPRESSOR CONTROL RELAY, K19 6450.7-04
CONNECTOR VIEWS 8500.0
CONTACT RING, C101 3234.0-00
CONVERTIBLE TOP ACTUATING SWITCH, S143 5430.1-01
CONVERTIBLE TOP CONTROL MODULE, A96 5430.1
CONVERTIBLE TOP END-POSITION MICRO SWITCH,
S164 5430.1-01
CONVERTIBLE TOP MOTOR, M101 5430.1-02
CONVERTIBLE TOP POSITION MICRO SWITCH, S165 5430.1-01
CONVERTIBLE TOP STORAGE LID LOCK MOTOR,
M43 5430.1-02
CONVERTIBLE TOP STORAGE LID MICRO SWITCH,
S214 5430.1-04
CONVERTIBLE TOP STORAGE LID MOTOR, M100 ... 5430.1-02
CRANKSHAFT POSITION/RPM SENSOR, B6203 1210.
CRASH CONTROL MODULE 6350.0
CRASH CONTROL MODULE, N17 6350.0-01
CRUISE CONTROL (TEMPOMAT) 6571.0
CRUISE CONTROL ACTUATOR (TEMPOMAT), M25 ... 6571.0-01
CRUISE CONTROL MODULE (TEMPOMAT), A8 6571.0
CRUISE CONTROL SWITCH, S28 6571.0-00
DATA LINK 0670.5
DATA LINK CONNECTOR, D100 0670.5
DAY LIGHT RELAY MODULE, K46z 6312.0-01
DEFOGGER I, REAR, E9 6424.0
DEFOGGER RELAY, REAR, K13 6424.0
DEFOGGER/ANTENNA, REAR, E10 6424.0



DEFROSTER FLAP MOTOR, M35 6450.7-03
DIMMER, N3 6300.0-00
DIVERSITY, N404 6424.0-04
DOME LIGHT/MAP READING ASSEMBLY, FRONT, E34 .. 6330.3
DOOR HANDLE SWITCH, DRIVER'S, S48 6575.2-00
DOOR JAMB SWITCH, DRIVER'S, S14 5133.1-00
DOOR JAMB SWITCH, PASSENGER'S, S13 5133.1-00
DOOR LOCK HEATER, E48 5120.0-00
DOOR LOCK MOTOR, DRIVER'S, M12 5126.0-00
DOOR LOCK MOTOR, PASSENGER'S, M13 5126.0-00
DOOR LOCK SWITCH, DRIVER'S, S47 5126.0-02
DOOR LOCK SWITCH, PASSENGER'S, S49 5126.0-02
DOUBLE TEMPERATURE SWITCH, S36y 6450.7-06
DRIVE-AWAY PROTECTION (EWS II) 6135.0
DUAL TEMPERATURE SENSOR
(COOLANT TEMPERATURE), B6256 1210.17-02
ELECTRICAL CONVERTIBLE TOP 5430.1
ELECTRONIC IMMOBILIZER CONTROL MODULE
(EWS II), A836 6135.0
ELECTRONIC TRANSMISSION CONTROL
(EGS A4S 270R) 2460.2
ELECTRONIC TRANSMISSION CONTROL
(EGS A5S 310Z) 2460.4
ENGINE CONTROL MODULE (DME), A6000 1210.
ENGINE CONTROL MODULE RELAY, K6300 1210.
ENGINE CONTROL SYSTEM
(DME M5.2, 4-CYLINDER M44) 1210.20
ENGINE CONTROL SYSTEM MS41.1
(6-CYLINDER M52) 1210.17

ENGINE COOLANT LEVEL SWITCH, S63 6581.2-02
ENGINE COOLANT TEMPERATURE SENSOR, B6232 1210.17-02
ENGINE COOLANT TEMPERATURE SENSOR, B6232 1210.20-05
ENGINE COOLANT TEMPERATURE SENSOR, B6236 1210.17-02
ENGINE HOOD SWITCH, S21w 6575.2-02
EVAPORATIVE EMISSION VALVE, Y6120 1210.
EVAPORATOR TEMPERATURE SENSOR, B14 6450.7-02
EXHAUST GAS FLAP VALVE, Y198 1210.17-09
FINAL STAGE UNIT, N2 6412.20-00
FINAL STAGE UNIT, N2 6450.7-00
FOG LIGHT RELAY, FRONT, K47 6312.0-00
FOG LIGHT SWITCH, S10 6312.0-00
FOG LIGHT, LEFT, E26 6312.0-00
FOG LIGHT, RIGHT, E27 6312.0-00
FOOTWELL LIGHT, LEFT FRONT, E61 6330.3
FOOTWELL LIGHT, RIGHT FRONT, E62 6330.3
FRESH AIR FLAP MOTOR, M36 6450.7-00
FUEL CHANGEOVER VALVE, Y6263 1210.20-09
FUEL INJECTION VALVE, CYL. 1, Y6101 1210.
FUEL INJECTION VALVE, CYL. 2, Y6102 1210.
FUEL INJECTION VALVE, CYL. 3, Y6103 1210.
FUEL INJECTION VALVE, CYL. 4, Y6104 1210.
FUEL INJECTION VALVE, CYL. 5, Y6105 1210.17-01
FUEL INJECTION VALVE, CYL. 6, Y6106 1210.17-01
FUEL LEVEL SENSOR, B6 6211.0-04
FUEL PUMP RELAY, CYL. 1-6, K6301 1210.17-04
FUEL PUMP RELAY, K6301w 1210.20-04
FUEL PUMP, M2 1210.



FUEL TANK PRESSURE SENSOR, B72 1210.17-10
FUEL TANK PRESSURE SENSOR, B72 1210.20-05
FUEL TANK SENSOR II, B25y 6211.0-04
FUSE CHART 0670.1
FUSE DETAILS 0670.3
GAS FILLER LOCK MOTOR, M16 5126.0-00
GEAR SHIFT LEVER INDICATOR, E96 6300.0-01
GENERATOR, G6509 1230.0-00
GLOVE BOX LIGHT, E42 6332.1-01
GLOVE BOX LIGHT/CASSETTE BOX/ASHTRAY LIGHT/
CHARGING SOCKET/CIGAR LIGHTER 6332.1
GLOVE BOX LOCK MOTOR, M107 5126.0-00
GROUND DISTRIBUTION 0670.4
HALL EFFECT CAMSHAFT SENSOR, B6209 1210.20-04
HARD TOP CONNECTOR 1, E99 5430.1-00
HARD TOP CONNECTOR 2, E100y 6330.3-03
HAZARD FLASHER RELAY, K16 6313.0-00
HAZARD SWITCH, S18 6313.0-01
HEADLIGHT WASHER (SRA) 6167.1
HEADLIGHT, LEFT, E7 6313.0-02
HEADLIGHT, LEFT, E7 6314.0-01
HEADLIGHT, RIGHT, E8 6313.0-02
HEADLIGHT, RIGHT, E8 6314.0-01
HEADLIGHT/FOG LIGHT WASHER PUMP, M7 6167.1-00
HEADLIGHTS/FOG LIGHTS 6312.0
HEAT EXCHANGER TEMPERATURE SENSOR, LH, B11 6410.5-01
HEAT EXCHANGER TEMPERATURE SENSOR, LH, B11 6450.7-02
HEAT EXCHANGER TEMPERATURE SENSOR, RH, B126450.7-02

HEATED SEATS 5203.0
HIFI AMPLIFIER, A18 6510.1
HIGH BEAM LIGHT RELAY, K46 6312.0-01
HIGH BEAM LIGHT, LEFT, E11 6312.0-01
HIGH BEAM LIGHT, RIGHT, E12 6312.0-01
HIGH LEVEL STOP LIGHT, H34 6325.0
HIGH LEVEL STOP LIGHT/REAR SPOILER, H34z 6325.0
HIGH RANGE SPEAKER, LEFT FRONT, H59 6510.0-00
HIGH RANGE SPEAKER, LEFT FRONT, H59 6510.1-01
HIGH RANGE SPEAKER, LEFT REAR, H56 6510.1
HIGH RANGE SPEAKER, RIGHT FRONT, H50 6510.0-00
HIGH RANGE SPEAKER, RIGHT FRONT, H50 6510.1-02
HIGH RANGE SPEAKER, RIGHT REAR, H53 6510.1
HIGH SPEED RELAY, K22 6450.7-05
HIGH SPEED RELAY, K22 6450.7-06
HORN 6133.0
HORN RELAY (ALPINE), K108 6575.2-02
HORN RELAY, K2 6133.0-00
HORN SWITCH, S4 6133.0-00
HORN, LEFT, H2 6133.0-00
HORN, RIGHT, H3 6133.0-00
HOT FILM AIR MASS METER, B6207 1210.17-05
HOT FILM AIR MASS METER, B6217 1210.20-06
IDLE SPEED CONTROL VALVE, Y6130 1210.
IGNITION COIL, CYL. 1, T6151 1210.
IGNITION COIL, CYL. 2, T6152 1210.
IGNITION COIL, CYL. 3, T6153 1210.
IGNITION COIL, CYL. 4, T6154 1210.



INDEX

IGNITION COIL, CYL. 5, T6155	1210.17-03
IGNITION COIL, CYL. 6, T6156	1210.17-03
IGNITION SWITCH, S2	0670.2-04
INDEX	0100.0
INSTRUMENT CLUSTER	6211.0
INSTRUMENT CLUSTER, A2w	6211.0
INTAKE AIR RESONANCE CHANGEOVER VALVE, Y6131	1210.20-01
INTAKE AIR TEMPERATURE SENSOR, B6205	1210.
INTEGRATED CLIMATE REGULATION (IHKA E36)	6450.7
INTERIOR LIGHT, LEFT REAR, E39	6330.3
INTERIOR LIGHT, RIGHT REAR, E40	6330.3
INTERIOR LIGHTS	6330.3
INTERMEDIATE PRESSURE SWITCH, B9	6450.7
INTRODUCTION	0110.0
JET HEATER THERMOSWITCH, S198	6169.0-00
KICK-DOWN SWITCH, S8507	2460.
KNOCK SENSOR, B6240	1210.17-06
KNOCK SENSOR, B6240	1210.20-05
LICENSE PLATE LIGHT, LEFT, E43	6320.0-00
LICENSE PLATE LIGHT, RIGHT, E44	6320.0-00
LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS ...	6320.0
LIGHT EMITTING DIODE (LED)	6575.2-00
LIGHT SWITCH DETAILS	6300.0
LIGHT SWITCH, S8	6300.0-00
LOW BEAM LIGHT RELAY, K48	6312.0-01
LOW BEAM LIGHT, LEFT, E13	6312.0-01
LOW BEAM LIGHT, RIGHT, E14	6312.0-01

LOW RANGE SPEAKER, LEFT FRONT, H58	6510.0-00
LOW RANGE SPEAKER, LEFT FRONT, H58	6510.1-01
LOW RANGE SPEAKER, LEFT REAR, H57	6510.1
LOW RANGE SPEAKER, RIGHT FRONT, H51	6510.0-00
LOW RANGE SPEAKER, RIGHT FRONT, H51	6510.1-02
LOW RANGE SPEAKER, RIGHT REAR, H52	6510.1
LOW-NOISE MICROPHONE	6575.2-00
LUGGAGE COMPARTMENT LID MICRO SWITCH, S213	5430.1-02
LUGGAGE COMPARTMENT LID RELAY, K117	5126.0-01
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, LEFT, E46	6313.0-02
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, LEFT, E46	6314.0-01
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, LEFT, E46	6322.0-00
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, LEFT, E46	6325.0
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, LEFT, E46	6581.2
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, RIGHT, E47	6313.0-02
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, RIGHT, E47	6314.0-01
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, RIGHT, E47	6322.0-00
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, RIGHT, E47	6325.0
LUGGAGE COMPARTMENT LIGHT ASSEMBLY, RIGHT, E47	6581.2



INDEX

LUGGAGE COMPARTMENT LIGHT SWITCH, S61y ...	6320.0-01	ON-BOARD DISPLAY, A35	6214.0-00
LUGGAGE COMPARTMENT LIGHT, E32	6320.0-01	OUTSIDE TEMPERATURE SENSOR, B13	6450.7-02
LUGGAGE COMPARTMENT LIGHT, LEFT, E101	6320.0-01	OXYGEN SENSOR (BEHIND CATALYTIC CONVERTER), B62002	1210.20-04
LUGGAGE COMPARTMENT LIGHT, RIGHT, E102	6320.0-01	OXYGEN SENSOR (IN FRONT OF CATALYTIC CONVERTER), B62001 .	1210.20-04
LUGGAGE COMPARTMENT LOCK MOTOR, M17	5126.0-01	OXYGEN SENSOR I (BEHIND CATALYTIC CONVERTER), B62102	1210.17-04
MAKE-UP MIRROR LIGHT, DRIVER'S, E35	6330.3	OXYGEN SENSOR I (IN FRONT OF CATALYTIC CONVERTER), B62101 .	1210.17-04
MAKE-UP MIRROR LIGHT, PASSENGER'S, E36	6330.3	OXYGEN SENSOR II (BEHIND CATALYTIC CONVERTER), B62202	1210.17-04
MAKE-UP MIRROR SWITCH, DRIVER'S, S77	6330.3	OXYGEN SENSOR II (IN FRONT OF CATALYTIC CONVERTER), B62201 .	1210.17-04
MAKE-UP MIRROR SWITCH, PASSENGER'S, S78	6330.3	PARK BRAKE SWITCH, S31	6211.0-00
MID-HIGH RANGE SPEAKER, LEFT, H42	6510.1-01	PARK LIGHT, LEFT, E15	6314.0-01
MID-HIGH RANGE SPEAKER, RIGHT, H43	6510.1-02	PARK LIGHT, RIGHT, E19	6314.0-01
MIDRANGE SPEAKER, LEFT FRONT, H55	6510.1-01	PARK VENTILATION RELAY, K450	6412.
MIDRANGE SPEAKER, RIGHT FRONT, H54	6510.1-02	PARK VENTILATION RELAY, K450	6412.10-01
MIRROR CONTROL SWITCH, S17	5116.0-00	PARK VENTILATION WITH HR	6412.10
MIRROR, DRIVER'S SIDE, Y5	5116.0	PARK VENTILATION WITH IHKA E36	6412.20
MIRROR, PASSENGER'S SIDE, Y6	5116.0	PARK/TAIL LIGHTS	6314.0
MULTI-FUNCTION CLOCK	6213.2	POWER DISTRIBUTION	0670.2
MULTI-FUNCTION CLOCK, N10	6213.2	POWER DISTRIBUTION BOX, FRONT, P90	0670.2
NORMAL SPEED RELAY, K21	6450.7-05	POWER DISTRIBUTION CHART	0670.0
NORMAL SPEED RELAY, K21	6450.7-06	POWER MIRRORS	5116.0
OBD II CONNECTOR, D110	0670.5	POWER SEATS	5200.0
OIL PRESSURE SWITCH, B6231	6211.0-00	POWER TILT/SLIDE SUNROOF (SHD)	5410.1
OIL TEMPERATURE SENSOR, B6238	6211.0-04		
ON-BOARD COMPUTER (BC V)	6581.2		
ON-BOARD COMPUTER TEMPERATURE SENSOR, B21	6581.2-00		
ON-BOARD COMPUTER, N4	6581.2		
ON-BOARD DISPLAY	6214.0		



INDEX

POWER WINDOW SWITCH, DRIVER'S, S126y 5133.1-01
POWER WINDOW SWITCH, PASSENGER'S, S127y ... 5133.1-01
POWER WINDOWS (FH) 5133.1
PRESSURE SWITCH, B8y 6450.7
PRESSURE SWITCH, B9508 6450.7
PROGRAM SWITCH, S8503 2460.
PYROTECHNICAL BELT TENSIONER,
DRIVER'S SIDE, G12 3234.0-00
PYROTECHNICAL BELT TENSIONER,
PASSENGER'S SIDE, G13 3234.0-00
RADIO, N9 6510.0-00
RADIO, N9 6510.1
RADIO/HIFI/TOP HIFI 6510.1
RADIO/STEREO 6510.0
REAR POWER WINDOW SWITCH, LH, S128z 5133.1-02
REAR POWER WINDOW SWITCH, RH, S129z 5133.1-02
RECIRCULATION FLAP MOTOR, M40 6450.7-03
RECIRCULATION FLAP MOTOR, REAR, M46 6450.7-03
REGULATION FLAP MOTOR, M44 6450.7-03
RELAY MODULE, A5 5133.1-04
RELAY MODULE, A5 6100.0-04
RESISTOR, R8554 0670.4-12
REVERSING LIGHT SWITCH, S8511 6322.0-00
ROLLOVER PROTECTION ACTUATOR, LH, Y85 5430.1-03
ROLLOVER PROTECTION ACTUATOR, RH, Y86 5430.1-03
ROLLOVER SENSOR, N24 5430.1-03
SEAT BELT SWITCH, DRIVER'S, S58 3234.0-02
SEAT BELT SWITCH, PASSENGER'S, S59 3234.0-02

SEAT CONTROL SWITCH, DRIVER'S SEAT, S51 5200.0-00
SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56 . 5200.0-01
SEAT CUSHION TILT MOTOR, DRIVER'S, M50 5200.0-00
SEAT CUSHION TILT MOTOR, PASSENGER'S, M61 .. 5200.0-01
SEAT HEATER SWITCH, DRIVER'S SEAT, S53 5203.0-00
SEAT HEATER SWITCH, PASSENGER'S SEAT, S54 .. 5203.0-00
SEAT HEATER, DRIVER'S, E57 5203.0-00
SEAT HEATER, PASSENGER'S, E58 5203.0-00
SEAT HEIGHT MOTOR, DRIVER'S, M52 5200.0-00
SEAT HEIGHT MOTOR, PASSENGER'S, M59 5200.0-01
SEAT LUMBAR SUPPORT MOTOR/VALVE, DRIVER'S,
M55z 5200.0-02
SEAT LUMBAR SWITCH, DRIVER'S, S52 5200.0-02
SEAT MAT, I1008 3234.0-03
SEAT MOVEMENT MOTOR, DRIVER'S, M51 5200.0-00
SEAT MOVEMENT MOTOR, PASSENGER'S, M60 5200.0-01
SEAT OCCUPANCY DETECTOR, A113 3234.0-03
SEATBACK HEATER, DRIVER'S, E56 5203.0-00
SEATBACK HEATER, PASSENGER'S, E59 5203.0-00
SEATBACK RECLINER MOTOR, DRIVER'S, M53 5200.0-00
SEATBACK RECLINER MOTOR, PASSENGER'S, M58 5200.0-01
SECONDARY AIR PUMP RELAY, K6304 1210.17-05
SECONDARY AIR PUMP RELAY, K6304 1210.20-09
SECONDARY AIR PUMP VALVE, Y6163 1210.17-05
SECONDARY AIR PUMP VALVE, Y6163 1210.20-09
SHIFT-LOCK, Y19 2460.
SIDE IMPACT SENSOR, DRIVER'S, B78 3234.0-01
SIDE IMPACT SENSOR, PASSENGER'S, B79 3234.0-01



INDEX

SLIP CONTROL (ABS/ASC)	3450.1
SLIP CONTROL MODULE (ABS/ASC), A52	3450.1
SOLENOID VALVE ("RUNNING LOSSES"), Y6550	1210.17-05
SPATIAL SOUND RELAY, K128	6510.1-05
SPEAKER, LEFT REAR, H46	6510.0-00
SPEAKER, LEFT REAR, H46	6510.1
SPEAKER, RIGHT REAR, H45	6510.0-00
SPEAKER, RIGHT REAR, H45	6510.1
SPEED SENSOR – ABS, LEFT FRONT, B2	3450.1
SPEED SENSOR – ABS, LEFT REAR, B4	3450.1
SPEED SENSOR – ABS, RIGHT FRONT, B1	3450.1
SPEED SENSOR – ABS, RIGHT REAR, B3	3450.1
SPLICE LOCATION VIEWS	8000.0
START	1240.0
STARTER IMMOBILIZATION SWITCH, S235	6135.0-00
STARTER, M6510	1240.0-02
SUBWOOFER, H66	6510.1-06
SUPPLEMENTAL RESTRAINT SYSTEM CONTROL MODULE, A12	3234.0
SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)	3234.0
SUPPRESSION FILTER, C900	6424.0
SYMBOLS	0140.0
TAIL LIGHT, LEFT, H25	6314.0-01
TAIL LIGHT, LEFT, H37	6314.0-01
TAIL LIGHT, RIGHT, H30	6314.0-01
TAIL LIGHT, RIGHT, H39	6314.0-01
TELEPHONE CONNECTOR	6561.0
TEMPERATURE SWITCH, S36	6450.7-05

THERMOSTAT, A32y	6410.5
THROTTLE POSITION SENSOR (ASC), R6255z	3450.1-05
THROTTLE POSITION SENSOR, R6252	1210.
TILT/SLIDE SUNROOF CONTROL ASSEMBLY, A56 ...	5410.1-00
TILT/SLIDE SUNROOF SWITCH (SHD), S38	5410.1-00
TOP HIFI SWITCH, S303y	6510.1-04
TRANSMISSION CONTROL MODULE (EGS), A7000 ..	2460.4-00
TRANSMISSION CONTROL MODULE (EGS), A8500 ..	2460.2-00
TRANSMISSION POSITION INDICATOR LIGHT, E82 ..	6300.0-01
TRANSMISSION VALVE UNIT, Y8505	2460.2-01
TRANSMISSION VALVE UNIT, Y8505y	2460.2-07
TRANSMISSION VALVE UNIT, Y8505y	2460.4-01
TRANSMITTER MODULE (EWS II), A835	6135.0-01
TURN LIGHT, LEFT FRONT, H7	6313.0-02
TURN LIGHT, LEFT REAR, H6	6313.0-02
TURN LIGHT, RIGHT FRONT, H4	6313.0-02
TURN LIGHT, RIGHT REAR, H5	6313.0-02
TURN/HAZARD LIGHTS	6313.0
UNCOUPLING DIODE, V6	6412.20-00
UNLOADER RELAY, TERMINAL 15, K6326	1210.
UNLOADER RELAY, TERMINAL 15, K9	5203.0-00
VARIABLE CAMSHAFT CONTROL VALVE 1, Y6275 ..	1210.17-05
VEHICLE SPEED SENSOR, B10	6211.0-04
WASHER FLUID LEVEL SWITCH, S64	6581.2-02
WASHER JET HEATER, LEFT, E51	6169.0-00
WASHER JET HEATER, RIGHT, E52	6169.0-00
WASHER PUMP, M4	6160.1
WATER VALVE ASSEMBLY, Y4	6410.5-00



INDEX

WATER VALVE ASSEMBLY, Y4	6450.7-01
WINDOW BLOWER MICRO SWITCH, REAR, S196	5430.1-01
WINDOW BLOWER RELAY, REAR, K99	6424.0-02
WINDOW BLOWER, REAR, M105	6424.0-02
WINDOW DEFOGGER/ANTENNA, REAR,	6424.0
WINDOW MOTOR, DRIVER'S, M21	5133.1-03
WINDOW MOTOR, LEFT REAR, M98	5133.1-04
WINDOW MOTOR, PASSENGER'S, M23	5133.1-03
WINDOW MOTOR, RIGHT REAR, M99	5133.1-04
WINDSCREEN COWL PANEL LOCK MICRO SWITCH, S231	5430.1-00
WINDSCREEN COWL PANEL LOCK MOTOR, M132 ...	5430.1-00
WINDSHIELD WASHER JET HEATERS	6169.0
WIPER MOTOR, M3	6160.1
WIPER/WASHER MODULE (LOW II), A64	6160.1-00
WIPER/WASHER MODULE (WWM)	6160.1
WIPER/WASHER MODULE, A51	6160.1
WIPER/WASHER SWITCH, S5	6160.1
ZKE CENTRAL LOCKING (ZV)	5126.0
ZKE DOOR LOCK HEATING (TSH)	5120.0

Schematics

The schematics divide the entire vehicle electrical system into individual circuits. Interacting electrical components are shown on one common schematic.

Switches and other components are represented in such a way that their general layout and function are self-explicit. They are arranged on the sheet such that the current path can be followed from positive (top) to negative (bottom).

Important: The components and wires are not drawn to scale. For instance, a lead with a length of over 1m can be shown as a lead that is only a few cm long. To ensure clear arrangement, all connectors, line branches and connected components from the fuses to the component and from the component to ground connection are not shown within the individual cells. If required, reference can be made to cells **0670.3 Fuse Details** and **0670.4 Ground Distribution** where all lines are illustrated with all plug connections, line branches and connected components.

All circuit symbols used are listed and explained in cell **0140.0 Symbols**.


In cell **7000.0 Component Location Chart** all important connectors, ground points and components are listed in tabular form. It provides a precise description of the component locations in the vehicle.

In cell **7100.0 Component Location Views** the location of connectors and components which are difficult to locate are shown in line arts or illustrations. In cell **8000.0 Splice Location Views** all splices are listed in numerical order and illustrations are provided to assist in locating splices on larger harnesses. In cell **8500.0 Connector Views** diagrams of connectors with more than 2 pins are illustrated.

Included in this ETM are foldout block diagrams. These are overviews of the entire system (EGS, ABS, AC, etc.) which helps understand the relationships between various components and control unit of the system being diagnosed.

Example

General conventions can be explained based on the following schematic example.

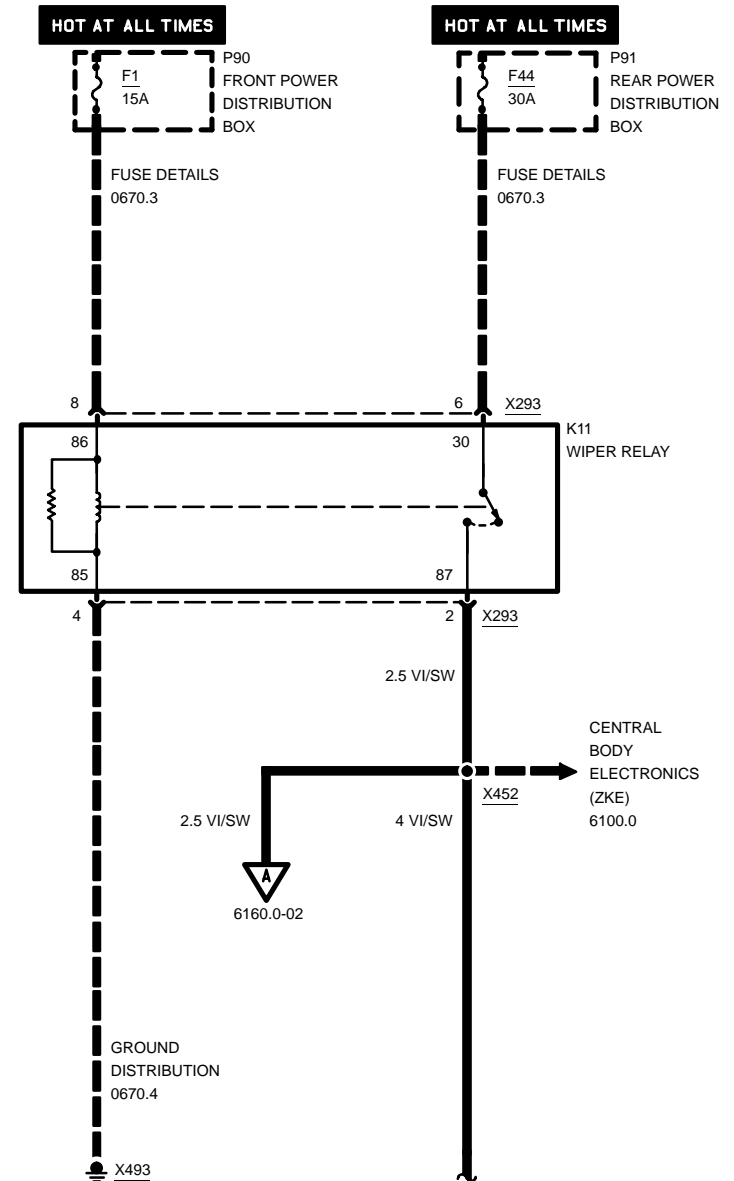




INTRODUCTION

General Conventions


1. Switches and relays are always shown in rest position (e.g. K11).
2. A component shown in a dashed frame signifies that the component is illustrated only in part (e.g. P90 and P91).
3. A component shown in a completely drawn frame signifies that the component is illustrated in full (e.g. K11).
4. The dashed line between pin 8 and pin 6 of connector X293 indicates that both pins belong to connector X293.
5. The dashed line from fuse F1 to pin 8 of connector X293 shows the positive supply of relay K11. If required, refer to cell **0670.3 Fuse Details** at fuse F1 for the complete line progressing with plug connections, line branches, wire colors and cross sections.
6. The dashed line with an arrow at splice X452 indicates that several wires lead to splice X452. All lines leading to the connection are illustrated in cell **6100.0 Central Body Electronics (ZKE)**. An interrupted line with an arrow indicates that only this one wire leads to another circuit.
7. The dashed line from pin 4 of connector X293 to ground X493 shows the ground supply for relay K11. If required, refer to cell **0670.4 Ground Distribution** at ground X493 for the complete line progression with all plug connections, line branches, wire colors, and cross sections.
8. The interrupted line from splice X452 with an **A** in the open arrow is continued on page 6160.0-02. Termination of wire 4 VI/SW from splice X452 with a wavy line indicates that the wire is continued on the opposite page.



0140.0 SYMBOLS

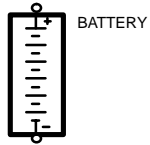

BATTERY

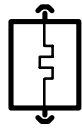 

HEATING ELEMENT



VARIABLE RESISTANCE SENSOR
VARIABLE CONTACT IS MOVED BY AN EXTERNAL FORCE



ANTENNA



FUSE DETAILS



LOUDSPEAKER OR HORN



VARIABLE RESISTOR
RESISTANCE IS CHANGED BY TEMPERATURE OR PRESSURE



CONTROL/POWER ELECTRONICS



FUSIBLE LINK



LIGHT



DIODE CURRENT CAN FLOW ONLY IN DIRECTION OF ARROW



HALL EFFECT SENSOR



RADIO



CIRCUIT BREAKER



PERMANENT MAGNET MOTOR ONE SPEED



ZENER DIODE TO REGULATE VOLTAGE



TRANSISTORIZED SWITCH



THERMO SWITCH



PERMANENT MAGNET MOTOR TWO SPEEDS



LIGHT EMITTING DIODE (LED)



INDUCTIVE SENSOR



SOLENOID



KNOCK SENSOR



OXYGEN SENSOR



VEHICLE SPEED SENSOR

 
SOLENOID CONTROLLED VALVE OR CLUTCH SOLENOID




SYMBOLS




ENTIRE COM-
PONENT SHOWN

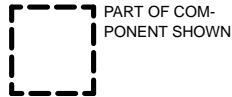


PART OF COM-
PONENT SHOWN

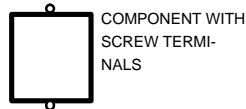 


COMPONENT WITH
SCREW TERMI-
NALS

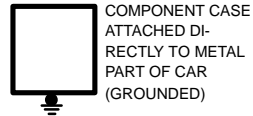 


COMPONENT CASE
ATTACHED DI-
RECTLY TO METAL
PART OF CAR
(GROUNDED)

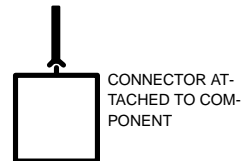


CONNECTOR AT-
TACHED TO COM-
PONENT

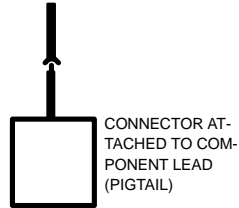

CONNECTOR AT-
TACHED TO COM-
PONENT LEAD
(PIGTAIL)

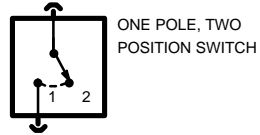





ONE POLE, TWO
POSITION SWITCH

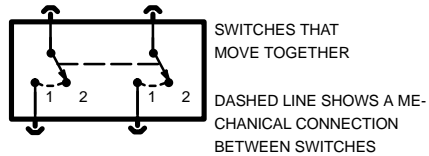

SWITCHES THAT
MOVE TOGETHER


DASHED LINE SHOWS A ME-
CHANICAL CONNECTION
BETWEEN SWITCHES

WIRE COLOR	
BL	BLUE
BR	BROWN
GE	YELLOW
GN	GREEN
GR	GRAY
OR	ORANGE
RS	PINK
RT	RED
SW	BLACK
VI	VIOLET
WS	WHITE
TR	TRANSPARENT

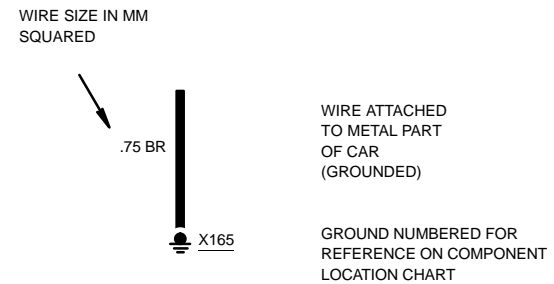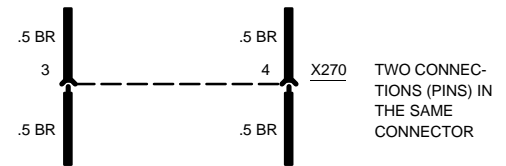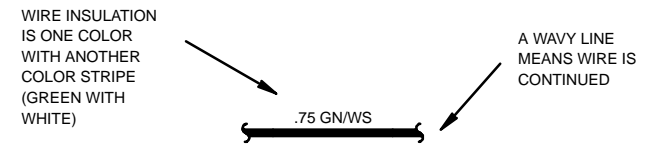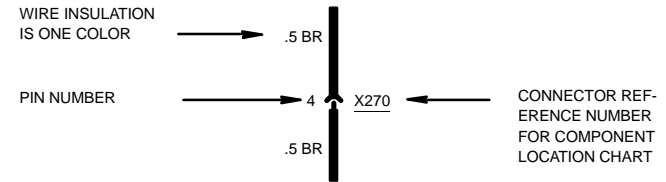





SYMBOLS

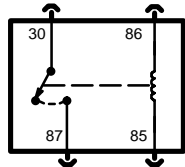


CONTACT RELAY

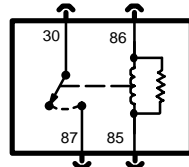

RELAY WITH RESISTOR ACROSS WINDING

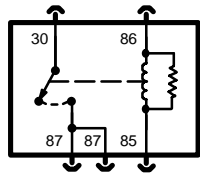

CONTACT RELAY WITH TWO OUTPUTS

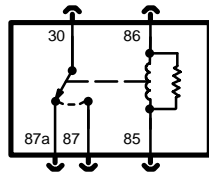

CHANGEOVER RELAY WITH TWO OUTPUTS

TERMINAL NUMBER DESCRIPTION


30 RELAY INPUT

85 RELAY OUTPUT (WINDING)

86 RELAY INPUT (WINDING)


87 RELAY OUTPUT (ENERGIZED)

87a RELAY OUTPUT (AT REST)

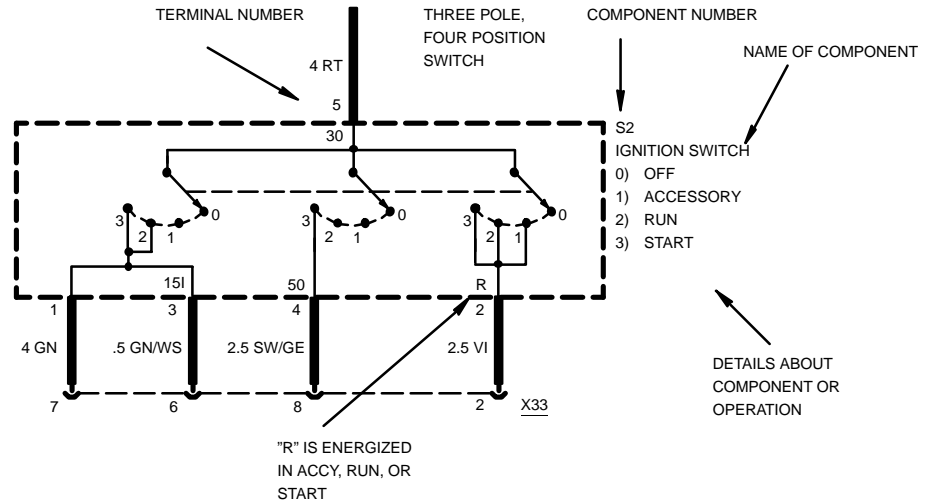

TERMINAL NUMBER	DESCRIPTION	TERMINAL NUMBER	DESCRIPTION
50	VOLTAGE: IGNITION SWITCH IN START	15I	VOLTAGE: IGNITION SWITCH IN RUN
30	VOLTAGE: SUPPLIED AT ALL TIMES	R	VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START
15	VOLTAGE: IGNITION SWITCH IN RUN OR START	31	GROUND

 HOT AT ALL TIMES

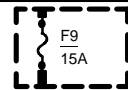

INDICATES THAT FUSE 9 IS SUPPLIED WITH POWER AT ALL TIMES

POWER STATUS

HOT AT ALL TIMES

HOT IN RUN AND START

HOT IN ACCY, RUN AND START

DESCRIPTION

VOLTAGE: SUPPLIED AT ALL TIMES


VOLTAGE: IGNITION SWITCH IN RUN OR START

VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START




SYMBOLS


HOT IN ACCY, RUN AND START

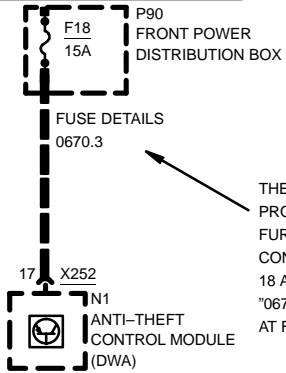



THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED TO FUSE 18 ARE SHOWN IN CELL "0670.3 FUSE DETAILS" AT FUSE 18

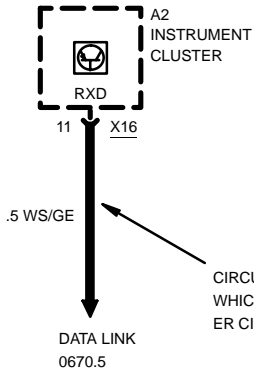

CIRCUIT REFERENCE—A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT

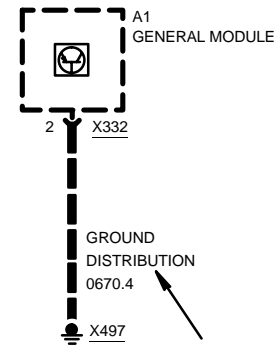


THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED TO GROUND X497 ARE SHOWN IN CELL "0670.4 GROUND DISTRIBUTION" AT GROUND X497

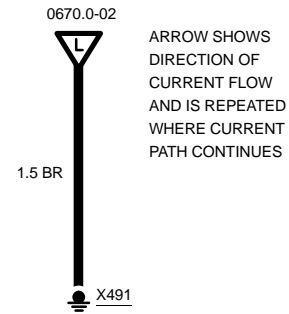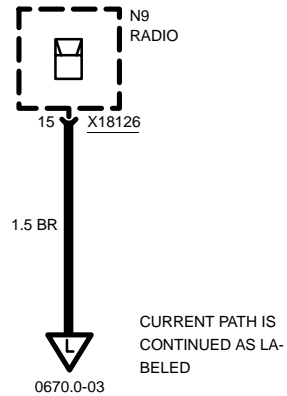



POWER DISTRIBUTION CHART

RELAY PANEL UNDER LH SIDE OF DASHBOARD

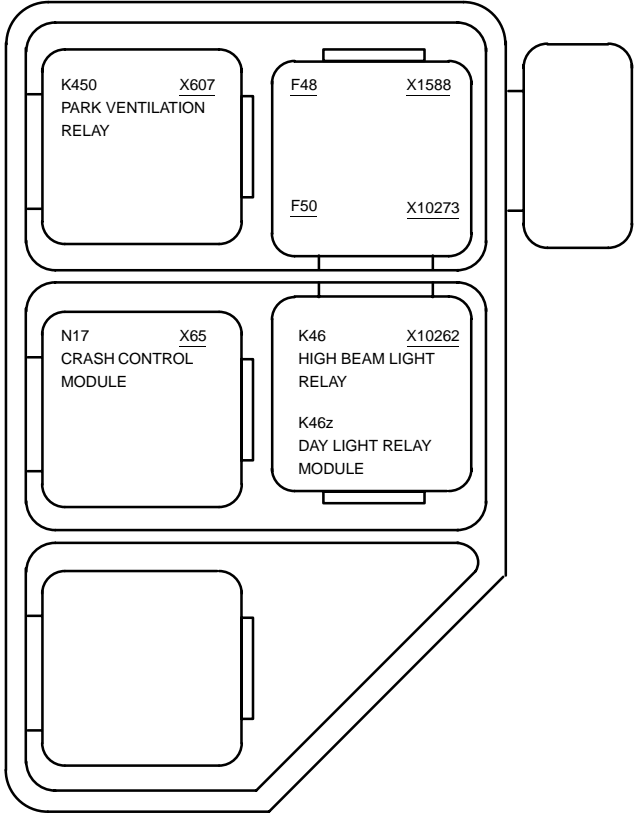

03/00 ————— 0670.0-01 ————— 1999