

1995

BMW


**525i, 525it, 530i,
530it, 540i (E34)**

Electrical

Troubleshooting

Manual

Vehicles Produced 5/94 to 12/95

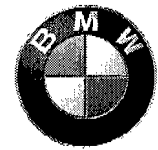

ELECTRICAL TROUBLESHOOTING MANUAL

5 SERIES – E34 (525i/t, 530i/t, 540i)

SCHEMATICS

MODEL YEAR 1995

0100.0	INDEX	3715.2	ELECTRONIC SHOCK ABSORBER CONTROL (EDC III+)
0110.0	INTRODUCTION	5116.0	POWER MIRRORS
0140.0	SYMBOLS	5120.0	ZKE DOOR LOCK HEATING (TSH)
0670.0	POWER DISTRIBUTION CHART	5126.0	ZKE CENTRAL LOCKING (ZV)
0670.1	FUSE CHART	5133.0	ZKE POWER WINDOWS (FH)
0670.2	POWER DISTRIBUTION	5200.0	POWER SEATS
0670.3	FUSE DETAILS	5200.1	SEAT/MIRROR MEMORY SYSTEM (SM/SPM)
0670.4	GROUND DISTRIBUTION	5203.0	HEATED SEATS
0670.5	DATA LINK	5212.0	LUMBAR SUPPORT
1210.11	ENGINE CONTROL SYSTEM (DME M3.3, 8-CYLINDER M60)	5410.0	ZKE SUNROOF (SHD)
1210.13	ENGINE CONTROL SYSTEM (DME M3.3.1, 6-CYLINDER M50)	5410.2	DOUBLE PANEL POWER SUNROOF (ZKE)
1230.0	CHARGING SYSTEM	6100.0	CENTRAL BODY ELECTRONICS (ZKE)
1240.0	START	6133.0	HORN
1290.0	E-BOX FAN	6135.0	DRIVE-AWAY PROTECTION (EWS II)
2460.2	ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)	6160.0	ZKE WIPER/WASHER CONTROL
2460.7	ELECTRONIC TRANSMISSION CONTROL (AGS: GS 9.22/A5S 560Z)	6162.0	REAR WINDOW WIPER/WASHER CONTROL
2460.8	ELECTRONIC TRANSMISSION CONTROL (AGS: GS 7.32/A5S 310Z)	6167.0	ZKE HEADLIGHT WASHER (SRA)
3231.0	ELECTRIC STEERING COLUMN ADJUSTMENT	6169.0	WINDSHIELD WASHER JET HEATERS
3234.0	SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)	6200.0	INSTRUMENT CLUSTER/CHECK CONTROL (K/CC)
3450.0	SLIP CONTROL (ABS)	6213.2	MULTI-FUNCTION CLOCK
3450.5	SLIP CONTROL 5 (ASC 5)		

SCHEMATICS

6300.0	LIGHT SWITCH DETAILS	6450.5	INTEGRATED CLIMATE REGULATION WITH FILTER (IHKR/F3)
6301.0	LAMP MONITOR (LKM)	6454.0	AUXILIARY FAN
6312.0	HEADLIGHTS/FOG LIGHTS	6510.1	RADIO/HIFI
6313.0	TURN/HAZARD LIGHTS	6510.2	RADIO PROVISIONS
6314.0	PARK/TAIL/UNDERHOOD LIGHTS	6561.0	CELLULAR TELEPHONE (PROVISIONS)
6320.0	LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS	6571.0	CRUISE CONTROL (TEMPOMAT)
6322.0	BACK UP LIGHTS	6575.2	ANTI-THEFT SYSTEM (ALPINE)
6325.0	BRAKE LIGHTS	6575.3	ANTI-THEFT SYSTEM IV (DWA IV)
6330.0	ZKE INTERIOR LIGHTS CONTROL (IB)	6581.0	ON-BOARD COMPUTER (BCIV)
6332.0	INTERIOR ACCESSORIES	6610.1	REMOTE CONTROLLED LOCKING SYSTEM
6350.0	CRASH CONTROL MODULE	7000.0	COMPONENT LOCATION CHART
6412.19	PARK VENTILATION WITH IHKR/F3	7100.0	COMPONENT LOCATION VIEWS
6424.0	REAR WINDOW DEFOGGER/ ANTENNA	8000.0	SPLICE LOCATION VIEWS
		8500.0	CONNECTOR VIEWS

BMW
5

0100.0



ABS HYDRAULIC UNIT, Y1 3450.0-03
 ABS HYDRAULIC UNIT, Y1w 3450.5-03
 AIR BAG GAS GENERATOR, DRIVER'S, G5 3234.0-01
 AIR BAG GAS GENERATOR, PASSENGER'S, G6 3234.0-01
 AIR CONDITIONING COMPRESSOR, Y2 6450.5-05
 AIR FLOW SENSOR, B6206 1210.11-06
 AIR TEMPERATURE SENSOR, CYL. 1-8, B6215w 1210.11-06
 ANTENNA AMPLIFIER AM/FM, N8 6424.0-01
 ANTENNA AMPLIFIER AM/FM, N8 6510.1-00
 ANTI-THEFT CONTROL MODULE (ALPINE), N12w 6575.2-00
 ANTI-THEFT CONTROL MODULE (DWA), N1 6575.3-00
 ANTI-THEFT HORN, H1y 6575.3-03
 ANTI-THEFT SYSTEM (ALPINE) 6575.2-00
 ANTI-THEFT SYSTEM IV (DWA IV) 6575.3-00
 ASC SWITCH, S6 3450.5-01
 AUTOMATIC TRANSMISSION RANGE SWITCH, S3 2460.2-04
 AUTOMATIC TRANSMISSION RANGE SWITCH, S3 2460.7-04
 AUTOMATIC TRANSMISSION RANGE SWITCH, S3 2460.8-04
 AUXILIARY FAN 6454.0-00
 AUXILIARY FAN MOTOR, M9 6454.0-00
 AUXILIARY RELAY BOX, P92 0670.2-06
 AUXILIARY THROTTLE POSITION MOTOR (ADS), M93 3450.5-04
 AUXILIARY THROTTLE POSITION SENSOR, R6253 3450.5-04
 AUXILIARY TURN LIGHT, LEFT FRONT, H9 6313.0-02
 AUXILIARY TURN LIGHT, RIGHT FRONT, H8 6313.0-02
 AUXILIARY WATER PUMP RELAY, K8 6450.5-06
 AUXILIARY WATER PUMP, M37a 6450.5-06
 B+ DISTRIBUTOR, X7163 0670.2-00
 B+ JUMP START JUNCTION POINT, G6430 0670.2-00
 B+ JUNCTION POINT, X6400 0670.2-00
 BACK UP LIGHT SWITCH (MANUAL TRANSMISSION),
 S92 6322.0-00
 BACK UP LIGHT, LEFT, H27 6322.0-01
 BACK UP LIGHT, RIGHT, H28 6322.0-01
 BACK UP LIGHTS 6322.0-00

BATTERY, G1 0670.2-00
 BLOWER MOTOR, M30 6412.19-00
 BLOWER MOTOR, M30 6450.5-02
 BLOWER POTENTIOMETER, R90001 6450.5-01
 BLOWER RELAY, K4 6450.5-00
 BLOWER RESISTORS, R11 6412.19-00
 BLOWER RESISTORS, R11 6450.5-02
 BLOWER SWITCH, S75 6412.19-00
 BLOWER SWITCH, S75 6450.5-02
 BRAKE FLUID LEVEL SWITCH, B18 6200.0-01
 BRAKE LIGHT SWITCH, S30 6325.0-00
 BRAKE LIGHT, LEFT, H24 6325.0-01
 BRAKE LIGHT, RIGHT, H31 6325.0-01
 BRAKE LIGHTS 6325.0-00
 BRAKE PAD SENSOR, LEFT FRONT, B16 6200.0-01
 BRAKE PAD SENSOR, RIGHT REAR, B17 6200.0-01
 CAMSHAFT ACTUATOR, B6208 1210.13-01
 CAMSHAFT POSITION SENSOR
 (CYLINDER IDENTIFICATION), B6204 1210.11-09
 CARBON CANISTER, B60 1210.11-10
 CD CHANGER, N22 6510.1-05
 CELLULAR TELEPHONE (PROVISIONS) 6561.0-00
 CENTRAL BODY ELECTRONICS (ZKE) 6100.0-00
 CHARGING SOCKET, X779 6332.0-00
 CHARGING SYSTEM 1230.0-00
 CHECK CONTROL MODULE, A4 6200.0-11
 CHIME MODULE, H10 6581.0-03
 CLUTCH SWITCH, S32 6571.0-03
 COMBINATION SWITCH, S7 6301.0-01
 COMBINATION SWITCH, S7 6312.0-00
 COMBINATION SWITCH, S7 6313.0-00
 COMPONENT LOCATION CHART 7000.0-00
 COMPONENT LOCATION VIEWS 7100.0-00
 COMPRESSOR CONTROL RELAY, K19 6450.5-05
 CONNECTOR VIEWS 8500.0-00



INDEX

CONTACT RING, C101	3234.0-01	EDC SWITCH, S105	3715.2-00
CRANKSHAFT POSITION/RPM SENSOR, B6203	1210.11-09	EDC VALVES, LEFT FRONT, Y401z	3715.2-02
CRANKSHAFT POSITION/RPM SENSOR, B6203	1210.13-04	EDC VALVES, LEFT REAR, Y403z	3715.2-02
CRASH CONTROL MODULE	6350.0-00	EDC VALVES, RIGHT FRONT, Y402z	3715.2-02
CRASH CONTROL MODULE, N17	6350.0-01	EDC VALVES, RIGHT REAR, Y404z	3715.2-02
CRUISE CONTROL (TEMPOMAT)	6571.0-00	ELECTRIC POWER PROTECTION RELAY, K15	6100.0-00
CRUISE CONTROL ACTUATOR (TEMPOMAT), M25	6571.0-02	ELECTRIC STEERING COLUMN ADJUSTMENT	3231.0-00
CRUISE CONTROL MODULE (TEMPOMAT), A8	6571.0-01	ELECTRIC STEERING COLUMN ADJUSTMENT RELAY, K87	3231.0-00
CRUISE CONTROL SWITCH, S28	6571.0-00	ELECTROCHROMIC REAR VIEW MIRROR, A22z	5116.0-02
DATA LINK	0670.5-00	ELECTRONIC IMMOBILIZER CONTROL MODULE (EWS II), A836	6135.0
DATA LINK CONNECTOR, D100	0670.5-00	ELECTRONIC SHOCK ABSORBER CONTROL (EDC III+)	3715.2-00
DAYTIME RUNNING LIGHTS CODING DIODE, V4	6300.0-04	ELECTRONIC SHOCK ABSORBER CONTROL MODULE (EDC), A413	3715.2
DIMMER, N3	6300.0-00	ELECTRONIC TRANSMISSION CONTROL (AGS: GS 7.32/A5S 310Z)	2460.8-00
DIVERSITY, N404	6424.0-02	ELECTRONIC TRANSMISSION CONTROL (AGS: GS 9.22/A5S 560Z)	2460.7-00
DOOR HANDLE SWITCH, DRIVER'S, S48	5120.0-00	ELECTRONIC TRANSMISSION CONTROL (EGS A4S 310R)	2460.2-00
DOOR JAMB SWITCH, DRIVER'S, S14	6330.0-00	ELECTRONIC TRANSMISSION ENGINE SPEED SENSOR (EGS), Y8516	2460.2-01
DOOR JAMB SWITCH, LEFT REAR, S16	6330.0-00	ENGINE CONTROL MODULE (DME), A6000	1210.11-00
DOOR JAMB SWITCH, PASSENGER'S, S13	6330.0-00	ENGINE CONTROL MODULE (DME), A6000	1210.13-00
DOOR LOCK HEATER, E48	5120.0-01	ENGINE CONTROL MODULE RELAY, K6300	1210.11-00
DOOR LOCK MOTOR, DRIVER'S, M12	5126.0-04	ENGINE CONTROL MODULE RELAY, K6300	1210.13-00
DOOR LOCK MOTOR, LEFT REAR, M15	5126.0-04	ENGINE CONTROL RELAY (ABS/ASC), K94	3450.0-02
DOOR LOCK MOTOR, PASSENGER'S, M13	5126.0-04	ENGINE CONTROL RELAY (ABS/ASC), K94	3450.5-02
DOOR LOCK MOTOR, RIGHT REAR, M14	5126.0-04	ENGINE CONTROL SYSTEM (DME M3.3.1, 6-CYLINDER M50)	1210.13-00
DOOR LOCK SWITCH, DRIVER'S, S47	5126.0-00	ENGINE CONTROL SYSTEM (DME M3.3, 8-CYLINDER M60)	1210.11-00
DOOR LOCK SWITCH, PASSENGER'S, S49	5126.0-00	ENGINE COOLANT LEVEL SWITCH, S63	6200.0-11
DOUBLE PANEL POWER SUN ROOF SENSOR I, B54	5410.2-02		
DOUBLE PANEL POWER SUN ROOF SENSOR II, B55	5410.2-02		
DOUBLE PANEL POWER SUNROOF CONTROL MODULE, A99	5410.2-00		
DOUBLE PANEL POWER SUNROOF (ZKE)	5410.2-00		
DRIVE-AWAY PROTECTION (EWS II)	6135.0-00		
DWA LED, V5	6571.3-01		
E-BOX FAN	1290.0-00		
E-BOX FAN, M6506	1290.0-00		
EDC RELAY, K67	3715.2-00		



INDEX

ENGINE COOLANT TEMPERATURE SENSOR, B6236	1210.11-06
ENGINE COOLANT TEMPERATURE SENSOR, B6236	1210.13-05
ENGINE HOOD SWITCH (DWA), S21	6575.3-04
EVAPORATIVE EMISSION VALVE, Y6120	1210.13-01
EVAPORATOR TEMPERATURE SENSOR, B14	6450.5-03
FOG LIGHT SWITCH, S10	6312.0-01
FOG LIGHT, LEFT, E26	6312.0-02
FOG LIGHT, RIGHT, E27	6312.0-02
FRESH AIR FLAP MOTOR, M36	6450.5-04
FRONT CIGAR LIGHTER LIGHT, E29	6300.0-00
FRONT CIGAR LIGHTER, E28	6332.0-01
FRONT CONSOLE WINDOW SWITCH ASSEMBLY, S40	5133.0-00
FRONT DOME LIGHT/MAP READING ASSEMBLY, E34	6330.0-01
FRONT POWER DISTRIBUTION BOX, P90	0670.2-00
FUEL INJECTION VALVE, CYL. 1, Y6101	1210.11-01
FUEL INJECTION VALVE, CYL. 1, Y6101	1210.13-06
FUEL INJECTION VALVE, CYL. 2, Y6102	1210.11-01
FUEL INJECTION VALVE, CYL. 2, Y6102	1210.13-06
FUEL INJECTION VALVE, CYL. 3, Y6103	1210.11-01
FUEL INJECTION VALVE, CYL. 3, Y6103	1210.13-06
FUEL INJECTION VALVE, CYL. 4, Y6104	1210.11-01
FUEL INJECTION VALVE, CYL. 4, Y6104	1210.13-06
FUEL INJECTION VALVE, CYL. 5, Y6105	1210.11-01
FUEL INJECTION VALVE, CYL. 5, Y6105	1210.13-06
FUEL INJECTION VALVE, CYL. 6, Y6106	1210.11-01
FUEL INJECTION VALVE, CYL. 6, Y6106	1210.13-06
FUEL INJECTION VALVE, CYL. 7, Y6107	1210.11-01
FUEL INJECTION VALVE, CYL. 8, Y6108	1210.11-01
FUEL LEVEL SENSOR, B6	6200.0-07
FUEL PUMP RELAY, CYL. 1-6, K6301	1210.13-02
FUEL PUMP RELAY, K6301w	1210.11-04
FUEL PUMP, M2	1210.11-04
FUEL PUMP, M2	1210.13-02
FUSE CHART	0670.1-00
FUSE DETAILS	0670.3-00

FUSIBLE LINK, F0	0670.2-00
FUSIBLE LINK, F97	0670.2-00
GAS FILLER LOCK MOTOR, M16	5126.0-05
GENERAL MODULE, A1	6100.0-00
GENERATOR, G6509	1230.0-00
GLOVE BOX LIGHT SWITCH, S37	6332.0-00
GLOVE BOX LIGHT, E42	6332.0-00
GRADIENT MONITOR (DWA), B28	6575.3-06
GROUND DISTRIBUTION	0670.4-00
HALL EFFECT CAMSHAFT SENSOR, B6209	1210.13-01
HAZARD FLASHER RELAY, K16	6313.0-00
HAZARD SWITCH, S18	6313.0-01
HEADLIGHT/FOG LIGHT WASHER PUMP, M7	6167.0-02
HEADLIGHT/FOGLIGHT CLEANING MODULE (SRA), N6	6167.0-02
HEADLIGHTS/FOG LIGHTS	6312.0-00
HEADREST MOTOR, DRIVER'S, M54	5200.0-00
HEADREST POTENTIOMETER, R5	5200.1-04
HEAT EXCHANGER TEMPERATURE SENSOR, LH, B11	6450.5-03
HEAT EXCHANGER TEMPERATURE SENSOR, RH, B12	6450.5-03
HEATED OXYGEN SENSOR, B6200	1210.13-04
HEATED OXYGEN SENSOR, CYL. 1-4, B6210w	1210.11-05
HEATED OXYGEN SENSOR, CYL. 5-8, B6220w	1210.11-05
HEATED SEATS	5203.0-00
HEIGHT MOTOR, PASSENGER'S SEAT, M59	5200.0-03
HIFI AMPLIFIER, A18	6510.1-00
HIGH BEAM LIGHT, LEFT, E11	6312.0-01
HIGH BEAM LIGHT, RIGHT, E12	6312.0-01
HIGH LEVEL STOP LIGHT, H34	6325.0-01
HIGH RANGE SPEAKER, LEFT FRONT, H59	6510.1-02
HIGH RANGE SPEAKER, LEFT REAR, H56	6510.1-04
HIGH RANGE SPEAKER, RIGHT FRONT, H50	6510.1-03
HIGH RANGE SPEAKER, RIGHT REAR, H53	6510.1-04
HIGH SPEED RELAY, K22	6454.0-00
HORN	6133.0-00



INDEX

HORN RELAY, K2	6133.0-00	(IHKR/F3)	6450.5-00
HORN SWITCH, S4	6133.0-00	INTERIOR ACCESSORIES	6332.0-00
HORN, LEFT, H2	6133.0-00	INTERIOR LIGHT, LEFT REAR, E39	6330.0-01
HORN, RIGHT, H3	6133.0-00	INTERIOR LIGHT, RIGHT REAR, E40	6330.0-01
HOT FILM AIR MASS METER, B6217	1210.13-05	INTRODUCTION	0110.0-00
IDLE SPEED CONTROL VALVE, Y6130	1210.11-00	JET HEATER THERMOSWITCH, S198	6169.0-00
IDLE SPEED CONTROL VALVE, Y6130	1210.13-01	KICK-DOWN SWITCH, S8507	2460.2-05
IGNITION COIL, CYL. 1, T6151	1210.11-02	KICK-DOWN SWITCH, S8507	2460.7-03
IGNITION COIL, CYL. 1, T6151	1210.13-03	KICK-DOWN SWITCH, S8507	2460.8-03
IGNITION COIL, CYL. 2, T6152	1210.11-02	KNOCK SENSOR, CYL. 1-2, B6241	1210.11-07
IGNITION COIL, CYL. 2, T6152	1210.13-03	KNOCK SENSOR, CYL. 1-3, B6241w	1210.13-04
IGNITION COIL, CYL. 3, T6153	1210.11-02	KNOCK SENSOR, CYL. 3-4, B6242	1210.11-07
IGNITION COIL, CYL. 3, T6153	1210.13-03	KNOCK SENSOR, CYL. 4-6, B6242w	1210.13-04
IGNITION COIL, CYL. 4, T6154	1210.11-02	KNOCK SENSOR, CYL. 5-6, B6243	1210.11-07
IGNITION COIL, CYL. 4, T6154	1210.13-03	KNOCK SENSOR, CYL. 7-8, B6244	1210.11-07
IGNITION COIL, CYL. 5, T6155	1210.11-03	LAMP CONTROL MODULE, A3	6301.0-00
IGNITION COIL, CYL. 5, T6155	1210.13-03	LAMP MONITOR (LKM)	6301.0-00
IGNITION COIL, CYL. 6, T6156	1210.11-03	LICENSE PLATE LIGHT, LEFT, E43	6320.0-00
IGNITION COIL, CYL. 6, T6156	1210.13-03	LICENSE PLATE LIGHT, RIGHT, E44	6320.0-00
IGNITION COIL, CYL. 7, T6157	1210.11-03	LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS	6320.0-00
IGNITION COIL, CYL. 8, T6158	1210.11-03	LIFT GATE LIMIT SWITCH, S171	5126.0-07
IGNITION SWITCH, S2	0670.2-04	LIFT GATE LOCK SWITCH, S167	5126.0-06
IHKR/F3 CONTROL PANEL, S134w	6450.5-01	LIFT GATE MOTOR, M97	5126.0-07
IHKR/F3 SWITCHING UNIT, S135w	6450.5-02	LIFT GATE SWITCH, S172	6320.0-02
INDEX	0100.0-00	LIGHT ASSEMBLY, LEFT FRONT, E9001	6313.0-02
INERTIA SWITCH, S27	6350.0-01	LIGHT ASSEMBLY, LEFT REAR, E16	6313.0-02
INFRARED LOCKING (IRS)	6610.0-00	LIGHT ASSEMBLY, RIGHT FRONT, E9000	6313.0-02
INSTRUMENT CLUSTER, A2w	6200.0-00	LIGHT ASSEMBLY, RIGHT REAR, E17	6313.0-02
INSTRUMENT CLUSTER/CHECK CONTROL (K/CC)	6200.0-00	LIGHT SWITCH DETAILS	6300.0-00
INTAKE AIR TEMPERATURE SENSOR, B6205	1210.13-05	LIGHT SWITCH, S8	6300.0-00
INTEGRATED CLIMATE REGULATION		LIGHT SWITCH, S8	6312.0-00
CONTROL MODULE (IHKR/F3), A87w	6412.19-00	LIGHT SWITCH, S8	6314.0-00
INTEGRATED CLIMATE REGULATION		LOW BEAM LIGHT, LEFT, E13	6312.0-02
CONTROL MODULE (IHKR/F3), A87w	6450.5-00	LOW BEAM LIGHT, RIGHT, E14	6312.0-02
INTEGRATED CLIMATE REGULATION WITH FILTER		LOW RANGE SPEAKER, LEFT FRONT, H58	6510.1-02



LOW RANGE SPEAKER, LEFT REAR, H57	6510.1-04	PARK HEATING/VENTILATION RELAY BOX, A15	6412.19-00
LOW RANGE SPEAKER, RIGHT REAR, H52	6510.1-04	PARK LIGHT RELAY, LEFT, K26	6314.0-00
LOW RANGE, RIGHT FRONT SPEAKER, H51	6510.1-03	PARK LIGHT, LEFT, E15	6314.0-01
LUMBAR SUPPORT	5212.0-00	PARK LIGHT, RIGHT, E19	6314.0-01
MAKEUP MIRROR LIGHT, DRIVER'S, E35	6332.0-00	PARK LIGHT/LICENSE PLATE LIGHT RELAY, RIGHT, K25	6314.0-00
MAKEUP MIRROR LIGHT, PASSENGER'S, E36	6332.0-00	PARK LIGHT/LICENSE PLATE LIGHT RELAY, RIGHT, K25	6320.0-00
MAKEUP MIRROR SWITCH, DRIVER'S, S77	6332.0-00	PARK VENTILATION WITH IHKR/F3	6412.19-00
MAKEUP MIRROR SWITCH, PASSENGER'S, S78	6332.0-00	PARK/TAIL/UNDERHOOD LIGHTS	6314.0-00
MEMORY MIRRORS CONTROL SWITCH, S12	5200.1-06	POWER DISTRIBUTION	0670.2-00
MEMORY SEAT MIRRORS SWITCH, S57	5200.1-01	POWER DISTRIBUTION CHART	0670.0-00
MICROPHONE, B400	6561.0-00	POWER MIRRORS	5116.0-00
MIDRANGE SPEAKER, LEFT FRONT, H55	6510.1-02	POWER SEATS	5200.0-00
MIDRANGE SPEAKER, RIGHT FRONT, H54	6510.1-03	PRESSURE SWITCH, B8y	6450.5-05
MIRROR CONTROL SWITCH, S17	5116.0-00	PRESSURE SWITCH, B8y	6450.5-05
MOTOR DRIVE I DOUBLE PANEL POWER SUNROOF, M87	5410.2-02	PRESSURE SWITCH, B8y	6454.0-01
MOTOR DRIVE II DOUBLE PANEL POWER SUNROOF, M88	5410.2-02	PRESSURE SWITCH, B9508	6450.5-05
MOVEMENT MOTOR, PASSENGER'S SEAT, M60	5200.0-02	PRESSURE SWITCH, B9508	6454.0-00
MULTI-FUNCTION CLOCK	6213.2-00	PRESSURE SWITCH, B9y	6454.0-00
MULTI-FUNCTION CLOCK, N10	6213.2-00	PROGRAM SWITCH, S8503	2460.2-02
NORMAL SPEED RELAY, K21	6454.0-00	PROGRAM SWITCH, S8503	2460.7-02
OIL LEVEL SENSOR, B6230	6200.0-12	PROGRAM SWITCH, S8503	2460.8-02
OIL PRESSURE SWITCH, B6231	1290.0-00	QUARTER WINDOW SWITCH (DWA), LEFT REAR, R21	6575.3-06
OIL PRESSURE SWITCH, B6231	6200.0-02	QUARTER WINDOW SWITCH (DWA), RIGHT REAR R22	6575.3-06
ON-BOARD COMPUTER (BCIV)	6581.0-00	RADIO PROVISIONS	6510.2-00
ON-BOARD COMPUTER HORN RELAY, K91	6575.2-00	RADIO, N9	6510.1-00
ON-BOARD COMPUTER HORN RELAY, K91	6581.0-01	RADIO/HIFI	6510.1-00
ON-BOARD COMPUTER TEMPERATURE SENSOR, B21	6213.2-00	REAR DEFOGGER I, E9	6424.0-00
ON-BOARD COMPUTER, N4	6581.0-00	REAR DEFOGGER RELAY, K13	6424.0-00
OUTSIDE TEMPERATURE SENSOR, B13	6450.5-03	REAR DEFOGGER/ANTENNA, E10	6424.0-00
OXYGEN SENSOR RELAY, K6303	1210.11-05	REAR LID/REAR WINDOW SERVO OPENING MODULE, K70w	5126.0-07
OXYGEN SENSOR RELAY, K6303	1210.13-04	REAR POWER DISTRIBUTION BOX, P91	0670.2-07
PARK BRAKE SWITCH, S31	6200.0-00		



INDEX

REAR RIGHT DOOR JAMB SWITCH, S15	6330.0-00	SEAT OCCUPANCY DETECTOR, A113	3234.0-00
REAR WINDOW DEFOGGER/ANTENNA	6424.0-00	SEAT/MIRROR MEMORY CONTROL MODULE, A21	5200.1-00
REAR WINDOW LIMIT SWITCH, S170	5126.0-07	SEAT/MIRROR MEMORY SYSTEM (SM/SPM)	5200.1-00
REAR WINDOW MOTOR, M96	5126.0-07	SEATBACK HEATER, DRIVER'S, E56	5203.0-00
REAR WINDOW OPENING SWITCH, S147	6162.0-01	SEATBACK HEATER, PASSENGER'S, E59	5203.0-00
REAR WINDOW WASHER PUMP, M95	6162.0-01	SEATBACK POTENTIOMETER, R7	5200.1-03
REAR WINDOW WIPER MOTOR, M94	6162.0-01	SEATBACK RECLINER MOTOR, DRIVER'S, M53	5200.0-00
REAR WINDOW WIPER/WASHER CONTROL	6162.0-00	SEATBACK RECLINER MOTOR, PASSENGER'S, M58	5200.0-03
REAR WIPER/WASHER FLUID LEVEL SWITCH, S176	6200.0-11	SECONDARY AIR PUMP RELAY, K6304	1210.11-11
REAR WIPER/WASHER INTERVAL CONTROL MODULE, A36	6162.0-00	SECONDARY AIR PUMP VALVE, B6163	1210.11-11
RECIRCULATION FLAP MOTOR, M40	6450.5-04	SECONDARY AIR PUMP, M63	1210.11-11
RELAY MODULE, A5	6100.0-05	SHIFT LOCK, S8522	2460.2-06
REMOTE LOCKING RECEIVER, N13y	6610.0-00	SHIFT LOCK, Y8522	2460.7-03
RESISTOR, R6240	0670.4-24	SIDE MEMORY MIRROR, DRIVER'S, Y9	5200.1-07
RESISTOR, R6240	0670.4-27	SIDE MEMORY MIRROR, PASSENGER'S, Y10	5200.1-08
REVERSING LIGHT SWITCH, S8524	6322.0-00	SIDE MIRROR, DRIVER'S, Y5	5116.0-01
SEAT BELT SWITCH, DRIVER'S, S58	3234.0-01	SIDE MIRROR, PASSENGER'S, Y6	5116.0-01
SEAT BELT SWITCH, PASSENGER'S, S59	3234.0-01	SLIP CONTROL (ABS)	3450.0-00
SEAT CONTROL SWITCH, DRIVER'S SEAT, S51	5200.0-00	SLIP CONTROL 5 (ASC 5)	3450.5-00
SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56	5200.0-02	SLIP CONTROL MODULE (ABS), A7	3450.0-00
SEAT CUSHION MOVEMENT POTENTIOMETER, R9	5200.1-02	SLIP CONTROL MODULE (ABS/ASC), A52	3450.5-00
SEAT CUSHION REAR HEIGHT POTENTIOMETER, R8	5200.1-02	SPEAKER, LEFT FRONT, H41	6561.1-00
SEAT CUSHION TILT MOTOR, DRIVER'S, M50	5200.0-01	SPEED SENSOR - ABS, LEFT REAR, B4	3450.0-04
SEAT CUSHION TILT MOTOR, PASSENGER'S, M61	5200.0-02	SPEED SENSOR - ABS, LEFT FRONT, B2	3450.0-04
SEAT HEADREST MOTOR, PASSENGER'S, M57	5200.0-03	SPEED SENSOR - ABS, LEFT FRONT, B2	3450.5-06
SEAT HEATER SWITCH, DRIVER'S SEAT, S53	5203.0-00	SPEED SENSOR - ABS, LEFT REAR, B4	3450.5-06
SEAT HEATER SWITCH, PASSENGER'S SEAT, S54	5203.0-00	SPEED SENSOR - ABS, RIGHT FRONT, B1	3450.0-04
SEAT HEATER, DRIVER'S, E57	5203.0-00	SPEED SENSOR - ABS, RIGHT FRONT, B1	3450.5-06
SEAT HEATER, PASSENGER'S, E58	5203.0-00	SPEED SENSOR - ABS, RIGHT REAR, B3	3450.0-04
SEAT HEIGHT MOTOR, DRIVER'S, M52	5200.0-00	SPEED SENSOR - ABS, RIGHT REAR, B3	3450.5-06
SEAT HEIGHT POTENTIOMETER, R6	5200.1-03	SPlice LOCATION VIEWS	8000.0-00
SEAT LUMBAR SUPPORT MOTOR, DRIVER'S, M55	5212.0-00	START	1240.0-00
SEAT LUMBAR SWITCH, DRIVER'S, S52	5212.0-00	STARTER IMMOBILIZATION RELAY, K1w	1240.0-01
SEAT MOVEMENT MOTOR, DRIVER'S, M51	5200.0-01	STARTER, M6510	1240.0-01
		STEERING COLUMN LENGTH ADJUST MOTOR, M82	3231.0-00



STEERING COLUMN POSITION SWITCH, S119z	3231.0-00	TRUNK LID SWITCH, S61	6320.0-01
SUNROOF MOTOR, M24	5410.0-03	TRUNK LIGHT ASSEMBLY, LEFT, E46	6320.0-01
SUNROOF POSITION SWITCH, S39	5410.0-02	TRUNK LIGHT ASSEMBLY, RIGHT, E47	6320.0-01
SUNROOF SWITCH, S38	5410.0-02	TRUNK LIGHT, LEFT H90	6320.0-01
SUNROOF SWITCH, S38	5410.2-01	TRUNK LIGHT, RIGHT, H91	6320.0-01
SUPPLEMENTAL RESTRAINT SYSTEM		TRUNK LOCK MOTOR, M17	5126.0-05
CONTROL MODULE, A12	3234.0-00	TURN LIGHT, LEFT FRONT, H7	6313.0-02
SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)	3234.0-00	TURN LIGHT, LEFT REAR, H6	6313.0-02
SUPPRESSION FILTER, C900	6424.0-01	TURN LIGHT, RIGHT FRONT, H4	6313.0-02
SYMBOLS	0140.0-00	TURN LIGHT, RIGHT REAR, H5	6313.0-02
TAIL LIGHT, LEFT, H25	6314.0-01	TURN/HAZARD LIGHTS	6313.0-00
TAIL LIGHT, RIGHT, H30	6314.0-01	UNLOADER RELAY, TERMINAL 15, K9	0670.2-06
TELEPHONE HANDSET, U4	6561.0-01	UNLOADER RELAY, TERMINAL 61, K61	1230.0-00
TELEPHONE INTERFACE US, A192	6561.0-01	UNLOADER RELAY, TERMINAL R, K3	0670.2-06
TELEPHONE TRANSCEIVER, H38	6561.0-00	VALVE RELAY (ABS/ASC), K95	3450.0-02
TEMPERATURE SWITCH, B6235	1290.0-00	VALVE RELAY (ABS/ASC), K95	3450.5-02
TEMPERATURE SWITCH, S36	6454.0-00	VEHICLE SPEED SENSOR, B10	6200.0-05
THIGH SUPPORT MOTOR, DRIVER'S, M65	5200.0-04	WASHER FLUID LEVEL SWITCH, S64	6200.0-11
THIGH SUPPORT MOTOR, PASSENGER'S, M66	5200.0-04	WASHER JET HEATER, LEFT, E51	6169.0-00
THIGH SUPPORT POTENTIOMETER, R15	5200.0-06	WASHER JET HEATER, RIGHT, E52	6169.0-00
THIGH SUPPORT SWITCH, DRIVER'S, S93	5200.0-04	WASHER PUMP, M4	6160.0-00
THIGH SUPPORT SWITCH, PASSENGER'S, S94	5200.0-04	WATER VALVE ASSEMBLY, Y4	6450.5-01
THROTTLE FLAP HEATER, E104	3450.5-04	WHEEL CAMBER CONTROL MODULE, B22	6200.0-13
THROTTLE POSITION SENSOR, R6252	1210.11-06	WINDOW LIMIT SWITCH, DRIVER'S, S43	5133.0-01
THROTTLE POSITION SENSOR, R6252	1210.13-05	WINDOW LIMIT SWITCH, RIGHT REAR, S46	5133.0-03
TRANSMISSION CONTROL MODULE (AGS), A8600	2460.7-00	WINDOW LIMIT SWITCH, S44	5133.0-01
TRANSMISSION CONTROL MODULE (AGS), A8600	2460.8-00	WINDOW LIMIT SWITCH, S45	5133.0-03
TRANSMISSION CONTROL MODULE (EGS), A8500	2460.2-00	WINDOW MONITORING SWITCH	
TRANSMISSION POSITION INDICATOR LIGHT, E82	6300.0-03	(DWA), PASSENGER'S, S99	6575.3-06
TRANSMISSION VALVE UNIT, Y8505	2460.2-01	WINDOW MONITORING SWITCH	
TRANSMISSION VALVE UNIT, Y8505w	2460.7-01	(DWA), RIGHT REAR, S101	6575.3-06
TRANSMISSION VALVE UNIT, Y8505w	2460.8-01	WINDOW MONITORING SWITCH	
TRANSMITTER MODULE (EWS II), A835	6135.0-01	(DWA), LEFT REAR, S102	6575.3-06
TRUNK COMPARTMENT LIGHT, E32	6320.0-01	WINDOW MONITORING SWITCH (DWA), DRIVER'S,	
TRUNK LID LIGHT, E33w	6320.0-02	S100	6575.3-06



INDEX

WINDOW MOTOR, DRIVER'S, M21	5133.0-04
WINDOW MOTOR, LEFT REAR, M20	5133.0-04
WINDOW MOTOR, PASSENGER'S, M23	5133.0-05
WINDOW MOTOR, RIGHT REAR, M22	5133.0-05
WINDOW SWITCH, LEFT REAR, S41	5133.0-01
WINDOW SWITCH, RIGHT REAR, S42	5133.0-01
WINDSHIELD WASHER JET HEATERS	6169.0-00
WIPER MOTOR, M3	6160.0-01
WIPER RELAY, K11	6160.0-00
WIPER/WASHER SWITCH, S5	6160.0-00
WIPER/WASHER SWITCH, S5	6162.0-00
WIPER/WASHER SWITCH, S5	6167.0-01
ZKE CENTRAL LOCKING (ZV)	5126.0-00
ZKE DOOR LOCK HEATING (TSH)	5120.0-00
ZKE HEADLIGHT WASHER (SRA)	6167.0-00
ZKE INTERIOR LIGHTS CONTROL (IB)	6330.0-00
ZKE POWER WINDOWS (FH)	5133.0-00
ZKE SUNROOF (SHD)	5410.0-00
ZKE WIPER/WASHER CONTROL	6160.0-00

Schematics

The schematics divide the entire vehicle electrical system into individual circuits. Interacting electrical components are shown on one common schematic.

Switches and other components are represented in such a way that their general layout and function are self-explicit. They are arranged on the sheet such that the current path can be followed from positive (top) to negative (bottom).

Important: The components and wires are not drawn to scale. For instance, a lead with a length of over 1 m can be shown as a lead that is only a few cm long. To ensure clear arrangement, all connectors, lines branches and connected components from the fuses to the component and from the component to ground connection are not shown within the individual cells. If required, reference can be made to cells **0670.3 Fuse Details** and **0670.4 Ground Distribution** where all lines are illustrated with all plug connections, line branches and connected components.


All circuit symbols used are listed and explained in cell **0140.0 Symbols**.

In cell **7000.0 Component Location Chart** all important connectors, ground points and components are listed in tabular form. It provides a precise description of the component locations in the vehicle.

In cell **7100.0 Component Location Views** the location of connectors and components which are difficult to locate are shown in line arts or illustrations. In cell **8500.0 Connector Views** diagrams of connectors with more than 2 pins are illustrated.

Example


General conventions can be explained based on the following schematic example.

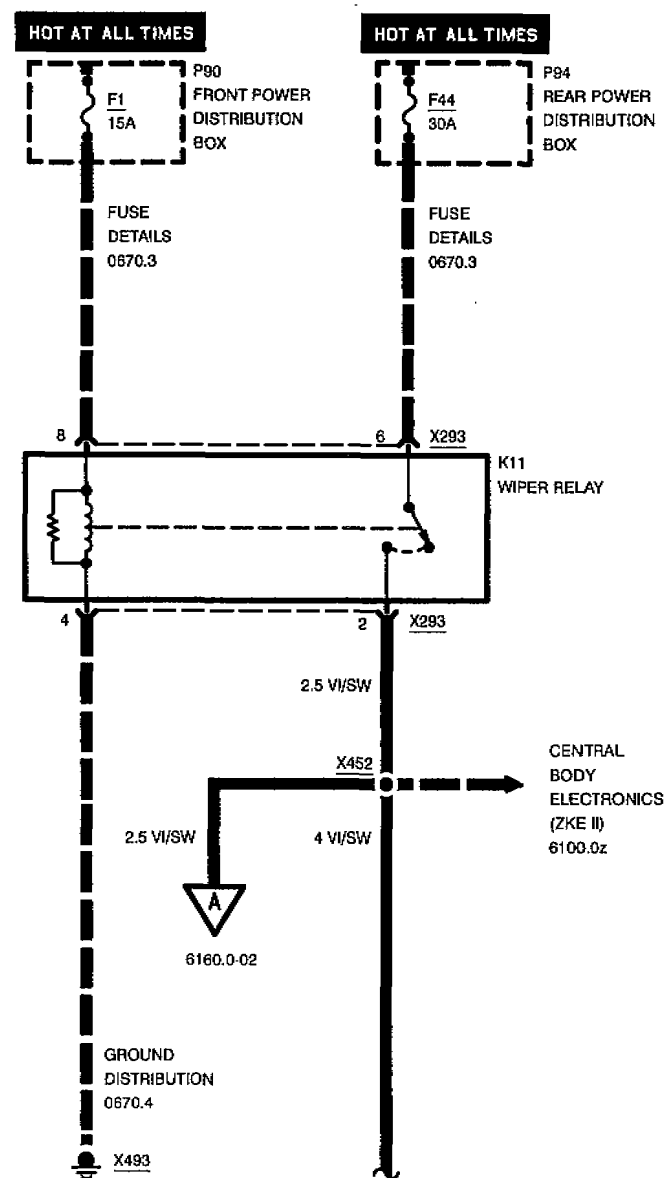



General Conventions

1. Switches and relays are always shown in rest position (e.g. K11).
2. A component shown in a dashed frame signifies that the component is illustrated only in part (e.g. P90 and P94).
3. A component shown in a completely drawn frame signifies that the component is illustrated in full (e.g. K11).
4. The dashed line between pin 8 and pin 6 of connector X293 indicates that both pins belong to connector X293.
5. The dashed line from fuse F1 to pin 8 of connector X293 shows the positive supply of relay K11. If required, refer to cell **0670.3 Fuse Details** at fuse F1 for the complete line progressing with plug connections, line branches, wire colors and cross sections.
6. The dashed line with an arrow at splice X452 indicates that several wires lead to splice X452. All lines leading to the connection are illustrated in cell **6100.0 Central Body Electronics (ZKE II)**. An interrupted line with an arrow indicates that only this one wire leads to another circuit.
7. The dashed line from pin 4 of connector X293 to ground X493 shows the ground supply for relay K11. If required, refer to cell **0670.4 Ground Distribution** at ground X493 for the complete line progression with all plug connections, line branches, wire colors and cross sections.
8. The interrupted line from splice X452 with an **A** in the open arrow is continued on page 6160.0-02. Termination of wire 4 VI/SW from splice X452 with a wavy line indicates that the wire is continued on the opposite page.

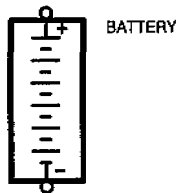


BATTERY



SOLENOID CONTROLLED VALVE
OR CLUTCH SOLENOID



VARIABLE RESISTANCE
SENSOR VARIABLE
CONTACT IS MOVED BY
AN EXTERNAL FORCE

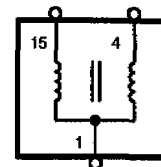

IGNITION COIL



FUSE DETAILS



HEATING ELEMENT



VARIABLE RESISTOR
RESISTANCE IS CHANGED BY
TEMPERATURE OR PRESSURE



CONTROL/POWER ELECTRONICS



FUSIBLE LINK



LOUDSPEAKER OR HORN



INDUCTIVE SENSOR



RADIO



CIRCUIT BREAKER



LIGHT



DIODE
CURRENT CAN FLOW
ONLY IN DIRECTION OF
ARROW



TRANSISTORIZED SWITCH



OXYGEN SENSOR



Q7
ZENER DIODE
TO REGULATE VOLTAGE



VEHICLE SPEED SENSOR



THERMO SWITCH



PERMANENT MAGNET MOTOR
ONE SPEED



PERMANENT MAGNET MOTOR
TWO SPEEDS







 




LIGHT EMITTING DIODE






KNOCK SENSOR

SYMBOLS

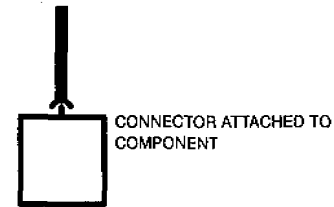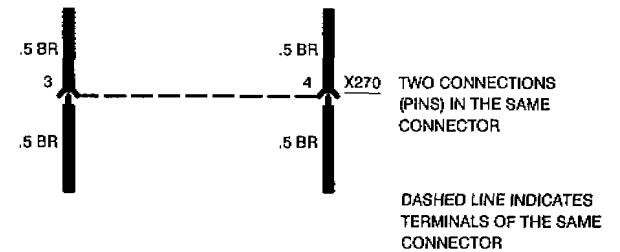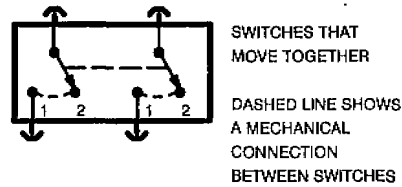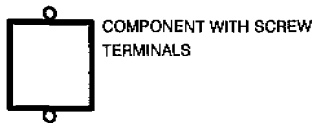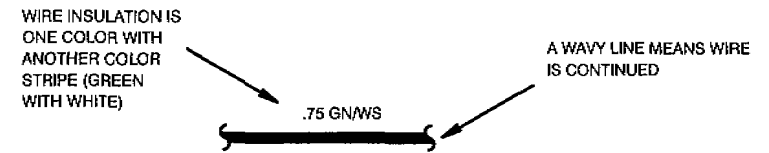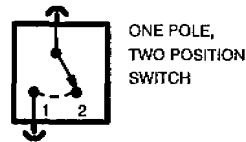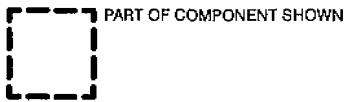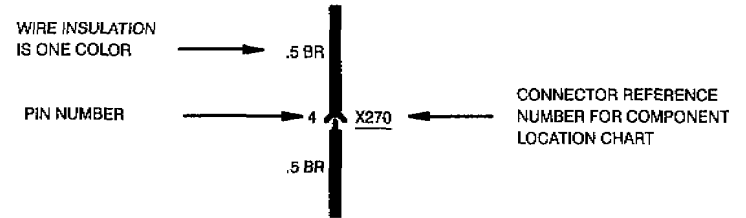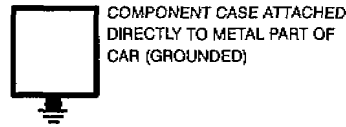


WIRE COLOR	
BL	BLUE
BR	BROWN
GE	YELLOW
GN	GREEN
GR	GRAY
OR	ORANGE
RS	PINK
RT	RED
SW	BLACK
VI	VIOLET
WS	WHITE
TR	TRANSPARENT

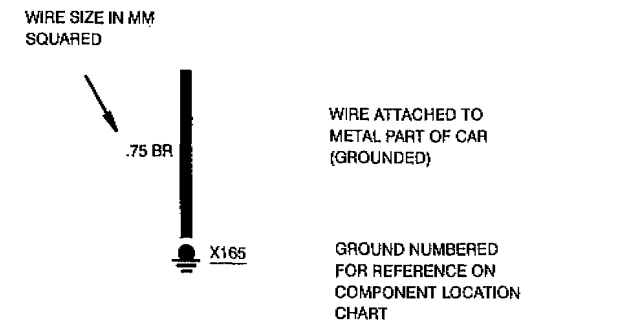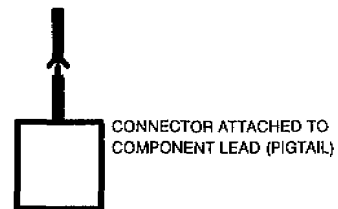


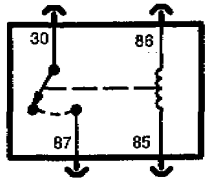


CONTACT RELAY

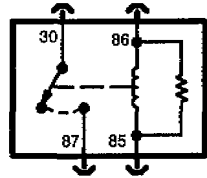

RELAY WITH RESISTOR ACROSS WINDING

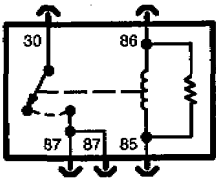

CONTACT RELAY WITH TWO OUTPUTS

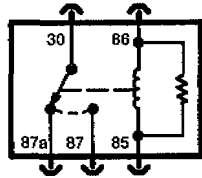

CHANGEOVER RELAY WITH TWO OUTPUTS

TERMINAL NUMBER DESCRIPTION


30 RELAY INPUT

85 RELAY OUTPUT (WINDING)


86 RELAY INPUT (WINDING)

87 RELAY OUTPUT (ENERGIZED)

87a RELAY OUTPUT (AT REST)

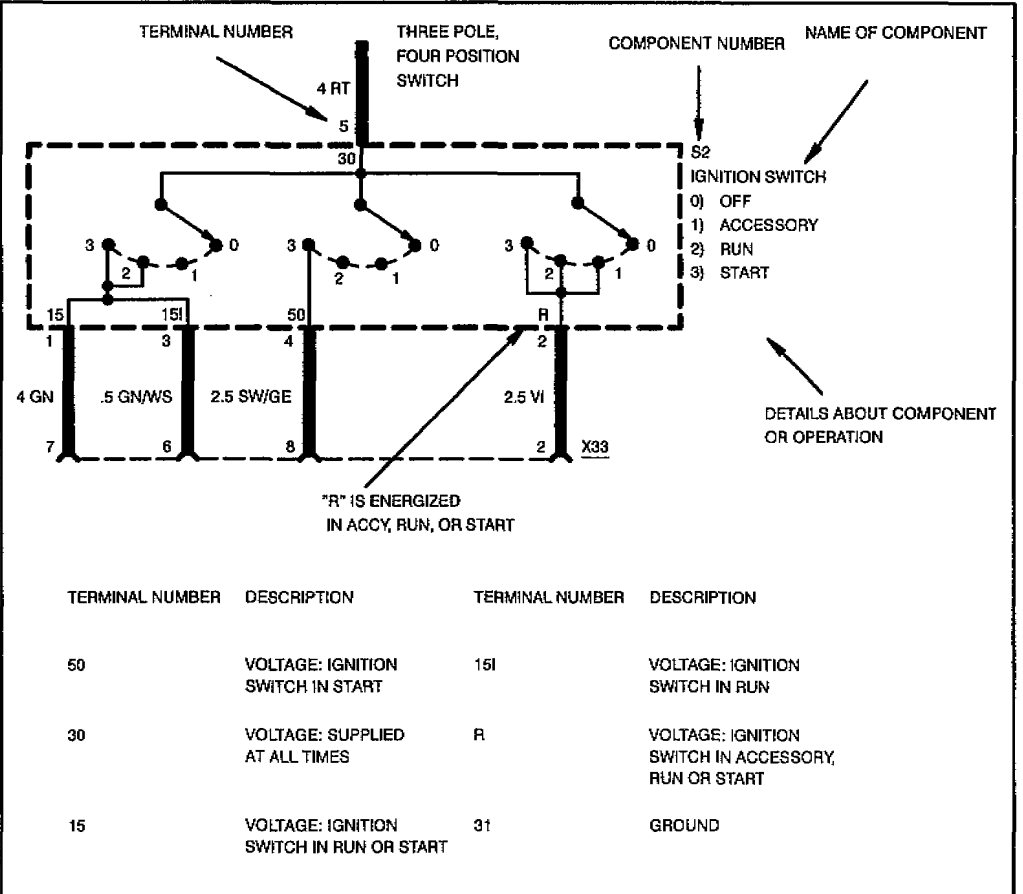

HOT AT ALL TIMES

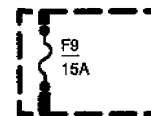 

INDICATES THAT FUSE 9 IS SUPPLIED WITH POWER AT ALL TIMES

POWER STATUS

HOT AT ALL TIMES

HOT IN RUN AND START

HOT IN ACCY, RUN AND START

DESCRIPTION

VOLTAGE: SUPPLIED AT ALL TIMES


VOLTAGE: IGNITION SWITCH IN RUN OR START

VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START







SYMBOLS

HOT IN ACCY, RUN AND START

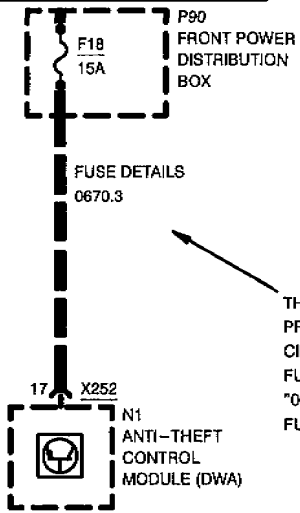


THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED TO FUSE 18 ARE SHOWN IN CELL "0670.3 FUSE DETAILS" AT FUSE 18

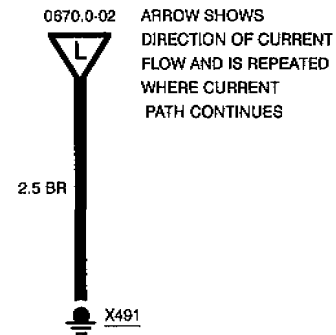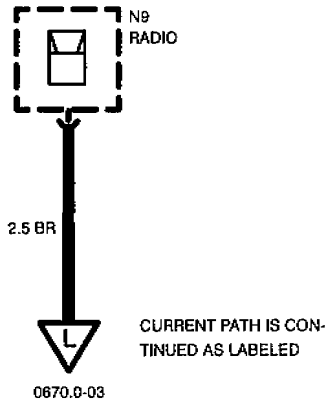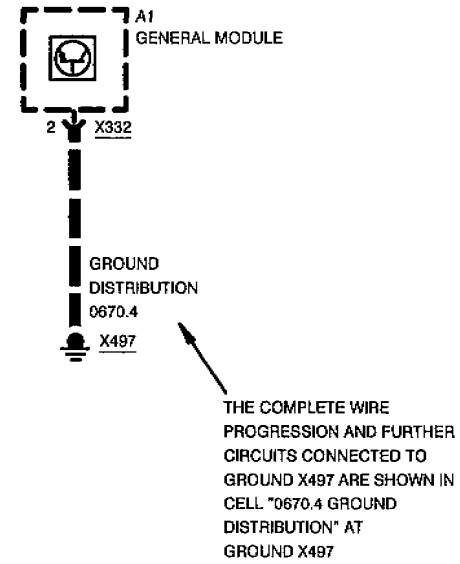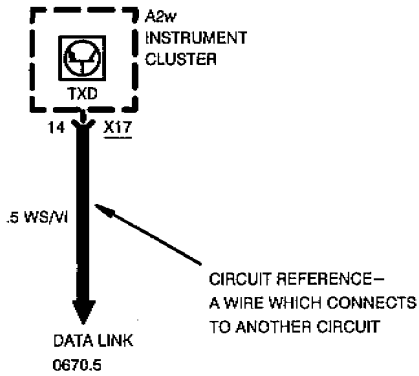



SYMBOLS

BLOCK DIAGRAM

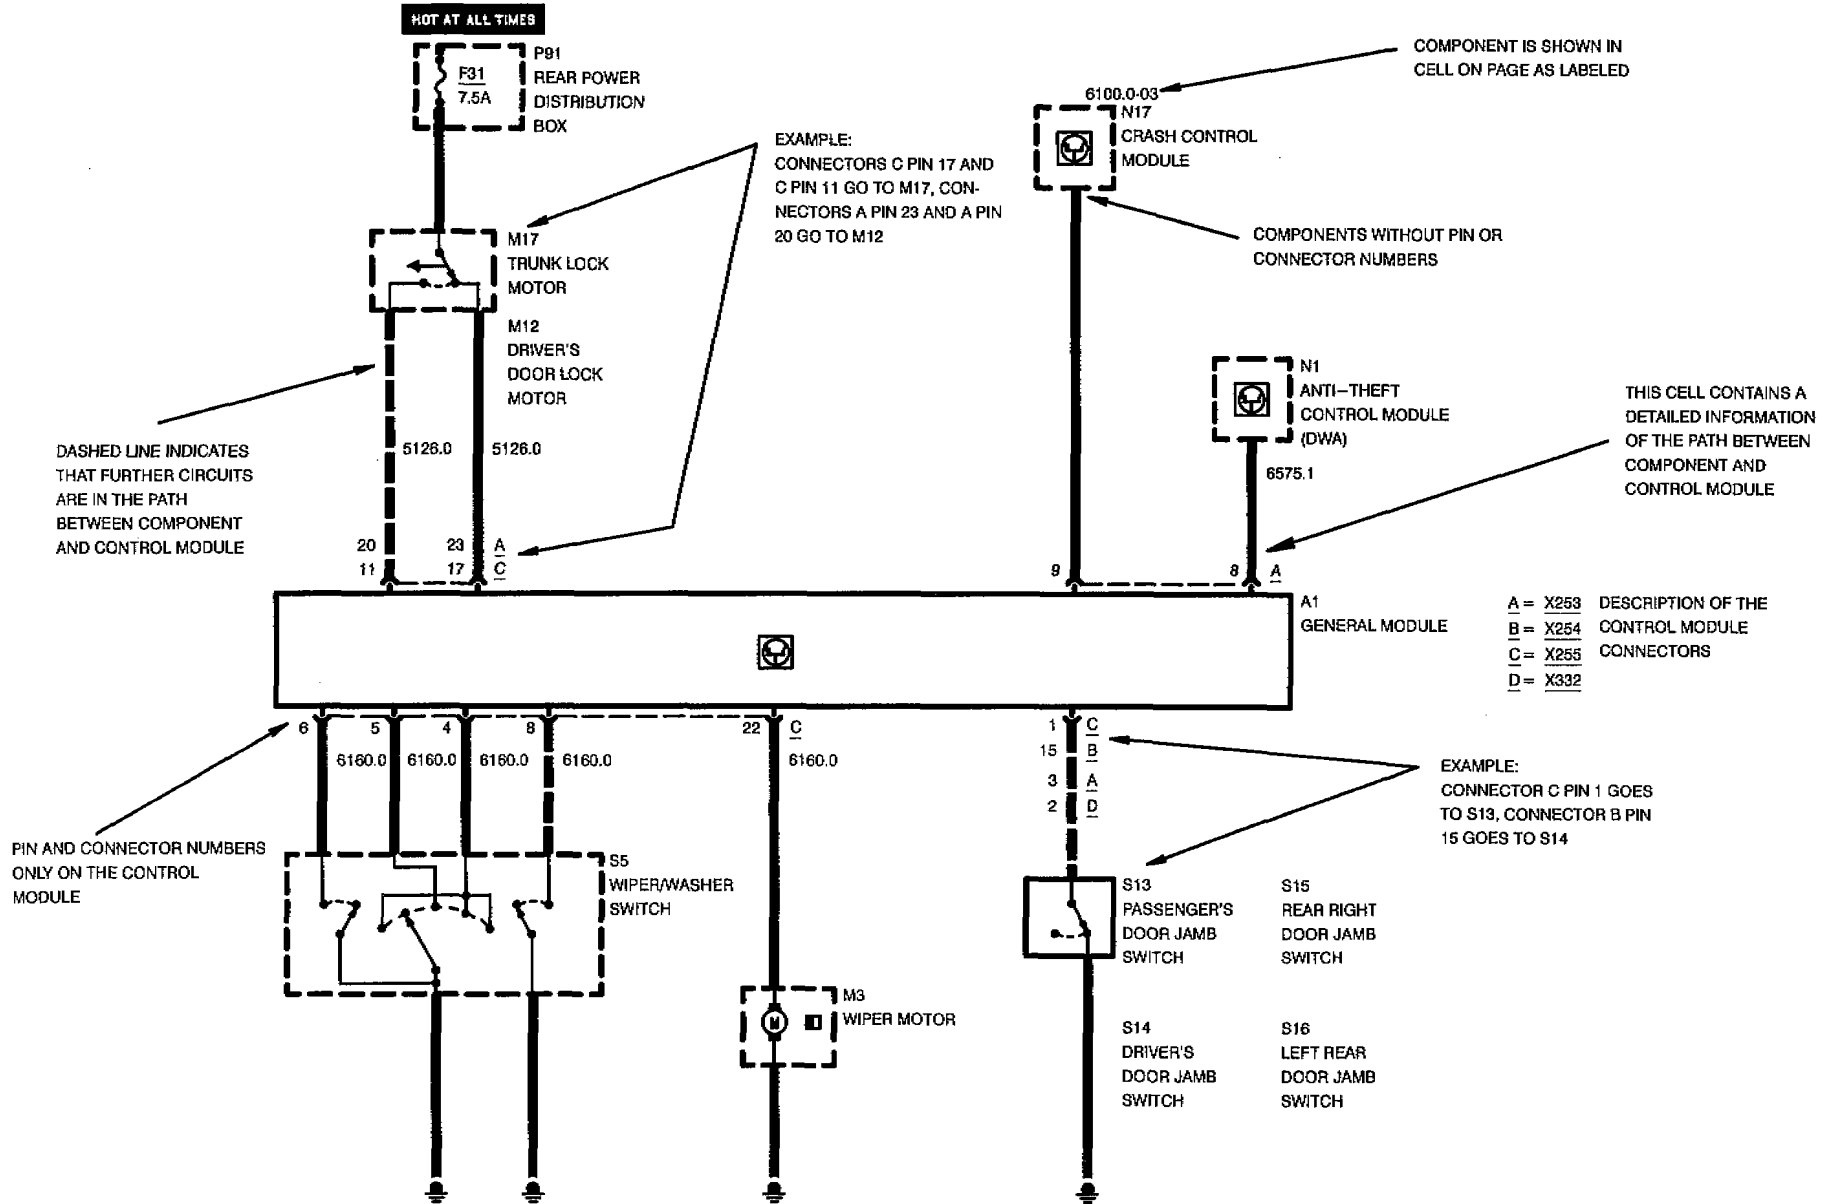



0670.0