



1986

BMW 635CSi

Electrical

Troubleshooting

Manual

BMW of North America, Inc.
Montvale, New Jersey

FOREWORD


In the interests of continuing technical development work we reserve the right to modify designs and equipment.

Printed in USA

©Copyright BMW of North America, Inc.

Not to be reproduced wholly or in part
without written permission of BMW of
North America, Inc.


PN 01 00 1 467 813

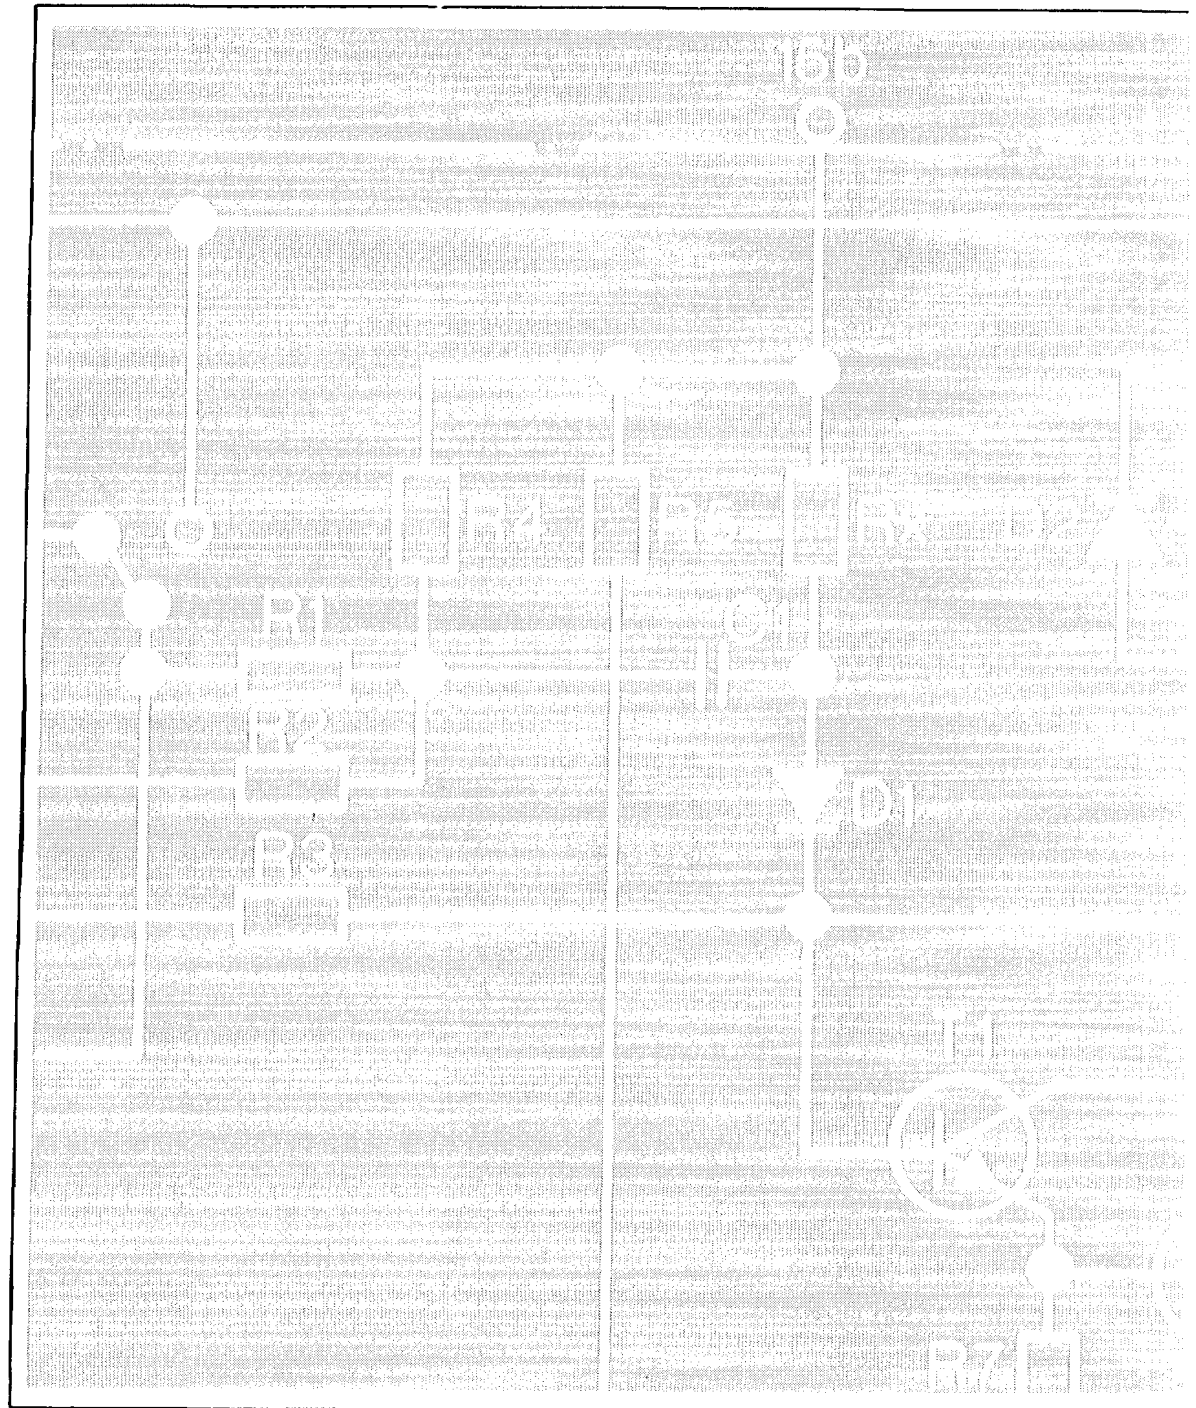

**1986
BMW 635CSi
Electrical
Troubleshooting
Manual**

CONTENTS

Index	2
How To Use This Manual	3
Symbols	4
Wire Size Conversion Chart ...	5
Systematic Troubleshooting ..	6
Connector Views	8500-0
Power Distribution Box	0670-0
Fuse Data	0670-1
Component Location Chart ...	9000-0
Component Location Views ..	7000-0
Splice Location Views	8000-0

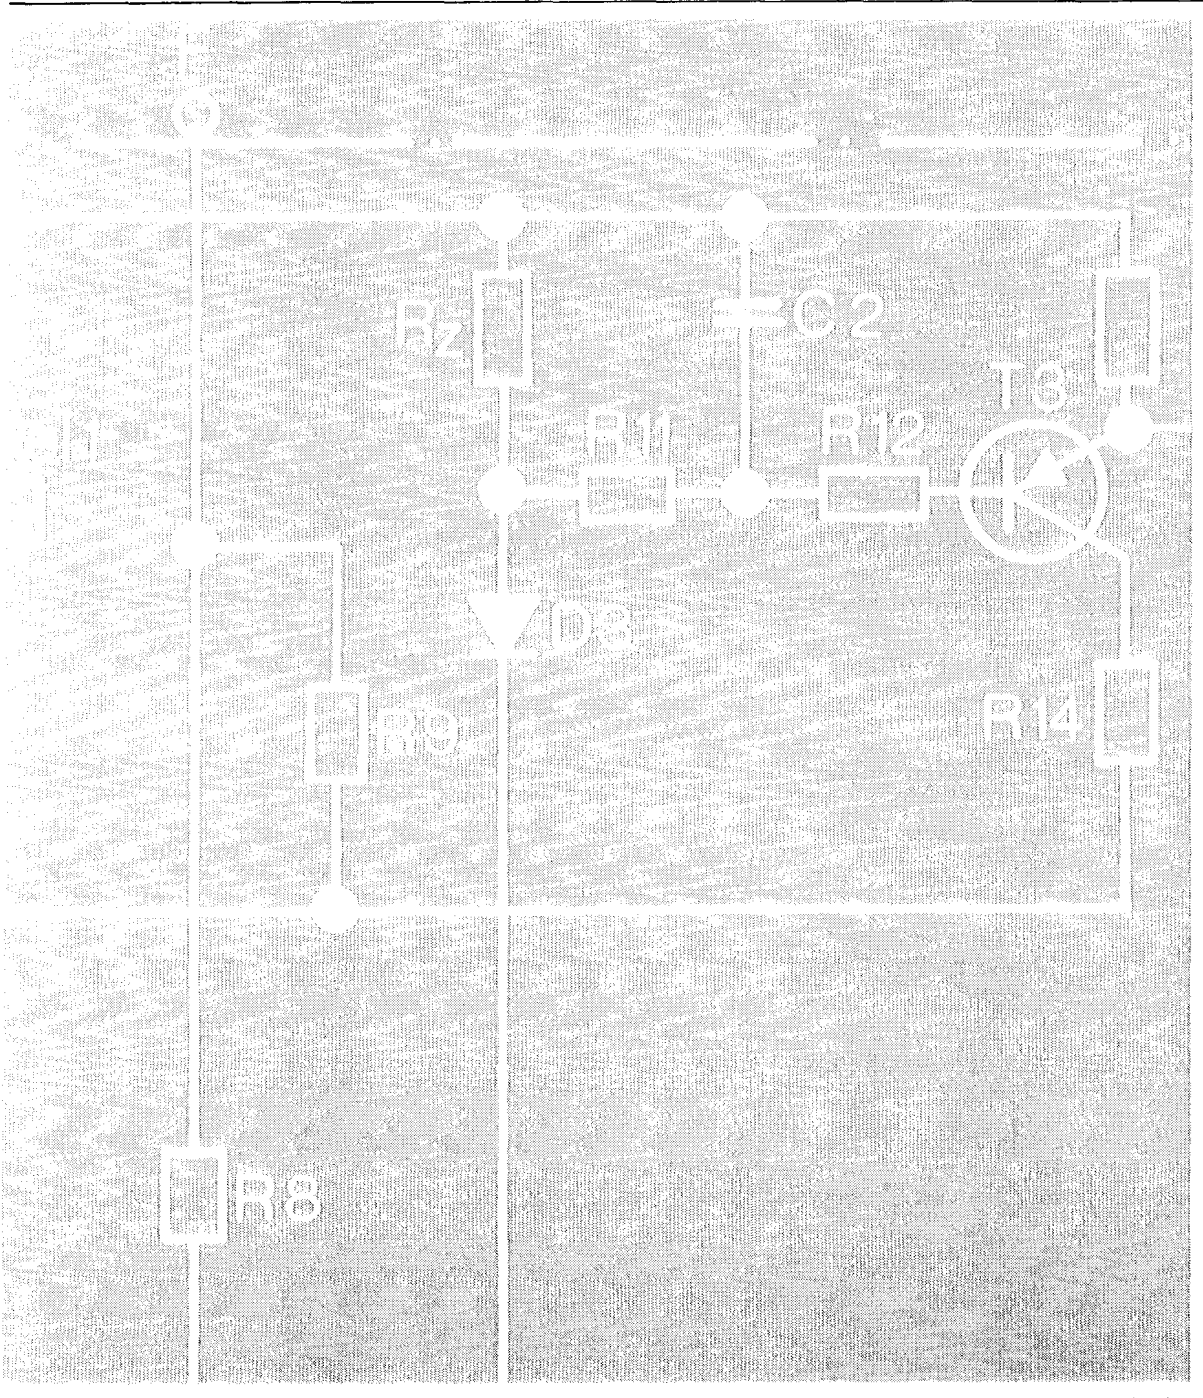

2 INDEX

Index — Alphabetical Listing of Electrical Circuits

	PAGE		PAGE		PAGE
Active Check Control	6216- 0	— G103	0670-11	— Fog	6312- 0
AntiLock Braking System	3450- 0	— G104	0670-11,13,15	— Front Park	6314- 0
A/C Auxiliary Evaporator	6414- 0	— G200	0670-12,13	— Glove Box	6100- 2
A/C Blower Control	6413- 0	— G201	0670-12	— Hazard	6313- 0
A/C Compressor Control	6411- 0	— G302	0670-14	— Headlights	6312- 0
A/C Panel Lights	6400- 0	Heated Door Lock	6100- 0	— Interior	6330- 0
A/C Temperature Control	6411- 0	Horn	6100- 0	— License	6320- 0
Auto-Charging Flashlight	6100- 2	Idle Speed Control		— Rear Marker	6320- 0
Auxiliary Fan	6454- 0	— Electronic Transmission	1360- 1	— Stop	6325- 0
Body Electrical	6100- 0	— Manual Transmission	1360- 5	— Tail	6314- 0
Brake Lining Warning	3435- 0	Ignition		— Transmission Range	6300- 1
Central Locking	5126- 0	— Electronic Transmission	1360- 2	— Turn	6313- 1
Charging System	1230- 0	— Manual Transmission	1360- 3	— Trunk	6320- 0
Cigar Lighter	6100- 2	Ignition Key Warning	6131- 0	— Underhood	6314- 0
Component Location Views	7000- 0	Indicators		— Visor	6300- 0
Connector Views	8500- 0	— Active Check Control Alarm	6210- 1	Light Switch Details	6300- 2
Cruise Control	6571- 0	— "Brake Lights" Fault	6216- 1	Memory Seat	5200- 0
Electronic Transmission Control	2460- 0	— "Brake Lining" Wear	3435- 0	On-Board Computer	6581- 0
Engine Block Diagrams	1250- 0	— "Brake" Warning	6210- 2	Power Antenna	6500- 0
Fuel Control		— "Charge" Indicator	6210- 0	Power Distribution	0670- 2
— Electronic Transmission	1360- 0	— "Coolant" Level Fault	6216- 3	Power Distribution Box	0670- 0
— Manual Transmission	1360- 4	— "Engine Oil" Fault	6216- 3	Power Mirrors	5116- 0
Fuel Delivery		— Fasten Seatbelts	6216- 3	Power Seats	5200- 0
— Electronic Transmission	1360- 0	— Fog Lights	6210- 2	Power Windows	5133- 0
— Manual Transmission	1360- 0	— High Beam	6210- 2	Radio	6500- 0
Fuel Gauge	6210- 1	— Inspection	6210- 3	Rear Defogger	6100- 1
Fuse Data	0670- 1	— LH Turn	6210- 2	Seat Belt Warning	6131- 0
Fuse Details		— "License Plate" Fault	6216- 2	Seat Bolster Support	5200- 5
— Fuse 5	0670- 6	— "Low Beam" Fault	6216- 0	Speedometer	6210- 0
— Fuse 6	0670- 9	— Low Fuel Warning	6210- 1	Start	
— Fuse 9	0670- 8	— Oil Pressure Warning	6210- 1	— Electronic Transmission	1240- 0
— Fuse 10	0670- 7	— Oil Service	6210- 3	— Manual Transmission	1240- 1
— Fuse 12	0670- 6	— "Park Brake"	6210- 1	Splice Location Views	8000- 0
— Fuse 19	0670- 8	— "Rear Lights" Fault	6216- 2	Sunroof	5413- 0
— Fuse 20	0670- 9	— RH Turn	6210- 2	Tach/Fuel Economy Gauge	6210- 0
— Fuse 21	0670-10	— Temperature Warning	6210- 1	Temperature Gauge	6210- 1
— Fuse 26	0670- 7	— "Washer Fluid" Fault	6216- 3	Warning Indicators	6210- 0
— Fuse 27	0670- 7	Injection Electronics	1360- 0	Windshield Washer Jet Heaters	6160- 1
Gauges	6210- 0	Instrument Cluster	6210- 0	Wiper/Washer	6160- 0
Ground Distribution		Lights			
G101	0670-15	— Backup	6322- 0		
		— Dash	6300- 1		

The purpose of this manual is to show electrical schematics in a manner that makes electrical troubleshooting easier. Electrical components which work together are shown together on one schematic. The Wiper-Washer schematic, for example, shows all of the electrical components in one diagram. At the top of the page is the fuse (positive) that powers the circuit. The flow of current is shown through all wires, connectors, switches, and motors to ground (negative) at the bottom of the page.

Within the schematic, all switches and sensors are shown "at rest," as though the Ignition Switch were off. For identification, component names are underlined and placed next to or above each component. Notes are included, describing how switches and other components work.

The power distribution schematic shows the current feed through all the connections from the Battery and Alternator to each fuse and the Ignition and Light Switches. If the Power Distribution schematic is combined with any other circuit schematic, a complete picture is made of how that circuit works. The Ground Distribution schematics show how several circuits are connected to common grounds.

All wiring between components is shown exactly as it exists in the vehicle; however, the wiring is not drawn to scale. To aid in understanding electrical operation, wiring inside complicated components has been simplified. The "Solid State" label designates electronic components.


WIRE SIZE CONVERSION CHART	
METRIC (CROSSSECTIONAL AREA IN MM ²)	AWG (AMERICAN WIRE GAUGE)
.5	20
.75	18
1	16
1.5	14
2	14
2.5	12
4	10
6	8
8	8
16	4
20	4
25	2
32	2

WIRE INSULATION	
ABBREVIATIONS	COLOR
BK	BLACK
BR	BROWN
RD	RED
YL	YELLOW
GN	GREEN
BU	BLUE
VI	VIOLET
GY	GRAY
WT	WHITE
PK	PINK


4 SYMBOLS



 ENTIRE COMPONENT SHOWN




PART OF A COMPONENT SHOWN

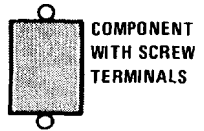


COMPONENT WITH SCREW TERMINALS




SOLID STATE (INCLUDES ONLY ELECTRONIC PARTS)

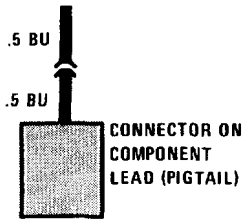


CONNECTOR ON COMPONENT LEAD (PIGTAIL)

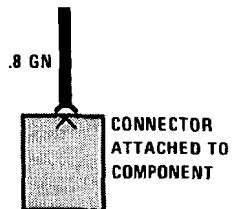


CONNECTOR ATTACHED TO COMPONENT

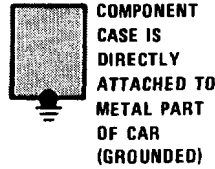


COMPONENT CASE IS DIRECTLY ATTACHED TO METAL PART OF CAR (GROUNDED)

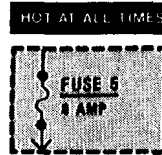


INDICATES THAT FUSE 5 IS ALWAYS SUPPLIED WITH POWER

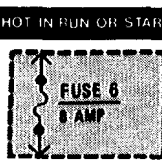

INDICATES THAT FUSE 6 IS SUPPLIED WITH POWER WITH THE IGNITION SWITCH IN THE RUN OR START POSITIONS

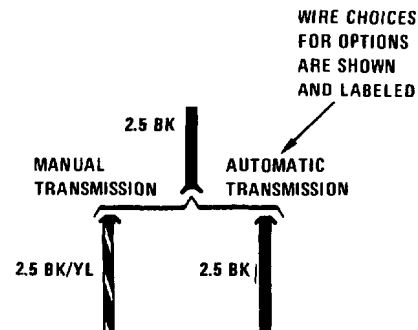

WIRE CHOICES FOR OPTIONS ARE SHOWN AND LABELED

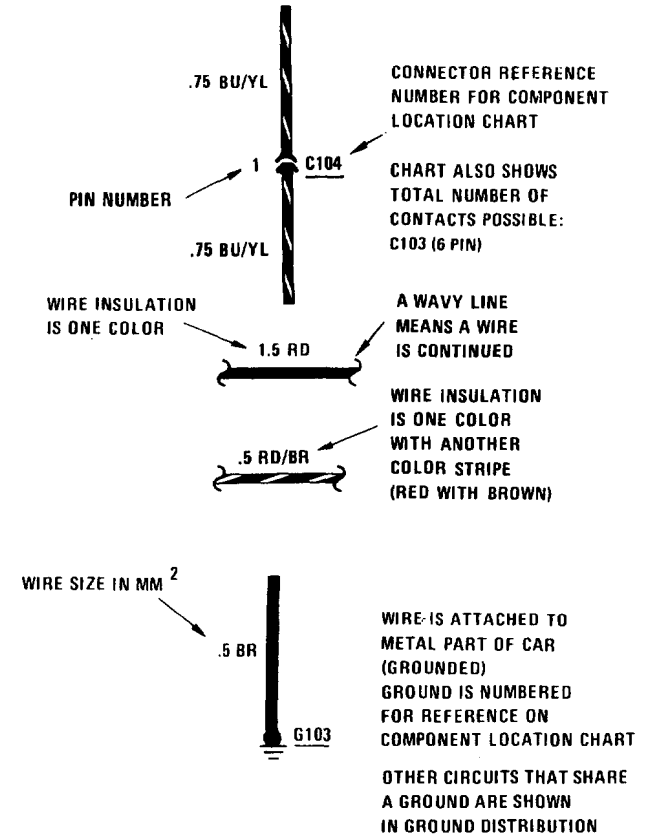

CONNECTOR REFERENCE NUMBER FOR COMPONENT LOCATION CHART


CHART ALSO SHOWS TOTAL NUMBER OF CONTACTS POSSIBLE: C103 (6 PIN)

A WAVY LINE MEANS A WIRE IS CONTINUED

WIRE INSULATION IS ONE COLOR WITH ANOTHER COLOR STRIPE (RED WITH BROWN)

WIRE IS ATTACHED TO METAL PART OF CAR (GROUNDED) GROUND IS NUMBERED FOR REFERENCE ON COMPONENT LOCATION CHART

OTHER CIRCUITS THAT SHARE A GROUND ARE SHOWN IN GROUND DISTRIBUTION

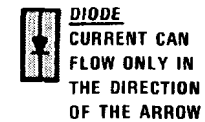


DIODE CURRENT CAN FLOW ONLY IN THE DIRECTION OF THE ARROW


CIRCUIT REFERENCE - A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT



 ACTIVE CHECK CONTROL




**ONE POLE,
TWO POSITION
SWITCH**

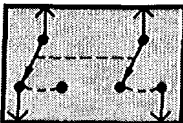

**SWITCHES THAT
MOVE TOGETHER**

DASHED LINE SHOWS
A MECHANICAL
CONNECTION
BETWEEN SWITCHES

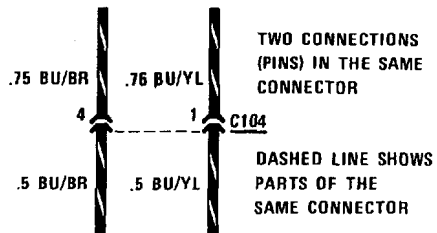

**TWO CONNECTIONS
(PINS) IN THE SAME
CONNECTOR**

DASHED LINE SHOWS
PARTS OF THE
SAME CONNECTOR





**WHEN COIL IS
ENERGIZED, SWITCH
IS PULLED CLOSED**

**RELAY SHOWN
WITH NO
CURRENT
FLOWING
THROUGH
COIL**






**RESISTOR ACROSS COIL
IS FOR NOISE
SUPPRESSION**

**RELAY SHOWN
WITH RESISTOR
ACROSS COIL**

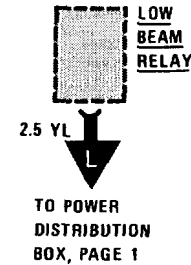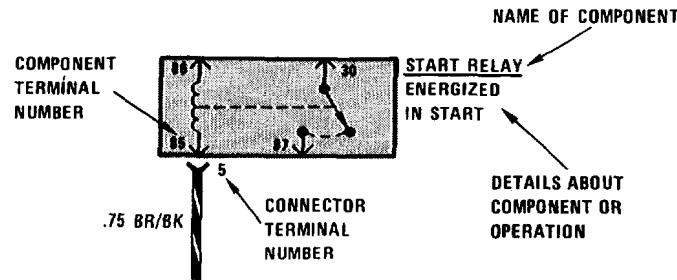

 **CURRENT PATH
IS CONTINUED
AS LABELED.
THE ARROW SHOWS
DIRECTION OF CURRENT
FLOW AND IS REPEATED
WHERE CURRENT
PATH CONTINUES.**

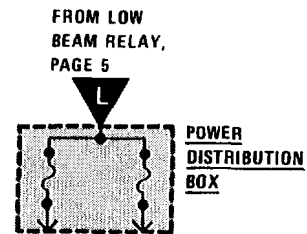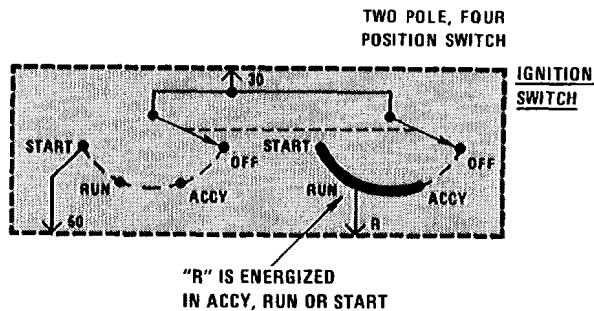


**WHEN COIL IS
ENERGIZED, SWITCH
IS PULLED CLOSED**

**RELAY SHOWN
WITH NO
CURRENT
FLOWING
THROUGH
COIL**



**RESISTOR ACROSS COIL
IS FOR NOISE
SUPPRESSION**

**RELAY SHOWN
WITH RESISTOR
ACROSS COIL**

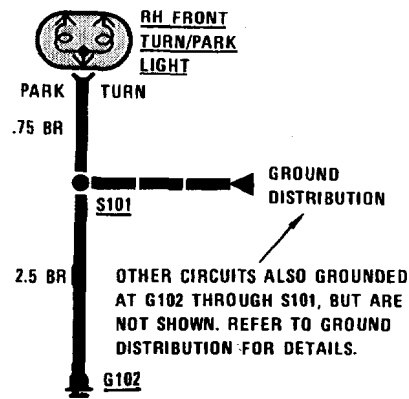

**LIGHT
EMITTING
DIODE**

6 SYSTEMATIC TROUBLESHOOTING

TROUBLESHOOTING PROCEDURE

1. Verify the Problem

Operate the problem circuit to check the accuracy of the complaint. Note the symptoms of the inoperative circuit.

2. Analyze the Problem

Refer to the schematic of the problem circuit in the ETM. Determine how the circuit is supposed to work by tracing the current path(s) from the power feed through the circuit components to ground. Then based on the symptoms you noted in step 1 and your understanding of circuit operation, identify one or more possible causes of the problem.

3. Isolate the Problem

Make circuit tests to prove or disprove the preliminary diagnosis made in step 2. Keep in mind that a logical simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points which are easily accessible.

4. Repair the Problem

Once the specific problem is identified, make the repair using the proper tools and safe procedures.

5. Check the Problem

Operate the circuit to check for satisfactory circuit operation. Good repair practice calls for rechecking all circuits you have worked on.

TROUBLESHOOTING TOOLS


Isolating the problem (Step 3 of TROUBLESHOOTING PROCEDURES) requires the use of a **voltmeter** and/or **ohmmeter**. A voltmeter measures voltage at selected points in a circuit. An ohmmeter measures a circuit's resistance to current flow. It has an internal battery that provides current to the circuit under test. Disconnect the car battery when using an ohmmeter because the battery voltage will cause the ohmmeter to give false readings. Also, do not use an ohmmeter on solid-state components. The voltage that the ohmmeter applies to the circuit could damage these components.

TROUBLESHOOTING TESTS

Voltage Test

This test measures voltage in a circuit. By taking measurements at several points (terminals or connectors) along the circuit, you can isolate the problem.

To take a voltage measurement, connect the negative lead of the voltmeter to the battery's negative terminal or other known good ground. Then connect the positive lead of the voltmeter to the point you want to test. The voltmeter will measure the voltage present at that point in the circuit.

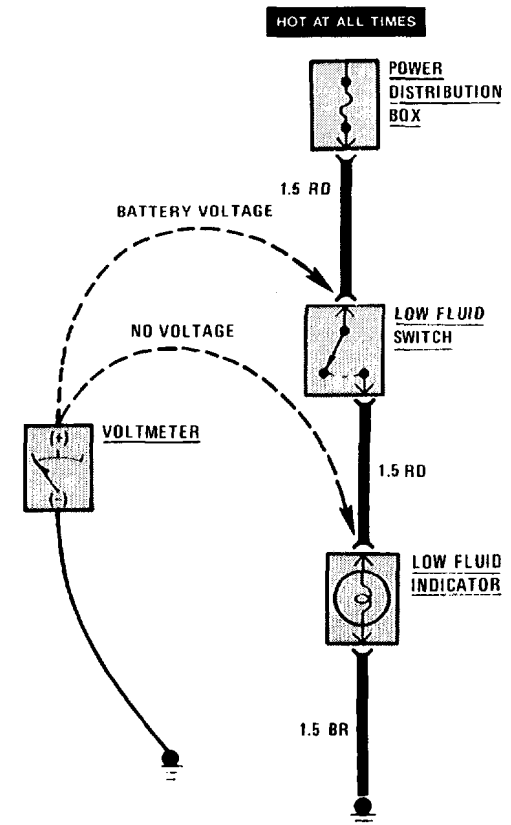


Voltage Test

Voltage Drop Test

Wires, connectors, and switches are designed to conduct current with a minimum loss of voltage. A voltage drop of more than one volt indicates a problem.


To test for voltage drop, connect the voltmeter leads to connectors at either end of the circuit's suspected problem area. The positive lead should be connected to the connector closest to the power source. The voltmeter will show the voltage drop between these two points.

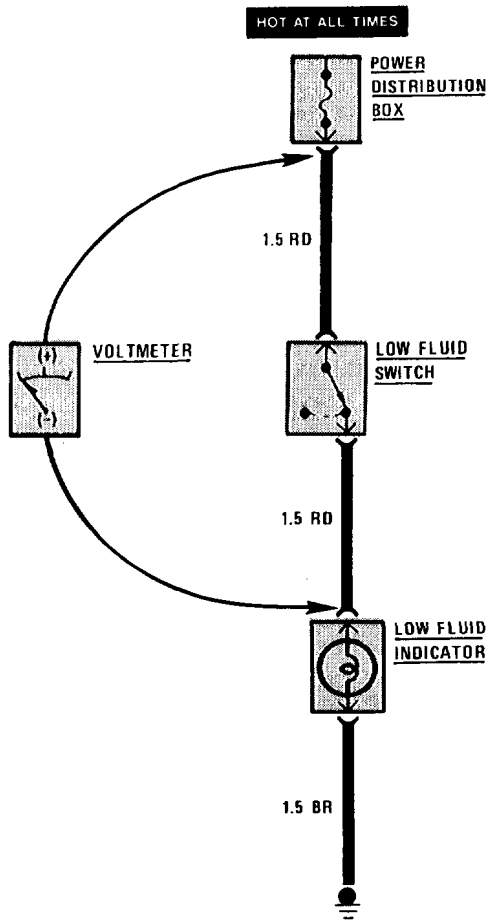

Voltage Drop Test

Continuity Test

To perform a continuity test, first disconnect the car battery. Then adjust the ohmmeter to read zero while holding the leads together. Connect the ohmmeter leads to connector or terminals at either end of the circuit's suspected problem area. The ohmmeter will show the resistance across that part of the circuit.

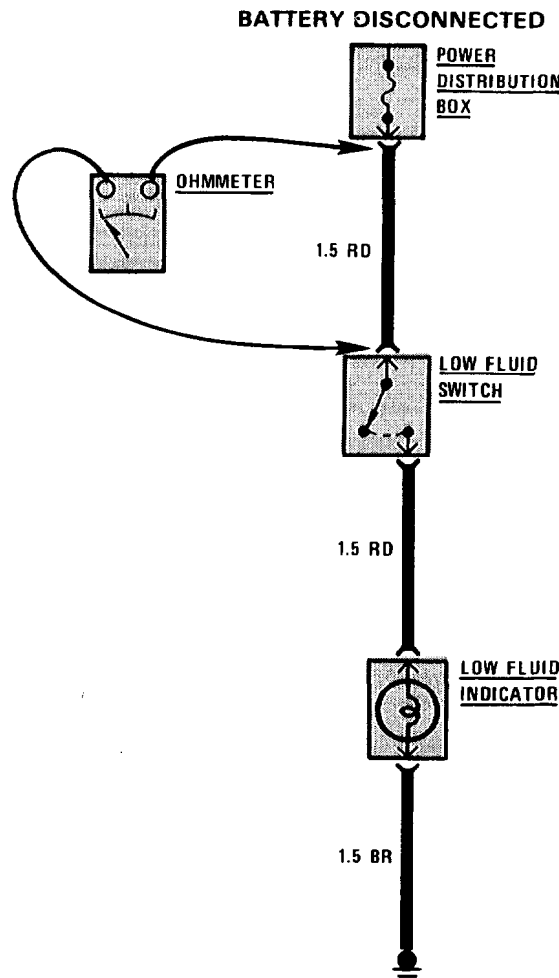


Continuity Test

Short Test Using Voltmeter

Remove the blown fuse and disconnect the load. Connect the voltmeter leads to the fuse terminals. The positive lead should be connected to the terminal closest to the power source.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the voltmeter reading. If the voltmeter registers a reading, there is a short to ground in the wiring. Somewhere in the area of the harness being moved, the wire insulation is worn away and the circuit is grounding.

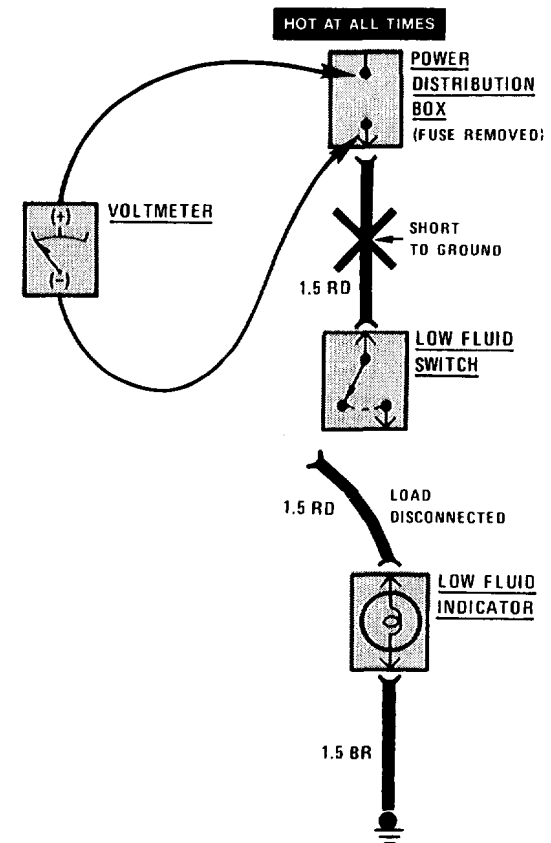


Short Test Using Voltmeter

8 SYSTEMATIC TROUBLESHOOTING

Short Test Using Ohmmeter

Disconnect the battery. Adjust the ohmmeter to read zero while holding the leads together. Remove the blown fuse and disconnect the load. Connect one lead of the ohmmeter to the fuse terminal that is closest to the load. Connect the other lead to a known good ground.

Starting near the POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the ohmmeter reading. Low or no resistance indicates a short to ground in the wiring. Infinitely high resistance indicates no short.

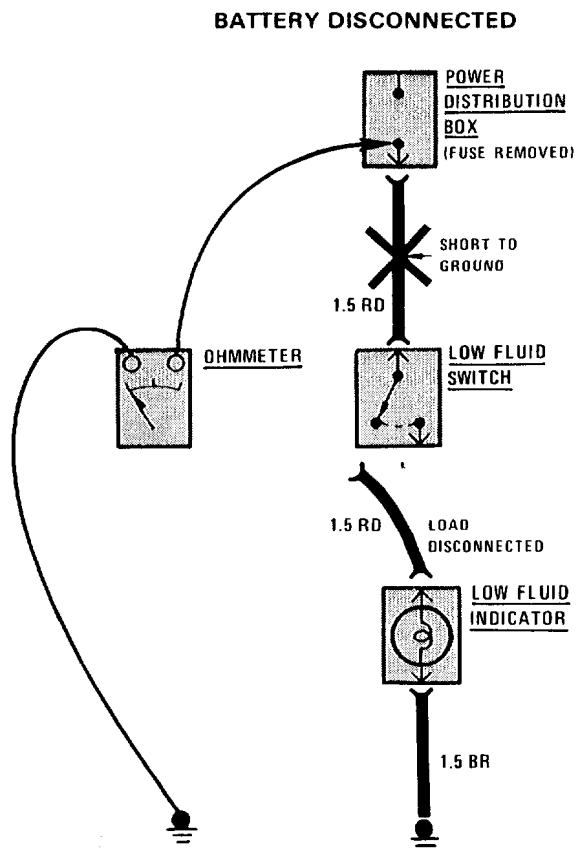

Short Test Using Ohmmeter