

**1989**  
**BMW 735i/735iL/750iL (E32)**  
**Electrical**  
**Troubleshooting**  
**Manual**  
**Vehicles Produced 9/88—5/89**

### CONTENTS

---

Index . . . . .	0100-00
Introduction . . . . .	0110-00
Systematic Troubleshooting . . . . .	0130-00
Symbols . . . . .	0140-00
Power Distribution Chart . . . . .	0660-00
Fuse Chart . . . . .	0661-00
Power Distribution . . . . .	0670-00
Fuse Details . . . . .	0671-00
Ground Distribution . . . . .	0672-00
Component Location Chart . . . . .	7000-00
Component Location Views . . . . .	7100-00
Splice Location Views . . . . .	8000-00
Connector Views . . . . .	8500-00

---



# INDEX

Antilock Brake System (ABS) .....	3450-00
Antitheft System (DWA) .....	6575-00
Automatic Rear Headrest .....	5205-00
Auxiliary Fan .....	6454-00
Brake Lining Warning .....	3435-00
Cellular Telephone (Provisions) .....	6501-00
Central Body Electronics (ZKE) .....	6100-00
Central Locking System (ZKE) .....	5126-00
Charging Plug .....	6331-00
Charging System .....	1230-00
Check Control .....	6200-00
Cigar Lighter .....	6331-01
Component Location Chart .....	7000-00
Component Location Views .....	7100-00
Connector Views .....	8500-00
Crash Controller .....	6312-01
Cruise Control (EML) .....	6572-00
Cruise Control (TEMPOMAT) .....	6571-00
Diagnostic Link .....	0680-00
Door Lock Heating (ZKE) .....	5120-00
E-Box Fan .....	0690-00
Electronic Throttle Control (EML 1.2) .....	1375-00
Electronic Transmission Control (AEGS) .....	2460-00
Electronic Transmission Control (AEGS/EML) .....	2465-00
Fog Light Washer (ZKE) .....	6167-00
Fuses	
— Fuse 1 .....	0671-00
— Fuse 2 .....	0670-01
— Fuse 3 .....	0670-01
— Fuse 4 .....	0670-02
— Fuse 5 .....	0670-02

— Fuse 6 .....	0670-02
— Fuse 7 .....	0670-02
— Fuse 9 .....	0670-03
— Fuse 10 .....	0670-04
— Fuse 11 .....	0670-04
— Fuse 12 .....	0671-01
— Fuse 13 .....	0670-04
— Fuse 14 .....	0670-04
— Fuse 15 .....	0671-02
— Fuse 16 .....	0671-03
— Fuse 17 .....	0671-04
— Fuse 18 .....	0671-05
— Fuse 19 .....	0670-05
— Fuse 20 .....	0671-06
— Fuse 21 .....	0671-07
— Fuse 22 .....	0671-08
— Fuse 23 .....	0670-04
— Fuse 24 .....	0670-04
— Fuse 25 .....	0670-03
— Fuse 26 .....	0670-03
— Fuse 27 .....	0670-03
— Fuse 28 .....	0671-09
— Fuse 29 .....	0671-10
— Fuse 30 .....	0671-09
— Fuse 31 .....	0671-11
— Fuse 32 .....	0670-09
— Fuse 33 .....	0671-12
— Fuse 34 .....	0670-05
— Fuse 35 .....	0670-06
— Fuse 40 .....	0670-09
— Fuse 41 .....	0670-09
— Fuse 42 .....	0671-13

Fuse 43 .....	0671-13	— X2008 .....	0672-22
— Fuse 44 .....	0671-13	Headlight Washer (ZKE) .....	6167-00
— Fuse 45 .....	0670-09	Heated Seats .....	5203-00
— Fuse 46 .....	0670-08	Horn .....	6133-00
— Fuse 47 .....	0670-08	IHKA Air Delivery .....	6450-10
— Fuse 50 .....	0670-09	IHKA Auxiliary Water Pump .....	6450-25
Gauges		IHKA Blower Control .....	6450-04
— Fuel .....	6200-06	IHKA Compressor Controls .....	6450-20
— Fuel Economy .....	6200-04	IHKA Diagnostic Link and Starter Input . . .	6450-28
— Speedometer .....	6200-04	IHKA Front Window Defogger .....	6450-24
— Tachometer .....	6200-08	IHKA Ground .....	6450-03
— Temperature .....	6200-08	IHKA Power .....	6450-00
Ground Distribution		IHKA Temperature Controls .....	6450-07
— X165 .....	0672-00	IHKA Water Valves .....	6450-26
— X166 .....	0672-02	Indicators	
— X167 .....	0672-03	— "ABS" .....	3450-02
— X172 .....	0672-04	— "Air Bag" .....	3234-00
— X173 .....	0672-05	— "Brake" Lining Wear .....	3435-00
— X490 .....	0672-06	— "Check Engine" .....	6200-00
— X491 .....	0672-08	— Charge .....	1230-00
— X492 .....	0672-09	— Electronic Transmission (AEGS) .....	2460-02
— X493 .....	0672-11	— Electronic Transmission (AEGS/EML) .	2465-00
— X494 .....	0672-13	— "EML" .....	6200-02
— X497 .....	0672-15	— Fog Lights .....	6313-03
— X498 .....	0672-18	— Gear Selector .....	6200-10
— X814 .....	0672-20	— High Beam .....	6313-00
— X818 .....	0672-22	— Left Turn .....	6312-02
— X905 .....	0672-22	— Low Fuel Warning .....	6200-06
— X1541 .....	0672-23	— Oil Pressure Warning .....	6200-00
— X1542 .....	0672-24	— Park Brake .....	6200-00
— X1620 .....	0672-25		
— X1621 .....	0672-27		

— Right Turn . . . . .	6312-02
Infrared Locking (IRS) . . . . .	6610-00
Injection Electronics (DME 1.3) . . . . .	1360-00
Injection Electronics (DME/EML 1.2) . . . . .	1367-00
Instrument Cluster . . . . .	6200-00
Interior Lights (ZKE) . . . . .	6330-00
Lamp Monitor (LKM) . . . . .	6301-00
Lights	
— Ashtray . . . . .	6331-01
— Back Up . . . . .	6322-00
— Brake . . . . .	6325-00
— Cigar Lighter . . . . .	6331-01
— Charging Plug . . . . .	6331-00
— Fog . . . . .	6313-03
— Glove Box . . . . .	6331-00
— Hazard . . . . .	6312-00
— Headlights . . . . .	6313-00
— Interior (ZKE) . . . . .	6330-00
— License . . . . .	6320-00
— Marker . . . . .	6314-00
— Park . . . . .	6314-00
— Tail . . . . .	6314-00
— Turn . . . . .	6312-00
— Trunk . . . . .	6320-02
— Underhood . . . . .	6314-03

Light Switch Details . . . . .	6300-03
Lumbar Support . . . . .	5202-00
Memory Mirrors . . . . .	5119-00
Memory Seat . . . . .	5201-00
On-Board Computer . . . . .	6581-00
Park Ventilation . . . . .	6413-00
Power Distribution Chart . . . . .	0660-00
Power Distribution . . . . .	0670-00
Power Assist Steering (Servotronic) . . . . .	3240-00
Power Seats . . . . .	5200-00
Power Windows (ZKE) . . . . .	5133-00
Radio/CD Player (Provisions) . . . . .	6500-00
Rear Window Defogger (IHKA) . . . . .	6420-00
Splice Location Views . . . . .	8000-00
Start . . . . .	1240-00
Sunroof (ZKE) . . . . .	5410-00
Supplemental Restraint System (Air Bag) . . . . .	3234-00
Windshield Washer (ZKE) . . . . .	6166-00
Windshield Washer Jet Heaters . . . . .	6169-00
Windshield Wipers (ZKE) . . . . .	6161-00
Windshield Wiper Pressure Control (ZKE) . . . . .	6168-00

The purpose of this manual is to provide information to aid in electrical troubleshooting. It consists of schematics, component location information, harness routing views and connector views.

The manual is divided into sections called cells. In each cell electrical components that work together are shown together on one or more schematics. At the top of the page is the fuse (positive) that powers the circuit. The flow of current is shown through all wires, connectors, switches, and motors to ground (negative) at the bottom of the page.

Within the schematic all switches and sensors are shown "at rest," as though the Ignition Switch were off. For identification, component names are underlined and placed next to or above each component. Notes are included that describe how or when switches and other components work.

The Power Distribution schematics show the current feed through all the connections from the Battery and Alternator to each fuse and the Ignition and

Light Switches. If a Power Distribution schematic is combined with any other circuit schematic, a complete picture is made of how that circuit works. The Ground Distribution schematics show how several circuits are connected to common grounds. All wiring between components is shown exactly as it exists in the vehicles; however, the wiring is not drawn to scale. To aid in understanding electrical operation, wiring inside complicated components has been simplified. Further information regarding schematic symbols and references can be found in cell 0140 (Symbols).

With this car, BMW introduces the Central Body Electronics System. This system incorporates the use of a single module that controls many apparently unrelated functions. For instance, the Sunroof and Windshield Wipers are controlled by the same module. However, only the portion of the module that controls the Sunroof will appear in the Sunroof schematics.



## INTRODUCTION

---

Component Identification Information begins in cell 7000 and consists of the Component Location List, Component Location Photographs, and Harness Connector Faces. The Component Location List helps you find where the parts of the circuit are in the vehicle. A brief description of the location is given along with a reference to the photograph that shows the component and its connecting wires. The Harness Connector Faces show the cavity or terminal locations of all connectors having three or more pins. Harness Connector Faces help you locate test points. The drawings show the connector faces you see after the harness connector has been disconnected from a component.

**TROUBLESHOOTING PROCEDURES**

Diagnostic procedures for many of the circuits in this manual are included with the schematics. These procedures are based on a logical problem-solving procedure. The steps listed below are provided for those circuits that do not include diagnostic procedures. Following these steps will enable you to make a quick diagnosis of the problem.

**1. Verify the Problem**

Operate the problem circuit to check the accuracy of the complaint. Note the symptoms of the inoperative circuit.

**2. Analyze the Problem**

Refer to the schematic of the problem circuit in the ETM. Determine how the circuit is supposed to work by tracing the current path(s) from the power feed through the circuit components to ground. Then, based on the symptoms you noted in step 1 and your understanding of circuit operation, identify one or more possible causes of the problem.

**3. Isolate the Problem**

Make circuit tests to prove or disprove the preliminary diagnosis made in step 2. Keep in mind that a logical, simple procedure is the key to efficient troubleshooting. Test for the most likely cause of failure first. Try to make tests at points which are easily accessible.

**4. Repair the Problem**

Once the specific problem is identified, make the repair using the proper tools and safe procedures.

**5. Check the Problem**


Operate the circuit to check for satisfactory circuit operation. Good repair practice calls for rechecking all circuits you have worked on.

**TROUBLESHOOTING TOOLS**

Isolating the problem (Step 3 of TROUBLESHOOTING PROCEDURES) requires the use of a voltmeter and/or ohmmeter. A voltmeter measures voltage at selected points in a circuit. An ohmmeter measures a circuit's resistance to current flow. It has an internal battery that provides current to the circuit under test. Disconnect the car battery when using an ohmmeter because the battery voltage will cause the ohmmeter to give false readings. Also, do not use an ohmmeter on solid state components. The voltage that the ohmmeter applies to the circuit could damage these components.

**Fused Jumper Wire**

A jumper wire is made up of an in-line fuse holder connected to a set of test leads. It should have a five ampere fuse. Use it for bypassing open circuits. Never use a jumper wire across any load (motors, etc.). This direct battery short will blow the fuse.

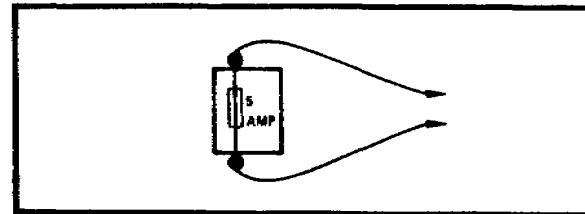


Fused Jumper Wire

**TROUBLESHOOTING TESTS**

**Voltage Test**

This test measures voltage in a circuit. By taking measurements at several points (terminals or connectors) along the circuit, you can isolate the problem.


To take a voltage measurement, connect the negative lead of the voltmeter to the battery's negative terminal or other known good ground. Then connect the positive lead of the voltmeter to the point you want to test. The voltmeter will measure the voltage present at that point in the circuit.

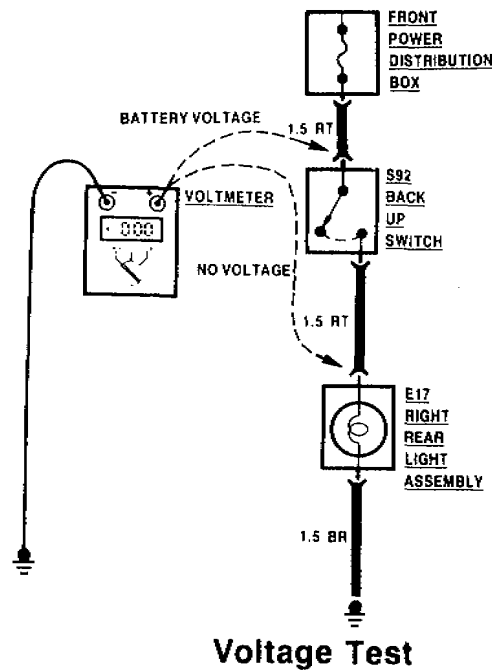

**Voltage Drop Test**

Wires, connectors, and switches are designed to conduct current with a minimum loss of voltage. A voltage drop of more than one volt indicates a problem.


To test for voltage drop, connect the voltmeter leads to connectors at either end of the circuit's suspected problem area. The positive lead should be connected to the connector closest to the power source. The voltmeter will show the voltage drop between these two points. Any switches in the circuit should be on during this test.

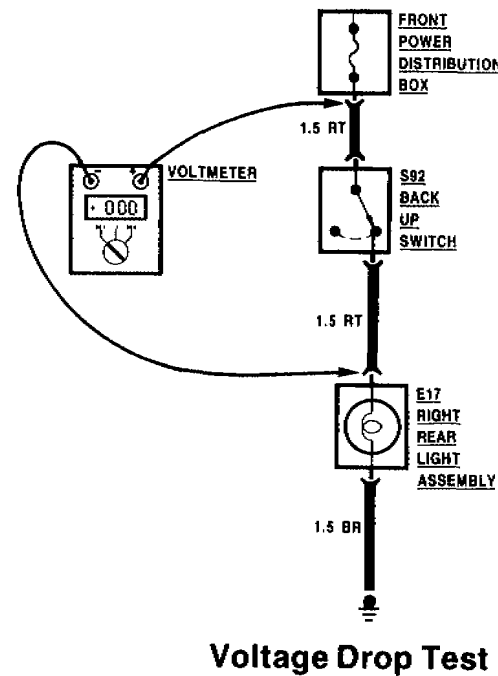



**Continuity Test**

To perform a continuity test, first disconnect the car battery. Then, while holding the leads together, adjust the ohmmeter to read zero. Connect the ohmmeter leads to connector or terminals at either end of the circuit's suspected problem area. The ohmmeter will show the resistance across that part of the circuit. This test can also be performed with a self-powered test light.

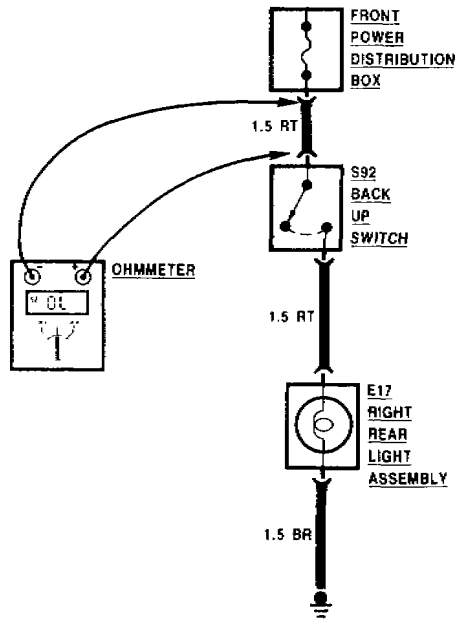


**Continuity Test**

**Short Test Using voltmeter**

To locate a wiring short to ground, remove the blown fuse and disconnect the load. Connect the voltmeter leads to the fuse terminals. The positive lead should be connected to the terminal closest to the power source.


Starting near the FRONT POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the voltmeter reading. If the voltmeter registers a reading, there is a short to ground in the wiring. Somewhere in the area of the harness being moved, the wire insulation is worn away and the circuit is grounding.

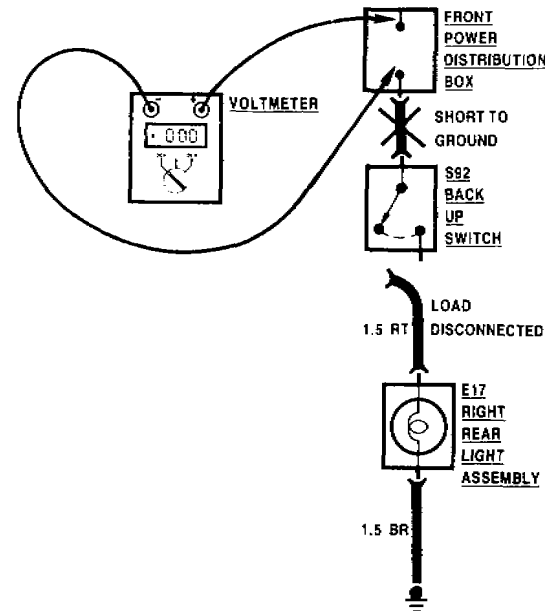

**Short Test Using Voltmeter**

**Short Test Using Ohmmeter**


Disconnect the battery. While holding the leads together, adjust the ohmmeter to read zero. Remove the blown fuse and disconnect the load. Connect one lead of the ohmmeter to the fuse terminal that is closest to the load. Connect the other lead to a known good ground. Starting near the FRONT POWER DISTRIBUTION BOX, move the wire harness back and forth and watch the ohmmeter reading. Low or no resistance indicates a short to ground in the wiring. Infinitely high resistance indicates no short.

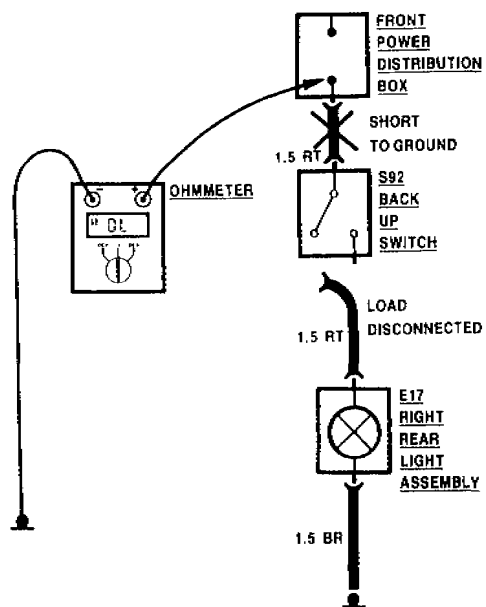

**Short Test Using Ohmmeter**







**Current Test Using Ammeter**

To measure the current, connect the ammeter leads to the connector or terminals in series with the circuit. The ammeter will show the current through the circuit.

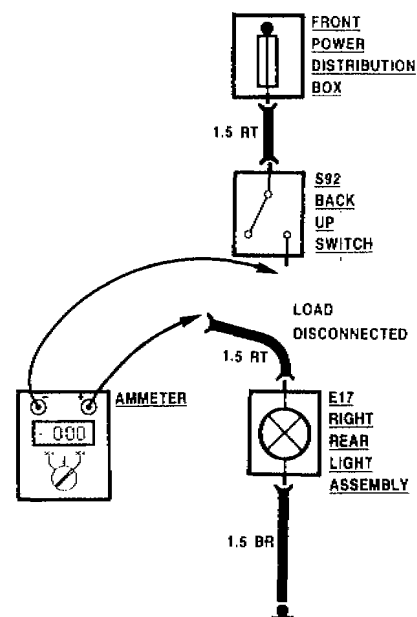

**Current Test Using Ammeter**
   
# SYMBOLS

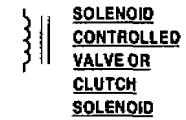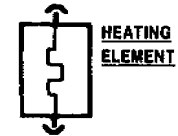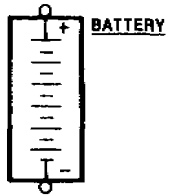





# SYMBOLS



 
ENTIRE COMPONENT SHOWN




PART OF A COMPONENT SHOWN

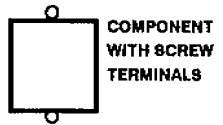


COMPONENT WITH SCREW TERMINALS

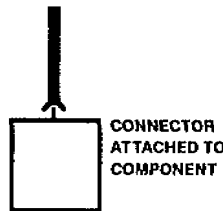


CONNECTOR ATTACHED TO COMPONENT

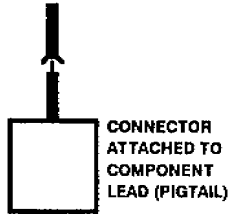


CONNECTOR ATTACHED TO COMPONENT LEAD (PIGTAIL)

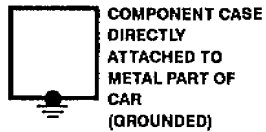



COMPONENT CASE DIRECTLY ATTACHED TO METAL PART OF CAR (GROUNDED)

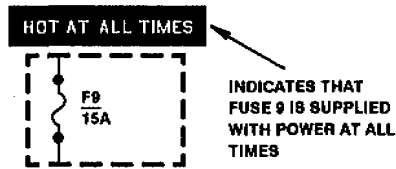

TERMINAL NUMBER	DESCRIPTION
50	VOLTAGE: IGNITION SWITCH IN START
30	VOLTAGE: SUPPLIED AT ALL TIMES
15	VOLTAGE: IGNITION SWITCH IN RUN OR START
15E	VOLTAGE: IGNITION SWITCH IN RUN
R	VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START
31	GROUND



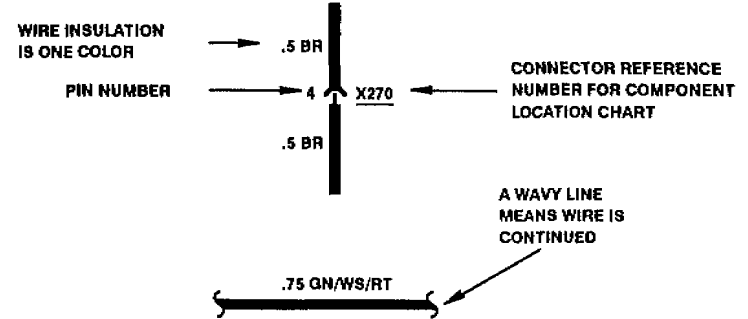


1. FIRST COLOR IS THE WIRE INSULATION.
2. SECOND COLOR IS THE "TRACER" OR "STRIPE" COLOR.
3. THIRD COLOR IS THE "DOTS" COLOR

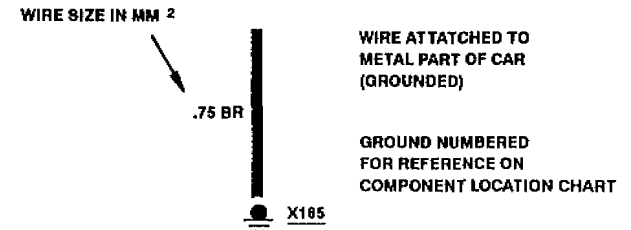
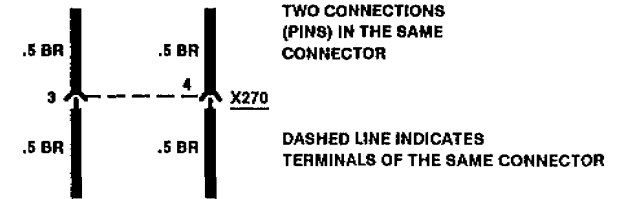




# SYMBOLS

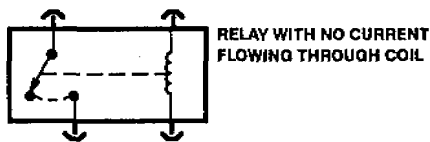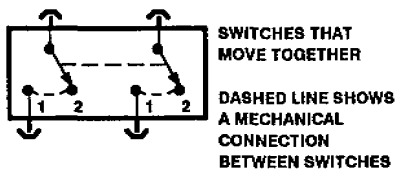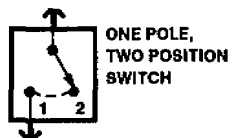


WHEN COIL IS  
ENERGIZED, SWITCH  
IS PULLED CLOSED

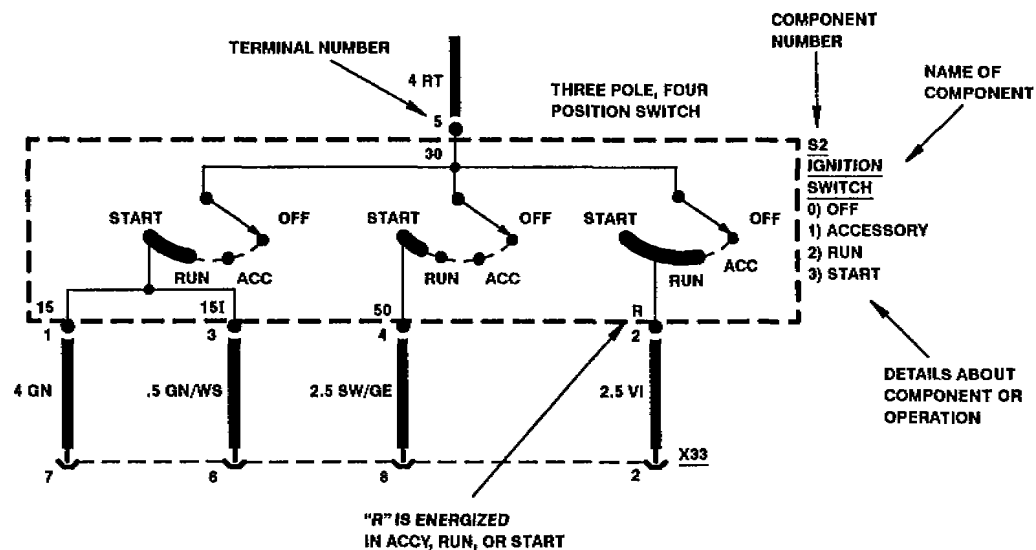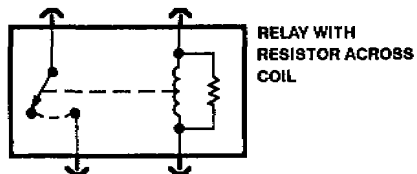


TERMINAL NUMBER	DESCRIPTION
50	VOLTAGE: IGNITION SWITCH IN START
30	VOLTAGE: SUPPLIED AT ALL TIMES
15	VOLTAGE: IGNITION SWITCH IN RUN OR START
15I	VOLTAGE: IGNITION SWITCH IN RUN
R	VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN, OR START
31	GROUND

# SYMBOLS


**HOT IN ACC, RUN OR START**

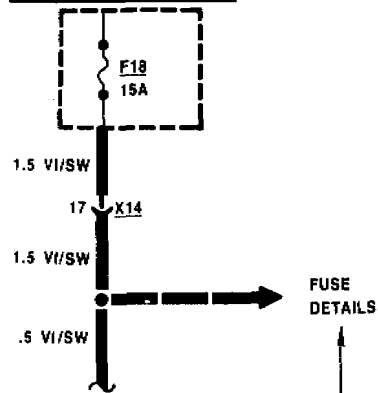

OTHER CIRCUITS WHICH SHARE FUSE 18, BUT ARE NOT SHOWN, CAN BE REFERENCED IN FUSE DETAILS

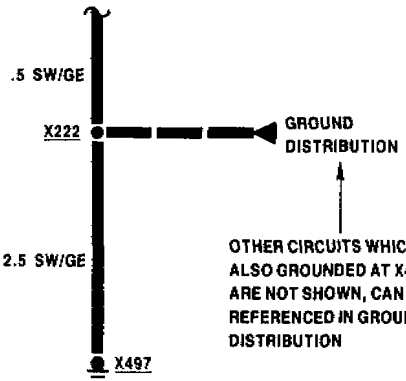


OTHER CIRCUITS WHICH ARE ALSO GROUNDED AT X497, BUT ARE NOT SHOWN, CAN BE REFERENCED IN GROUND DISTRIBUTION

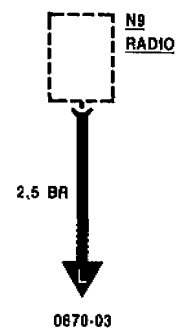


CURRENT PATH IS CONTINUED AS LABELED

ARROW SHOWS DIRECTION OF CURRENT FLOW AND IS REPEATED WHERE CURRENT PATH CONTINUES

CIRCUIT REFERENCE — A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT

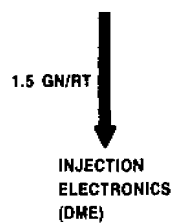


**HOT IN ACC, RUN OR START**

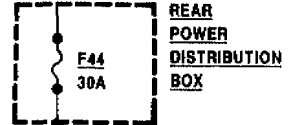


TESTER COMMAND NUMBER- ENTERING 315 FOR THE GIVEN ZKE SYSTEM WILL ACTIVATE THE TRANSISTORIZED SWITCH

CENTRAL BODY ELECTRONICS (ZKE)

 SYMBOL INDICATES A SOLID STATE DEVICE (INCLUDES ONLY ELECTRONIC PARTS)



CIRCUIT SHOWN IS INCOMPLETE COMPLETE CIRCUIT CAN BE REFERENCED IN CENTRAL BODY ELECTRONICS (ZKE)

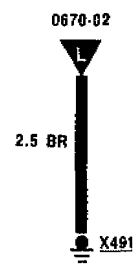




# POWER DISTRIBUTION CHARTS

## FRONT POWER DISTRIBUTION BOX

### FRONT POWER DISTRIBUTION BOX

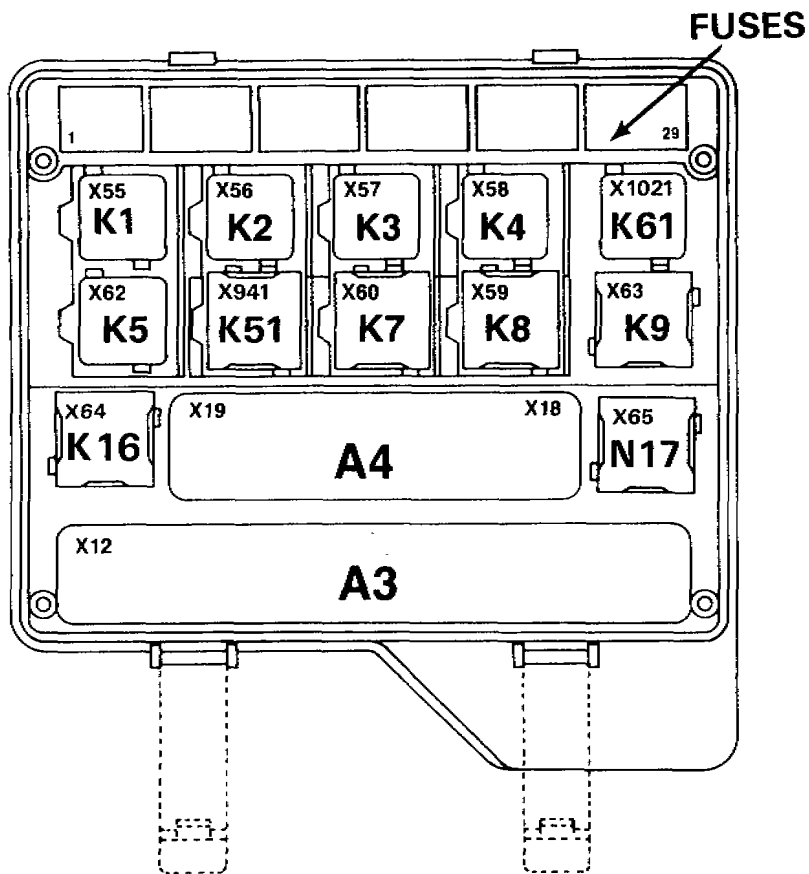


COMPONENTS IN FRONT POWER DISTRIBUTION BOX		
NUMBER	CONNECTOR	DESCRIPTION
A3	X12	LAMP CONTROL MODULE
A4	X18, X19	CHECK CONTROL MODULE
K1	X55	STARTER RELAY
K2	X56	HORN RELAY
K3	X57	UNLOADER RELAY, KLR
K4	X58	BLOWER RELAY
K5	X62	WASHER PUMP RELAY
K7	X60	PARKING LIGHT MONITOR RELAY
K8	X59	FRONT DEFOGGER/WATER PUMP RELAY
K9	X63	UNLOADER RELAY, KL15
K16	X64	HAZARD FLASHER RELAY
K51	X941	PHONE ALERT RELAY
K61	X1021	UNLOADER RELAY, KL61
N17	X65	CRASH CONTROL UNIT



# POWER DISTRIBUTION CHARTS

## REAR POWER DISTRIBUTION BOX

REAR POWER DISTRIBUTION BOX

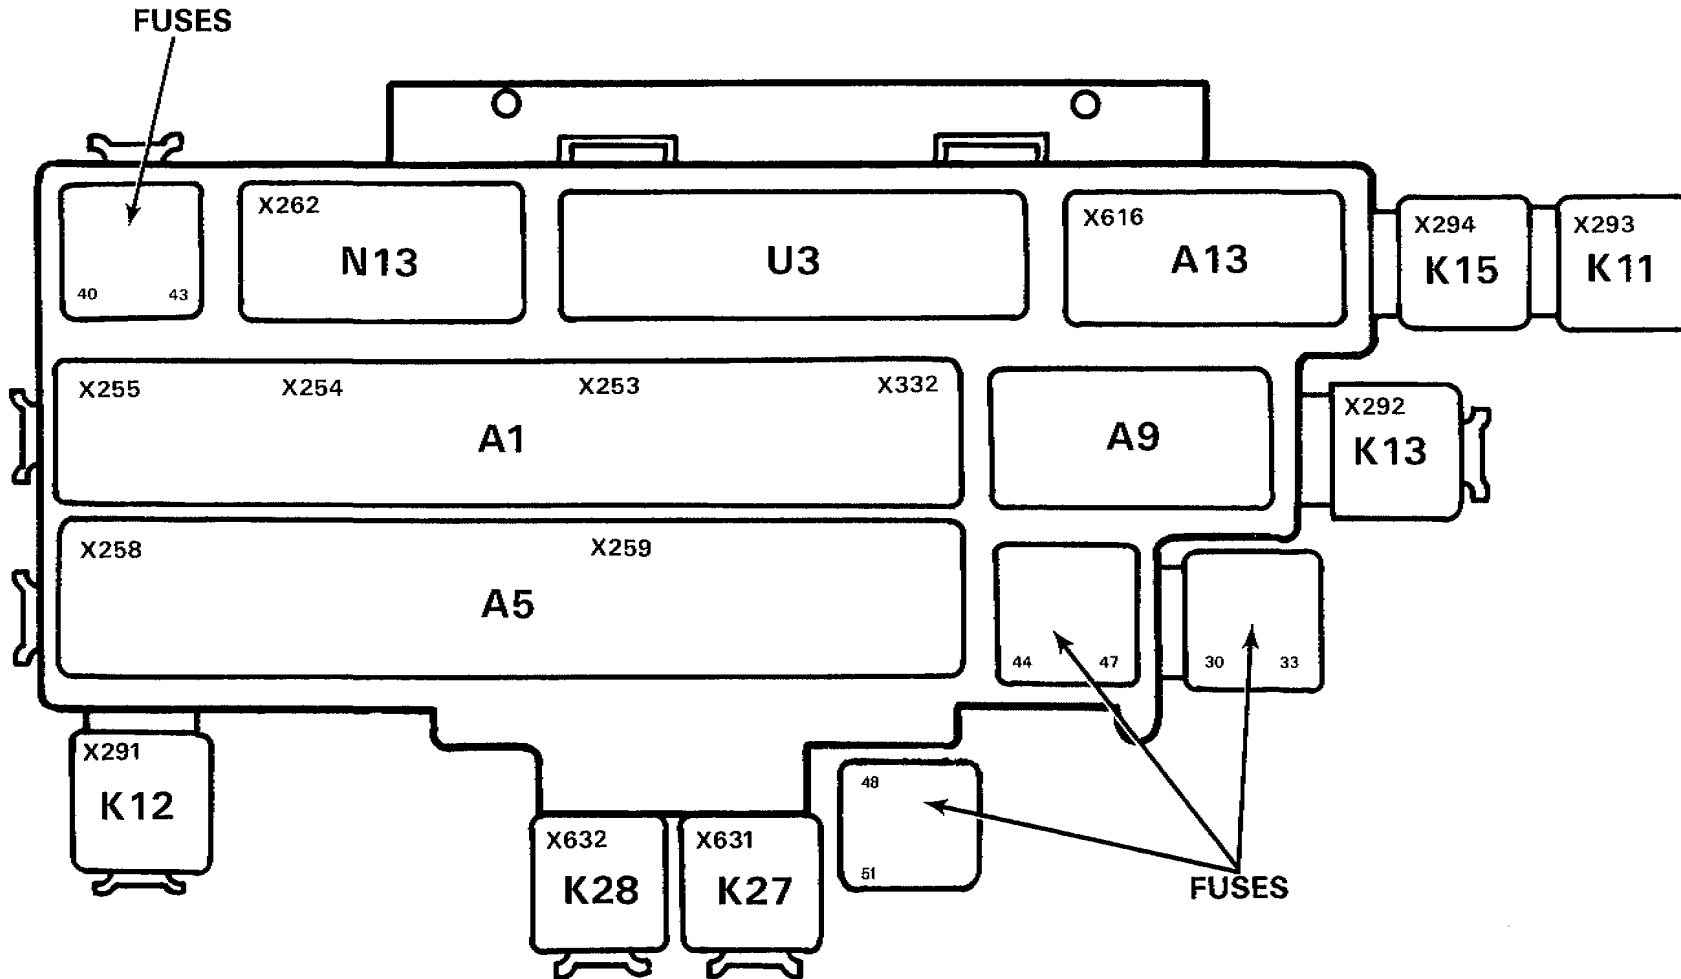





## POWER DISTRIBUTION CHARTS

### REAR POWER DISTRIBUTION BOX



COMPONENTS IN REAR POWER DISTRIBUTION BOX		
NUMBER	CONNECTOR	DESCRIPTION
A1	X253, X254, X255, X332	GENERAL MODULE
A5	X258, X259	RELAY MODULE
A9		PRESENTLY NOT AVAILABLE
A13	X616	REAR HEADREST CONTROL UNIT
K11	X293	WIPER RELAY
K12	X291	WIPER PRESSURE CONTROL RELAY (ADV)
K13	X292	REAR DEFOGGER RELAY
K15	X294	ELECTRIC POWER PROTECTION RELAY
K27	X631	LEFT REAR SEAT HEATING/ POSITION RELAY
K28	X632	RIGHT REAR SEAT HEATING/ POSITION RELAY
N13	X262	INFRARED LOCKING CONTROL UNIT
U3		PRESENTLY NOT AVAILABLE



# POWER DISTRIBUTION CHARTS

## AUXILIARY RELAY BOX

### AUXILIARY RELAY BOX

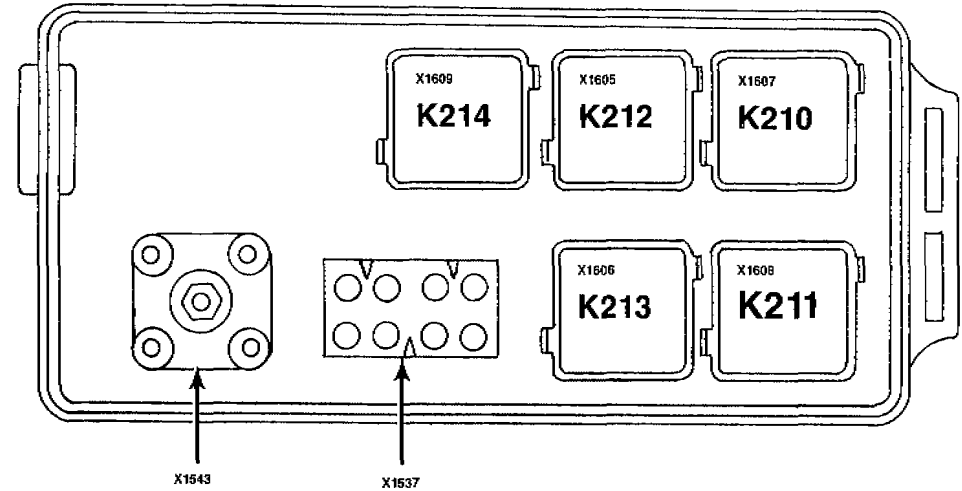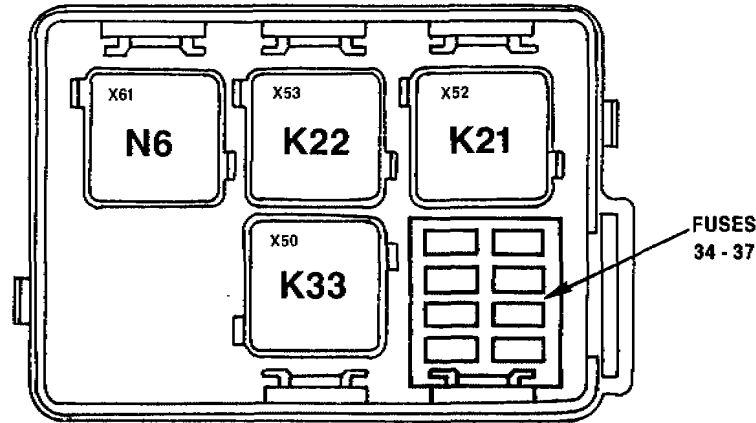

COMPONENTS IN AUXILIARY RELAY BOX		
NUMBER	CONNECTOR	DESCRIPTION
K21	X52	NORMAL SPEED RELAY
K22	X53	HIGH SPEED RELAY
K33	X50	AIR CONDITIONING MOTRONIC RELAY
N6	X61	HEADLIGHT/FRONT FOGLIGHT MODULE (SRA)

COMPONENTS IN AUXILIARY RELAY BOX, 750iL ONLY		
NUMBER	CONNECTOR	DESCRIPTION
K210	X1607	FUEL PUMP RELAY I
K211	X1608	FUEL PUMP RELAY II
K212	X1605	MAIN RELAY I
K213	X1606	MAIN RELAY II
K214	X1609	OXYGEN SENSOR RELAY
—	X1537	CONNECTOR (8 PINS)
X1543	—	B + JUNCTION POST



## FUSE CHARTS

Fuse No.	Size	Circuit Protected
1	15A	Antilock Brake System (ABS) (Also Fuse 17) Brake Lights Brake Lining Warning (Also Fuses 17 and 20) Cruise Control (Tempomat) (Also Fuse 17) Cruise Control (EML) Electronic Throttle Control (EML 1.2) (Also Fuses 17 and 20) Instrument Cluster/Check Control (Also Fuses 12, 15, 17, 20, 29, and 33) Lamp Monitor (LKM) (Also Fuses 2, 3, 4, 5, 7, 10, 11, 13, and 14) Park/Tail/Underhood Lights (Also Fuses 4, 5, and 20)
2	7.5A	Headlights/Fog Lights (Also Fuses 3, 5, 7, 10, 11, 13 and 14) Lamp Monitor (LKM) (Also Fuses 1, 3, 4, 5, 7, 10, 11, 13 and 14) Turn/Hazard Lights (Also Fuses 3, 6, 13 and 14)
3	7.5A	Headlights/Fog Lights (Also Fuses 2, 5, 7, 10, 11, 13 and 14) Headlight/Fog Light Washer (ZKE) (Also Fuses 5, 17, 22 and 44) Lamp Monitor (LKM) (Also Fuses 1, 2, 4, 5, 7, 10, 11, 13 and 14) Turn/Hazard Lights (Also Fuses 2, 6, 13 and 14)
4	7.5A	Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 5, 7, 10, 11, 13 and 14) Park/Tail/Marker/Underhood Lights (Also Fuses 1, 5 and 20)

**BMW**  
**7** **FUSE CHARTS**

Fuse No.	Size	Circuit Protected
5	10A	Glove Box Light/Cigar Lighter/Ashtray Light/Charging Plug (Also Fuses 4, 26 and 33) Headlights/Fog Lights (Also Fuses 2, 3, 7, 10, 11, 13 and 14) Headlight/Fog Light Washer (ZKE) (Also Fuses 3, 17, 22 and 44) Heated Seats (Also Fuse 16) Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 7, 10, 11, 13 and 14) License/Trunk Lights (Also Fuse 33) Lumbar Support (Also Fuse 16) Park/Tail/Underhood Lights (Also Fuses 1, 4 and 20)
6	7.5A	Turn/Hazard Lights (Also Fuses 2, 3, 13 and 14)
7	15A	Headlights/Fog Lights (Also Fuses 2, 3, 5, 10, 11, 13 and 14) Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 10, 11, 13 and 14)
9	15A	Automatic Climate Control (IHKA) (Also Fuses 9, 19, 20, 21 and 29) Auxiliary Fan (Also Fuses 25 and 29) Cellular Telephone (Provisions) (Also Fuses 18 and 31) Horn
10	7.5A	Headlights/Fog Lights (Also Fuses 2, 3, 5, 7, 11, 13 and 14) Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 11, 13 and 14)
11	7.5A	Headlights/Fog Lights (Also Fuses 2, 3, 5, 7, 10, 13 and 14) Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 10, 13 and 14)
12	15A	Back Up Lights Instrument Cluster/Check Control (Also Fuses 1, 15, 17, 20, 29 and 33) Memory Mirrors (Also Fuses 16, 17, 18, 30, 42 and 44)
13	7.5A	Headlights/Fog Lights (Also Fuses 2, 3, 5, 7, 10, 11 and 14) Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 10, 11 and 14) Turn/Hazard Lights (Also Fuses 2, 3, 6 and 14)
14	7.5A	Headlights/Fog Lights (Also Fuses 2, 3, 5, 7, 10, 11 and 13) Lamp Monitor (LKM) (Also Fuses 1, 2, 3, 4, 5, 7, 10, 11 and 13) Turn/Hazard Lights (Also Fuses 2, 3, 6 and 13)
15	7.5A	Instrument Cluster/Check Control (Also Fuses 1, 12, 17, 20, 29 and 33) On-Board Computer (Also Fuses 17 and 20) Windshield Washer (ZKE) (Also Fuse 44) Windshield Wipers (ZKE) (Also Fuse 44)