

**1994**

**BMW**

**840Ci, 850Ci,  
850CSi (E31)**

**Electrical**

**Troubleshooting  
Manual**

Vehicles Produced 9/93 to 5/94



## ELECTRICAL TROUBLESHOOTING MANUAL

8 SERIES – E31 (840Ci, 850Ci, 850CSi)

### SCHEMATICS

### MODEL YEAR 1994

0100.0	INDEX	3240.0	POWER ASSIST STEERING (SERVOTRONIC)
0110.0	INTRODUCTION	3334.0	ACTIVE REAR AXLE KINEMATICS (AHK)
0140.0	SYMBOLS	3450.0	SLIP CONTROL (ABS)
0670.0	POWER DISTRIBUTION CHART	3450.2	SLIP CONTROL (ABS/ASC + T)
0670.1	FUSE CHART	3450.5	SLIP CONTROL 5 (ASC 5)
0670.2	POWER DISTRIBUTION	3715.2	ELECTRONIC SHOCK ABSORBER CONTROL (EDC III +)
0670.3	FUSE DETAILS	5116.0	POWER MIRRORS
0670.4	GROUND DISTRIBUTION	5120.0	ZKE DOOR LOCK HEATING (TSH)
0670.5	DATA LINK	5126.0	ZKE CENTRAL LOCKING (ZV)
1210.6	ENGINE CONTROL SYSTEM (DME M1.7, 12-CYLINDER M70)	5133.0	ZKE POWER WINDOWS (FH)
1210.11	ENGINE CONTROL SYSTEM (DME M3.3, 8-CYLINDER M60)	5146.0	POWER SUN SHADES
1230.0	CHARGING SYSTEM	5200.0	POWER SEATS
1240.0	START	5200.1	SEAT/MIRROR MEMORY SYSTEM (SM/SPM)
1270.1	ELECTRONIC THROTTLE CONTROL (EML 12-CYLINDER)	5203.0	HEATED SEATS
1290.0	E-BOX FAN	5212.0	LUMBAR SUPPORT
2460.0	ELECTRONIC TRANSMISSION CONTROL (EGS 4HP-24)	5410.0	ZKE SUNROOF (SHD)
2460.7	ELECTRONIC TRANSMISSION CONTROL (EGS: GS 9.20/A5S 560Z)	6100.0	CENTRAL BODY ELECTRONICS (ZKE II)
3231.0	ELECTRIC STEERING COLUMN ADJUSTMENT	6133.0	HORN
3231.1	STEERING COLUMN MEMORY (LSM)	6160.0	ZKE WIPER/WASHER CONTROL
3234.0	SUPPLEMENTAL RESTRAINT SYSTEM (AIRBAG)	6164.0	ZKE WINDSHIELD WIPER PRESSURE CONTROL (ADV)
		6167.0	ZKE HEADLIGHT WASHER (SRA)
		6169.0	WINDSHIELD WASHER JET HEATERS
		6210.0	BODY ELECTRONICS MODULE (EKM)
		6211.0	INSTRUMENT CLUSTER

## **SCHEMATICS**

6300.0	LIGHT SWITCH DETAILS	(IHKA)
6301.0	LAMP MONITOR (LKM)	6454.0 AUXILIARY FAN
6312.0	HEADLIGHTS/FOG LIGHTS	6510.1 RADIO/HIFI
6313.0	TURN/HAZARD LIGHTS	6561.0 CELLULAR TELEPHONE (PROVISIONS)
6314.0	PARK/TAIL/UNDERHOOD LIGHTS	6571.0 CRUISE CONTROL (TEMPOMAT)
6320.0	LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS	6575.3 ANTI-THEFT SYSTEM IV (DWA IV)
6322.0	BACK UP LIGHTS	6581.1 MULTI-INFORMATION DISPLAY (MID)
6325.0	BRAKE LIGHTS	6610.1 REMOTE CONTROLLED LOCKING SYSTEM
6330.0	ZKE INTERIOR LIGHTS CONTROL (IB)	7000.0 COMPONENT LOCATION CHART
6332.0	INTERIOR ACCESSORIES	7100.0 COMPONENT LOCATION VIEWS
6350.0	CRASH CONTROL MODULE	8000.0 SPLICE LOCATION VIEWS
6412.2	PARK VENTILATION WITH IHKA	8500.0 CONNECTOR VIEWS
6424.0	REAR WINDOW DEFOGGER	
6450.0	AUTOMATIC HEATING/AC CONTROL	

BMW  
8

0100.0



# INDEX

ABS HYDRAULIC UNIT, Y1 .....	3450.0
ABS HYDRAULIC UNIT, Y1 .....	3450.2
ABS HYDRAULIC UNIT, Y1w .....	3450.5
ABS PUMP MOTOR RELAY, K94 .....	3450.5-08
ACCELERATION SENSOR, RIGHT REAR, B48 .....	3715.2-01
ACCUMULATOR CHARGING UNIT, B52 .....	3334.0-01
ACOUSTIC DEVICE, H10z .....	6210.0-08
ACTIVE REAR AXLE KINEMATICS (AHK) .....	3334.0
AHK ACTUATOR, B53 .....	3334.0-02
AHK CONTROL MODULE, A57 .....	3334.0
AHK RELAY, K82 .....	3334.0-00
AIR BAG GAS GENERATOR, DRIVER'S, G5 .....	3234.0-01
AIR BAG GAS GENERATOR I, PASSENGER'S, G6 .....	3234.0-01
AIR CONDITIONING COMPRESSOR (IHKA), Y3 .....	6450.0-13
AIR CONDITIONING PRESSURE SWITCH, S96 .....	6450.0-12
AIR CONDITIONING RELAY, K33 .....	6454.0-01
ANTENNA AMPLIFIER AM/FM, N8 .....	6424.0-00
ANTI-THEFT CONTROL MODULE (DWA), N1 .....	6575.3
ANTI-THEFT HORN (DWA), H1 .....	6575.3-00
ANTI-THEFT SYSTEM IV (DWA IV) .....	6575.3
ASC SWITCH, S6 .....	3450.2
ASC SWITCH, S6 .....	3450.5-00
AUTOMATIC AIR RECIRCULATION CONTROL MODULE, A417 ..	6450.0-15
AUTOMATIC AIR RECIRCULATION SENSOR, B414 .....	6450.0-15
AUTOMATIC HEATING/AC CONTROL (IHKA) .....	6450.0
AUTOMATIC HEATING/AC CONTROL MODULE (IHKA), A11 ..	6450.0-00
AUTOMATIC HEATING AND AIR CONDITIONING SWITCH (IHKA), S26 .....	6450.0-01
AUTOMATIC TRANSMISSION RANGE SWITCH, S3 .....	2460.7-04
AUTOMATIC TRANSMISSION RANGE SWITCH, S8515 .....	2460.0-04
AUXILIARY FAN .....	6454.0
AUXILIARY FAN MOTOR, M9 .....	6454.0-00
AUXILIARY RELAY BOX - ENGINE COMPARTMENT, P1 .....	0670.2
AUXILIARY THROTTLE POSITION MOTOR (ADS), M93 .....	3450.5-09
AUXILIARY THROTTLE POSITION SENSOR, R6253 .....	3450.5-09
AUXILIARY TURN LIGHT, RIGHT FRONT, H8 .....	6313.0-02
AUXILIARY WATER PUMP, M37a .....	6450.0-11

AUXILIARY WATER PUMP RELAY, K8z .....	6450.0-11
BACK UP LIGHT, LEFT, H27 .....	6322.0-00
BACK UP LIGHT, RIGHT, H28 .....	6322.0-00
BACK UP LIGHTS .....	6322.0
BATTERY I, RIGHT, G1z .....	0670.2-00
BATTERY II, LEFT, G4 .....	0670.2-00
BLOWER MOTOR, M30 .....	6450.0-01
BLOWER RELAY, K4 .....	6450.0-00
BODY ELECTRONICS MODULE, A25 .....	6210.0-00
BODY ELECTRONICS MODULE (EKM) .....	6210.0
BRAKE FLUID LEVEL SWITCH, B18 .....	6210.0-06
BRAKE LIGHT, LEFT, H24 .....	6325.0-00
BRAKE LIGHT, RIGHT, H31 .....	6314.0-04
BRAKE LIGHT SWITCH, S30 .....	6325.0-00
BRAKE LIGHTS .....	6325.0
BRAKE PAD SENSOR, RIGHT REAR, B17 .....	6210.0-05
BRAKE PRESSURE REGULATING SWITCH, B19 .....	6210.0-06
BRAKE PRESSURE SWITCH, B20 .....	6210.0-06
CAMSHAFT POSITION SENSOR (CYLINDER IDENTIFICATION), B6204 .....	1210.11-09
CASSETTE BOX LIGHT, E45y .....	6300.0-04
CD CHANGER, N22 .....	6510.1-04
CELLULAR TELEPHONE (PROVISIONS) .....	6561.0
CENTRAL BODY ELECTRONICS (ZKE II) .....	6100.0
CENTRAL LOCKING TRUNK LID MOTOR RELAY (ZV), K70 .....	5126.0-02
CHARGING SYSTEM .....	1230.0
CLUTCH SWITCH, S32 .....	1270.1-09
COMBINATION SWITCH, S7 .....	6301.0-00
COMPONENT LOCATION CHART .....	7000.0
COMPONENT LOCATION VIEWS .....	7100.0
COMPRESSOR CONTROL RELAY, K19 .....	6450.0-12
COMPRESSOR CUT-OFF RELAY, K60 .....	6450.0-12
CONCEALING HEADLIGHT MOTOR, LH, M18 .....	6312.0-06
CONCEALING HEADLIGHT MOTOR, RH, M19 .....	6312.0-06
CONCEALING HEADLIGHTS RELAY, K39 .....	6312.0-06
CONNECTOR VIEWS .....	8500.0
CONSUMER CUT-OFF RELAY I, K72 .....	6330.0-02



# INDEX

CONSUMER CUT-OFF RELAY II, K73 .....	6330.0-02
CONTACT RING, C101 .....	3234.0-01
CRANKSHAFT POSITION/RPM SENSOR, B6203 .....	1210.11-09
CRASH CONTROL MODULE .....	6350.0
CRASH CONTROL MODULE, N17 .....	6350.0-01
CRUISE CONTROL (TEMPOMAT) .....	6571.0
CRUISE CONTROL MODULE (TEMPOMAT), A8 .....	6571.0
CRUISE CONTROL SWITCH (EML), S11 .....	1270.1-02
CYL. 1 FUEL INJECTION VALVE, Y6101 .....	1210.6-02
CYL. 1 FUEL INJECTION VALVE, Y6101 .....	1210.11-01
CYL. 1 IGNITION COIL, T6151 .....	1210.11-03
CYL. 1-2 KNOCK SENSOR, B6241 .....	1210.11-08
CYL. 1-4 HEATED OXYGEN SENSOR, B6210w .....	1210.11-06
CYL. 1-6 AIR TEMPERATURE SENSOR, B6215 .....	1210.6-08
CYL. 1-6 CRANKSHAFT POSITION/RPM SENSOR, B6212 .....	1210.6-05
CYL. 1-6 CYLINDER IDENTIFICATION SENSOR, B6211 .....	1210.6-05
CYL. 1-6 ENGINE CONTROL MODULE (DME), A6010 .....	1210.6
CYL. 1-6 ENGINE CONTROL MODULE RELAY, K6310 .....	1210.6-01
CYL. 1-6 EVAPORATIVE EMISSION VALVE, Y6121 .....	1210.6-03
CYL. 1-6 FUEL PUMP, M2z .....	1210.6-04
CYL. 1-6 FUEL PUMP RELAY, K6311 .....	1210.6-04
CYL. 1-6 HEATED OXYGEN SENSOR, B6210 .....	1210.6-05
CYL. 1-6 IGNITION COIL, T6151z .....	1210.6-00
CYL. 1-6 MASS AIR FLOW SENSOR, B6216 .....	1210.6-03
CYL. 2 FUEL INJECTION VALVE, Y6102 .....	1210.11-01
CYL. 2 FUEL INJECTION VALVE, Y6102 .....	1210.6-02
CYL. 2 IGNITION COIL, T6152 .....	1210.11-03
CYL. 3 FUEL INJECTION VALVE, Y6103 .....	1210.6-02
CYL. 3 FUEL INJECTION VALVE, Y6103 .....	1210.11-01
CYL. 3 IGNITION COIL, T6153 .....	1210.11-03
CYL. 3-4 KNOCK SENSOR, B6242 .....	1210.11-08
CYL. 4 FUEL INJECTION VALVE, Y6104 .....	1210.11-01
CYL. 4 FUEL INJECTION VALVE, Y6104 .....	1210.6-02
CYL. 4 IGNITION COIL, T6154 .....	1210.11-03
CYL. 5 FUEL INJECTION VALVE, Y6105 .....	1210.6-02
CYL. 5 FUEL INJECTION VALVE, Y6105 .....	1210.11-02
CYL. 5 IGNITION COIL, T6155 .....	1210.11-04

CYL. 5-6 KNOCK SENSOR, B6243 .....	1210.11-08
CYL. 5-8 HEATED OXYGEN SENSOR, B6220w .....	1210.11-06
CYL. 6 FUEL INJECTION VALVE, Y6106 .....	1210.11-02
CYL. 6 FUEL INJECTION VALVE, Y6106 .....	1210.6-02
CYL. 6 IGNITION COIL, T6156 .....	1210.11-04
CYL. 7 FUEL INJECTION VALVE, Y6107 .....	1210.6-12
CYL. 7 FUEL INJECTION VALVE, Y6107 .....	1210.11-02
CYL. 7 IGNITION COIL, T6157 .....	1210.11-04
CYL. 7-8 KNOCK SENSOR, B6244 .....	1210.11-08
CYL. 7-12 AIR TEMPERATURE SENSOR, B6225 .....	1210.6-16
CYL. 7-12 CRANKSHAFT POSITION/RPM SENSOR, B6222 .....	1210.6-15
CYL. 7-12 CYLINDER IDENTIFICATION SENSOR, B6221 .....	1210.6-15
CYL. 7-12 ENGINE CONTROL MODULE (DME), A6020 .....	1210.6
CYL. 7-12 ENGINE CONTROL MODULE RELAY, K6320 .....	1210.6-11
CYL. 7-12 EVAPORATIVE EMISSION VALVE, Y6122 .....	1210.6-13
CYL. 7-12 FUEL PUMP, M11 .....	1210.6-14
CYL. 7-12 FUEL PUMP RELAY, K6321 .....	1210.6-14
CYL. 7-12 HEATED OXYGEN SENSOR, B6220 .....	1210.6-15
CYL. 7-12 IGNITION COIL, T6152z .....	1210.6-10
CYL. 7-12 MASS AIR FLOW SENSOR, B6226 .....	1210.6-13
CYL. 8 FUEL INJECTION VALVE, Y6108 .....	1210.11-02
CYL. 8 FUEL INJECTION VALVE, Y6108 .....	1210.6-12
CYL. 8 IGNITION COIL, T6158 .....	1210.11-04
CYL. 9 FUEL INJECTION VALVE, Y6109 .....	1210.6-12
CYL. 10 FUEL INJECTION VALVE, Y6110 .....	1210.6-12
CYL. 11 FUEL INJECTION VALVE, Y6111 .....	1210.6-12
CYL. 12 FUEL INJECTION VALVE, Y6112 .....	1210.6-12
DASH LIGHT, E41 .....	6450.0-05
DASH VENT MIXING FLAP MOTOR, M34 .....	6450.0-08
DATA LINK .....	0670.5
DATA LINK CONNECTOR, D100 .....	0670.5-02
DAYTIME RUNNING LIGHTS CODING DIODE, V4 .....	6314.0-02
DAYTIME RUNNING LIGHTS RELAY, K111 .....	6314.0-02
DEFROSTER FLAP MOTOR, M35 .....	6450.0-10
DIMMER, N3 .....	6300.0-02
DIVERSITY, N404 .....	6424.0-02
DOOR HANDLE SWITCH, DRIVER'S, S48 .....	5120.0-00



# INDEX

DOOR HANDLE SWITCH, PASSENGER'S, S79	6100.0-03
DOOR JAMB SWITCH, DRIVER'S, S14	6575.3-01
DOOR JAMB SWITCH, PASSENGER'S, S13	6575.3-01
DOOR LOCK HEATER, E48	5120.0-00
DOOR LOCK MOTOR, DRIVER'S, M12	5126.0-03
DOOR LOCK MOTOR, PASSENGER'S, M13	5126.0-03
DOOR LOCK SWITCH, DRIVER'S, S47	5126.0-00
DOOR LOCK SWITCH, PASSENGER'S, S49	5126.0-00
DOOR MODULE, DRIVER'S, A23	6100.0-00
DOOR MODULE, PASSENGER'S, A24	6100.0-00
DOOR PANEL LIGHT, DRIVER'S, E78	6300.0-04
DOOR PANEL LIGHT, PASSENGER'S, E79	6300.0-04
DRIVER'S SEATBACK SWITCH, LH, S104	6210.0-04
DRIVER'S SEATBACK SWITCH, RH, S103	6210.0-04
DWA LED, V5	6575.3-00
E-BOX, P93	0670.2
E-BOX FAN	1290.0
E-BOX FAN, M6506	1290.0-00
EDC RELAY, K67	3715.2-00
EDC SWITCH, S105	3715.2-00
EDC VALVES, LEFT REAR, Y403z	3715.2-02
EDC VALVES, RIGHT FRONT, Y402z	3715.2-02
EDC VALVES, RIGHT REAR, Y404z	3715.2-02
ELECTRIC POWER PROTECTION RELAY, K15	5126.0-02
ELECTRIC POWER PROTECTION RELAY II, K30	5126.0-02
ELECTRIC STEERING COLUMN ADJUSTMENT	3231.0
ELECTRO-HYDRAULIC CONVERTER (SERVOTRONIC), B15	3240.0-00
ELECTROCHROMIC REAR VIEW MIRROR, A22z	5116.0-02
ELECTRONIC SHOCK ABSORBER CONTROL (EDC III+)	3715.2
ELECTRONIC SHOCK ABSORBER CONTROL MODULE (EDC), A413	3715.2
ELECTRONIC THROTTLE CONTROL (EML 12-CYLINDER)	1270.1
ELECTRONIC TRANSMISSION CONTROL (EGS 4HP-22)	2460.0
ELECTRONIC TRANSMISSION CONTROL (EGS: GS 9.20/A5S 560Z)	2460.7
EML ACTUATOR MOTOR I, M6360	1270.1-05
EML ACTUATOR MOTOR II, M6370	1270.1-06

EML SWITCH, S202	1270.1-04
ENGINE CONTROL MODULE (DME), A6000	1210.11
ENGINE CONTROL MODULE RELAY, K6300	1210.11-00
ENGINE CONTROL SYSTEM (DME M1.7, 12-CYLINDER M70)	1210.6
ENGINE CONTROL SYSTEM (DME M3.3, 8-CYLINDER M60)	1210.11
ENGINE COOLANT TEMP. SENSOR (EML), B6234	1270.1-03
ENGINE COOLANT TEMPERATURE SENSOR, B6232	6210.0-07
ENGINE COOLANT TEMPERATURE SENSOR, B6236	1210.6-08
ENGINE COOLANT TEMPERATURE SENSOR, B6236	1210.11-07
ENGINE HOOD SWITCH (DWA), S21	6575.3-02
EVAPORATIVE EMISSION VALVE, Y6120	1210.11-01
EVAPORATOR TEMPERATURE SENSOR, B14	6450.0-03
FINAL STAGE UNIT, N2	6450.0-01
FLASHER LIGHT RELAY, K52z	6312.0-05
FM AMPLIFIER HLO, N444	6424.0-02
FM AMPLIFIER/SUPPRESSION FILTER, C900z	6424.0-02
FOG LIGHT, LEFT, E26	6312.0-03
FOG LIGHT, RIGHT, E27	6312.0-03
FOG LIGHT SWITCH, S10	6312.0-02
FOOTWELL LIGHT, RIGHT FRONT, E62	6330.0-03
FOOTWELL FLAP MOTOR, LEFT, M31	6450.0-09
FOOTWELL FLAP MOTOR, RIGHT, M32	6450.0-08
FRESH AIR FLAP MOTOR, M36	6450.0-10
FRONT ACCELERATION SENSOR, B41z	3715.2-01
FRONT AUXILIARY TURN LIGHT, LEFT, H9	6313.0-02
FRONT BRAKE PAD SENSOR, LEFT, B16	6210.0-05
FRONT CIGAR LIGHTER, E28	6332.0-03
FRONT CIGAR LIGHTER LIGHT, E29	6332.0-02
FRONT DOME LIGHT/MAP READING ASSEMBLY, E34	6330.0-03
FRONT EDC VALVES, LEFT, Y401z	3715.2-02
FRONT FOOTWELL LIGHT, LEFT, E61	6330.0-03
FRONT HIGH RANGE SPEAKER, LEFT, H59	6510.1-01
FRONT LOW RANGE SPEAKER, LEFT, H58	6510.1-01
FRONT MARKER LIGHT, LEFT, E21	6314.0-04
FRONT MIDRANGE SPEAKER, LEFT, H55	6510.1-01
FRONT POWER DISTRIBUTION BOX, P90	0670.2
FRONT SPEED SENSOR - ABS, LEFT, B2	3450.0-03



# INDEX

FRONT SPEED SENSOR - ABS, LEFT, B2	3450.2
FRONT SPEED SENSOR - ABS, LEFT, B2	3450.5
FRONT TURN LIGHT, LEFT, H7	6313.0-02
FUEL LEVEL SENSOR I, B6z	6210.0-08
FUEL LEVEL SENSOR II, B25	6210.0-08
FUEL PUMP, M2	1210.11-05
FUEL PUMP RELAY, K6301w	1210.11-05
FUSE CHART	0670.1
FUSE DETAILS	0670.3
FUSIBLE LINK, F0	0670.2-00
GAS FILLER LOCK MOTOR, M16	5126.0-03
GEAR SHIFT LEVER INDICATOR, E96	6300.0-05
GENERAL MODULE, A1	6100.0-00
GENERATOR, G6509	1230.0-00
GLOVE BOX CENTRAL LOCKING SWITCH, S118	5126.0-01
GLOVE BOX LIGHT, E42	6332.0-00
GLOVE BOX LIGHT SWITCH I, S37z	6332.0-01
GLOVE BOX LIGHT SWITCH II, S113	6332.0-01
GRADIENT MONITOR (DWA), B28	6575.3-04
GROUND DISTRIBUTION	0670.4
HAZARD FLASHER RELAY, K16	6313.0-00
HAZARD SWITCH, S18	6313.0-01
HEADLIGHT/FOG LIGHT WASHER PUMP, M7	6167.0-02
HEADLIGHT/FOGLIGHT CLEANING MODULE (SRA), N6	6167.0-02
HEADLIGHT WIDENING MOTOR, LEFT, M80	6312.0-07
HEADLIGHT WIDENING MOTOR, RIGHT, M81	6312.0-07
HEADLIGHT WIDENING POTENTIOMETER, R13	6312.0-07
HEADLIGHTS/FOG LIGHTS	6312.0
HEATED SEATS	5203.0
HEAT EXCHANGER TEMPERATURE SENSOR, LH, B11	6450.0-03
HEAT EXCHANGER TEMPERATURE SENSOR, RH, B12	6450.0-03
HIFI AMPLIFIER, A18	6510.1-00
HIGH BEAM FLASHER LIGHT, LEFT, E69	6312.0-05
HIGH BEAM FLASHER LIGHT, RIGHT, E70z	6312.0-05
HIGH BEAM LIGHT, RIGHT, E12	6312.0-05
HIGH BEAM LIGHT, LEFT, E11	6312.0-05
HIGH BEAM LIGHT RELAY, K46	6312.0-05

HIGH LEVEL STOP LIGHT, H34	6325.0-00
HIGH RANGE SPEAKER, LEFT REAR, H56	6510.1-03
HIGH RANGE SPEAKER, RIGHT FRONT, H50	6510.1-02
HIGH RANGE SPEAKER, RIGHT REAR, H53	6510.1-03
HIGH SPEED RELAY, K22	6454.0-00
HORN	6133.0
HORN, LEFT, H2	6133.0-00
HORN, RIGHT, H3	6133.0-00
HORN RELAY, K2	6133.0-00
HORN SWITCH, S4	6133.0-00
HOT FILM AIR MASS METER, B6217	1210.11-07
IDLE SPEED CONTROL VALVE, Y6130	1210.11-00
IGNITION SWITCH, S2	0670.2
INDEX	0100.0
INERTIA SWITCH, S27	6350.0-01
INSIDE DOOR HANDLE SWITCH, DRIVER'S, S89	5120.0-01
INSIDE DOOR HANDLE SWITCH, PASSENGER'S, S90	6100.0-03
INSTRUMENT CLUSTER	6211.0
INSTRUMENT CLUSTER, A2w	6211.0
INTAKE AIR TEMPERATURE SENSOR, B6215A	1210.11-07
INTENSIVE WASH PUMP, M5	6160.0-02
INTENSIVE WASH RELAY, K42	6160.0-02
INTERIOR ACCESSORIES	6332.0
INTERIOR LIGHT, LEFT REAR, E39	6330.0-03
INTERIOR LIGHT, RIGHT REAR, E40	6330.0-03
INTERIOR LIGHT RELAY, K29	6330.0-03
INTRODUCTION	0110.0
JET HEATER THERMOSWITCH, S198	6169.0-00
JUMPER PLUG, B900	1240.0-01
JUMPER PLUG FOR HORN/TELEPHONE, K51	6561.0-01
KICK-DOWN SWITCH, S8507	2460.7-03
LAMP CONTROL MODULE, A3	6301.0
LAMP MONITOR (LKM)	6301.0
LICENSE PLATE LIGHT, LEFT, E43	6320.0-01
LICENSE PLATE LIGHT, RIGHT, E44	6320.0-01
LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS	6320.0
LIGHT ASSEMBLY I, LEFT REAR, E46z	0670.4-12



LIGHT ASSEMBLY I, RIGHT REAR, E47z	0670.4-12
LIGHT ASSEMBLY II, LEFT REAR, E80	6301.0-03
LIGHT ASSEMBLY II, RIGHT REAR, E81	6301.0-03
LIGHT BAND, LEFT, E9046	0670.4-01
LIGHT BAND, RIGHT, E9047	0670.4-02
LIGHT SWITCH, S8	6300.0
LIGHT SWITCH, S8z	6300.0
LIGHT SWITCH DETAILS	6300.0
LOCK-SENSOR CONTROL MODULE, A26	6450.0-13
LONGITUDINAL ACCELERATION SENSOR, B49	3715.2-01
LOW BEAM LIGHT, LEFT, E13	6312.0-00
LOW BEAM LIGHT, RIGHT, E14	6312.0-00
LOW RANGE SPEAKER, LEFT REAR, H57	6510.1-03
LOW RANGE SPEAKER, RIGHT FRONT, H51	6510.1-02
LOW RANGE SPEAKER, RIGHT REAR, H52	6510.1-03
LUMBAR SUPPORT	5212.0
MAKEUP MIRROR LIGHT, DRIVER'S, E35	6332.0-01
MAKEUP MIRROR LIGHT, PASSENGER'S, E36	6332.0-01
MAKEUP MIRROR SWITCH, DRIVER'S, S77	6332.0-01
MAKEUP MIRROR SWITCH, PASSENGER'S, S78	6332.0-01
MARKER LIGHT, RIGHT FRONT, E22	6314.0-04
MEMORY MIRRORS CONTROL SWITCH, S12	5200.1-06
MEMORY SEAT ADJUSTMENT SWITCH, DRIVER'S, S50	5200.1-00
MEMORY SEAT MIRRORS SWITCH, S57	5200.1-01
MIDRANGE SPEAKER, RIGHT FRONT, H54	6510.1-02
MID-HIGH RANGE SPEAKER, LEFT, H42	6510.1-01
MID-HIGH RANGE SPEAKER, RIGHT, H43	6510.1-02
MIRROR CONTROL SWITCH, S17	5116.0-00
MIXING FLAP MOTOR, LEFT, M39	6450.0-09
MIXING SWITCH, R1	6450.0-04
MULTI-INFORMATION DISPLAY (MID)	6581.1
MULTI-INFORMATION DISPLAY (MID), N4z	6581.1-00
NORMAL SPEED RELAY, K21	6454.0-00
OIL LEVEL SENSOR, B6230	6210.0-07
OIL PRESSURE SWITCH, B206	6210.0-06
ON-BOARD COMPUTER HORN RELAY, K91	6575.3-00
OUTSIDE TEMPERATURE SENSOR, B13	6450.0-03

OXYGEN SENSOR RELAY, K6303	1210.11-06
PARK BRAKE SWITCH, S31	6210.0-04
PARK HEATING/VENTILATION RELAY BOX, A15	6412.2-02
PARK LIGHT, LEFT, E15	6314.0-03
PARK LIGHT, RIGHT, E19	6314.0-03
PARK LIGHT RELAY, LEFT, K26	6314.0-02
PARK LIGHT/LICENSE PLATE LIGHT RELAY, RIGHT, K25	6314.0-02
PARK/TAIL/UNDERHOOD LIGHTS	6314.0
PARK VENTILATION WITH IHKA	6412.2
PASSENGER'S SEATBACK SWITCH, LH, S122	6210.0-04
PEDAL POSITION SENSOR, R10	1270.1-03
POWER ASSIST STEERING (SERVOTRONIC)	3240.0
POWER DISTRIBUTION	0670.2
POWER DISTRIBUTION CHART	0670.0
POWER MIRRORS	5116.0
POWER SEATS	5200.0
POWER SUN SHADES	5146.0
POWER WINDOW MOTOR/INCREMENT SENSOR, DRIVER'S, M21z	5133.0-03
POWER WINDOW MOTOR/INCREMENT SENSOR, PASSENGER'S, M23z	5133.0-01
PRESSURE SENSOR/PLUNGER, Y16	3450.2
PRESSURE SENSOR/PLUNGER, Y16	3450.5-06
PRESSURE SWITCH, B9508	6450.0-12
PROGRAM SELECTOR, S173	2460.7-02
PROGRAM SWITCH, S8517	2460.0-02
RADIO, N9	6510.1-00
RADIO ANTI-THEFT SWITCH (DWA), S20	6575.3-02
RADIO/HIFI	6510.1
REAR DEFOGGER/ANTENNA, E10	6424.0-01
REAR DEFOGGER I, E9	6424.0-01
REAR DEFOGGER RELAY, K13	6424.0-00
REAR LEFT MID-HIGH RANGE SPEAKER, H55z	6510.1-03
REAR POWER DISTRIBUTION BOX, P94	0670.2-07
REAR RIGHT MID-HIGH RANGE SPEAKER, H54z	6510.1-03
REAR WINDOW DEFOGGER	6424.0
REAR WINDOW DEFOGGER SWITCH, S76	6450.0-07



# INDEX

RECIRCULATION FLAP MOTOR, M40 .....	6450.0-10
RELAY MODULE, A5 .....	6100.0
REMOTE CONTROLLED LOCKING SYSTEM .....	6610.1
REMOTE LOCKING RECEIVER, N13y .....	6610.1-00
REVERSING LIGHT SWITCH, S8511 .....	6322.0-00
SEATBACK HEATER, DRIVER'S, E56 .....	5203.0-00
SEATBACK HEATER, PASSENGER'S, E59 .....	5203.0-00
SEATBACK POTENTIOMETER, R7 .....	5200.1-03
SEATBACK RECLINER MOTOR, DRIVER'S, M53 .....	5200.0-00
SEATBACK RECLINER MOTOR, PASSENGER'S, M58 .....	5200.0-01
SEATBACK SWITCH, RH, PASSENGER'S, S121 .....	6210.0-04
SEAT BELT SWITCH, DRIVER'S, S58 .....	3234.0-00
SEAT CUSHION MOVEMENT POTENTIOMETER, R9 .....	5200.1-02
SEAT CUSHION REAR HEIGHT POTENTIOMETER, R8 .....	5200.1-02
SEAT CUSHION TILT MOTOR, DRIVER'S, M50 .....	5200.0-00
SEAT CUSHION TILT MOTOR, PASSENGER'S, M61 .....	5200.0-01
SEAT HEATER, DRIVER'S, E57 .....	5203.0-00
SEAT HEATER, PASSENGER'S, E58 .....	5203.0-00
SEAT HEIGHT MOTOR, DRIVER'S, M52 .....	5200.0-00
SEAT HEIGHT MOTOR, PASSENGER'S, M59 .....	5200.0-01
SEAT HEIGHT POTENTIOMETER, R6 .....	5200.1-03
SEAT LUMBAR SUPPORT MOTOR/VALVE, DRIVER'S, M55z .....	5212.0-00
SEAT LUMBAR SUPPORT MOTOR/VALVE, PASSENGER'S, M56z .....	5212.0-00
SEAT LUMBAR SUPPORT SWITCH, PASSENGER'S, S55 .....	5212.0-00
SEAT LUMBAR SWITCH, DRIVER'S, S52 .....	5212.0-00
SEAT/MIRROR MEMORY CONTROL MODULE, A21 .....	5200.1-00
SEAT/MIRROR MEMORY SYSTEM (SM/SPM) .....	5200.1
SEAT MOVEMENT MOTOR, DRIVER'S, M51 .....	5200.0-00
SEAT MOVEMENT MOTOR, PASSENGER'S, M60 .....	5200.0-01
SEAT OCCUPANCY DETECTOR, A113 .....	3234.0-00
SEAT, SEAT CONTROL SWITCH, DRIVER'S, S51 .....	5200.0-00
SEAT, SEAT CONTROL SWITCH, PASSENGER'S, S56 .....	5200.0-01
SEAT, SEAT HEATER SWITCH, DRIVER'S, S53 .....	5203.0-00
SEAT, SEAT HEATER SWITCH, PASSENGER'S, S54 .....	5203.0-00
SERVOTRONIC RELAY, K199 .....	3240.0-00
SHIFT-LOCK, Y19 .....	2460.7-03
SHIFT LOCK, S8522 .....	2460.0-00

SIDE MARKER LIGHT, LEFT REAR, E9021 .....	6314.0-01
SIDE MARKER LIGHT, RIGHT REAR, E9022 .....	6314.0-01
SIDE MEMORY MIRROR, DRIVER'S, Y9 .....	5200.1-07
SIDE MEMORY MIRROR, PASSENGER'S, Y10 .....	5200.1-08
SIDE MIRROR, DRIVER'S, Y5 .....	5116.0-01
SIDE MIRROR, PASSENGER'S, Y6 .....	5116.0-01
SLIP CONTROL (ABS/ASC+T) .....	3450.2
SLIP CONTROL (ABS) .....	3450.0
SLIP CONTROL 5 (ASC 5) .....	3450.5
SLIP CONTROL MODULE (ABS/ASC+T), A9070 .....	3450.2
SLIP CONTROL MODULE (ABS/ASC+T), A9070 .....	3450.5
SLIP CONTROL MODULE (ABS), A7 .....	3450.0
SPEAKER, LEFT REAR, H46 .....	6510.0-03
SPEAKER, RIGHT REAR, H45 .....	6510.0-03
SPEED SENSOR - ABS, LEFT REAR, B4 .....	3450.0-03
SPEED SENSOR - ABS, LEFT REAR, B4 .....	3450.2
SPEED SENSOR - ABS, LEFT REAR, B4 .....	3450.5
SPEED SENSOR - ABS, RIGHT FRONT, B1 .....	3450.0-03
SPEED SENSOR - ABS, RIGHT FRONT, B1 .....	3450.2
SPEED SENSOR - ABS, RIGHT FRONT, B1 .....	3450.5
SPEED SENSOR - ABS, RIGHT REAR, B3 .....	3450.0-03
SPEED SENSOR - ABS, RIGHT REAR, B3 .....	3450.2
SPEED SENSOR - ABS, RIGHT REAR, B3 .....	3450.5
SPLICE LOCATION VIEWS .....	8000.0
START .....	1240.0
STARTER, M6510 .....	1240.0-01
STARTER IMMOBILIZATION RELAY, K1w .....	1240.0-01
STARTER RELAY, K1 .....	1240.0
STEERING ANGLE SENDER, B40 .....	3715.2-01
STEERING COLUMN ADJUSTMENT CONTROL MODULE, A34w .....	3231.0-00
STEERING COLUMN ANGLE ADJUST MOTOR, M83 .....	3231.0-00
STEERING COLUMN ANGLE ADJUST POTENTIOMETER, R19z .....	3231.1-00
STEERING COLUMN LENGTH ADJUST MOTOR, M82 .....	3231.0-00
STEERING COLUMN LENGTH ADJUST POTENTIOMETER, R18z .....	3231.1-00
STEERING COLUMN MEMORY (LSM) .....	3231.1
STEERING COLUMN MEMORY CONTROL MODULE, A34z .....	3231.1-00
STEERING COLUMN POSITION SWITCH, S119z .....	3231.0-00



# INDEX

STEERING WHEEL ANGLE SENSOR, R24 .....	3334.0-01
SUN BLIND CONTROL MODULE, A82 .....	5146.0-00
SUN BLIND MOTOR, M74 .....	5146.0-00
SUN BLIND SWITCH, S110 .....	5146.0-00
SUNROOF MODULE, A33 .....	5410.0-01
SUNROOF MOTOR, M24 .....	5410.0-01
SUNROOF SWITCH, S38 .....	5410.0-01
SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG) .....	3234.0
SUPPLEMENTAL RESTRAINT SYSTEM CONTROL MODULE, A12 .....	3234.0-00
SUPPRESSION FILTER, C900 .....	6424.0-01
SYMBOLS .....	0140.0
TAIL LIGHT, LEFT, H25 .....	6314.0-04
TAIL LIGHT, RIGHT, H30 .....	6314.0-04
TELEPHONE TRANSCEIVER, H38 .....	6510.1-00
TEMPERATURE SENSOR, B21z .....	6210.0-07
TEMPERATURE SWITCH, B6235 .....	1290.0-00
TEMPERATURE SWITCH, S36 .....	6454.0-00
THIGH SUPPORT MOTOR, DRIVER'S, M65 .....	5200.0-02
THIGH SUPPORT MOTOR, PASSENGER'S, M66 .....	5200.0-02
THIGH SUPPORT SWITCH, DRIVER'S, S93 .....	5200.0-02
THIGH SUPPORT SWITCH, PASSENGER'S, S94 .....	5200.0-02
THIGH SUPPORT POTENTIOMETER, R15 .....	5200.1-04
THROTTLE CONTROL MODULE (EML), A6004 .....	1270.1
THROTTLE POSITION SENSOR, R6252 .....	1210.11-07
TRANSMISSION CONTROL MODULE (EGS), A8500 .....	2460.0
TRANSMISSION CONTROL MODULE (EGS), A8500 .....	2460.7
TRANSMISSION POSITION INDICATOR LIGHT, E82 .....	2460.7-02
TRANSMISSION RANGE SELECTOR LEVER LIGHT, S8518 .....	2460.0-02
TRANSMISSION VALVE UNIT, Y8505 .....	2460.0-01
TRANSMISSION VALVE UNIT, Y8505w .....	2460.7-01
TRUNK LID LIGHT, E33 .....	6320.0-03
TRUNK LID LIGHT, LEFT, E9033 .....	6320.0-03
TRUNK LID LIGHT, RIGHT, E9133 .....	6320.0-03
TRUNK LID LOCKING SWITCH, S117 .....	5126.0-01
TRUNK LID SWITCH, S61 .....	6320.0-03
TRUNK LOCK MOTOR, M17 .....	5126.0-02
TURN/HAZARD LIGHTS .....	6312.0

TURN LIGHT, LEFT REAR, H6 .....	6313.0-02
TURN LIGHT, RIGHT FRONT, H4 .....	6313.0-02
TURN LIGHT, RIGHT REAR, H5 .....	6313.0-02
UNDERHOOD LIGHT, E20 .....	6314.0-04
UNDERHOOD LIGHT SWITCH, S19 .....	6314.0-04
UNLOADER RELAY, TERMINAL 15, K9 .....	0670.2-04
UNLOADER RELAY, TERMINAL 61, K61 .....	1230.0-00
UNLOADER RELAY, TERMINAL R, K3 .....	0670.2-04
UPPER LEFT TAIL LIGHT, H9025 .....	6314.0-01
UPPER RIGHT TAIL LIGHT, H9030 .....	6314.0-01
VALVE RELAY (ABS/ASC), K95 .....	3450.5-08
VEHICLE SPEED SENSOR, B10 .....	6210.0-08
VENTILATION FLAP MOTOR, LEFT, M38 .....	6450.0-09
VENTILATION FLAP MOTOR, RIGHT, M33 .....	6450.0-08
WARNING LIGHT RELAY, K81 .....	3334.0-00
WASHER FLUID LEVEL SWITCH, S64 .....	6210.0-06
WASHER FLUID LEVEL SWITCH, S136 .....	6210.0-06
WASHER JET HEATER, LEFT, E51 .....	6169.0-00
WASHER JET HEATER, RIGHT, E52 .....	6169.0-00
WASHER PUMP, M4 .....	6160.0-02
WASHER PUMP RELAY, K5 .....	6160.0-02
WATER PUMP IN LUGGAGE COMPARTMENT, M86 .....	6167.0-02
WATER VALVE ASSEMBLY, Y4 .....	6450.0-02
WINDOW LIMIT SWITCH, LEFT REAR, S45 .....	5133.0-04
WINDOW LIMIT SWITCH, RIGHT REAR, S46 .....	5133.0-04
WINDOW MONITORING SWITCH (DWA), DRIVER'S, S100 .....	6575.3-05
WINDOW MONITORING SWITCH (DWA), PASSENGER'S, S99 ..	6575.3-05
WINDOW MONITORING SWITCH (DWA), LEFT REAR, S102 ..	6575.3-05
WINDOW MONITORING SWITCH (DWA), RIGHT REAR, S101 ..	6575.3-05
WINDOW MOTOR, LEFT REAR, M20 .....	5133.0-04
WINDOW MOTOR, RIGHT REAR, M22 .....	5133.0-04
WINDOW SWITCH, S40z .....	5133.0-00
WINDOW SWITCH, PASSENGER'S, S97 .....	5133.0-02
WINDSHIELD WASHER JET HEATERS .....	6169.0
WIPER MOTOR, M3 .....	6160.0-01
WIPER PRESSURE CONTROL (ADV) RELAY, K12 .....	6164.0-01
WIPER PRESSURE CONTROL MOTOR (ADV), M6 .....	6164.0-01



# INDEX

---

WIPER RELAY II, K37 .....	6160.0-01
WIPER RELAY I, K36 .....	6160.0-01
WIPER RELAY III, K38 .....	6160.0-01
WIPER/WASHER SWITCH, S5 .....	6160.0-00
ZKE CENTRAL LOCKING (ZV) .....	5126.0
ZKE DOOR LOCK HEATING (TSH) .....	5120.0
ZKE HEADLIGHT WASHER (SRA) .....	6167.0
ZKE INTERIOR LIGHTS CONTROL (IB) .....	6330.0
ZKE POWER WINDOWS (FH) .....	5133.0
ZKE SUNROOF (SHD) .....	5410.0
ZKE WINDSHIELD WIPER PRESSURE CONTROL (ADV) .....	6164.0
ZKE WIPER/WASHER CONTROL .....	6160.0

## Schematics

The schematics divide the entire vehicle electrical system into individual circuits. Interacting electrical components are shown on one common schematic.

Switches and other components are represented in such a way that their general layout and function are self-explicit. They are arranged on the sheet such that the current path can be followed from positive (top) to negative (bottom).

**Important:** The components and wires are not drawn to scale. For instance, a lead with a length of over 1m can be shown as a lead that is only a few cm long. To ensure clear arrangement, all connectors, line branches and connected components from the fuses to the component and from the component to ground connection are not shown within the individual cells. If required, reference can be made to cells **0670.3 Fuse Details** and **0670.4 Ground Distribution** where all lines are illustrated with all plug connections, line branches and connected components.

All circuit symbols used are listed and explained in cell **0140.0 Symbols**.


In cell **7000.0 Component Location Chart** all important connectors, ground points and components are listed in tabular form. It provides a precise description of the component locations in the vehicle.

In cell **7100.0 Component Location Views** the location of connectors and components which are difficult to locate are shown in line arts or illustrations. In cell **8500.0 Connector Views** diagrams of connectors with more than 2 pins are illustrated.

Included in this ETM are foldout block diagrams. These are overviews of the entire system (EGS, ABS, AC etc.) which helps understand the relationships between various components and control module of the system being diagnosed.

### Example

General conventions can be explained based on the following schematic example.

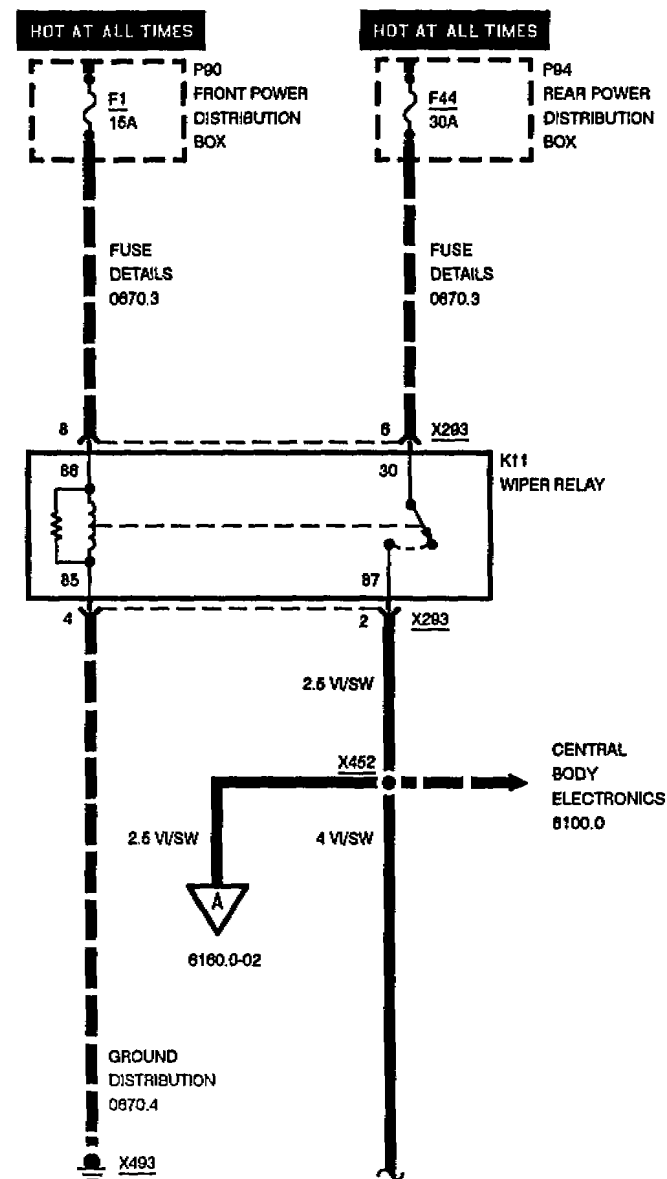




## General Conventions

1. Switches and relays are always shown in rest position (e.g. K11).
2. A component shown in a dashed frame signifies that the component is illustrated only in part (e.g. P90 and P91).
3. A component shown in a completely drawn frame signifies that the component is illustrated in full (e.g. K11).
4. The dashed line between pin 8 and pin 6 of connector X293 indicates that both pins belong to connector X293.
5. The dashed line from fuse F1 to pin 8 of connector X293 shows the positive supply of relay K11. If required, refer to cell **0670.3 Fuse Details** at fuse F1 for the complete line progressing with plug connections, line branches, wire colors and cross sections.
6. The dashed line with an arrow at splice X452 indicates that several wires lead to splice X452. All lines leading to the connection are illustrated in cell **6100.0 Central Body Electronics (ZKE)**. An interrupted line with an arrow indicates that only this one wire leads to another circuit.
7. The dashed line from pin 4 of connector X293 to ground X493 shows the ground supply for relay K11. If required, refer to cell **0670.4 Ground Distribution** at ground X493 for the complete line progression with all plug connections, line branches, wire colors and cross sections.
8. The interrupted line from splice X452 with an A in the open arrow is continued on page 6160.0-02. Termination of wire 4 VI/SW from splice X452 with a wavy line indicates that the wire is continued on the opposite page.

**SYMBOLS**

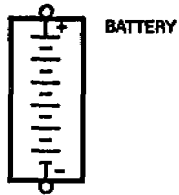


BATTERY



HEATING ELEMENT



VARIABLE RESISTANCE SENSOR  
VARIABLE CONTACT IS  
MOVED BY AN EXTERNAL  
FORCE

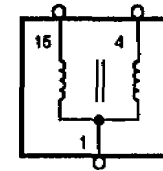

IGNITION COIL



FUSE



LOUDSPEAKER OR HORN



VARIABLE RESISTOR  
RESISTANCE IS CHANGED  
BY TEMPERATURE OR  
PRESSURE



CONTROL/POWER ELECTRONICS



FUSIBLE LINK



LIGHT



INDUCTIVE SENSOR



RADIO



CIRCUIT BREAKER



PERMANENT MAGNET MOTOR  
ONE SPEED



DIODE  
CURRENT CAN FLOW ONLY  
IN DIRECTION OF ARROW



TRANSISTORIZED SWITCH



SOLENOID



PERMANENT MAGNET MOTOR  
TWO SPEEDS



ZENER DIODE  
TO REGULATE VOLTAGE



OXYGEN SENSOR



SOLENOID CONTROLLED VALVE  
OR CLUTCH SOLENOID



KNOCK SENSOR



LIGHT EMITTING DIODE








VEHICLE SPEED SENSOR







THERMO SWITCH

# SYMBOLS

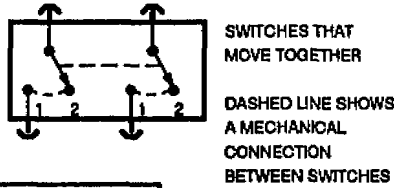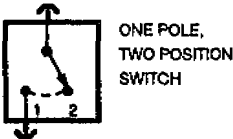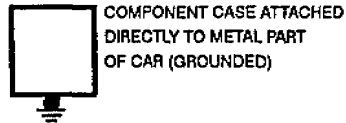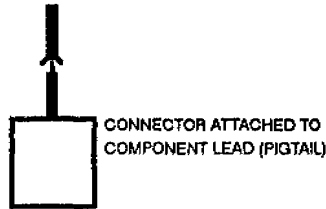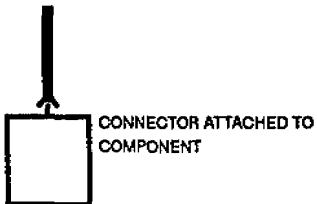


WIRE COLOR	
BL	BLUE
BR	BROWN
GE	YELLOW
GN	GREEN
GR	GRAY
OR	ORANGE
RS	PINK
RT	RED
SW	BLACK
VI	VIOLET
WS	WHITE
TR	TRANSPARENT

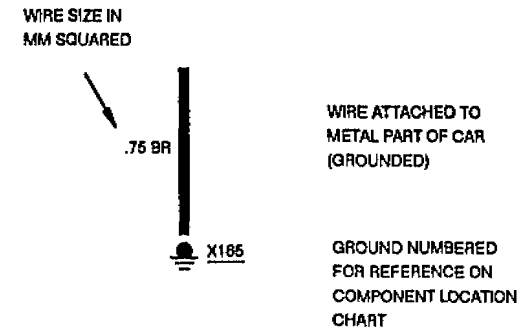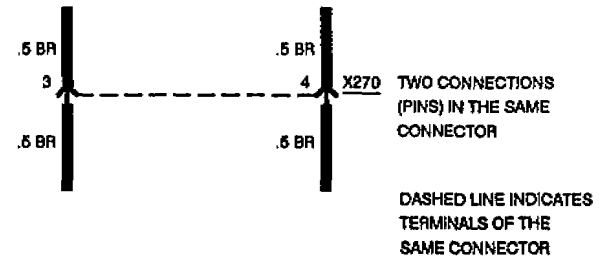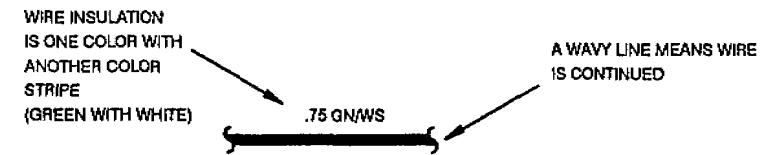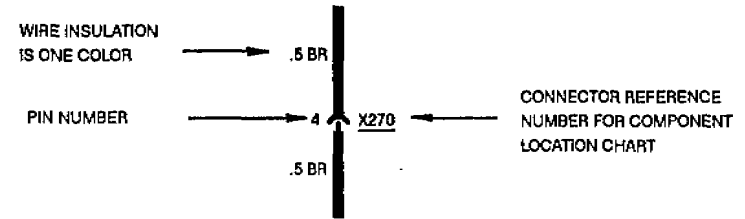





**BMW**  
**8** **SYMBOLS**

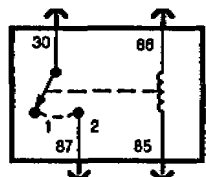


CONTACT RELAY

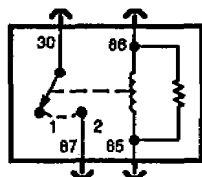

RELAY WITH RESISTOR ACROSS WINDING

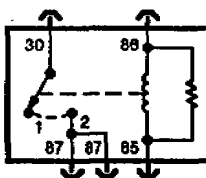

CONTACT RELAY WITH TWO OUTPUTS

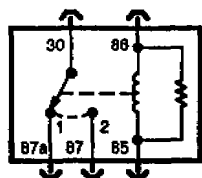

CHANGEOVER RELAY WITH TWO OUTPUTS

TERMINAL NUMBER DESCRIPTION


30 RELAY INPUT

85 RELAY OUTPUT (WINDING)

86 RELAY INPUT (WINDING)

87 RELAY OUTPUT (ENERGIZED)

87a RELAY OUTPUT (AT REST)

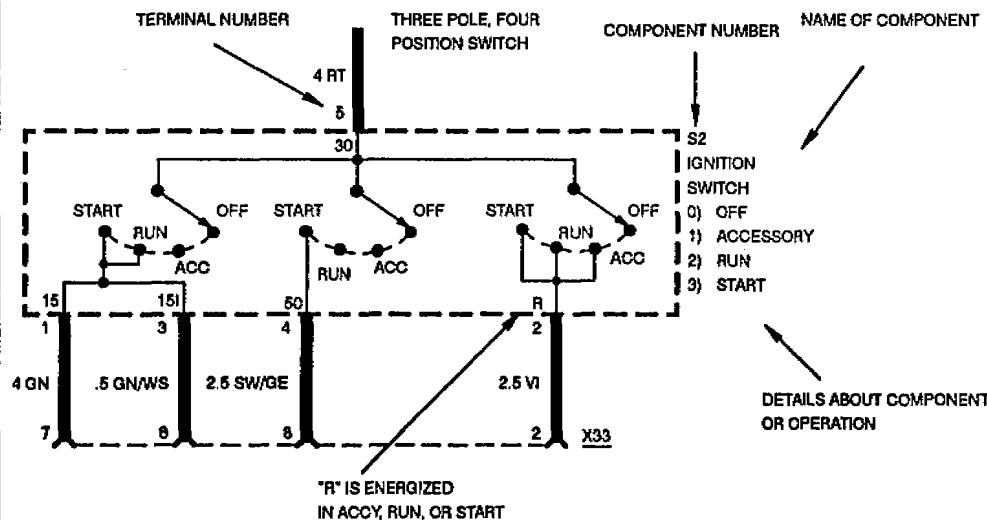


TERMINAL NUMBER DESCRIPTION TERMINAL NUMBER DESCRIPTION

50 VOLTAGE: IGNITION SWITCH IN START 15i VOLTAGE: IGNITION SWITCH IN RUN

30 VOLTAGE: SUPPLIED AT ALL TIMES R VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START

15 VOLTAGE: IGNITION SWITCH IN RUN OR START 31 GROUND

**HOT AT ALL TIMES**

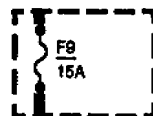 

INDICATES THAT FUSE 9 IS SUPPLIED WITH POWER AT ALL TIMES

POWER STATUS

**HOT AT ALL TIMES**

**HOT IN RUN AND START**

**HOT IN ACCY, RUN AND START**

DESCRIPTION


VOLTAGE: SUPPLIED AT ALL TIMES

VOLTAGE: IGNITION SWITCH IN RUN OR START


VOLTAGE: IGNITION SWITCH IN ACCESSORY, RUN OR START

# SYMBOLS


**HOT IN ACCY, RUN AND START**

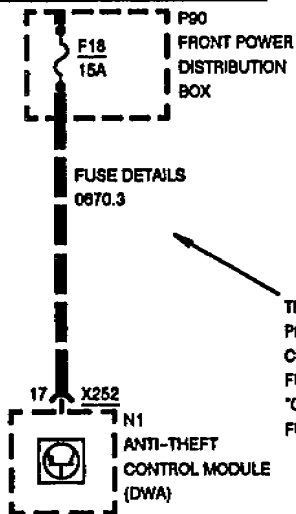


THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED TO FUSE 18 ARE SHOWN IN CELL '0670.3 FUSE DETAILS' AT FUSE 18

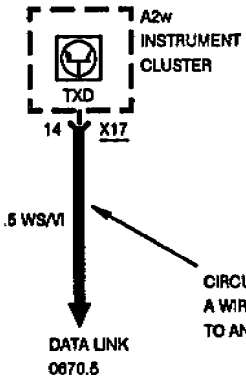

CIRCUIT REFERENCE- A WIRE WHICH CONNECTS TO ANOTHER CIRCUIT

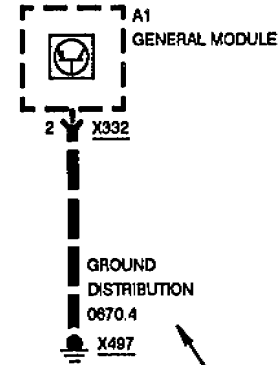

THE COMPLETE WIRE PROGRESSION AND FURTHER CIRCUITS CONNECTED TO GROUND X497 ARE SHOWN IN CELL '0670.4 GROUND DISTRIBUTION' AT GROUND X497

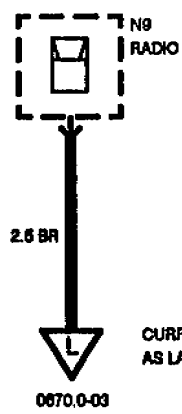

CURRENT PATH IS CONTINUED AS LABELED



ARROW SHOWS DIRECTION OF CURRENT FLOW AND IS REPEATED WHERE CURRENT PATH CONTINUES



# SYMBOLS

## BLOCK DIAGRAM

