

1995/96

BMW

**840Ci, 850Ci,
850CSi (E31)**

Electrical

**Troubleshooting
Manual**

Vehicles Produced 9/94 to 8/96



ELECTRICAL TROUBLESHOOTING MANUAL

SERIES 8 – E31 (840Ci, 850Ci, 850CSi)

SCHEMATICS

MODEL YEAR 1995/96

0100.0	INDEX	3240.0	POWER ASSIST STEERING (SERVOTRONIC)
0110.0	INTRODUCTION	3334.0	ACTIVE REAR AXLE KINEMATICS (AHK)
0140.0	SYMBOLS	3450.0	SLIP CONTROL (ABS)
0670.0	POWER DISTRIBUTION CHART	3450.5	SLIP CONTROL 5 (ASC 5)
0670.1	FUSE CHART	3715.2	ELECTRONIC SHOCK ABSORBER CONTROL (EDC III+)
0670.2	POWER DISTRIBUTION	3715.3	ELECTRONIC SHOCK ABSORBER CONTROL (EDC IV)
0670.3	FUSE DETAILS	5116.0	POWER MIRRORS
0670.4	GROUND DISTRIBUTION	5120.0	ZKE DOOR LOCK HEATING (TSH)
0670.5	DATA LINK	5126.0	ZKE CENTRAL LOCKING (ZV)
1210.6	ENGINE CONTROL SYSTEM (DME M1.7, 12-CYLINDER M70)	5133.0	ZKE POWER WINDOWS (FH)
1210.11	ENGINE CONTROL SYSTEM (DME M3.3, 8-CYLINDER M60)	5146.0	POWER SUN SHADES
1210.18	ENGINE CONTROL SYSTEM (DME M5.2, 12-CYLINDER M73)	5200.0	POWER SEATS
1210.22	ENGINE CONTROL SYSTEM (DME M5.2, 8-CYLINDER M62)	5200.1	SEAT/MIRROR MEMORY SYSTEM (SM/SPM)
1230.0	CHARGING SYSTEM	5203.0	HEATED SEATS
1240.0	START	5212.0	LUMBAR SUPPORT
1270.1	ELECTRONIC THROTTLE CONTROL (EML 12-CYLINDER)	5410.0	ZKE SUNROOF (SHD)
1270.2	ELECTRONIC THROTTLE CONTROL (EML IIIIS, 12-CYLINDER)	6100.0	CENTRAL BODY ELECTRONICS (ZKE II)
1290.0	E-BOX FAN	6133.0	HORN
2460.7	ELECTRONIC TRANSMISSION CONTROL (EGS: GS 9.20/A5S 560Z)	6135.0	DRIVE-AWAY PROTECTION (EWS II)
2460.10	ELECTRONIC TRANSMISSION CONTROL (EGS: GS 9.22/AS5 560Z)	6160.0	ZKE WIPER/WASHER CONTROL
3231.0	ELECTRIC STEERING COLUMN ADJUSTMENT	6164.0	ZKE WINDSHIELD WIPER PRESSURE CONTROL (ADV)
3231.1	STEERING COLUMN MEMORY (LSM)	6167.0	ZKE HEADLIGHT WASHER (SRA)
3234.0	SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)	6169.0	WINDSHIELD WASHER JET HEATERS
		6210.0	BODY ELECTRONICS MODULE (EKM)
		6211.0	INSTRUMENT CLUSTER

SCHEMATICS

6300.0	LIGHT SWITCH DETAILS	6450.0	AUTOMATIC HEATING/AC CONTROL (IHKA)
6301.0	LAMP MONITOR (LKM)	6454.0	AUXILIARY FAN
6312.0	HEADLIGHTS/FOG LIGHTS	6510.1	RADIO/HIFI
6313.0	TURN/HAZARD LIGHTS	6561.0	CELLULAR TELEPHONE (PROVISIONS)
6314.0	PARK/TAIL/UNDERHOOD LIGHTS	6575.3	ANTI-THEFT SYSTEM IV (DWA IV)
6320.0	LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS	6581.1	MULTI-INFORMATION DISPLAY (MID)
6322.0	BACK UP LIGHTS	6610.1	REMOTE CONTROLLED LOCKING SYSTEM
6325.0	BRAKE LIGHTS	7000.0	COMPONENT LOCATION CHART
6330.0	ZKE INTERIOR LIGHTS CONTROL (IB)	7100.0	COMPONENT LOCATION VIEWS
6332.0	INTERIOR ACCESSORIES	8000.0	SPLICE LOCATION VIEWS
6350.0	CRASH CONTROL MODULE	8500.0	CONNECTOR VIEWS
6412.2	PARK VENTILATION WITH IHKA		
6424.0	REAR WINDOW DEFOGGER/ ANTENNA		



0100.0



ABS HYDRAULIC UNIT, Y1 3450.0
 ABS HYDRAULIC UNIT, Y1 3450.5-01
 ABS HYDRAULIC UNIT, Y1w 3450.5-07
 ACCELERATION SENSOR, RIGHT REAR, B48 3715.2-01
 ACCELERATION SENSOR, RIGHT REAR, B48 3715.3-01
 ACOUSTIC DEVICE, H10z 6210.0-09
 AIR BAG GAS GENERATOR, DRIVER'S, G5 3234.0-01
 AIR BAG GAS GENERATOR, PASSENGER'S, G6 3234.0-01
 AIR CONDITIONING COMPRESSOR (IHKA), Y3 6450.0-13
 AIR CONDITIONING PRESSURE SWITCH, S96 6450.0-12
 AIR CONDITIONING RELAY, K33 6454.0
 AIR FLOW SENSOR, CYL. 1-6, B6216 1210.6-03
 AIR FLOW SENSOR, CYL. 7-12, B6226 1210.6-13
 AIR TEMPERATURE SENSOR, CYL. 1-6, B6215 1210.6-08
 AIR TEMPERATURE SENSOR, CYL. 7-12, B6225 1210.6-16
 ANTENNA AMPLIFIER AM/FM, N8 6424.0-00
 ANTI-THEFT CONTROL MODULE (DWA), N1 6575.3
 ANTI-THEFT HORN (DWA), H1 6575.3-00
 ANTI-THEFT SYSTEM IV (DWA IV) 6575.3
 ASC SWITCH, S6 3450.5
 AUTOMATIC AIR RECIRCULATION CONTROL MODULE,
 A417 6450.0-16
 AUTOMATIC AIR RECIRCULATION SENSOR, B414 6450.0-16
 AUTOMATIC HEATING AND AIR CONDITIONING
 SWITCH (IHKA), S26 6450.0-01
 AUTOMATIC HEATING/AC CONTROL (IHKA) 6450.0
 AUTOMATIC HEATING/AC CONTROL MODULE
 (IHKA), A11 6450.0-00
 AUTOMATIC TRANSMISSION RANGE SWITCH,
 S3 2460.7-04
 AUTOMATIC TRANSMISSION RANGE SWITCH,
 S8532 2460.10-04

AUTOMATIC TRANSMISSION RANGE SWITCH,
 S8532 2460.10-09
 AUXILIARY FAN 6454.0
 AUXILIARY FAN MOTOR, M9 6454.0-00
 AUXILIARY FUSE BOX, P95 0670.2-09
 AUXILIARY FUSE BOX, P97 0670.2-09
 AUXILIARY RELAY BOX - ENGINE COMPARTMENT,
 P1 0670.2
 AUXILIARY THROTTLE POSITION MOTOR (ADS),
 M93 3450.5-09
 AUXILIARY THROTTLE POSITION SENSOR, R6253 3450.5-09
 AUXILIARY TURN LIGHT, LEFT FRONT, H9 6313.0-02
 AUXILIARY TURN LIGHT, RIGHT FRONT, H8 6313.0-02
 AUXILIARY WATER PUMP RELAY, K8z 6450.0-11
 AUXILIARY WATER PUMP, M37a 6450.0-11
 B+ JUMP START JUNCTION POINT, G6430 0670.2-02
 B+ JUNCTION POINT, X6400 0670.2
 BACK UP LIGHT, LEFT, H27 6322.0-00
 BACK UP LIGHT, RIGHT, H28 6322.0-00
 BACK UP LIGHTS 6322.0
 BATTERY I, RIGHT, G1z 0670.2-00
 BATTERY II, LEFT, G4 0670.2-00
 BLOWER MOTOR, M30 6450.0-01
 BLOWER RELAY, K4 6450.0-00
 BODY ELECTRONICS MODULE (EKM) 6210.0
 BODY ELECTRONICS MODULE, A25 6210.0-00
 BRAKE FLUID LEVEL SWITCH, B18 6210.0-08
 BRAKE LIGHT SWITCH, S30 6325.0-00
 BRAKE LIGHT, LEFT, H24 6325.0-01
 BRAKE LIGHT, RIGHT, H31 6325.0-01
 BRAKE LIGHTS 6325.0
 BRAKE PAD SENSOR, LEFT FRONT, B16 6210.0-07



INDEX

BRAKE PAD SENSOR, RIGHT REAR, B17	6210.0-07
BRAKE PRESSURE REGULATING SWITCH, B19	6210.0-08
BRAKE PRESSURE SWITCH, B20	6210.0-08
CAMSHAFT POSITION SENSOR (CYLINDER IDENTIFICATION), B6204	1210.11-09
CAN BUS, I1000	0670.5-13
CASSETTE BOX LIGHT, E45y	6300.0-04
CD CHANGER, N22	6510.1-04
CELLULAR TELEPHONE (PROVISIONS)	6561.0
CENTRAL BODY ELECTRONICS (ZKE II)	6100.0
CENTRAL LOCKING TRUNK LID MOTOR RELAY (ZV), K70	5126.0-03
CHARGING SOCKET, X779	6332.0-00
CHARGING SYSTEM	1230.0
CLUTCH SWITCH, S32	1270.1-09
COMBINATION SWITCH, S7	6301.0-00
COMPONENT LOCATION CHART	7000.0
COMPONENT LOCATION VIEWS	7100.0
COMPRESSOR CONTROL RELAY, K19	6450.0-12
COMPRESSOR CUT-OFF RELAY, K60	6450.0-12
CONCEALING HEADLIGHT MOTOR, LH, M18	6312.0-06
CONCEALING HEADLIGHT MOTOR, RH, M19	6312.0-06
CONCEALING HEADLIGHTS RELAY, K39	6312.0-06
CONNECTOR VIEWS	8500.0
CONSUMER CUT-OFF RELAY I, K72	6330.0-02
CONSUMER CUT-OFF RELAY II, K73	6330.0-02
CONTACT RING, C101	3234.0-01
CRANKSHAFT POSITION/RPM SENSOR, B6203	1210.11-09
CRANKSHAFT POSITION/RPM SENSOR, B6203	1210.22-10
CRANKSHAFT POSITION/RPM SENSOR, CYL. 1-6, B6212	1210.6-05

CRANKSHAFT POSITION/RPM SENSOR, CYL. 7-12, B6222	1210.6-15
CRANKSHAFT SENSOR I, B6213	1210.18-05
CRANKSHAFT SENSOR II, B6223	1210.18-12
CRASH CONTROL MODULE	6350.0
CRASH CONTROL MODULE, N17	6350.0-01
CRUISE CONTROL (TEMPOMAT)	6571.0
CRUISE CONTROL ACTUATOR (TEMPOMAT), M25	6571.0-02
CRUISE CONTROL MODULE (TEMPOMAT), A8	6571.0
CRUISE CONTROL SWITCH (EML), S11	1270.1-02
CRUISE CONTROL SWITCH (EML), S11	1270.2-01
CRUISE CONTROL SWITCH, S28	6571.0-00
CYLINDER IDENTIFICATION SENSOR, CYL. 1-6, B6211	1210.6-05
CYLINDER IDENTIFICATION SENSOR, CYL. 7-12, B6221	1210.6-15
DASH LIGHT, E41	6450.0-07
DASH VENT MIXING FLAP MOTOR, M34	6450.0-08
DATA LINK	0670.5
DATA LINK CONNECTOR, D100	0670.5
DAYTIME RUNNING LIGHTS CODING DIODE, V4	6314.0-02
DAYTIME RUNNING LIGHTS RELAY, K111	6314.0-02
DEFROSTER FLAP MOTOR, M35	6450.0-10
DIMMER, N3	6300.0-02
DIVERSITY, N404	6424.0-02
DOOR HANDLE SWITCH, DRIVER'S, S48	5120.0-00
DOOR HANDLE SWITCH, PASSENGER'S, S79	6100.0-03
DOOR JAMB SWITCH, DRIVER'S, S14	6575.3-04
DOOR JAMB SWITCH, PASSENGER'S, S13	6575.3-04
DOOR LOCK HEATER, E48	5120.0-00
DOOR LOCK MOTOR, DRIVER'S, M12	5126.0-04



DOOR LOCK MOTOR, PASSENGER'S, M13 5126.0-04
DOOR LOCK SWITCH, DRIVER'S, S47 5126.0-00
DOOR LOCK SWITCH, PASSENGER'S, S49 5126.0-00
DOOR MODULE, DRIVER'S, A23 6100.0-00
DOOR MODULE, PASSENGER'S, A24 6100.0-00
DOOR PANEL LIGHT, DRIVER'S, E78 6300.0-04
DOOR PANEL LIGHT, PASSENGER'S, E79 6300.0-04
DRIVE-AWAY PROTECTION (EWS II) 6135.0
DRIVER'S SEATBACK SWITCH, LH, S104 6210.0-06
DRIVER'S SEATBACK SWITCH, RH, S103 6210.0-06
DSC STEERING WHEEL ANGLE SENSOR, R26 3450.5-08
DUAL TEMPERATURE SENSOR
(COOLANT TEMPERATURE), B6256 1210.18-06
DUAL TEMPERATURE SENSOR
(COOLANT TEMPERATURE), B6256 1210.22-08
DUAL TEMPERATURE SENSOR
(COOLANT TEMPERATURE), B6256 6210.0
DWA LED, V5 6575.3-00
E-BOX FAN 1290.0
E-BOX FAN, M6506 1290.0-00
EDC RELAY, K67 3715.2-00
EDC RELAY, K67 3715.3-00
EDC SWITCH, S105 3715.2-00
EDC SWITCH, S105 3715.3-00
EDC VALVES, LEFT FRONT, Y401z 3715.2-02
EDC VALVES, LEFT FRONT, Y401z 3715.3-02
EDC VALVES, LEFT REAR, Y403z 3715.2-02
EDC VALVES, LEFT REAR, Y403z 3715.3-02
EDC VALVES, RIGHT FRONT, Y402z 3715.2-02
EDC VALVES, RIGHT FRONT, Y402z 3715.3-02
EDC VALVES, RIGHT REAR, Y404z 3715.2-02
EDC VALVES, RIGHT REAR, Y404z 3715.3-02

ELECTRIC POWER PROTECTION RELAY II, K30 5126.0-03
ELECTRIC POWER PROTECTION RELAY, K15 5126.0-03
ELECTRIC STEERING COLUMN ADJUSTMENT 3231.0
ELECTRO-HYDRAULIC CONVERTER (SERVOTRONIC),
B15 3240.0-00
ELECTROCHROMIC REAR VIEW MIRROR, A22z 5116.0-02
ELECTRONIC IMMOBILIZER CONTROL MODULE
(EWS II), A836 1240.0
ELECTRONIC IMMOBILIZER CONTROL MODULE
(EWS II), A836 6135.0
ELECTRONIC SHOCK ABSORBER CONTROL (EDC III+) ... 3715.2
ELECTRONIC SHOCK ABSORBER CONTROL (EDC IV) 3715.3
ELECTRONIC SHOCK ABSORBER CONTROL MODULE
(EDC), A413 3715.2
ELECTRONIC SHOCK ABSORBER CONTROL MODULE
(EDC), A413 3715.3
ELECTRONIC THROTTLE CONTROL
(EML 12-CYLINDER) 1270.1
ELECTRONIC THROTTLE CONTROL
(EML IIIS, 12-CYLINDER) 1270.2
ELECTRONIC TRANSMISSION CONTROL
(EGS: GS 9.20/A5S 560Z) 2460.7
ELECTRONIC TRANSMISSION CONTROL
(EGS: GS 9.22/AS5 560Z) 2460.10
EML ACTUATOR MOTOR I, M6360 1270.1-05
EML ACTUATOR MOTOR I, M6360 1270.2-04
EML ACTUATOR MOTOR II, M6370 1270.1-06
EML ACTUATOR MOTOR II, M6370 1270.2-05
EML SWITCH, S202 1270.1-04
ENGINE CONTROL MODULE (DME), A6000 1210.11
ENGINE CONTROL MODULE (DME), A6000 1210.22
ENGINE CONTROL MODULE (DME), CYL. 1-6, A6010 1210.18



INDEX

ENGINE CONTROL MODULE (DME), CYL. 1-6, A6010	1210.6	EVAPORATIVE EMISSION VALVE, CYL. 7-12, Y6122	1210.18-10
ENGINE CONTROL MODULE (DME), CYL. 7-12, A6020	1210.18	EVAPORATIVE EMISSION VALVE, CYL. 7-12, Y6122	1210.6-13
ENGINE CONTROL MODULE (DME), CYL. 7-12, A6020	1210.6	EVAPORATIVE EMISSION VALVE, Y6120	1210.11-01
ENGINE CONTROL MODULE RELAY, CYL. 1-6, K6310	1210.18-01	EVAPORATIVE EMISSION VALVE, Y6120	1210.22-01
ENGINE CONTROL MODULE RELAY, CYL. 1-6, K6310	1210.6-01	EVAPORATOR TEMPERATURE SENSOR, B14	6450.0-03
ENGINE CONTROL MODULE RELAY, CYL. 7-12, K6320	1210.18-10	FINAL STAGE UNIT, N2	6450.0-01
ENGINE CONTROL MODULE RELAY, CYL. 7-12, K6320	1210.6-11	FLASHER LIGHT RELAY, K52z	6312.0-05
ENGINE CONTROL MODULE RELAY, K6300	1210.11-00	FM AMPLIFIER HLO, N444	6424.0-02
ENGINE CONTROL MODULE RELAY, K6300	1210.22-00	FM AMPLIFIER/SUPPRESSION FILTER, C900z	6424.0-02
ENGINE CONTROL RELAY (ABS/ASC), K94	3450.0-01	FOG LIGHT SWITCH, S10	6312.0-02
ENGINE CONTROL RELAY (ABS/ASC), K94	3450.5-07	FOG LIGHT, LEFT, E26	6312.0-03
ENGINE CONTROL SYSTEM (DME M1.7, 12-CYLINDER M70)	1210.6	FOG LIGHT, RIGHT, E27	6312.0-03
ENGINE CONTROL SYSTEM (DME M3.3, 8-CYLINDER M60)	1210.11	FOOTWELL FLAP MOTOR, LEFT, M31	6450.0-09
ENGINE CONTROL SYSTEM (DME M5.2, 12-CYLINDER M73)	1210.18	FOOTWELL FLAP MOTOR, RIGHT, M32	6450.0-08
ENGINE CONTROL SYSTEM (DME M5.2, 8-CYLINDER M62)	1210.22	FOOTWELL LIGHT, LEFT FRONT, E61	6330.0-03
ENGINE COOLANT TEMP. SENSOR (EML), B6234	1270.1-03	FOOTWELL LIGHT, RIGHT FRONT, E62	6330.0-03
ENGINE COOLANT TEMPERATURE SENSOR, B6232	6210.0	FRESH AIR FLAP MOTOR, M36	6450.0-10
ENGINE COOLANT TEMPERATURE SENSOR, B6236	1210.11-07	FRONT ACCELERATION SENSOR, B41z	3715.2-01
ENGINE COOLANT TEMPERATURE SENSOR, B6236	1210.6-08	FRONT ACCELERATION SENSOR, B41z	3715.3-01
ENGINE HOOD SWITCH (DWA), S21	6575.3-05	FRONT CIGAR LIGHTER LIGHT, E29	6332.0-03
EVAPORATIVE EMISSION VALVE, CYL. 1-6, Y6121	1210.18-01	FRONT CIGAR LIGHTER, E28	6332.0-03
EVAPORATIVE EMISSION VALVE, CYL. 1-6, Y6121	1210.6-03	FRONT DOME LIGHT/MAP READING ASSEMBLY, E34	6330.0-03
		FRONT POWER DISTRIBUTION BOX, P90	0670.2
		FUEL INJECTION VALVE, CYL. 1, Y6101	1210.11-01
		FUEL INJECTION VALVE, CYL. 1, Y6101	1210.18-02
		FUEL INJECTION VALVE, CYL. 1, Y6101	1210.22-01
		FUEL INJECTION VALVE, CYL. 1, Y6101	1210.6-02
		FUEL INJECTION VALVE, CYL. 2, Y6102	1210.11-01
		FUEL INJECTION VALVE, CYL. 2, Y6102	1210.18-02
		FUEL INJECTION VALVE, CYL. 2, Y6102	1210.22-01
		FUEL INJECTION VALVE, CYL. 2, Y6102	1210.6-02
		FUEL INJECTION VALVE, CYL. 3, Y6103	1210.11-01



FUEL INJECTION VALVE, CYL. 3, Y6103 1210.18-02
 FUEL INJECTION VALVE, CYL. 3, Y6103 1210.22-01
 FUEL INJECTION VALVE, CYL. 3, Y6103 1210.6-02
 FUEL INJECTION VALVE, CYL. 4, Y6104 1210.11-01
 FUEL INJECTION VALVE, CYL. 4, Y6104 1210.18-02
 FUEL INJECTION VALVE, CYL. 4, Y6104 1210.22-01
 FUEL INJECTION VALVE, CYL. 4, Y6104 1210.6-02
 FUEL INJECTION VALVE, CYL. 5, Y6105 1210.11-02
 FUEL INJECTION VALVE, CYL. 5, Y6105 1210.18-02
 FUEL INJECTION VALVE, CYL. 5, Y6105 1210.22-02
 FUEL INJECTION VALVE, CYL. 5, Y6105 1210.6-02
 FUEL INJECTION VALVE, CYL. 6, Y6106 1210.11-02
 FUEL INJECTION VALVE, CYL. 6, Y6106 1210.18-02
 FUEL INJECTION VALVE, CYL. 6, Y6106 1210.22-02
 FUEL INJECTION VALVE, CYL. 6, Y6106 1210.6-02
 FUEL INJECTION VALVE, CYL. 7, Y6107 1210.11-02
 FUEL INJECTION VALVE, CYL. 7, Y6107 1210.18-11
 FUEL INJECTION VALVE, CYL. 7, Y6107 1210.22-02
 FUEL INJECTION VALVE, CYL. 7, Y6107 1210.6-12
 FUEL INJECTION VALVE, CYL. 8, Y6108 1210.11-02
 FUEL INJECTION VALVE, CYL. 8, Y6108 1210.18-11
 FUEL INJECTION VALVE, CYL. 8, Y6108 1210.22-02
 FUEL INJECTION VALVE, CYL. 8, Y6108 1210.6-12
 FUEL INJECTION VALVE, CYL. 9, Y6109 1210.18-11
 FUEL INJECTION VALVE, CYL. 9, Y6109 1210.6-12
 FUEL INJECTION VALVE, CYL. 10, Y6110 1210.18-11
 FUEL INJECTION VALVE, CYL. 10, Y6110 1210.6-12
 FUEL INJECTION VALVE, CYL. 11, Y6111 1210.18-11
 FUEL INJECTION VALVE, CYL. 11, Y6111 1210.6-12
 FUEL INJECTION VALVE, CYL. 12, Y6112 1210.18-11
 FUEL INJECTION VALVE, CYL. 12, Y6112 1210.6-12
 FUEL LEVEL SENSOR I, B6z 6210.0-09

FUEL LEVEL SENSOR II, B25 6210.0-09
 FUEL PUMP RELAY, CYL. 1-6, K6311 1210.6-04
 FUEL PUMP RELAY, CYL. 7-12, K6321 1210.6-14
 FUEL PUMP RELAY, K6301w 1210.11-05
 FUEL PUMP RELAY, K6301w 1210.18-04
 FUEL PUMP RELAY, K6301w 1210.22-05
 FUEL PUMP, CYL. 1-6, M2z 1210.6-04
 FUEL PUMP, CYL. 7-12, M11 1210.6-14
 FUEL PUMP, M2 1210.11-05
 FUEL PUMP, M2 1210.18-04
 FUEL PUMP, M2 1210.22-05
 FUSE CHART 0670.1
 FUSE DETAILS 0670.3
 FUSE HOLDER IN E-BOX, P98 0670.2-08
 FUSIBLE LINK, F0 0670.2-00
 GAS FILLER LOCK MOTOR, M16 5126.0-04
 GEAR SHIFT LEVER INDICATOR, E96 6300.0-05
 GEAR STEP TRANSMISSION SWITCH, S224 2460.10-03
 GEAR STEP TRANSMISSION SWITCH, S224 2460.10-08
 GENERAL MODULE, A1 6100.0-00
 GENERATOR, G6509 1230.0-01
 GLOVE BOX CENTRAL LOCKING SWITCH, S118 5126.0-02
 GLOVE BOX LIGHT SWITCH I, S37z 6332.0-01
 GLOVE BOX LIGHT SWITCH II, S113 6332.0-01
 GLOVE BOX LIGHT, E42 6332.0-00
 GRADIENT MONITOR (DWA), B28 6575.3-01
 GROUND DISTRIBUTION 0670.4
 HALL EFFECT CAMSHAFT SENSOR I, B6219 1210.22-10
 HALL EFFECT CAMSHAFT SENSOR, B6209 1210.18-01
 HAZARD FLASHER RELAY, K16 6313.0-00
 HAZARD SWITCH, S18 6313.0-01
 HEADLIGHT WIDENING MOTOR, M80 6312.0-07



INDEX

HEADLIGHT WIDENING MOTOR, RIGHT, M81	6312.0-07
HEADLIGHT WIDENING POTENTIOMETER, R13	6312.0-07
HEADLIGHT/FOG LIGHT WASHER PUMP, M7	6167.0-02
HEADLIGHT/FOGLIGHT CLEANING MODULE (SRA), N6	6167.0-02
HEADLIGHTS/FOG LIGHTS	6312.0
HEAT EXCHANGER TEMPERATURE SENSOR, LH, B11	6450.0-03
HEAT EXCHANGER TEMPERATURE SENSOR, RH, B12	6450.0-03
HEATED OXYGEN SENSOR, CYL. 1-4, B6210w	1210.11-06
HEATED OXYGEN SENSOR, CYL. 1-6, B6210	1210.6-05
HEATED OXYGEN SENSOR, CYL. 5-6, B6220w	1210.11-06
HEATED OXYGEN SENSOR, CYL. 7-12, B6220	1210.6-15
HEATED SEATS	5203.0
HIFI AMPLIFIER, A18	6510.1-00
HIGH BEAM FLASHER LIGHT, LEFT, E69	6312.0-05
HIGH BEAM FLASHER LIGHT, RIGHT, E70z	6312.0-05
HIGH BEAM LIGHT RELAY, K46	6312.0-05
HIGH BEAM LIGHT, LEFT, E11	6312.0-05
HIGH BEAM LIGHT, RIGHT, E12	6312.0-05
HIGH LEVEL STOP LIGHT, H34	6325.0-01
HIGH RANGE SPEAKER, LEFT FRONT, H59	6510.1-01
HIGH RANGE SPEAKER, LEFT REAR, H56	6510.1-03
HIGH RANGE SPEAKER, RIGHT FRONT, H50	6510.1-02
HIGH RANGE SPEAKER, RIGHT REAR, H53	6510.1-03
HIGH SPEED RELAY, K22	6454.0-00
HORN	6133.0
HORN RELAY, K2	6133.0-00
HORN SWITCH, S4	6133.0-00
HORN, LEFT, H2	6133.0-00
HORN, RIGHT, H3	6133.0-00
HOT FILM AIR MASS METER, B6217	1210.11-07
HOT FILM AIR MASS METER, B6217	1210.22-08

HOT-FILM AIR MASS METER I, B6217w	1210.18-06
HOT-FILM AIR MASS METER II, B6227w	1210.18-13
IDLE SPEED CONTROL VALVE, Y6130	1210.11-00
IDLE SPEED CONTROL VALVE, Y6130	1210.22-02
IGNITION COIL, CYL. 1, T6151	1210.11-03
IGNITION COIL, CYL. 1, T6151	1210.22-03
IGNITION COIL, CYL. 1-6, T6151z	1210.18-00
IGNITION COIL, CYL. 1-6, T6151z	1210.6-00
IGNITION COIL, CYL. 2, T6152	1210.11-03
IGNITION COIL, CYL. 2, T6152	1210.22-03
IGNITION COIL, CYL. 3, T6153	1210.11-03
IGNITION COIL, CYL. 3, T6153	1210.22-03
IGNITION COIL, CYL. 4, T6154	1210.11-03
IGNITION COIL, CYL. 4, T6154	1210.22-03
IGNITION COIL, CYL. 5, T6155	1210.11-04
IGNITION COIL, CYL. 5, T6155	1210.22-04
IGNITION COIL, CYL. 6, T6156	1210.11-04
IGNITION COIL, CYL. 6, T6156	1210.22-04
IGNITION COIL, CYL. 7, T6157	1210.11-04
IGNITION COIL, CYL. 7, T6157	1210.22-04
IGNITION COIL, CYL. 7-12, T6152z	1210.18-09
IGNITION COIL, CYL. 7-12, T6152z	1210.6-10
IGNITION COIL, CYL. 8, T6158	1210.11-04
IGNITION COIL, CYL. 8, T6158	1210.22-04
IGNITION SWITCH, S2	0670.2
INDEX	0100.0
INERTIA SWITCH, S27	6350.0-01
INSIDE DOOR HANDLE SWITCH, DRIVER'S, S89	5120.0-01
INSIDE DOOR HANDLE SWITCH, PASSENGER'S, S90	6100.0-03
INSTRUMENT CLUSTER	6211.0
INSTRUMENT CLUSTER, A2w	6211.0
INTAKE AIR TEMPERATURE SENSOR, B6205	1210.18-13



INDEX

INTAKE AIR TEMPERATURE SENSOR, B6215A	1210.11-07
INTAKE AIR TEMPERATURE SENSOR, B6215A	1210.22-08
INTENSIVE WASH PUMP, M5	6160.0-02
INTENSIVE WASH RELAY, K42	6160.0-02
INTERIOR ACCESSORIES	6332.0
INTERIOR LIGHT RELAY, K29	6330.0-03
INTERIOR LIGHT, LEFT REAR, E39	6330.0-03
INTERIOR LIGHT, RIGHT REAR, E40	6330.0-03
INTRODUCTION	0110.0
JET HEATER THERMOSWITCH, S198	6169.0-00
JUMPER PLUG FOR HORN/TELEPHONE, K51	6133.0-00
JUMPER PLUG FOR HORN/TELEPHONE, K51	6561.0-01
KICK-DOWN SWITCH, S8507	2460.10-10
KICK-DOWN SWITCH, S8507	2460.7-03
KNOCK SENSOR, B6243	1210.11-08
KNOCK SENSOR, CYL. 1-2, B6241	1210.11-08
KNOCK SENSOR, CYL. 1-2, B6241	1210.22-09
KNOCK SENSOR, CYL. 1-3, B6241w	1210.18-06
KNOCK SENSOR, CYL. 10-12, B6244w	1210.18-13
KNOCK SENSOR, CYL. 3-4, B6242	1210.11-08
KNOCK SENSOR, CYL. 3-4, B6242	1210.22-09
KNOCK SENSOR, CYL. 4-6, B6242w	1210.18-06
KNOCK SENSOR, CYL. 5-6, B6243	1210.22-09
KNOCK SENSOR, CYL. 7-8, B6244	1210.11-08
KNOCK SENSOR, CYL. 7-8, B6244	1210.22-09
KNOCK SENSOR, CYL. 7-9, B6243w	1210.18-13
LAMP CONTROL MODULE, A3	6301.0
LAMP MONITOR (LKM)	6301.0
LICENSE PLATE LIGHT, LEFT, E43	6320.0-01
LICENSE PLATE LIGHT, RIGHT, E44	6320.0-01
LICENSE PLATE/LUGGAGE COMPARTMENT LIGHTS	6320.0
LIGHT ASSEMBLY I, LEFT REAR, E46z	0670.4-12

LIGHT ASSEMBLY I, RIGHT REAR, E47z	0670.4-12
LIGHT ASSEMBLY II, LEFT REAR, E80	6301.0-03
LIGHT ASSEMBLY II, RIGHT REAR, E81	6301.0-03
LIGHT BAND, LEFT, E9046	0670.4-01
LIGHT BAND, RIGHT, E9047	0670.4-02
LIGHT SWITCH DETAILS	6300.0
LIGHT SWITCH, S8	6300.0
LIGHT SWITCH, S8z	6300.0
LOCK-SENSOR CONTROL MODULE, A26	6450.0-13
LONGITUDINAL ACCELERATION SENSOR, B49	3715.2-01
LOW BEAM LIGHT, LEFT, E13	6312.0-00
LOW BEAM LIGHT, RIGHT, E14	6312.0-00
LOW RANGE SPEAKER, LEFT FRONT, H58	6510.1-01
LOW RANGE SPEAKER, LEFT REAR, H57	6510.1-03
LOW RANGE SPEAKER, RIGHT FRONT, H51	6510.1-02
LOW RANGE SPEAKER, RIGHT REAR, H52	6510.1-03
LUMBAR SUPPORT	5212.0
MAKEUP MIRROR LIGHT, DRIVER'S, E35	6332.0-01
MAKEUP MIRROR LIGHT, PASSENGER'S, E36	6332.0-01
MAKEUP MIRROR SWITCH, DRIVER'S, S77	6332.0-01
MAKEUP MIRROR SWITCH, PASSENGER'S, S78	6332.0-01
MARKER LIGHT, LEFT FRONT, E21	6314.0-04
MARKER LIGHT, RIGHT FRONT, E22	6314.0-04
MEMORY MIRROR, DRIVER'S SIDE, Y9	5200.1-07
MEMORY MIRROR, PASSENGER'S SIDE, Y10	5200.1-08
MEMORY MIRRORS CONTROL SWITCH, S12	5200.1-06
MEMORY SEAT ADJUSTMENT SWITCH, DRIVER'S, S50	5200.1-00
MEMORY SEAT MIRRORS SWITCH, S57	5200.1-01
MICROPHONE, B400	6561.0-00
MID-HIGH RANGE SPEAKER, LEFT, H42	6510.1-01
MID-HIGH RANGE SPEAKER, RIGHT, H43	6510.1-02
MIDRANGE SPEAKER, LEFT FRONT, H55	6510.1-01



INDEX

MIDRANGE SPEAKER, RIGHT FRONT, H54	6510.1-02
MIRROR CONTROL SWITCH, S17	5116.0-00
MIRROR, DRIVER'S SIDE, Y5	5116.0-01
MIRROR, PASSENGER'S SIDE, Y6	5116.0-01
MIXING FLAP MOTOR, LEFT, M39	6450.0-09
MIXING SWITCH, R1	6450.0-04
MULTI-INFORMATION DISPLAY (MID)	6581.1
MULTI-INFORMATION DISPLAY (MID), N4z	6581.1-00
NORMAL SPEED RELAY, K21	6454.0-00
OBD II CONNECTOR, D110	0670.5-14
OIL LEVEL SENSOR, B6230	6210.0
OIL PRESSURE SWITCH, B206	6210.0-08
ON-BOARD COMPUTER HORN RELAY, K91	6575.3-00
OUTSIDE TEMPERATURE SENSOR, B13	6450.0-03
OXYGEN SENSOR I (BEHIND CATALYTIC CONVERTER), B62102	1210.18-05
OXYGEN SENSOR I (BEHIND CATALYTIC CONVERTER), B62102	1210.22-07
OXYGEN SENSOR I (IN FRONT OF CATALYTIC CONVERTER), B62101	1210.18-05
OXYGEN SENSOR I (IN FRONT OF CATALYTIC CONVERTER), B62101	1210.22-06
OXYGEN SENSOR II (BEHIND CATALYTIC CONVERTER), B62202	1210.18-12
OXYGEN SENSOR II (BEHIND CATALYTIC CONVERTER), B62202	1210.22-07
OXYGEN SENSOR II (IN FRONT OF CATALYTIC CONVERTER), B62201	1210.18-12
OXYGEN SENSOR II (IN FRONT OF CATALYTIC CONVERTER), B62201	1210.22-06
OXYGEN SENSOR RELAY, K6303	1210.11-06
PARK BRAKE SWITCH, S31	6210.0-05

PARK HEATING/VENTILATION RELAY BOX, A15	6412.2-02
PARK LIGHT RELAY, LEFT, K26	6314.0-02
PARK LIGHT, LEFT, E15	6314.0-03
PARK LIGHT, RIGHT, E19	6314.0-03
PARK LIGHT/LICENSE PLATE LIGHT RELAY, RIGHT, K25	6314.0-02
PARK VENTILATION WITH IHKA	6412.2
PARK/TAIL/UNDERHOOD LIGHTS	6314.0
PASSENGER'S SEATBACK SWITCH, LH, S122	6210.0-06
PASSENGER'S SEATBACK SWITCH, RH, S121	6210.0-06
PEDAL POSITION SENSOR, R10	1270.1-03
PEDAL POSITION SENSOR, R10	1270.2-02
POWER ASSIST STEERING (SERVOTRONIC)	3240.0
POWER DISTRIBUTION	0670.2
POWER DISTRIBUTION CHART	0670.0
POWER MIRRORS	5116.0
POWER SEATS	5200.0
POWER SUN SHADES	5146.0
POWER WINDOW MOTOR/ INCREMENT SENSOR, DRIVER'S, M21z	5133.0-03
POWER WINDOW MOTOR/ INCREMENT SENSOR, PASSENGER'S, M23z	5133.0-01
PRESSURE SENSOR/PLUNGER, Y16	3450.5-06
PRESSURE SWITCH, B9508	6450.0-12
PROGRAM SELECTOR, S173	2460.7-02
RADIO ANTI-THEFT SWITCH (DWA), S20	6575.3-05
RADIO, N9	6510.1-00
RADIO/HIFI	6510.1
REAR DEFOGGER I, E9	6424.0-01
REAR DEFOGGER RELAY, K13	6424.0-00
REAR DEFOGGER/ANTENNA, E10	6424.0-01
REAR LEFT MID-HIGH RANGE SPEAKER, H55z	6510.1-03

REAR POWER DISTRIBUTION BOX, P94 0670.2-10
 REAR RIGHT MID-HIGH RANGE SPEAKER, H54z 6510.1-03
 REAR WINDOW DEFOGGER SWITCH, S76 6424.0-00
 REAR WINDOW DEFOGGER/ANTENNA 6424.0
 RECIRCULATION FLAP MOTOR, M40 6450.0-10
 RELAY MODULE, A5 6100.0
 REMOTE CONTROLLED LOCKING SYSTEM 6610.1
 REMOTE LOCKING RECEIVER, N13y 6610.1-00
 RESISTOR, R6240 1210.18-00
 RESISTOR, R6240 1210.18-09
 REVERSING LIGHT SWITCH, S8511 6322.0-00
 SEAT BELT SWITCH, DRIVER'S, S58 3234.0-00
 SEAT BELT SWITCH, PASSENGER'S, S59 3234.0-01
 SEAT CONTROL SWITCH, DRIVER'S SEAT, S51 5200.0-00
 SEAT CONTROL SWITCH, PASSENGER'S SEAT, S56 .. 5200.0-01
 SEAT CUSHION MOVEMENT POTENTIOMETER, R9 ... 5200.1-02
 SEAT CUSHION REAR HEIGHT POTENTIOMETER, R8 . 5200.1-02
 SEAT CUSHION TILT MOTOR, DRIVER'S, M50 5200.0-00
 SEAT CUSHION TILT MOTOR, DRIVER'S, M50 5200.1-02
 SEAT CUSHION TILT MOTOR, PASSENGER'S, M61 5200.0-01
 SEAT HEATER SWITCH, DRIVER'S SEAT, S53 5203.0-00
 SEAT HEATER SWITCH, PASSENGER'S SEAT, S54 5203.0-00
 SEAT HEATER, DRIVER'S, E57 5203.0-00
 SEAT HEATER, PASSENGER'S, E58 5203.0-00
 SEAT HEIGHT MOTOR, DRIVER'S, M52 5200.0-00
 SEAT HEIGHT MOTOR, DRIVER'S, M52 5200.1-03
 SEAT HEIGHT MOTOR, PASSENGER'S, M59 5200.0-01
 SEAT HEIGHT POTENTIOMETER, R6 5200.1-03
 SEAT LUMBAR SUPPORT MOTOR/
 VALVE, PASSENGER'S, M56z 5212.0-00
 SEAT LUMBAR SUPPORT MOTOR/VALVE, DRIVER'S,
 M55z 5212.0-00

SEAT LUMBAR SUPPORT SWITCH, PASSENGER'S, S55 5212.0-00
 SEAT LUMBAR SWITCH, S52 5212.0-00
 SEAT MOVEMENT MOTOR, M51 5200.0-00
 SEAT MOVEMENT MOTOR, M51 5200.1-02
 SEAT MOVEMENT MOTOR, PASSENGER'S, M60 5200.0-01
 SEAT OCCUPANCY DETECTOR, A113 3234.0-00
 SEAT/MIRROR MEMORY CONTROL MODULE, A21 5200.1-00
 SEAT/MIRROR MEMORY SYSTEM (SM/SPM) 5200.1
 SEATBACK HEATER, DRIVER'S, E56 5203.0-00
 SEATBACK HEATER, PASSENGER'S, E59 5203.0-00
 SEATBACK POTENTIOMETER, R7 5200.1-03
 SEATBACK RECLINER MOTOR, DRIVER'S, M53 5200.0-00
 SEATBACK RECLINER MOTOR, DRIVER'S, M53 5200.1-03
 SEATBACK RECLINER MOTOR, PASSENGER'S, M58 .. 5200.0-01
 SECONDARY AIR PUMP RELAY, K109 1210.18-03
 SECONDARY AIR PUMP RELAY, K6304 1210.18-03
 SECONDARY AIR PUMP VALVE, Y6164 1210.18-03
 SECONDARY AIR PUMP, M63 1210.18-03
 SELECTOR LEVER POSITION SWITCH, S227 2460.10-02
 SELECTOR LEVER POSITION SWITCH, S227 2460.10-07
 SERIES RESISTOR (FOR SECONDARY AIR PUMP),
 R14 1210.18-03
 SERVOTRONIC RELAY, K199 3240.0-00
 SHIFT LOCK, S8522 2460.10-03
 SHIFT-LOCK, Y19 2460.7-03
 SIDE MARKER LIGHT, LEFT REAR, E9021 6314.0-01
 SIDE MARKER LIGHT, RIGHT REAR, E9022 6314.0-01
 SLIP CONTROL (ABS) 3450.0
 SLIP CONTROL 5 (ASC 5) 3450.5
 SLIP CONTROL MODULE (ABS), A7 3450.0
 SLIP CONTROL MODULE (ABS/ASC+T), A9070 3450.5
 SPEAKER, LEFT REAR, H46 6510.0-03



INDEX

SPEAKER, RIGHT REAR, H45	6510.0-03	SUN BLIND SWITCH, S110	5146.0-00
SPEED SENSOR - ABS, LEFT FRONT, B2	3450.0-03	SUNROOF MODULE, A33	5410.0-01
SPEED SENSOR - ABS, LEFT FRONT, B2	3450.5	SUNROOF MOTOR, M24	5410.0-01
SPEED SENSOR - ABS, LEFT REAR, B4	3450.0-03	SUNROOF SWITCH, S38	5410.0-01
SPEED SENSOR - ABS, LEFT REAR, B4	3450.5	SUPPLEMENTAL RESTRAINT SYSTEM	
SPEED SENSOR - ABS, RIGHT FRONT, B1	3450.0-03	CONTROL MODULE, A12	3234.0-00
SPEED SENSOR - ABS, RIGHT FRONT, B1	3450.5	SUPPLEMENTAL RESTRAINT SYSTEM (AIR BAG)	3234.0
SPEED SENSOR - ABS, RIGHT REAR, B3	3450.0-03	SUPPRESSION FILTER, C900	6424.0-01
SPEED SENSOR - ABS, RIGHT REAR, B3	3450.5	SYMBOLS	0140.0
SPLICE LOCATION VIEWS	8000.0	TAIL LIGHT, LEFT, H25	6314.0-04
START	1240.0	TAIL LIGHT, RIGHT, H30	6314.0-04
STARTER IMMOBILIZATION RELAY, K1w	1240.0	TELEPHONE TRANSCEIVER, H38	6510.1-00
STARTER, M6510	1240.0	TEMPERATURE SENSOR, B21z	6210.0
STEERING ANGLE SENDER, B40	3715.2-01	TEMPERATURE SWITCH, B6235	1290.0-00
STEERING ANGLE SENDER, B40	3715.3-01	TEMPERATURE SWITCH, S36	6454.0-00
STEERING COLUMN ADJUSTMENT CONTROL		TEMPERATURE SWITCH, S36z	6454.0-00
MODULE, A34w	3231.0-00	THIGH SUPPORT MOTOR, DRIVER'S, M65	5200.0-02
STEERING COLUMN ANGLE ADJUST		THIGH SUPPORT MOTOR, DRIVER'S, M65	5200.1-04
POTENTIOMETER, R19z	3231.1-00	THIGH SUPPORT MOTOR, PASSENGER'S, M66	5200.0-02
STEERING COLUMN ANGLE ADJUST MOTOR, M83 ...	3231.0-00	THIGH SUPPORT POTENTIOMETER, R15	5200.1-04
STEERING COLUMN ANGLE ADJUST MOTOR, M83 ...	3231.1-01	THIGH SUPPORT SWITCH, DRIVER'S, S93	5200.0-02
STEERING COLUMN LENGTH ADJUST		THIGH SUPPORT SWITCH, DRIVER'S, S93	5200.1-04
POTENTIOMETER, R18z	3231.1-00	THIGH SUPPORT SWITCH, PASSENGER'S, S94	5200.0-02
STEERING COLUMN LENGTH ADJUST MOTOR, M82 ..	3231.0-00	THROTTLE CONTROL MODULE (EML), A6004	1270.1
STEERING COLUMN LENGTH ADJUST MOTOR, M82 ..	3231.1-01	THROTTLE CONTROL MODULE (EML), A6004	1270.2
STEERING COLUMN MEMORY (LSM)	3231.1	THROTTLE POSITION SENSOR, R6252	1210.11-07
STEERING COLUMN MEMORY CONTROL		THROTTLE POSITION SENSOR, R6252	1210.22-08
MODULE, A34z	3231.1-00	TRANSMISSION CONTROL MODULE (AGS), A8600 ..	2460.10-05
STEERING COLUMN POSITION SWITCH, S119z	3231.0-00	TRANSMISSION CONTROL MODULE (EGS), A8500	2460.10
STEERING COLUMN POSITION SWITCH, S119z	3231.1-00	TRANSMISSION CONTROL MODULE (EGS), A8500	2460.7
SUN BLIND CONTROL MODULE, A82	5146.0-00	TRANSMISSION POSITION INDICATOR LIGHT, E82 ...	2460.10-02
SUN BLIND MOTOR, M74	5146.0-00	TRANSMISSION POSITION INDICATOR LIGHT, E82 ...	2460.10-07



INDEX

TRANSMISSION POSITION INDICATOR LIGHT, E82	2460.7-02
TRANSMISSION VALVE UNIT, Y8505w	2460.10-01
TRANSMISSION VALVE UNIT, Y8505w	2460.10-06
TRANSMISSION VALVE UNIT, Y8505w	2460.7-01
TRANSMITTER MODULE (EWS II), A835	6135.0-04
TRUNK LID LIGHT, E33	6320.0-03
TRUNK LID LIGHT, LEFT, E9033	6320.0-03
TRUNK LID LIGHT, RIGHT, E9133	6320.0-03
TRUNK LID LOCKING SWITCH, S117	5126.0-02
TRUNK LID SWITCH, S61	6320.0-03
TRUNK LOCK MOTOR, M17	5126.0-03
TURN LIGHT, LEFT FRONT, H7	6313.0-02
TURN LIGHT, LEFT REAR, H6	6313.0-02
TURN LIGHT, RIGHT FRONT, H4	6313.0-02
TURN LIGHT, RIGHT REAR, H5	6313.0-02
TURN/HAZARD LIGHTS	6313.0
UNDERHOOD LIGHT SWITCH, S19	6314.0-04
UNDERHOOD LIGHT, E20	6314.0-04
UNLOADER RELAY, TERMINAL 15, K9	0670.2-06
UNLOADER RELAY, TERMINAL 61, K61	1230.0-00
UNLOADER RELAY, TERMINAL R, K3	0670.2-06
UPPER LEFT TAIL LIGHT, H9025	6314.0-01
UPPER RIGHT TAIL LIGHT, H9030	6314.0-01
VALVE RELAY (ABS/ASC), K95	3450.0-01
VALVE RELAY (ABS/ASC), K95	3450.5-07
VEHICLE SPEED SENSOR, B10	6210.0-09
VENTILATION FLAP MOTOR, LEFT, M38	6450.0-09
VENTILATION FLAP MOTOR, RIGHT, M33	6450.0-08
WASHER FLUID LEVEL SWITCH, S136	6210.0-08
WASHER FLUID LEVEL SWITCH, S64	6210.0-08
WASHER JET HEATER, LEFT, E51	6169.0-00
WASHER JET HEATER, RIGHT, E52	6169.0-00

WASHER PUMP RELAY, K5	6160.0-02
WASHER PUMP, M4	6160.0-02
WATER PUMP IN LUGGAGE COMPARTMENT, M86	6167.0-02
WATER VALVE ASSEMBLY, Y4	6450.0-02
WINDOW LIMIT SWITCH, LEFT REAR, S45	5133.0-04
WINDOW LIMIT SWITCH, RIGHT REAR, S46	5133.0-04
WINDOW MONITORING SWITCH (DWA), PASSENGER'S, S99	6575.3-07
WINDOW MONITORING SWITCH (DWA), RIGHT REAR, S101	6575.3-07
WINDOW MONITORING SWITCH (DWA), DRIVER'S, S100	6575.3-07
WINDOW MONITORING SWITCH (DWA), LEFT REAR, S102	6575.3-07
WINDOW MOTOR, LEFT REAR, M20	5133.0-04
WINDOW MOTOR, RIGHT REAR, M22	5133.0-04
WINDOW SWITCH, PASSENGER'S, S97	5133.0-02
WINDOW SWITCH, S40z	5126.0-02
WINDOW SWITCH, S40z	5133.0-00
WINDSHIELD WASHER JET HEATERS	6169.0
WIPER MOTOR, M3	6160.0-01
WIPER PRESSURE CONTROL (ADV) RELAY, K12	6164.0-01
WIPER PRESSURE CONTROL MOTOR (ADV), M6	6164.0-01
WIPER RELAY I, K36	6160.0-01
WIPER RELAY II, K37	6160.0-01
WIPER RELAY III, K38	6160.0-01
WIPER/WASHER SWITCH, S5	6160.0-00
ZKE CENTRAL LOCKING (ZV)	5126.0
ZKE DOOR LOCK HEATING (TSH)	5120.0
ZKE HEADLIGHT WASHER (SRA)	6167.0
ZKE INTERIOR LIGHTS CONTROL (IB)	6330.0
ZKE POWER WINDOWS (FH)	5133.0



INDEX

ZKE SUNROOF (SHD)	5410.0
ZKE WINDSHIELD WIPER PRESSURE CONTROL (ADV)	6164.0
ZKE WIPER/WASHER CONTROL	6160.0

Schematics

The schematics divide the entire vehicle electrical system into individual circuits. Interacting electrical components are shown on one common schematic.

Switches and other components are represented in such a way that their general layout and function are self-explicit. They are arranged on the sheet such that the current path can be followed from positive (top) to negative (bottom).

Important: The components and wires are not drawn to scale. For instance, a lead with a length of over 1m can be shown as a lead that is only a few cm long. To ensure clear arrangement, all connectors, lines branches and connected components from the fuses to the component and from the component to ground connection are not shown within the individual cells. If required, reference can be made to cells **0670.3 Fuse Details** and **0670.4 Ground Distribution** where all lines are illustrated with all plug connections, line branches and connected components.


All circuit symbols used are listed and explained in cell **0140.0 Symbols**.

In cell **7000.0 Component Location Chart** all important connectors, ground points and components are listed in tabular form. It provides a precise description of the component locations in the vehicle.

In cell **7100.0 Component Location Views** the location of connectors and components which are difficult to locate are shown in line arts or illustrations. In cell **8500.0 Connector Views** diagrams of connectors with more than 2 pins are illustrated.

Example

General conventions can be explained based on the following schematic example.

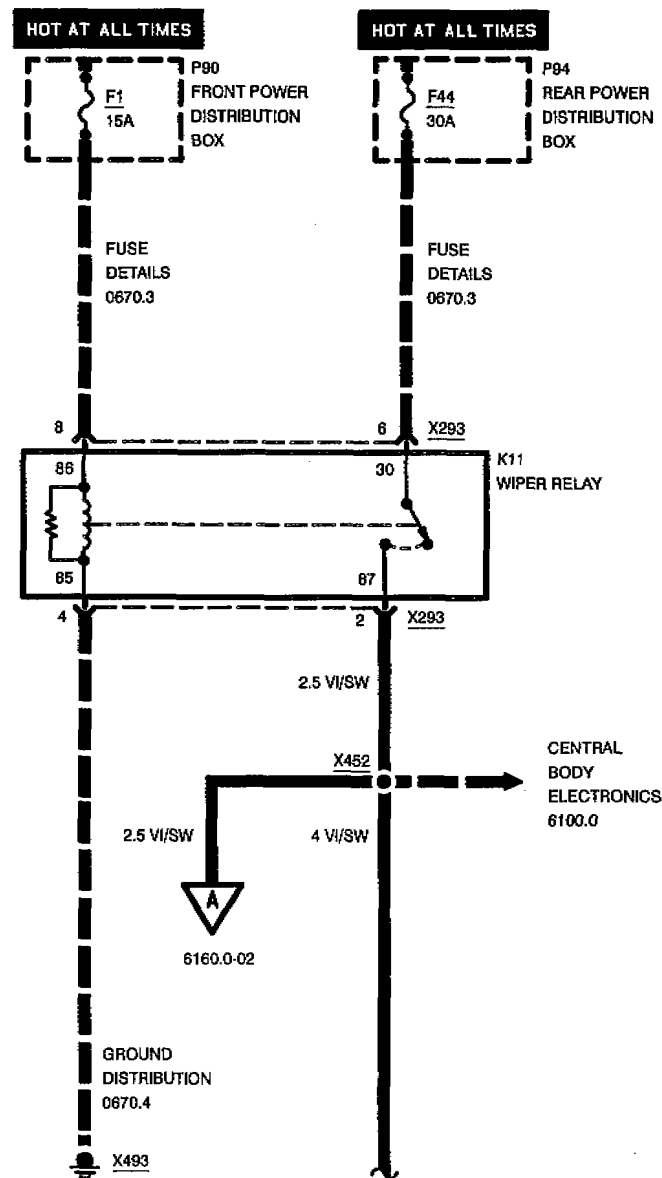



INTRODUCTION

General Conventions

1. Switches and relays are always shown in rest position (e.g. K11).
2. A component shown in a dashed frame signifies that the component is illustrated only in part (e.g. P90 and P91).
3. A component shown in a completely drawn frame signifies that the component is illustrated in full (e.g. K11).
4. The dashed line between pin 8 and pin 6 of connector X293 indicates that both pins belong to connector X293.
5. The dashed line from fuse F1 to pin 8 of connector X293 shows the positive supply of relay K11. If required, refer to cell **0670.3 Fuse Details** at fuse F1 for the complete line progressing with plug connections, line branches, wire colors and cross sections.
6. The dashed line with an arrow at splice X452 indicates that several wires lead to splice X452. All lines leading to the connection are illustrated in cell **6100.0 Central Body Electronics (ZKE)**. An interrupted line with an arrow indicates that only this one wire leads to another circuit.
7. The dashed line from pin 4 of connector X293 to ground X493 shows the ground supply for relay K11. If required, refer to cell **0670.4 Ground Distribution** at ground X493 for the complete line progression with all plug connections, line branches, wire colors and cross sections.
8. The interrupted line from splice X452 with an **A** in the open arrow is continued on page 6160.0-02. Termination of wire 4 VI/SW from splice X452 with a wavy line indicates that the wire is continued on the opposite page.




BATTERY



HEATING ELEMENT



VARIABLE RESISTANCE SENSOR
VARIABLE CONTACT IS MOVED BY AN EXTERNAL FORCE

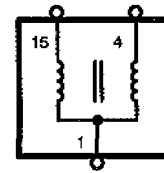

IGNITION COIL



FUSE



LOUDSPEAKER OR HORN



VARIABLE RESISTOR
RESISTANCE IS CHANGED BY TEMPERATURE OR PRESSURE



CONTROL/POWER ELECTRONICS



FUSIBLE LINK



LIGHT



INDUCTIVE SENSOR



RADIO



DIODE CURRENT CAN FLOW ONLY IN DIRECTION OF ARROW



TRANSISTORIZED SWITCH



CIRCUIT BREAKER



PERMANENT MAGNET MOTOR ONE SPEED



ZENER DIODE TO REGULATE VOLTAGE



OXYGEN SENSOR



SOLENOID



PERMANENT MAGNET MOTOR TWO SPEEDS



LIGHT EMITTING DIODE



VEHICLE SPEED SENSOR



SOLENOID CONTROLLED VALVE OR CLUTCH SOLENOID



KNOCK SENSOR



THERMO SWITCH

 
BMW
8 **SYMBOLS**




ENTIRE COM-
PONENT SHOWN



PART OF COM-
PONENT SHOWN

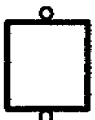

COMPONENT WITH
SCREW TERMI-
NALS

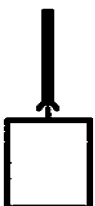 


CONNECTOR
ATTACHED TO
COMPONENT




CONNECTOR
ATTACHED TO
COMPONENT
LEAD (PIGTAIL)



 COMPONENT
CASE ATTACHED
DIRECTLY TO
METAL PART OF
CAR (GROUNDED)

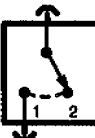

ONE POLE, TWO
POSITION SWITCH

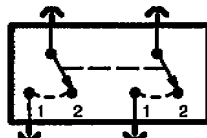


SWITCHES THAT
MOVE TOGETHER

DASHED LINE
SHOWS A
MECHANICAL
CONNECTION
BETWEEN
SWITCHES

WIRE COLOR	
BL	BLUE
BR	BROWN
GE	YELLOW
GN	GREEN
GR	GRAY
OR	ORANGE
RS	PINK
RT	RED
SW	BLACK
VI	VIOLET
WS	WHITE
TR	TRANSPARENT


WIRE INSULATION
IS ONE COLOR

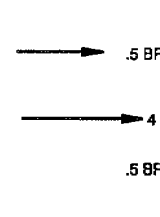

PIN NUMBER

CONNECTOR REF-
ERENCE NUMBER
FOR COMPONENT
LOCATION CHART

 WIRE INSULATION
IS ONE COLOR
WITH ANOTHER
COLOR STRIPE
(GREEN WITH
WHITE)

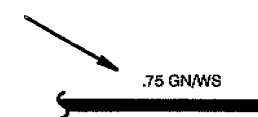


A WAVY LINE
MEANS WIRE IS
CONTINUED



TWO CONNE-
CTIONS (PINS) IN
THE SAME
CONNECTOR

DASHED LINE INDI-
CATES TERMINALS
OF THE SAME
CONNECTOR

WIRE SIZE IN MM
SQUARED

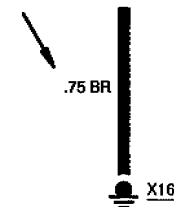

WIRE ATTACHED
TO METAL PART OF
CAR (GROUNDED)

GROUND NUM-
BERED FOR REF-
ERENCE ON COM-
PONENT LOCA-
TION CHART