



# **REPAIR MANUAL**

## **SKID STEER COMPACT TRACK LOADER**

**430**

**440**

**440CT**

**(Mechanical and Pilot Control Machines-  
H and ISO Pattern)**

87578830 NA

Replaces 87364091 NA

Revised 01-2007  
Issued 03-2006

# 430/440 SKID STEER AND 440CT COMPACT TRACK LOADER Repair Manual (Mechanical and Pilot Control Machines)

Bur 87578830

## Table of Contents

Description	Section Number	Publication Form Number
<b>General</b>		<b>Tab 1</b>
Section Index - General		6-79150
Fluids and Lubricants	1001	6-79031
Standard Torque Specifications	1002	7-52931
Metric Conversion Chart	1003	7-52950
<b>Engines</b>		<b>Tab 2</b>
Section Index - Engines		6-79160
Engine and Radiator Removal and Installation	2000	6-79290
For Engine Repair - See Engine Service Manual		6-74500
<b>Fuel Systems</b>		<b>Tab 3</b>
Section Index - Fuel Systems		6-79170
For Fuel System Repair - See the Engine Service Manual		6-74500
<b>Electrical</b>		<b>Tab 4</b>
Section Index - Electrical		6-79181
Electrical System Specifications, Troubleshooting, and Schematics (Mechanical and Pilot Control Machines)	4001	6-79371
Battery	4005	7-51310
Starter and Starter Solenoid	4006	7-53090
<b>Tracks</b>		<b>Tab 5</b>
Section Index - Tracks		5-2630
Tracks	5001	5-2610
Drive Sprocket, Idler Wheels, and Rollers	5002	5-2620
<b>Power Train</b>		<b>Tab 6</b>
Section Index - Power Train		6-79191
Hydrostatic System "How it Works" (ISO- Pattern and H-Pattern Pilot Control Machines)	6000	5-4930
Hydrostatic System Troubleshooting	6001	6-79331
Hydrostatic System Troubleshooting (Machines Equipped with Pilot Controls)	6001	5-4910
Removal and Installation of Hydrostatic Components (Mechanical and Pilot Control Machines)	6002	6-79322

# 430/440 SKID STEER AND 440CT COMPACT TRACK LOADER

## Repair Manual (Mechanical and Pilot Control Machines)

### Bur 87578830

#### Table of Contents (Continued)

Description	Section Number	Publication Form Number
Drive Coupling	6003	6-79230
Piston Pump	6004	6-49580
Piston Pump (Machines Equipped with Pilot Controls)	6004	5-4920
Drive Motors Single Speed	6005	6-79000
Drive Motors Two Speed	6005	6-79010
Sprocket, Chains, and Axle Assemblies	6007	6-79300
Wheels and Tires	6011	6-79310
<b>Brakes</b>		<b>Tab 7</b>
Section Index - Brakes		6-79200
Removal and Installation of Park Brake Components	7002	6-79441
<b>Hydraulics</b>		<b>Tab 8</b>
Section Index - Hydraulics		6-79212
Hydraulic System Troubleshooting and Schematics (Mechanical and Pilot Control Machines)	8001	6-79342
Cleaning the Hydraulic System and Hydrostatic System	8002	6-45290
Removal and Installation of Hydraulic Components	8003	6-79431
Gear Pump (Equipment and High Flow)	8004	6-79350
Loader Control Valve	8005	5-2640
Cylinders	8006	6-79360
Flat Faced Couplers	8007	7-54740
Accumulator for Ride Control	8013	6-45550
<b>Mounted Equipment</b>		<b>Tab 9</b>
Section Index - Mounted Equipment		6-79220
Pedals and Levers	9001	6-79421
Loader	9002	6-79390
Attachment Coupler	9003	6-79400
ROPS Canopy, Seat, Seat Belts, and Operators Compartment	9004	6-79410
Heater	9006	6-79450
Air Conditioning Troubleshooting for Systems with R-134A Refrigerant	9011	6-79460
Air Conditioner System Gauges and Testing for Systems with R-134A Refrigerant	9012	6-79470
Air Conditioner System Service for Systems with R-134A Refrigerant Refrigerant Recovery, Compressor Removal and System Evacuation and Recharging	9013	6-79480
Air Conditioner Component Service for Systems with R-134A Refrigerant	9014	6-79490

**430/440 SKID STEER AND 440CT COMPACT TRACK LOADER**  
**Repair Manual (Mechanical and Pilot Control Machines)**  
**Bur 87578830**

**Table of Contents** (Continued)

Description	Section Number	Publication Form Number
<b>Schematic Set</b>		
Hydraulic and Electrical Schematic Foldout	In Rear Pocket	5-5350

**430/440 SKID STEER AND 440CT COMPACT TRACK LOADER  
Repair Manual (Mechanical and Pilot Control Machines)**

**Bur 87578830**

**Table of Contents** (Continued)

**NOTES**

# SECTION INDEX

## GENERAL

<b>Section Title</b>	<b>Section Number</b>
Fluids and Lubricants .....	1001
Standard Torque Specifications .....	1002
Metric Conversion Chart .....	1003



# Section 1001

## FLUIDS AND LUBRICANTS



## TABLE OF CONTENTS

CAPACITIES AND LUBRICANTS .....	3
ENVIRONMENT .....	3
ENGINE LUBRICATION .....	4
Engine Oil Selection .....	4
Oil Viscosity/Temperature Ranges .....	4
DIESEL FUEL SYSTEM .....	5
Fuel Storage .....	5
Specifications for Acceptable No. 2 Diesel Fuel .....	5

## CAPACITIES AND LUBRICANTS

### FUEL TANK

Capacity ..... 83.3 litres (22 U.S. gallons)  
 Specifications ..... See diesel fuel specifications on page 5

### COOLING SYSTEM

Capacity ..... 17 litres (17.9 quarts)  
 Recovery bottle capacity ..... 2 litres (2.1 quarts)  
 Specifications ..... 50% water and 50% ethylene glycol

### HYDRAULIC SYSTEM

Capacity - Total System ..... 50.2 litres (13.3 gallons)  
 Capacity - Reservoir ..... 32.4 litres (7.1 gallons)  
 Specifications ..... Case Akcela No. 1 Engine Oil SAE 10W30

### CHAIN COMPARTMENTS

Capacity - Each Side ..... 5.7 litres (6.0 quarts)  
 Specifications ..... Case Akcela No. 1 Engine Oil, SAE 10W30

### FINAL DRIVE (CT MODELS)

Capacity - Each Side ..... 0.55 L (0.58 quarts)  
 Specifications ..... CASE AKCELA GEAR LUBE SSL 75W-90 (Synthetic)

### BATTERY

Quantity ..... As required  
 Specifications ..... Distilled water

### GREASE FITTINGS

Quantity ..... As required  
 Attachments (If equipped) ..... Quantity as required  
 Specifications ..... Case molydisulfide grease

### ENGINE CRANKCASE OIL (410/420 and 420CT MACHINES)

Capacity - with filter change ..... 8.7 litres (9.2 quarts)  
 Capacity - without filter change ..... 8.5 litres (9 quarts)  
 Specifications ..... Case Akcela No. 1 Engine Oil SAE 10W-30 (API service CH-4)  
 ..... (See Oil Viscosity/Temperature Ranges Chart on page 4)

### ENGINE CRANKCASE OIL (430/440 and 440CT MACHINES)

Capacity - with filter change ..... 12 litres (12.7 quarts)  
 Specifications ..... Case Akcela No. 1 Engine Oil SAE 10W-30 (API service CH-4)  
 ..... (See Oil Viscosity/Temperature Ranges Chart on page 4)

## ENVIRONMENT

Before you service this machine and dispose of oil, fluids and lubricants, always remember the environment. Do not put oil or fluids into the ground or into containers that can leak. Check with your local environmental, recycling center or your Case dealer for correct disposal information.

# ENGINE LUBRICATION


## Engine Oil Selection

Case Akcela No. 1 Engine Oil is recommended for use in your Case Engine. Case Akcela Engine Oil will lubricate your engine correctly under all operating conditions.

See the chart below for recommended viscosity at ambient temperature ranges.

**NOTE:** Do not put Performance Additives or other oil additive products in the engine crankcase. The oil change intervals given in the operating manual are according to tests with Case lubricants.

## Oil Viscosity/Temperature Ranges

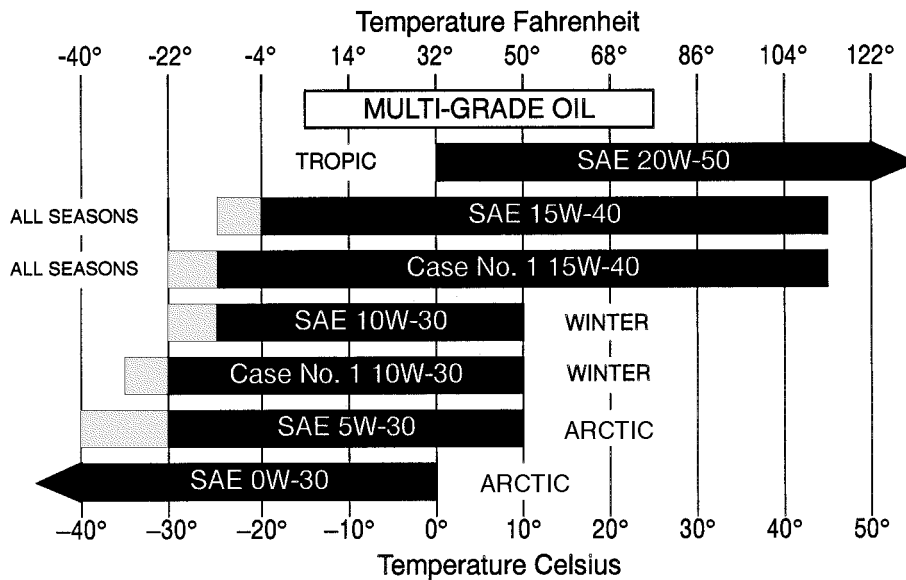

Indicates use of an engine oil heater or a jacket water heater is required.

BS99N019

## DIESEL FUEL SYSTEM

Use No. 2 diesel fuel in the engine of this machine. The use of other fuels can cause the loss of engine power and high fuel consumption.

In very cold temperatures, a mixture of No. 1 and No. 2 diesel fuels is temporarily permitted. See the following:

**NOTE:** See your fuel dealer for winter fuel requirements in your area. If the temperature of the fuel lowers below the cloud point (wax appearance point), wax crystals in the fuel will restrict the fuel filter and cause the engine to loose power or not start.

The diesel fuel used in this machine must meet the specifications below, "Specifications for Acceptable No. 2 Diesel Fuel" or Specification D975-81 of the American Society for Testing and Materials.

### Fuel Storage

If you keep fuel in storage for a period of time, you can get foreign material or water in the fuel storage tank. Many engine problems are caused by water in the fuel.

Keep the fuel storage tank outside and keep the fuel as cool as possible. Remove water from the storage container at regular periods of time.

Fill the fuel tank at the end of the daily operating period to prevent condensation in the fuel tank.

### Specifications for Acceptable No. 2 Diesel Fuel

API Gravity, Minimum .....	34
Flash Point, Minimum .....	60° C (140° F)
Cloud Point (wax appearance point), Maximum .....	-20° C (-5° F)
Pour Point, Maximum .....	-26° C (-15° F)
Distillation Temperature, 90% Point .....	282 to 338° C (540 to 640° F)
Viscosity, at 38° C (100° F)	
Centistokes .....	2.0 to 4.3
Saybolt Seconds Universal .....	32 to 40
Cetane Number, Minimum .....	43 (45 to 55 for winter or high altitudes)
Water and Sediment, by Volume, Maximum .....	0.5 of 1%
Sulphur, by Weight, Maximum .....	0.5 of 1%
Copper Strip Corrosion, Maximum .....	No. 2
Ash, by Weight, Maximum .....	0.1 of 1%

**NOTES**

# Section 1002

1002


## STANDARD TORQUE SPECIFICATIONS


## TABLE OF CONTENTS

TORQUE SPECIFICATIONS - DECIMAL HARDWARE .....	3
Grade 5 Bolts, Nuts, and Studs .....	3
Grade 8 Bolts, Nuts, and Studs .....	3
TORQUE SPECIFICATIONS - METRIC HARDWARE .....	4
Grade 8.8 Bolts, Nuts, and Studs .....	4
Grade 12.9 Bolts, Nuts, and Studs .....	4
Grade 10.9 Bolts, Nuts, and Studs .....	4
TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS .....	5
37 Degree Flare Fitting .....	5
Straight Threads with O-ring .....	5
Split Flange Mounting Bolts .....	6
O-Ring Face Seal End .....	6
O-Ring Boss End .....	6
Fitting or Lock Nut .....	6
Pipe fittings .....	7

## TORQUE SPECIFICATIONS - DECIMAL HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers dry, or when lubricated with engine oil. Not applicable if special graphities, Molydisulfide greases, or other extreme pressure lubricants are used.

<b>Grade 5 Bolts, Nuts, and Studs</b>		
		
Size	Newton metres	Pound-Inches
1/4 inch	10 to 12	91 to 103
5/16 inch	21 to 24	188 to 212
3/8 inch	38 to 43	336 to 378
		Pound-Feet
7/16 inch	61 to 69	45 to 51
1/2 inch	94 to 104	68 to 76
9/16 inch	132 to 149	98 to 110
5/8 inch	183 to 210	138 to 155
3/4 inch	325 to 370	242 to 270
7/8 inch	530 to 595	390 to 435
1.0 inch	790 to 890	585 to 655
1-1/8 inch	980 to 1100	725 to 805
1-1/4 inch	1385 to 1555	1020 to 1145
1-3/8 inch	1810 to 2030	1335 to 1495
1-1/2 inch	2400 to 2700	1770 to 1990

<b>Grade 8 Bolts, Nuts, and Studs</b>		
		
Size	Newton metres	Pound-Inches
1/4 inch	15 to 16	130 to 145
5/16 inch	30 to 34	268 to 301
3/8 inch	54 to 60	474 to 534
		Pound-Feet
7/16 inch	86 to 97	63 to 71
1/2 inch	132 to 149	96 to 110
9/16 inch	191 to 213	140 to 155
5/8 inch	260 to 293	190 to 215
3/4 inch	480 to 515	340 to 380
7/8 inch	745 to 835	550 to 615
1.0 inch	1120 to 1280	825 to 925
1-1/8 inch	1585 to 1785	1170 to 1315
1-1/4 inch	2215 to 2235	1650 to 1855
1-3/8 inch	2930 to 3295	2160 to 2430
1-1/2 inch	3895 to 4375	2870 to 3225


**NOTE:** Use thick nuts with Grade 8 bolts.

 


## TORQUE SPECIFICATIONS - METRIC HARDWARE

Use the following torques when specifications are not given.

These values apply to fasteners with both coarse and fine threads as received from supplier, plated or unplated, or when lubricated with engine oil. These values do not apply if graphite or Molydisulfide grease or oil is used. Use of a click type torque wrench, or better is required.

<b>Grade 8.8 Bolts, Nuts, and Studs</b>		
		
<b>Size</b>	<b>Newton metres</b>	<b>Pound-Inches</b>
M4	3 to 4	31 to 35
M5	5 to 6	49 to 55
M6	10 to 11	84 to 94
M8	23 to 26	229 to 277
M10	46 to 51	408 to 460
		<b>Pound-Feet</b>
M12	80 to 90	59 to 66
M14	128 to 145	94 to 106
M16	200 to 220	149 to 161
M20	400 to 450	293 to 330
M24	690 to 780	510 to 575
M30	1375 to 1545	1010 to 1140
M36	2400 to 2700	1770 to 1990

<b>Grade 10.9 Bolts, Nuts, and Studs</b>		
		
<b>Size</b>	<b>Newton metres</b>	<b>Pound-Inches</b>
M4	5 to 6	44 to 49
M5	8 to 9	71 to 79
M6	14 to 15	120 to 136
M8	33 to 37	293 to 329
		<b>Pound-Feet</b>
M10	65 to 74	48 to 54
M12	114 to 128	85 to 94
M14	183 to 205	136 to 153
M16	285 to 320	208 to 235
M20	555 to 620	406 to 460
M24	955 to 1075	705 to 790
M30	1900 to 2140	1400 to 1580
M36	3315 to 3730	2445 to 2750

### Grade 12.9 Bolts, Nuts, and Studs



Usually the torque values specified for grade 10.9 fasteners can be used satisfactorily on grade 12.9 fasteners.

## TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

<b>37 Degree Flare Fitting</b>				
Nom. SAE Dash Size	Tube OD/Hose ID	Thread Size	Newton metres	Pound-Inches
-2		5/16 - 24	8 to 9	72 to 84
-3		3/8 - 24	11 to 12	96 to 108
-4	6.4 mm (1/4 inch)	7/16 - 20	14 to 16	120 to 144
-5	7.9 mm (5/16 inch)	1/2 - 20	18 to 21	156 to 192
-6	9.5 mm (3/8 inch)	9/16 - 18	27 to 33	240 to 300
-8	12.7 mm (1/2 inch)	3/4 - 16	46 to 56	408 to 504
-10	15.9 mm (5/8 inch)	7/8 - 14	77 to 85	684 to 756
				<b>Pound-Feet</b>
-12	19.0 mm (3/4 inch)	1-1/16 - 12	107 to 119	79 to 88
-14	22.2 mm (7/8 inch)	1-3/16 - 12	127 to 140	94 to 103
-16	25.4 mm (1.0 inch)	1-5/16 - 12	131 to 156	97 to 117
-20	31.8 mm (1-1/4 inch)	1-5/8 - 12	197 to 223	145 to 165
-24	38.1 mm (1-1/2 inch)	1-7/8 - 12	312 to 338	230 to 250

<b>Straight Threads with O-ring</b>				
Nom. SAE Dash Size	Tube OD/Hose ID	Thread Size	Newton metres	Pound-Inches
-2		5/16 - 24	8 to 9	72 to 84
-3		3/8 - 24	11 to 12	96 to 108
-4	6.4 mm (1/4 inch)	7/16-20	20 to 25	180 to 228
-5	7.9 mm (5/16 inch)	1/2-20	27 to 33	240 to 300
-6	9.5 mm (3/8 inch)	9/16-18	43 to 54	384 to 480
-8	12.7 mm (1/2 inch)	3/4-16	73 to 90	648 to 804
				<b>Pound-Feet</b>
-10	15.9 mm (5/8 inch)	7/8-14	100 to 124	74 to 92
-12	19.0 mm (3/4 inch)	1-1/16-12	138 to 173	102 to 128
-14	22.2 mm (7/8 inch)	1-3/16-12	173 to 216	128 to 160
-16	25.4 mm (1.0 inch)	1-5/16-12	203 to 253	150 to 187
-20	31.8 mm (1-1/4 inch)	1-5/8-12	308 to 357	227 to 264
-24	38.1 mm (1-1/2 inch)	1-7/8-12	492 to 542	363 to 400

<b>Split Flange Mounting Bolts</b>		
<b>Size</b>	<b>Newton metres</b>	<b>Pound-Inches</b>
5/16-18	20 to 27	180 to 240
3/8-16	27 to 34	240 to 300
7/16-14	47 to 61	420 to 540
		<b>Pound-Feet</b>
1/2-13	74 to 88	55 to 65
5/8-11	190 to 203	140 to 150

<b>O-Ring Face Seal End</b>					<b>O-Ring Boss End Fitting or Lock Nut</b>		
<b>Nom. SAE Dash Size</b>	<b>Tube OD</b>	<b>Thread Size</b>	<b>Newton metres</b>	<b>Pound-Inches</b>	<b>Thread Size</b>	<b>Newton metres</b>	<b>Pound-Inches</b>
-4	6.4 mm (1/4 inch)	9/16-18	23 to 26	204 to 228			
-6	9.5 mm (3/8 inch)	11/16-16	34 to 40	300 to 348	9/16-18	48 to 54	432 to 480
-8	12.7 mm (1/2 inch)	13/16-16	52 to 57	456 to 504	3/4-16	70 to 78	612 to 684
-10	15.9 mm (5/8 inch)	1-14	81 to 90	720 to 792	7/8-14	102 to 114	75 to 84
				<b>Pound-Feet</b>			
-12	19.0 mm (3/4 inch)	1-3/16-12	117 to 128	86 to 94	1-1/16-12	142 to 160	105 to 117
-16	25.4 mm (1.0 inch)	1-7/16-12	152 to 174	112 to 128	1-5/16-12	237 to 254	175 to 187
-20	31.8 mm (1-1/4 inch)	1-11/16-12	179 to 201	132 to 148			
-24	38.1 mm (1-1/2 inch)	2-12	213 to 235	157 to 173			

Pipe fittings		
Nom. SAE Dash Size	Thread Size	TFFT (Turns For Finger Tight)
-2	1/8 - 27	2.0 - 3.0
-3	1/8 - 27	2.0 - 3.0
-4	1/8 - 27	2.0 - 3.0
-5	1/8 - 27	2.0 - 3.0
-6	1/4 - 18	1.5 - 3.0
-8	3/8 - 18	2.0 - 3.0
-10	1/2 - 14	2.0 - 3.0
-12	3/4 - 14	2.0 - 3.0
-14	3/4 - 14	2.0 - 3.0
-16	1 - 11 1/2	1.5 - 2.5
-20	1 1/4 - 11 1/2	1.5 - 2.5
-24	1 1/2 - 11 1/2	1.5 - 2.5
-32	2 - 11 1/2	1.5 - 2.5

**NOTE:** Apply sealant/lubricant to male pipe threads. The first two threads should be left uncovered to avoid system contamination. Screw pipe fitting into female pipe port to the finger tight position. Wrench tighten fitting to the appropriate turns from finger tight (TFFT) shown in table above, making sure the tube end of an elbow or tee fitting is aligned to receive incoming tube or hose fitting.