
Full download: http://manualplace.com/download/case-crawler-dozer-550-operators-manual/

TO	THE	OWNER	

TO THE OWNER OF A CASE CRAWLER

Read this manual before you start the engine or operate the machine. If you need more information, see your Case dealer.

Your dealer can give you assistance with Case Company approved service parts. Your dealer has technicians with special training who know the best methods of repair and maintenance for your machine.

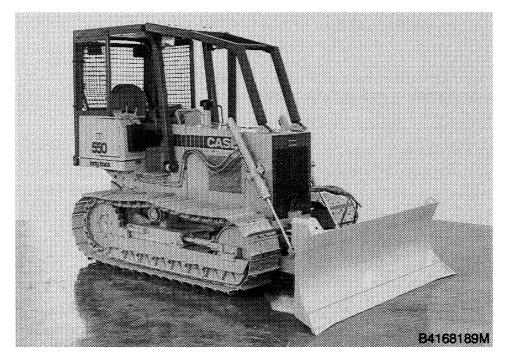

Call your dealer if you need any assistance or information.

AFTER DELIVERY CHECK


Two copies of the After Delivery Check are in the back of this manual. One copy is for you and one copy is for the dealer. Make sure that your J I Case dealer does the After Delivery Check after the first 20 hours of machine operation.


NOTE: Your cost for this check will be for filters, oil, or other accessories. If the dealer comes to your machine, there can also be a cost for the time and distance.

RIGHT, LEFT, FRONT, AND REAR SIDES OF THE MACHINE

Right-hand and left-hand, when used in this manual, indicate the right and left sides of the machine as seen from the operators seat.

Basic Machine, Dozer, and Ripper

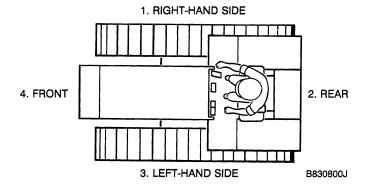

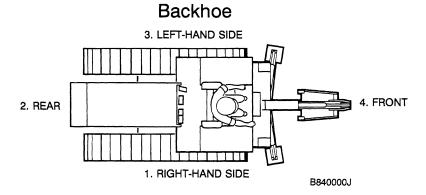

GENERAL TABLE OF CONTENTS

To the Owner	1	
Identification Numbers/Machine Components	4	
Safety/Decals/Hand Signals	8	
Specifications	24	
Instruments and Controls	37	
Operating Instructions	52	
Job Site Operations	71	
Tracks	91	
Lubrication/Maintenance Charts	93	
Lubrication/Filters/Fluids	100	
Maintenance and Adjustments	129	
Electrical System	143	
Storage	145	
After Delivery Check	147	

IDENTIFICATION	NUMBERS/MACHINE	COMPONENTS
DENTIONION	INDIVIDED S/IVIACITINE	COMEDIAL

IDENTIFICATION NUMBER

Write your machine model number, Product Identification Number (P.I.N.) and serial numbers on the lines provided below. If needed, give these numbers to your J I Case dealer when you need parts or information for your machine.


Make a record of the numbers. Keep the record and your Manufacturer's Statement of Origin in a safe place. If the machine is stolen, report the numbers to your local law enforcement agency.

MACHINE MODEL NUMBER550
PRODUCT IDENTIFICATION NUMBER
ENGINE SERIAL NUMBER
TRANSMISSION SERIAL NUMBER
TORQUE CONVERTER
ROPS CANOPY SERIAL NUMBER
BACKHOE
BACKHOE BUCKET
RIPPER
DOZER BLADE

Product Identification Number (P.I.N.)



Engine

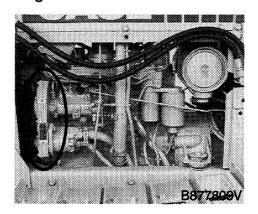


IDENTIFICATION NUMBERS (CONTINUED)

Transmission




Backhoe

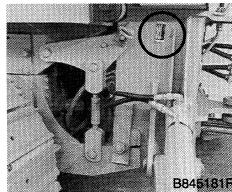


ROPS Canopy




Dozer Blade

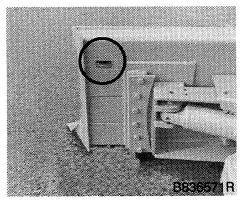


Ripper

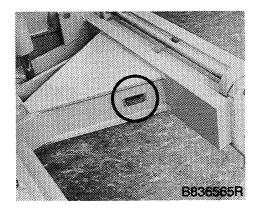


IDENTIFICATION OF MACHINE COMPONENTS

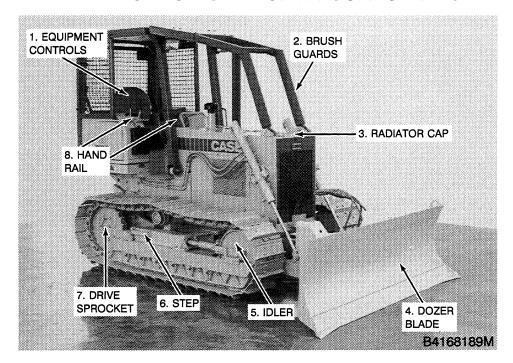

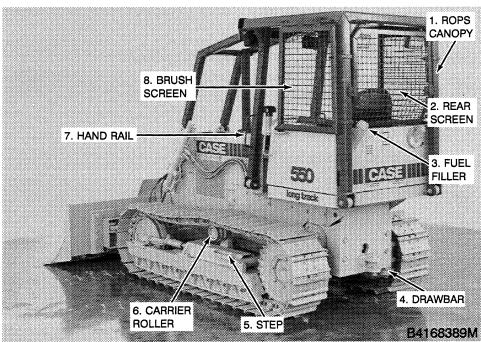


Backhoe

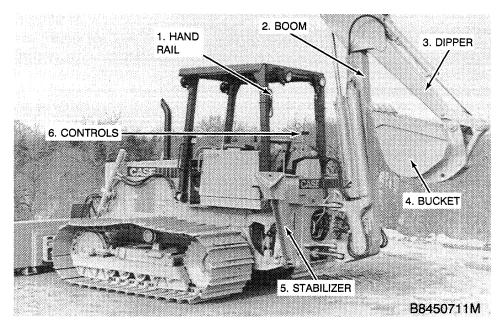

NOTE: Backhoe shown on 450C Machine.

Ripper

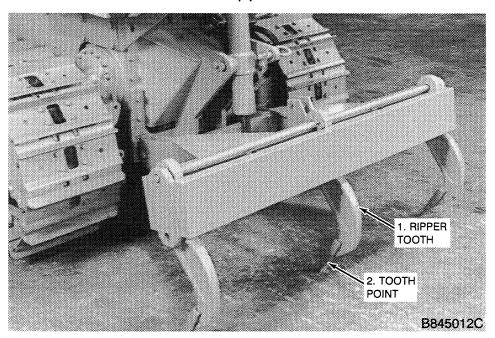

SAFETY/DECALS/HAND SIGNALS _____

SECTION INDEX

Before Operation10	Maintenance1
Burn Prevention12	Parking the Machine1
Fire or Explosion Prevention12	Safety Decals15
Hand Signals20	Safety Rules
Machine Operation 11	

SAFETY RULES 🛕



Most accidents involving machine operation and maintenance can be avoided by following basic safety rules and precautions. Read and understand all the safety messages in this manual, the safety manual, and the safety decals on the machine before you operate or service the machine. See your J I Case dealer if you have any questions.



READ THIS MANUAL COMPLETELY and make sure you understand the characteristics of speed, stability, brakes, and steering of this machine.

Do not remove this manual or the safety manual from the machine. See your J I Case dealer for additional manuals. Also see the inside of the rear cover of this manual.

The safety information given in this manual does not replace safety codes, insurance needs or, federal, state, and local laws. Make sure your machine has the correct equipment according to these rules or laws.

IMPORTANT: Safety messages in this section point out situations which can be encountered during the normal operation and maintenance of your machine. These safety messages also give possible ways of dealing with these conditions.

Additional safety messages are used in the text of the manual to show specific safety hazards.

SAFETY/DECALS/HAND SIGNALS ___



Avoid loose fitting clothing, loose or uncovered long hair, jewelry and loose personal articles.

Different jobs will require different protective equipment. Items such as hard hats, protective shoes, heavy gloves, reflector type vests, respirators, and ear protection can be required. Know and use the equipment that is required before you start the job.

Be prepared for emergencies. Always have a first aid kit and a good fire extinguisher with you and know how to use them.

Know the hand signals used on your job. Follow the instructions of the flagman, signs, etc. See page 20.

Check that all doors, guards, and covers are installed correctly and closed.

Foreign material or grease on the steps and hand rails can cause an accident. Keep the steps and hand rails clean.

Before you start each day, walk around the machine and check for oil or fluid leaks. Replace all broken or missing parts and do the required lubrication and maintenance as shown in this manual. Clean all trash and debris from the machine. Always face the machine and use the hand rails and steps when getting on. Do not rush.



Remove all loose objects from the operators area and from the machine. Loose objects can jam controls and cause accidents.

Before you start the engine, always fasten the seat belt.

Make sure the parking brake is applied and the transmission controls are in NEUTRAL before starting the engine.

Engine exhaust fumes can cause death. If you operate this machine in an enclosed area, use good ventilation to replace the exhaust fumes with fresh air.

Make sure all persons are away from the machine and give a warning before you start the engine.

Know the rules, laws, and safety equipment necessary for transporting this machine on a road or highway.