

850D/855D CRAWLERS

Operators Manual

9-9470



Reprinted



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

TABLE OF CONTENTS

<p>Introduction 2</p> <p> To the Owner 2</p> <p> After Delivery Check 3</p> <p> Right, Left, Front, and Rear of Machine 3</p> <p> Identification of Machine Components 4</p> <p>Safety 7</p> <p> Safety Decals 8</p> <p> Personal 12</p> <p> Before Starting the Engine 13</p> <p> Starting the Engine 15</p> <p> Machine Operation 15</p> <p> Loader and Dozer Operation 18</p> <p> Winch Operation 19</p> <p> Backhoe Operation 20</p> <p> Parking the Machine 22</p> <p> Maintenance 22</p> <p>Controls and Instruments 28</p> <p> Instrument Panel 28</p> <p> Foot Pedals 30</p> <p> Transmission Controls 31</p> <p> Neutral Lock and Starter Button 32</p> <p> Master Disconnect Switch 32</p> <p> Parking Brake 32</p> <p> Loader Lift Arm and Bucket Control 33</p> <p> 4-In-1 Bucket and Ripper Controls 34</p> <p> Dozer Controls 35</p> <p> Winch Control 36</p> <p> Backhoe Controls with Foot Swing 37</p> <p> Backhoe Controls with Hand Swing 38</p> <p> Extendahoe Controls with Foot Swing 39</p> <p> Extendahoe Controls with Hand Swing 40</p> <p> Backhoe Power Control 41</p> <p> Suspension Seat 42</p> <p> Seat Belts 43</p> <p> Cab Controls 45</p> <p>Operating Instructions 48</p> <p> Engine Operation 48</p> <p> Walk-Around Inspection 48</p> <p> Starting the Engine 49</p> <p> Operating Turbocharged Engine 50</p> <p> Engine Speed 50</p> <p> Parking the Machine and Stopping the the Engine 50</p> <p> Methods to Help Start the Engine During Cold Weather 52</p> <p> Crawler Operation 56</p> <p> Transmission Controls 57</p> <p> Steering 58</p> <p> Stopping the Crawler 60</p>	<p> Operating On Hill 61</p> <p> Procedure to Transport the Machine 61</p> <p> Moving a Disabled Machine 62</p> <p> Operating in Cold Temperatures 63</p> <p> Operating in Hot Temperatures 64</p> <p> Loader Operating Tips 65</p> <p> Dozer Operating Tips 71</p> <p> Winch Operating Tips 76</p> <p> Ripper Operating Tips 82</p> <p> Backhoe Operating Tips 83</p> <p> Backhoe Removal 90</p> <p> Backhoe Installation 92</p> <p>Maintenance and Lubrication 93</p> <p> Support Strut for the Loader Lift Arms 94</p> <p> Fluids and Lubricants Chart 95</p> <p> Systemgard Lubricant Analysis Service 96</p> <p> Run-In Period 97</p> <p> Run-In Maintenance Schedule 97</p> <p> Maintenance Schedule 98</p> <p> Grease Fittings 101</p> <p> Air Cleaner 106</p> <p> Engine Lubrication System 109</p> <p> Engine Cooling System 111</p> <p> Engine Fuel System 113</p> <p> Hydraulic System 117</p> <p> Transmission and Torque Converter 119</p> <p> Final Drives 122</p> <p> Batteries 123</p> <p> Track System 124</p> <p> Winch 127</p> <p> Reversable Fan 129</p> <p> Cab Service 130</p> <p> Air Conditioner Drive Belt 133</p> <p> Transmission Control Lever Adjustment 134</p> <p> Spark Arrester Muffler 135</p> <p> Brake System 136</p> <p> Loader Return-To-Dig Adjustment 142</p> <p> Machine Storage 144</p> <p> Removal From Storage 145</p> <p> Seat Belts 145</p> <p> Decals 146</p> <p> Roll-Over Protective Structure 151</p> <p> Specifications 154</p> <p> Diesel Fuel Specifications 168</p> <p> Product Identification and Serial Numbers 169</p> <p> Index 172</p> <p> After Delivery Check 175</p>
--	---

INTRODUCTION TO THE OWNER

Read this manual carefully before you operate the machine. If you do not completely understand the operation or maintenance of this machine, see your Case dealer.



A845763

If you need more information, call us.

Your Case Dealer

DELIVERY OF THE NEW MACHINE

When you get your new machine from your Case dealer, you will be instructed about correct operation and maintenance as shown in the Owner Warranty Registration form. When your Case dealer has given you these instructions, write your name on the report. Then, he will give you a copy for your records.

See page 169 and make a record of the Product Identification Number (PIN) and the serial number of your machine.

The JI Case Company can make changes in design or specifications of the machine at any time with no obligation for these changes.

INTRODUCTION

AFTER DELIVERY CHECK

 
Two copies of the After Delivery Check are in the back of this manual. One copy is for you and one copy is for the dealer. Make sure that your Case dealer does the After Delivery Check after the first 20 hours of machine operation.

NOTE: *Your cost for this inspection will be for filters, oil or other accessories. If the dealer comes to your machine, there can also be a cost for the time and distance.*


RIGHT, LEFT, FRONT AND REAR SIDES OF THE MACHINE

Right and left hand, when used in this manual, indicate the right and left sides of the machine as seen from the operators seat.

Basic Machine, Loader, Dozer, Ripper and Winch

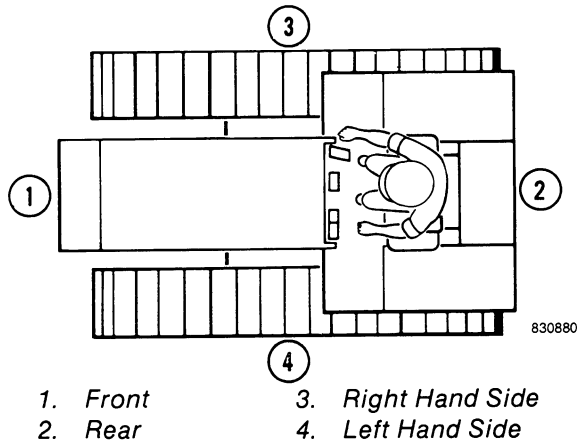


Backhoe

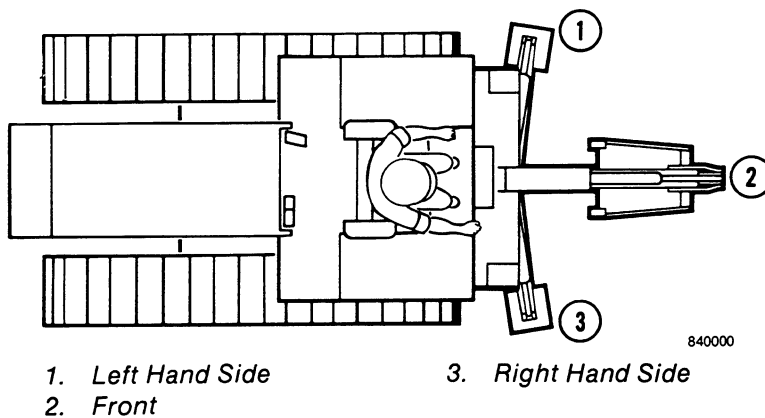 

INTRODUCTION

IDENTIFICATION OF MACHINE COMPONENTS

 
REAR EQUIPMENT ROPS BRUSH
SCREEN CONTROL LEVERS CANOPY GUARDS

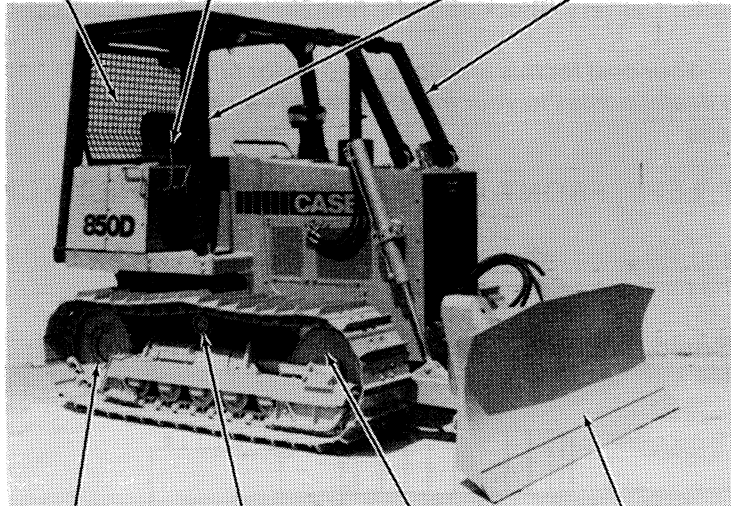

DRIVE CARRIER IDLER DOZER
SPROCKET ROLLER WHEEL BLADE

A845795


 
WINCH TRANSMISSION SERVICE COMPARTMENT
CONTROL CONTROLS For Engine Oil Dipstick,
Air Cleaner, Cold Start Can,
Coolant Reservoir, and
Brake Master Cylinders

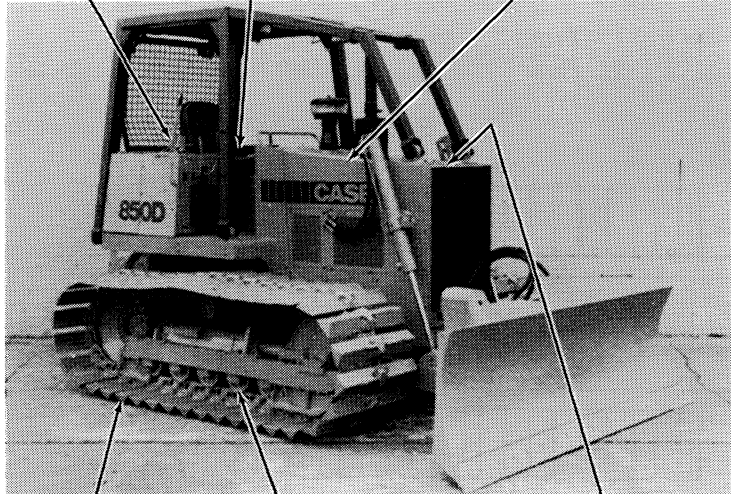


PYRAMID TRACK RADIATOR
GROUSERS ROLLERS FILL CAP

A845787

  
INTRODUCTION

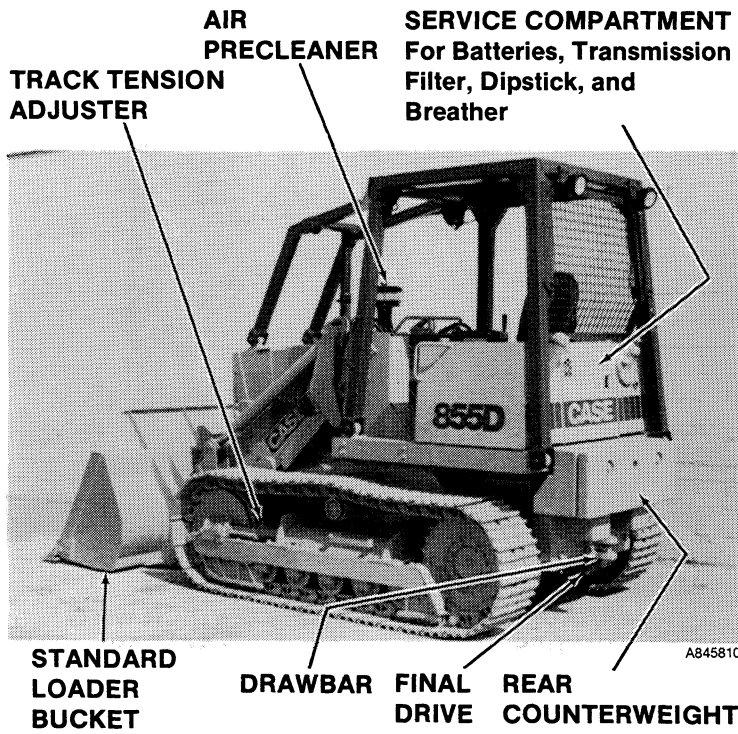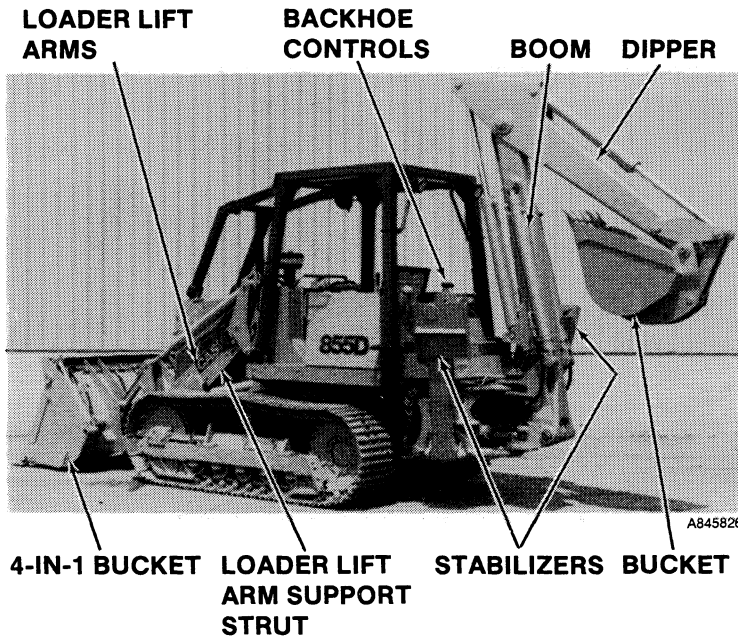

INTRODUCTION

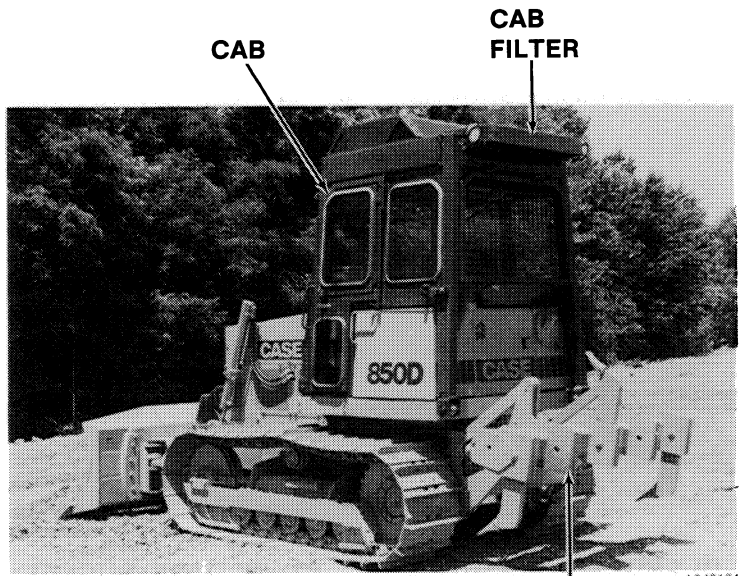 

A846164

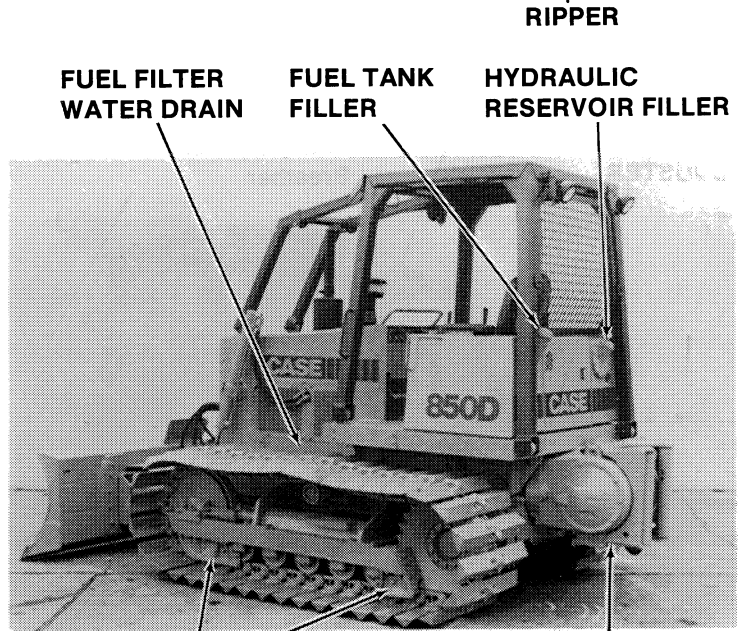 


A845793

SAFETY


The information in this manual does not replace any safety rules and laws used in your area. Before you operate this machine, learn the rules and laws for your area and make sure your machine has the correct equipment according to these rules and laws.

Your safety and the safety of other persons in the work area are the result of your correct operation of this machine.

 1. Know the location and function of all machine controls
2. Clear the area of other persons before you start the engine.
3. Check all controls in a safe, clear area before you operate the machine on a job site.
4. Understand the limits of the machine.
5. Do not try to do too much too fast
6. Keep the machine under control at all times.

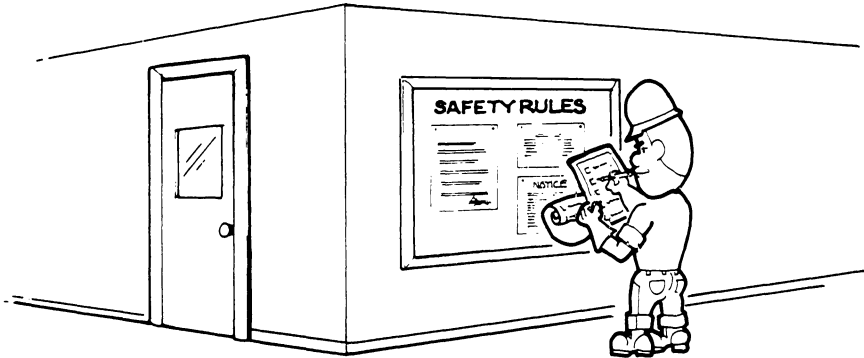

742672A

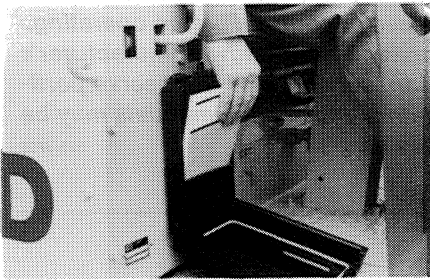 

Manual Storage Box

A845740

READ THIS MANUAL COMPLETELY and make sure you understand the contents. Make sure you understand, for example, the characteristics of speed, stability, brakes and steering, of this machine. If you have any questions, see your Case dealer.

SAFETY

SAFETY DECALS



WARNING: *Damaged, missing, or dirty safety decals can cause injury or death. Replace any missing or damaged safety decals and keep all safety decals clean. See your Case dealer for new safety decals.*

84-170

All safety decals on this machine are included on this page and the next three pages. Some of these safety decals are included in the copy of the manual. See page 146 for the location and maintenance of the decals.



POISON/DANGER: *Battery acid causes severe burns. Batteries contain sulfuric acid. Avoid contact with skin or clothing. Antidote: EXTERNAL - Flush with water. INTERNAL - Drink large quantities of water or milk. Follow with milk of magnesia, beaten egg, or veg. oil. Call physician immediately. Eyes: Flush with water for 15 minutes and get prompt medical attention.*

Batteries produce explosive gases. Keep sparks, flame, and cigarettes away. Ventilate when charging or using in inclosed spaces. Always shield eyes when working near batteries. Keep out of reach of children.

321-2996



WARNING: *Rotating fan and belts. Contact can injure. Keep clear.*

321-3596



WARNING: *Before starting engine study operator's manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating. It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations. Operators and service manuals may be obtained from your equipment dealer.*

321-3705