

60/75/90/115/160
Operators Manual

9-8670

Reprinted

CASE



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.

WARNING

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

 


It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.



Poclair

hydraulic excavators

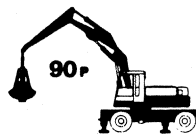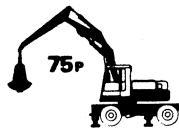

You are now the owner of a POCLAIN.

All the components of this unit have been thoroughly checked and tested to meet the standards of quality you are entitled to expect in this field.

Your machine will remain a highly reliable tool provided you carefully observe the operating and servicing recommendations outlined in this manual, which covers the following items :

- Features and specifications of the machine*
- Operation*
- Basic safety rules*
- Maintenance*
- Quick repair instructions on : Hydraulic, Mechanical and Electrical Systems*
- Attachments*

Our representatives (POCLAIN Distributors) are at your disposal to assist you in maintaining your machine in perfect working condition. Our personnel will carry out THREE MACHINE SERVICE INSPECTIONS :

- Excavator Delivery Service Inspection*
- 150 Hour Service Inspection*
- End of Warranty Service Inspection*

These three inspections are COMPULSORY and FREE OF CHARGE

After the expiry of the WARRANTY PERIOD, our AFTER SALES SERVICE personnel will remain at your disposal for any assistance and or supply of "ORIGINAL SPARE PARTS", the interchangeability and quality of which are guaranteed.

Our International Technical Training Centre organizes training courses for future operators :

- rapid course in machine operation*
- practical knowledge of maintenance methods*
- attachment changeover procedure.*

Wherever you may be, our Representative (POCLAIN Distributor) is at your disposal for any information you may require.

This manual has been expressly prepared for the benefit of operators and mechanics. Consult it frequently and keep it in the special compartment provided in the machine cab.

Contents 1

Index	2 - 3 - 4
General description	5 - 6
Dimensions	7
Characteristics	8...13
Identification	14
After-Sales Service.	15
Cab control equipment.	16...21
Control panel	22...27
Seat	28 - 29
Cab.	30
Other components.	31 - 32 - 33
Independent heating	34 - 35
Starting and stopping engine	36 - 37
Practical hints.	38 - 39
Safety	40
Running-in.	41
Maintenance intervals.	42 - 43
Ingredients.	44
Maintenance table	45
Engine.	46...57
- Engine.	47 - 48 - 49
- Feed system	50 - 51 - 52
- Air filter	53 - 54 - 55
Hydraulic components	58...63
- Tank.	59 - 60
- Pump	61
- Cooler - Accumulator.	62
Mechanical components	64...68
- Reduction gear - Track tension.	65
- Replacing tracks	66 - 67
Electrical components	69 - 70 - 71
Attachments.	72 - 73
Working ranges	74...87
Tool set - Spare parts	88

2 Index

Accelerator lever	20
After-sales service	15
Air filter cartridges	53
Alternator belt	70
Alternator	70
Attachment hose connections	72
Attachment working light control.	25
Attachments,hints on using	39
Attachments.	72 - 73
Batteries	31..69
Cab control equipment.	16..21
Cab door	30
Cab.	30
Characteristics	8..13
Cigarette lighter	27
Clamshell mounting	73
Clamshell swing pedal.	18
Coat hook	30
Control lever,boom and bucket	20
Control lever,dipperstick and swing.	19
Control panel	22..27
Cooler,hydraulic	62
Cooling fins	48
Cylinder tightness check	63
Description,general	5 - 6
Dimensions	7
Electrical components	69 - 70 - 71
Engine running	37
Engine shutdown.	37
Engine startup	36
Engine temperature indicator.	24
Engine.	46..57
Feed system	50 - 51 - 52
Filter,air	53 - 54 - 55
Filter,breather plug	60
Filter,engine oil.	47
Filter,feed pump	50
Filter,fuel	50
Filters,hydraulic	60
Filters,suction.	60
Filtration,heavy duty	53 - 54 - 55

Index 3

Filtration, standard	53
Flow selector	21
Fuel circuit, bleeding and priming	51
Fuse, cigarette-lighter	27
Fuse, starter device	27
Fuses	71
Glove compartment	30
Heater feed shutoff	33
Heating, independent	34 - 35
Heavy lift function control	25
Heating and ventilation control	26
Horn control	25
Hoses, removal, remounting	63
Hydraulic circuit	62
Hydraulic components	58..63
Hydraulic control	16
Hydropneumatic accumulator	62
Identification	14
Ingredients	44
Injectors	52
Jib cylinder pedal	18
Lighting, cab	30
Lighting, engine compartment	32
Lubrication diagram	68
Maintenance intervals	42 - 43
Maintenance table	45
Mechanical components	64..68
Mechanical control	16
Pins, mounting, disassembly	73
Power-line connection	31
Pump, circulating	61
Pump, emergency	21
Pump, fuel filter	33
Pump, high pressure	61
Pump, injection	52
Reduction gears, track drive	65
Rocker arms	49
Running-in	41
Safety	40
Seat	28 - 29
Spare parts	88

4 Index

Starter system	52
Starter	69
Starting device	27
Stop control	20
Swing brake control	26
Tank, fuel	33 - 50
Tank, hydraulic fluid	59 - 60
Tank, windshield washer	30
Temperature gauge	69
Tool box	32
Tool set	88
Tooth tip	73
Track drive brake control	26
Track drive pedal	18
Track drive speed control	26
Track group	66 - 67
Track tension	65
Troubleshooting table, engine	56
Troubleshooting table, independent heating	35
Turbine belt	48
Upperstructure locking handle	20
Upperstructure working light control	25
Ventilator, cab	30
Warning light, air filter clogging	24
Warning light, attachment working light	25
Warning light, battery charging	24
Warning light, belt failure	24
Warning light, engine oil pressure	24
Warning light, heating and ventilation	26
Warning light, heavy lift function	25
Warning light, pilot pressure	25
Warning light, upperstructure working light	25
Warning lights, dummy	26
Warning light, oil filter clogging	24
Windshield	30
Windshield washer control	26
Windshield wiper control	26
Winter operation, hints on	38
Working ranges, backhoe	78...82
Working ranges, clamshell	83...87
Working ranges, loader	74...77

General description 5

The track-mounted excavator is a fully hydraulic machine, consisting of a carrier frame, which incorporates the track drive assembly and supports the upperstructure, mounted on the swing gear. The attachments are mounted at the front of the upperstructure, which also incorporates the engine, hydraulic power units and operator's cab.

The pumps, driven by the engine, supply the hydraulic power by feeding the valve banks with hydraulic fluid.

When the operator actuates the control levers, the valve banks direct the fluid towards the different cylinders or motors concerned.

The cooling system, comprising a circulating pump and an independent ventilated cooler, maintains the fluid at a normal operating temperature.

