 


## TABLE OF CONTENTS

Introduction	2	Diesel Fuel	83
To the Owner	2	Engine Oil	84
Delivery of New Machine	3	Hydraulic Oil	84
After Delivery Check	3	Fuel, Fluids and Lubricants Chart	85
Directions	3	Maintenance and Lubrication	86
Safety	4	Introduction	86
Location of Serial Numbers	16	Maintenance Charts	87
Symbols	17	Lubrication Points	90
Specifications	18	Safety Decals	94
Engine	18	Engine Lubrication	95
Cooling System	18	Oil Level	95
Crawler Undercarriage	18	Oil Change	95
Turntable Rotation	19	Oil Filters	96
Boom and Attachments	19	Air Cleaner System	97
Electrical System	19	Restriction Indicator	97
Hydraulic System	20	Dust Cup	97
General Dimensions	21	Air Filter	98
Weights	21	Engine Cooling System	101
Circuit Breakers	22	Coolant Level	101
Identification of Controls and Instruments		Coolant Recommendation	101
Machines through PIN 6204050	23	Procedure to Clean the System	102
Machines with PIN 6204050 and After	35	Thermostat	103
House Brake Control	47	Fan Belts	105
Heater	48	Turbocharger	106
Cab Windows	50	Fuel System	107
Seat for the Operator	52	Fuel Tank	107
Engine Operation	54	Sediment Bowl for Transfer Pump	108
First Period of Operation	54	First and Second Stage Filters	109
Before Operation	55	Procedure to Remove Air from System	110
Procedure to Start the Engine	56	Electrical System	111
Engine Speed	57	Alternator Charging System	111
Priming of the Turbocharger	57	Batteries	112
Procedure to Stop the Engine	57	Starter Motor	116
Assistance for Cold Starting	58	Hydraulic System	117
Operation during Cold Temperatures	61	Oil Level	117
Operation during Hot Temperatures	62	Hydraulic Filters	117
Machine Operation	63	Procedure to Change Oil	121
How to Use the Hydraulic Controls	63	Breather for Hydraulic Reservoir	122
Procedure to Move the Machine	64	Mechanical Components	124
Drive Range	64	Turntable Bearing	124
Travel	64	Lubrication of Ring Gear	124
Turning	66	Lubrication of Bearing Race	125
Drive Locks	66	Bolts for Turntable Bearing	125
Travel over Obstacles	67	Swing Gearbox	129
Excavator Functions	68	Final Drive Transmission	131
Hoist	69	Backhoe Buckets	131
Crowd	70	Adjustments	132
Tool	71	House Brake	132
Swing	72	Hydraulic Controls	133
Leveler	73	Crawler Drive Brake	134
Auxiliary	74	Backhoe Buckets	134
Recommendations for Efficient		Crawler Tracks	135
Operation	75	Special Maintenance	137
After Operation	81	Cab Foam Liner	137
Transport of the Machine	82	Machine Storage	137
Fuels and Lubricants	83	After Delivery Check	141

# INTRODUCTION TO THE OWNER

This manual is your guide to safe, efficient operation. Before you operate this machine, read this manual.

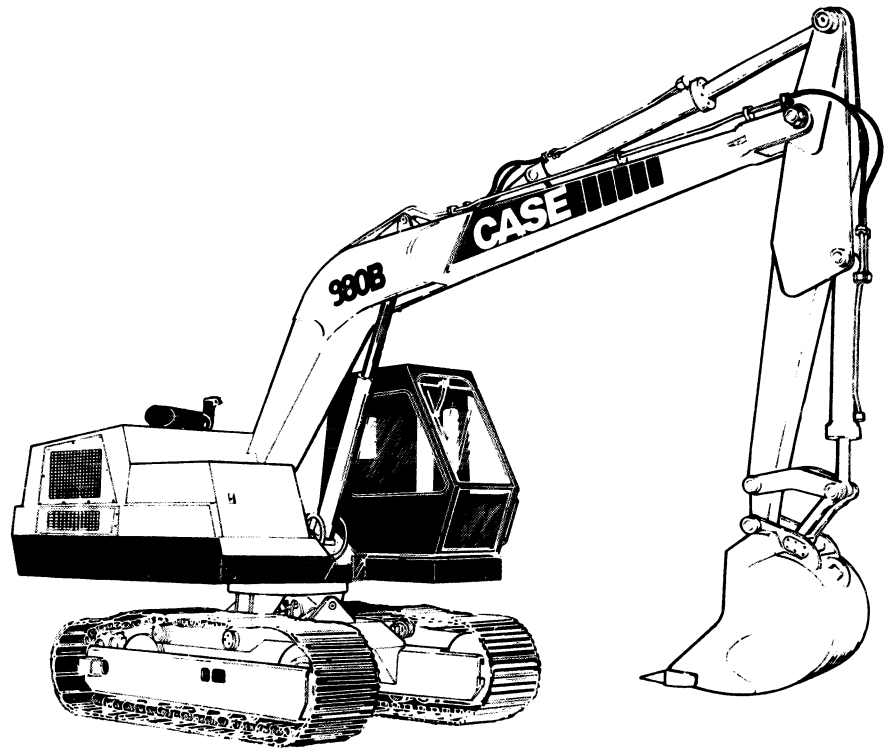

If you need more information, call us.

*Your Case Dealer*

The J I Case Company can make changes in design or specifications of the machine at any time with no obligation for these changes.

# DELIVERY OF THE NEW MACHINE

When you get your new machine from your Case dealer, you will be given instructions for correct operation and maintenance as shown in the Owner Warranty Registration form. When your Case dealer has given you these instructions, put your signature on the report. Then he will give you a copy for your records.

 
## AFTER DELIVERY CHECK

Three copies of the After Delivery Check are in the back of this manual. One copy is for you, one copy is for the dealer and one copy is for the Construction Equipment Service Department. Make sure that your Case dealer does the After Delivery Check after the first 20 hours of machine operation.

**NOTE:** Your cost for this inspection will be for filters, oil or other accessories. If the dealer travels to your machine, there can also be a cost for the time and distance he must travel.

## RIGHT AND LEFT SIDES OF THE MACHINE


“Right Hand” and “Left Hand”, when used in this manual, represent the right and left sides of (1) the upper structure as seen from the seat for the operator, and (2) the undercarriage as seen from the crawler drive end.

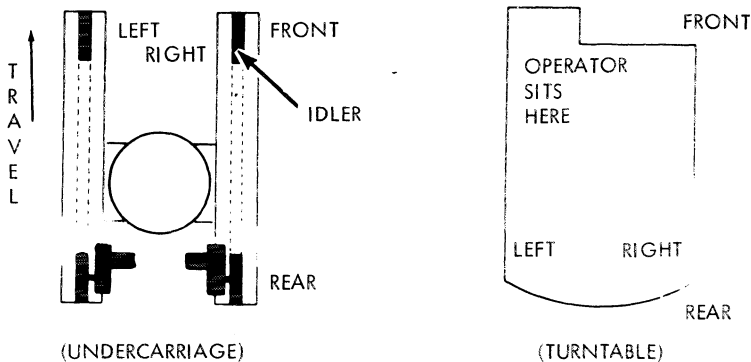

# **SAFETY**

## **SAFETY RULES**

 Your safety and the safety of other persons in the work area are the result of your correct operation of this machine. Know the location, positions and functions of all the controls. **MAKE SURE YOU CHECK ALL CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU WORK THE MACHINE.**

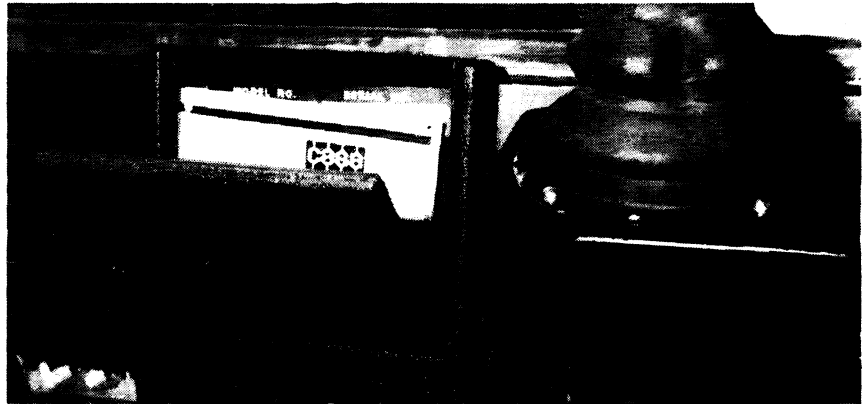


Manual Storage Box

**READ THIS MANUAL COMPLETELY AND MAKE SURE YOU UNDERSTAND THE CONTENTS.** Make sure you understand, for example, the characteristics of speed, stability, brakes, steering, etc., of this machine. If you have any questions, call your Case dealer. Always keep the manual with this machine.

The safety information in this manual does not replace any other rules or laws for safety that are used in your area. Know the rules or laws for safety that are used in your area. Make sure that your machine has the correct equipment to operate according to these rules or laws.

 It is recommended that you make copies of the safety rules in this manual and put these copies in the work area.

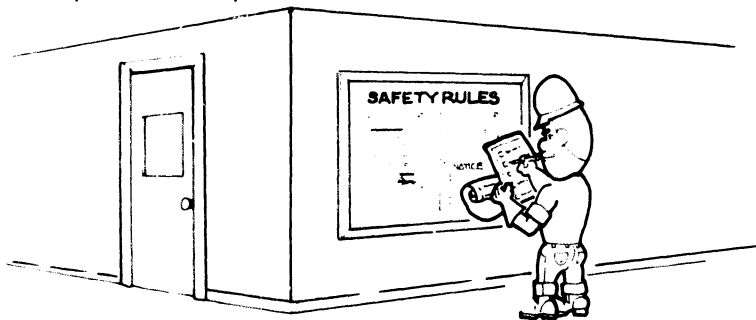

## Before You Start the Engine

**WARNING:** Before starting engine, study operator's manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.



It is your responsibility to understand and follow manufacturer's instructions on machine operation, service, and to observe pertinent laws and regulations. Operator and service manuals may be obtained from your equipment dealer.

**WARNING:** Wear the correct safety equipment. Do not wear loose clothing. If it is needed, get extra safety equipment. Extra safety equipment which can be needed includes hard hat, safety shoes, ear protection, reflector clothing, safety goggles and heavy gloves.

 


**WRONG**



**CORRECT**

**WARNING:** Before operation, check the machine for leaks and for parts that are damaged or not in good condition. Make sure that all caps, dipsticks, battery covers, etc., are tight. Failure of a part during operation can cause an injury.

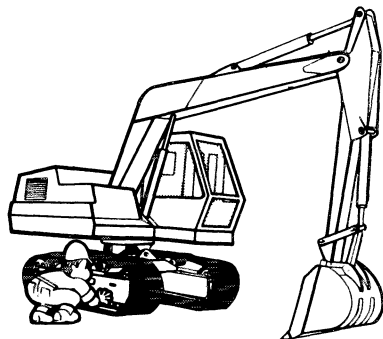

**CORRECT**

**IMPORTANT:** Always install new decals if the old decals cannot be read. When parts that have decals are replaced, make sure to install new decals with the new part. You can get new decals from your Case dealer.



**WARNING:** Do not have a burning cigarette, cigar, etc., when you use starting fluid. Never make a hole in the starting fluid container. Do not use starting fluid near an open flame or put the starting fluid container into a fire. Use only small amounts of starting fluid. Never put starting fluid in storage in a hot area.



**WARNING:** BE VERY CAREFUL IF THIS IS NOT THE MACHINE YOU NORMALLY OPERATE.



**WARNING:** Make sure the operator's area, steps and grab rails are clear of oil, foreign material or ice. Remove or fasten all maintenance or personal items. Failure to keep these areas clean can cause a bad accident.



**WARNING:** Keep a good fire extinguisher and a first aid kit with you at all times. Know how to use both of these items.



**WARNING:** Make sure the windows of your cab are clean. Make sure the windshield wipers are operating correctly. Dirty windows can cause an accident.



**WARNING: DRIVE LOCK.** Keep the switch for the crawler drive brake in the On position except during travel. Accidental engagement of the drive lock will cause the machine to move forward immediately. Possible injury can be caused to persons in the area.



 
**CAUTION:** Make sure all persons are away from the machine before you start the engine.



**WARNING:** Do the required maintenance and safety checks to the machine before you start each day. A machine that has not been given correct maintenance can cause an accident.



**WARNING:** Before each period of operation, check the machine for correct function of the brake controls, hydraulic controls, instruments, and safety equipment. A machine that runs correctly can prevent accidents. Make all necessary repairs or adjustments before you operate the machine.

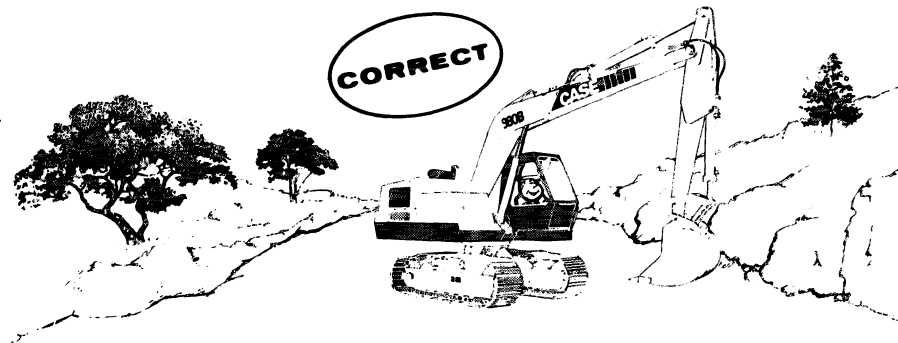

**WARNING:** Before you start to work in a new area, walk around and look for holes or obstructions. Failure to find hidden holes or obstructions can cause an accident and injury.



**WARNING:** Understand the limits of the machine. Keep the machine under control at all times. **DO NOT TRY TO DO TOO MUCH TOO FAST.**

## Operation



**CAUTION:** Always fasten seat belt securely before starting engine.



**CAUTION:** Make sure the seat belt is not twisted or can be cut by the parts of the seat.







**WARNING:** Never move the boom, bucket, or any other attachment over the heads of people. Press the horn button and wait until the people are away from the machine.



 
**WARNING:** Do not work next to a bank where there is a danger that material can fall on the machine. Do not work where there is a danger of a landslide. You can be injured if you operate in these areas.



**WARNING:** Know the location of all underground electrical cables, water pipes, gas pipes, etc. A broken gas pipe or cut electrical cable can cause injury.



**WARNING:** Do not dig the ground under the crawler track. The machine can fall into the excavation if the bank falls in.

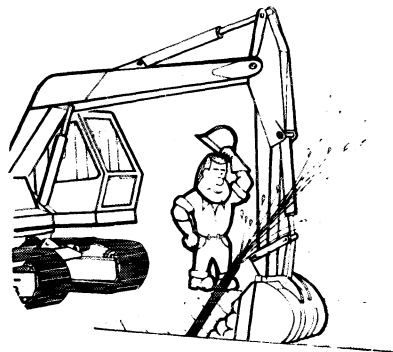

**WRONG**



**WARNING:** If you know there is a malfunction, a missing part or a part that needs adjustment, stop the machine immediately and correct the problem. Continued operation under these conditions can cause an accident or injury.



**CAUTION:** Before rotating the turntable, make sure the cab door is either fully closed or fastened in the open position.



**WARNING:** Before you rotate the turntable to either side, make sure that all persons are out of the way. Make sure that the area is clear of obstructions.



**WARNING: ELECTROCUTION HAZARD** - To prevent serious bodily injury.

NEVER operate this or any equipment in an area in which overhead powerlines, overhead or underground cables or power sources exist without first notifying the appropriate power company or utility company to de-energize the lines or take other suitable precautions.

NEVER operate machine, any part thereof, or load closer to any electrical powerline or power source than the distance specified or required by Federal, State/Provincial, Local, or other applicable safety codes or regulations. In addition, United States OSHA regulations require a flagman when operating in close proximity to energized powerlines.

NEVER operate machine without first consulting Federal, State/Provincial, Local or other applicable safety codes or regulations.

It is the employer's responsibility to implement the above precautions and to provide the employee(s) with all safety devices or means that may be necessary or required or any particular use, operations, set-up, or service.

Voltage of Electric Cables	Minimum Amount of Clearance from the Electric Cables When the Machine is Working	Minimum Amount of Clearance from the Electric Cables When You Move the Machine Between Jobs
50,000 volts or less	10 feet (3 m)	4 feet (1.2 m)
Over 50,000 volts	10 feet (3 m) plus 1/2 inch (10 mm) for every 1,000 volts over 50,000 volts	10 feet (3 m)
345,000 - 750,000 volts		16 feet (5 m)

**NOTE:** If the clearances in the specifications above are less than the clearances given in the rules and laws of your area, you must follow the rules and laws of that area.