

CX460 TIER 3 CRAWLER EXCAVATOR

SERVICE MANUAL

TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
1 GENERAL INFORMATION		
Safety, general information and standard torque data	1001	7-27691EN
General specifications and special torque setting	1002	SC4601002-0EN
2 ENGINE		
Radiator and oil-cooler	2001	SM4602001-0EN
Engine specifications	*	
Disassembly and assembly of the engine	*	
3 FUEL SYSTEM		
Fuel tank	3001	SM4603001-0EN
Fuel engine system	*	
4 ELECTRICAL SYSTEM		
Electrical system, electrical and electronic troubleshooting	4001	SC4604001-0EN
Main and engine electronic control boxes	4003	SM4604003-0EN
5 UNDERCARRIAGE		
Removal and installation of tracks	5001	SM160B5001-0EN
Rollers	5003	SM4605003-0EN
Sprocket.....	5004	SM160B5004-0EN
Idler wheel and tension shock absorber	5005	SM4605005-0EN
6 DRIVE TRAIN		
Drive motor and final drive transmission removal and installation	6001	SM4606001-0EN
Swing reduction gear, removal and installation	6003	SM4606003-0EN
Swing reduction gear, disassembly and assembly	6004	SM4606004-0EN
Travel reduction gear disassembly and assembly	6005	SM4606005-0EN
7 UNDERCARRIAGE HYDRAULICS		
8 UPPERSTRUCTURE HYDRAULICS		
Depressurising and decontaminating the hydraulic system, use of the vacuum pump and bleeding the components	8000	SM4608000-0EN
Specifications, troubleshooting, checks and hydraulic pressure settings	8001	SC4608001-0EN
Hydraulic reservoir removal and installation	8002	SM4608002-0EN
Main and hydraulic pilot pumps, removal and installation	8003	SM4608003-0EN
Main hydraulic control valve, removal and installation	8004	SM4608004-0EN
Attachment cylinders, removal and installation	8005	SM4608005-0EN
Hydraulic swivel, removal and installation	8006	SM4608006-0EN
Pilot blocs, removal and installation.....	8007	SM4608007-0EN
Swing motor, removal and installation	8008	SM4608008-0EN
Main hydraulic pump, disassembly and assembly	8010	SM4608010-0EN
Main hydraulic control valve, disassembly and assembly	8011	SM4608011-0EN
Attachment cylinders, disassembly and assembly	8012	SM4608012-0EN
Hand control levers, disassembly and assembly	8013	SM4608013-0EN
Foot control levers, disassembly and assembly.....	8014	SM4608014-0EN
Six-solenoid valves, disassembly and assembly	8015	SM4608015-0EN
Caution valve, disassembly and assembly	8016	SM4608016-0EN
Safety valves.....	8017	SM4608017-0EN
Hydraulic swivel, disassembly and assembly	8018	SM4608018-0EN
Swing motor, disassembly and assembly	8019	SM4608019-0EN
Hydraulic functions	8020	SC4608020-0EN
Travel hydraulic motor, disassembly and assembly	8021	SM4608021-0EN
Fan motor, removal and installation	8022	SM4608022-0EN
Fan motor, disassembly and assembly	8023	SM4608023-0EN
Fan pump, removal, disassembly, assembly and installation.....	8024	SM4608024-0EN
Hydraulic component functions.....	8030	SC4608030-0EN

DIVISION/SECTION	SECTION N°	REFERENCE N°
9 UPPERSTRUCTURE		
Upperstructure, turntable and counterweight.....	9002	SM4609002-0EN
Boom, dipper and bucket	9003	SM4609003-0EN
Seat, removal and installation.....	9004	SM4609004-0EN
Cab and cab equipment.....	9005	SM4609005-0EN
Air conditioning unit disassembly and assembly.....	9007	SM4609007-0EN
Large size hydraulic schematics	Pocket	87574463A
Large size electrical schematics	Pocket	87574470A

* *Consult the Engine Service Manual*

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

Section 1001

**SAFETY, GENERAL INFORMATION
AND TORQUE SPECIFICATIONS**

TABLE OF CONTENTS

GENERAL INFORMATION	3
SAFETY.....	4
STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS.....	6



WARNING : *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message that follows, as there is a risk of serious injury.*

GENERAL INFORMATION

Cleanning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

SAFETY



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier



WARNING: *Read the operator's manual to familiarize yourself with the correct control functions.*



WARNING: *Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.*



WARNING: *This is a one man machine, no riders allowed.*



WARNING: *Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.*

It is your responsibility to understand and follow manufacturers instructions on machine operation, service and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your Case dealer.



WARNING: *If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.*



WARNING: *When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.*



WARNING: *When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.*



WARNING: *When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.*



WARNING: Use insulated gloves or mittens when working with hot parts.



WARNING: Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service.



WARNING: Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. **DO NOT** use your hand to check for leaks, use a piece of cardboard or wood.



WARNING: When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.



WARNING: When using a hammer to remove and install pivot pins or separate parts using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors).



WARNING: Use suitable floor (service) jacks or chain hoist to raise wheels or tracks off the floor. Always block machine in place with suitable safety stands.



WARNING: When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times.



WARNING: Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this Service Manual.



WARNING: Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. Open the doors and get outside air into the area.




WARNING: When the battery electrolyte is frozen, the battery can explode if (1), you try to charge the battery, or (2), you try to jump start and run the engine. To prevent the battery electrolyte from freezing, try to keep the battery at full charge. If you do not follow these instructions, you or others in the area can be injured.

STANDARD TORQUE DATA FOR CAP SCREWS AND NUTS

Tightening of cap screws, nuts

Tighten alternately so that tightening torque can be applied evenly. The numbers in the figure below indicate the order of tightening.

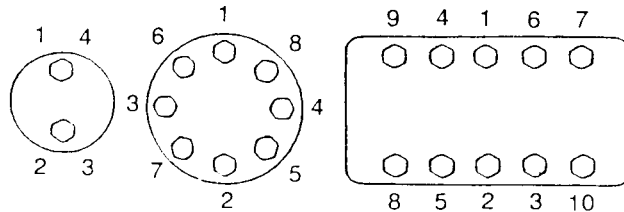

JS00481A

Cap screws which have had Loctite used (white residue remains after removal) should be cleaned with light oil or suitable cleaning solvent and dried. Apply 2-3 drops of Loctite to the thread portion of the cap screw and then tighten.

Torque table

Tighten cap screws and nuts according to the table below if there are no other special instructions.

Cap Screw Name Size (Size)			M6	M8	M10	M12	M14	M16	M18	M20
Cap Screw	Spanner	[mm]	10	13	17	19	22	24	27	30
		[in.]	0.39	0.51	0.67	0.75	0.87	0.95	1.06	1.18
	Tightening torque	[Nm]	6.9	19.6	39.2	58.8	98.1	156.9	196.1	294.2
		[lb-ft]	5.1	14.5	28.9	43.4	72.3	115.7	144.6	217
Socket Head Cap Screw	Spanner	[mm]	5	6	8	10	12	14	14	17
		[in.]	0.20	0.24	0.32	0.39	0.47	0.55	0.55	0.67
	Tightening torque	[Nm]	8.8	21.6	42.1	78.5	117.7	176.5	245.2	343.2
		[lb-ft]	6.5	15.9	31.1	57.9	86.9	130.2	181	253.2

Section 1002

1002

SPECIFICATIONS AND SPECIAL TORQUE SETTINGS

TABLE OF CONTENTS



WARNING: *This symbol is used in this manual to indicate important safety messages. Whenever you see this symbol, carefully read the message which follows. Your safety depends on it.*

TYPE, SERIAL NUMBER AND YEAR OF MANUFACTURE OF THE MACHINE.....	5
Machine	5
Engine	5
Serial numbers of the components	5
FLUIDS AND LUBRICANTS	6
Hydraulic fluid	6
Transmission component oil	6
Grease	6
Engine Oil	7
Engine fuel, maintenance of fuel filters and fuel storage	8
Anti-freeze/Anti-corrosion.....	10
Environment.....	10
Plastic and resin parts.....	10
SPECIFICATIONS	11
Main data	11
Performance	11
Complete machine dimensions.....	11
Main body dimensions	11
Engine.....	12
Cooling system	12
Capacity of coolant and lubricants	12
Hydraulic oil filter.....	12
Fuel filter	12
Operating devices	13
Hydraulic system.....	14
Swing unit	16
Travel lower body.....	16
Work Unit	17
Digging force (ISO 6015)	18
COMPONENT WEIGHT.....	19
Major component weight.....	19
Bucket weight.....	20
Other component weight.....	21
DIMENSIONS AND WEAR LIMIT OF THE TRACK ASSEMBLY	22
Sprocket.....	22
Idler wheel.....	23

Upper roller24

Lower roller25

Track26

DIMENSIONS AND WEAR LIMITS OF ATTACHEMENT MOBILE JOINTS27

1. Boom foot/Frame27

2. Boom cylinder foot/Frame.....28

3. Boom cylinder head/Boom.....28

4. Arm cylinder foot/Boom29

5. Boom/Arm29

6. Arm cylinder head/Arm29

7. Bucket cylinder foot/Arm30

8. Connecting rod/Arm.....30

9. Compensator/Bucket30

10. Connecting rod/Compensator/Bucket cylinder head31

11. Arm/Bucket31

SHIMS FOR ADJUSTING ATTACHMENT GAPS32

For boom foot32

SPECIAL TORQUE SETTINGS.....33

MACHINE OVERALL DIMENSIONS36

TYPE, SERIAL NUMBER AND YEAR OF MANUFACTURE OF THE MACHINE

For all part orders, request for information or assistance, always specify the type and the serial number of the machine to your Case dealer.

Fill in the following lines with the required information: Type, serial number, year of manufacture of the machine and the serial numbers of the hydraulic and mechanical components.

Machine



CT04A171A

(1) Type

(2) Serial number

(3) Year of manufacture

Engine

Make and type

Serial number

Serial numbers of the components

Hydraulic pump


Swing reduction gear

Travel reduction gears

Control valve

FLUIDS AND LUBRICANTS

Lubricants must have the correct properties for each application.

 **WARNING:** The conditions of use for individual fluids and lubricants must be respected.

Hydraulic fluid

CASE/AKCELA hydraulic fluid is specially designed for high pressure applications and for the CASE hydraulic system. The type of fluid to be used depends on the ambient temperature.

Temperate climates: -20°C to +40°C (-4° to 104° F)

CASE/AKCELA: HYDRAULIC EXCAVATOR FLUID (MS 1230. ISO VG 46. DIN 51524 PART 2 HV)

Hot climates: 0°C to +50°C (32° to 122° F)

CASE/AKCELA: AW HYDRAULIC FLUID 68 HV (MS 1216. ISO VG 68. DIN 51524 PART 3 CATEGORY HVLP)

Cold climates: -25°C to +20°C (-13° to 68° F)

CASE/AKCELA: AW HYDRAULIC FLUID 32 (MS 1216. ISO VG 32. DIN 51524 PART 2)

Biodegradable fluid: -30°C to +40°C (-22° to 104° F)

This yellow-colored fluid is miscible with standard fluid. If used to change standard fluid, it is advised to drain the circuit completely before refilling with this fluid.

CASE/AKCELA: HYDRAULIC EXCAVATOR FLUID BIO (MS 1230. ISO VG 46. DIN 51524 PART 2 HV)

Transmission component oil

Extreme pressure oil used for enclosed transmission components.

CASE/AKCELA: GEAR 135H EP (SAE 80W-90. API GL 5. MIL-L-2105 D. MS 1316. ZF TE-ML 05A)

Grease

CASE/AKCELA: MOLY GREASE 251H EP-M (251H EP-M. NLGI 2)

"Extreme Pressure" multipurpose grease with lithium soap and molybdenum disulphide.

CASE/AKCELA: MULTIPURPOSE GREASE 251H EP (251H EP. NLGI 2)

"Extreme Pressure" multipurpose grease with lithium soap and calcium.

CASE/AKCELA: PREMIUM GREASE EP2 (NLGI 2)

"Extreme Pressure" multipurpose grease with lithium soap.

Hydraulic breakers

CASE/AKCELA: MULTIPURPOSE GREASE 251H EP (NLGI 2).

Engine Oil


THE CASE/AKCELA No. 1 engine oil is recommended for your engine. This oil ensures proper lubrication of your engine for all operating conditions.

If the CASE/AKCELA Multigrade "No. 1 ENGINE OIL" cannot be obtained, use the oil corresponding to one of the following categories: ACEA E7. API CI-4.



CP02N001

Oil viscosity / Oil range

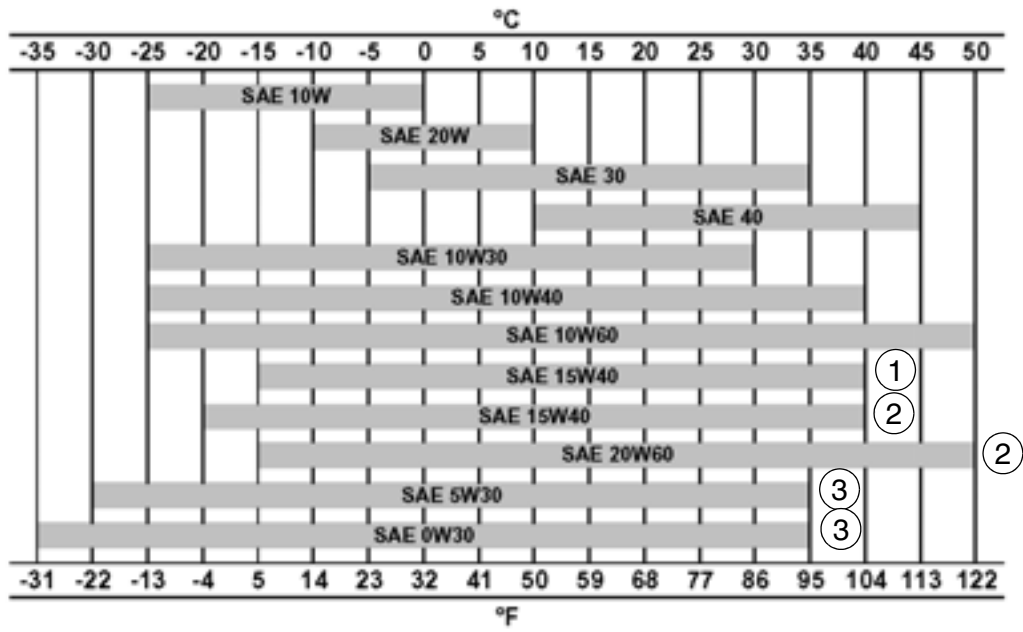

CT02M001

- 1) With mineral base
- 2) With semi-synthetic base
- 3) With synthetic base

Engine fuel, maintenance of fuel filters and fuel storage

In order to meet the emission control regulation of 3rd-stage, the engine components have been made precisely and they are to be used under high-pressure conditions.

Therefore, the specified fuel must be used for the engine.

As a matter of course, not only the guarantee will not be given for the use of a fuel other than the specified but also it may invite a serious breakdown.

In addition, since suitable specifications for the fuel filter elements have been established for this engine, use of the genuine filter is essential.

The following describes the specifications and the requirements of the fuel to be applied, and maintenance of the fuel and the fuel elements.

Fuel to be applied

Selection of fuel

Following conditions must be met for the diesel engines, that is the one;

- 1 In which no dust even fine one is mixed,
- 2 With proper viscosity,
- 3 With high cetane rating,
- 4 With good flow properties in lower temperature,
- 5 With not much sulfur content, and
- 6 With less content of carbon residue

Applicable standards for diesel fuel

Applicable Standard	Recommendation
JIS (Japanese Industrial Standard)	NO.2
DIN (Deutsche Industrie Normen)	DIN 51601
SAE (Society of Automotive Engineers)	
Based on SAE-J-313C	NO. 2-D
BS (British Standard) Based on BS/2869-197	Class A-1
EN590	

If a standard applied to the fuel for the diesel engine is stipulated in your country, check the standard for details.

Requirements for diesel fuel

Although conditions required for the diesel fuel are illustrated above, there are other requirements exerting a big influence on its service durability and service life.

Be sure to observe the following requirements for selecting fuel.

Sulfur content.....	2500 ppm or less
HFRR*.....	460 mm or less
Water content.....	0.05 wt% or less

* HFRR (High-Frequency Reciprocating Rig.): An index showing lubricating properties of the fuel.

Sulfur content reacts to moisture to change into sulfuric acid after combustion.

Use of a fuel containing much sulfur content allows it to accelerate internal corrosion and wear.

In addition, much sulfur content quickens deterioration of engine oil allowing its cleaning dispersive property to be worse which results in acceleration of wear of sliding portions.

HFRR is an index that indicates lubricating property of a fuel.

Large value of the index means poor lubrication so that seizure of the machine components may result if such a fuel is used.

Since a fuel with high HFRR value also has lower viscosity, it can easily be leaked out.

If the fuel is mixed with the engine oil, the oil is diluted to deteriorate its lubricating property resulting in acceleration of wear.

Water content allows inside of the fuel tank to rust which in turn blocking the fuel line and the fuel filter.

IMPORTANT : *In cold weather, fill the fuel tank at the end of the day's work, in order to prevent the formation of condensation.*

This may also cause wear and seizure of the machine components.

If atmospheric temperature goes below the freezing point, moisture content in the fuel forms fine particle of ice allowing the fuel line to be clogged.

IMPORTANT : *Obtain table of analysis for the fuel you are using from the fuel supplier to confirm that it meets the criteria described above.*

IMPORTANT : *If a fuel which does not meet the specifications and the requirements for the diesel engine, function and performance of the engine will not be delivered. In addition, never use such a fuel because a breakdown of the engine or an accident may be invited.*

Guarantee will not be given to a breakdown caused by the use of a improper fuel.

Some fuels are used with engine oil or additives mixed together with diesel engine fuel.

In this case, do not use these fuels because damage to the engine may result as the fuel has been contaminated.

It is natural that the emission control regulation of 3rd-stage will not be cleared in case where a fuel that does not meet the specifications and the requirements is used.

Use the specified fuel for compliance of the exhaust gas control.

IMPORTANT : *If you use diesel fuel which contains much sulfur content more than 2500 ppm, be sure to follow the items below for the engine oil selection and maintenance of engine parts. Guarantee will not be given to breakdowns caused by not to follow these items.*

1 Selection of engine oil

Use API grade CF-4 or JASO grade DH-1.

2 Exchange the engine oil and engine oil filter element by the periodical interval reported on the Operator's Manual.

3 Inspect and exchange the EGR (*)parts and fuel injector parts of engine every 3000 hour of use.

* EGR: Exhaust Gas Recirculation

Maintenance of fuel filters

Be sure to use the genuine fuel filters.

The fuel injection system is precisely constructed and the genuine filter employs finer mesh than conventional filters to improve protection of machine equipment.

If a filter with coarse mesh is used, foreign object passing through the filter enters into the engine so that machine equipment can wear out in a short period of time.

IMPORTANT : *If a fuel filter other than the genuine filter is used, guaranty will not be applied to a fault caused by the use of a wrong filter.*

Two kinds of fuel filter, the pre-filter and the main filter, are mounted on the machine.

Be sure to use the genuine fuel filters and replace them at the periodic intervals reported on the operator's Manual.

IMPORTANT : *Since the pre-filter also has a function of water separation, discharge water and sediment when the float reaches lower part of the filter elements. CHECK EVERY DAY before to start the engine.*

Time to replace filters may be advanced according to properties of the fuel being supplied.

- Therefore, take measures to prevent dust or water from being entered in the fuel tank when supplying fuel.
- When supplying fuel directly from a fuel drum can, leave the drum as it stands for a long period of time to supply clean fuel standing above a precipitate.
- If it is hard to leave the drum for a long period of time, install a fuel strainer and a water separator before the fuel tank of the machine to supply clean fuel.

Water drain cock is provided on the bottom side of the fuel tank.

- Drain water before starting the engine every morning.
- In addition, remove the cover under the tank once a year to clean up inside of the tank.

Fuel storage

Long storage can lead to the accumulation of impurities and condensation in the fuel. Engine trouble can often be traced to the presence of water in the fuel.

The storage tank must be placed outside and the temperature of the fuel should be kept as low as possible. Drain off water and impurities regularly.

Anti-freeze/Anti-corrosion

Use anti-freeze in all seasons to protect the cooling system from corrosion and all risk of freezing.

CASE/AKCELA: PREMIUM ANTI-FREEZE (MS 1710)

For areas where the temperature goes down to -38°C (-36.4°F), mix 50/50 with water.

IMPORTANT : *Do not mix products of a different origin or brand. The same product must be used when topping up the system.*

Environment

Before carrying out any maintenance operation on this machine and before disposing of used fluids or lubricants, always think of the environment. Never throw oil or fluid on the ground and never place it in leaking receptacles.

Contact your local ecological recycling centre or your CASE Dealer to obtain information on the correct method of disposing of these lubricants.

Plastic and resin parts

When cleaning plastic parts, the console, the instrument panel, the indicators etc... avoid using petrol, kerosene, paint solvents etc... Use only water, soap and a soft cloth.

The use of petrol, kerosene, paint solvents etc... causes discoloration, cracks or deformation of these parts.

SPECIFICATIONS

Main data

Model nameCX460 Hydraulic Excavator
 Operating weight 46600 kg (102735 lbs)
 Engine output 270 kW / 1950 rpm

Performance

Swing speed 9.0 Tr/min.
 Travel speed
 Low Speed 3.1 km/h (1.93 mph)
 High Speed 5.3 km/h (3.30 mph)
 Maximum drawbar pull 341 kN (76659.85)
 Grade ability 70% (35°)
 Ground pressure 80 kPa (600 mm (23.62 in) grouser shoe)

Complete machine dimensions

	Standard arm (3.40 m) (11 ft 1.85 in)	Short arm (2.55 m) (8 ft 4.39 in)
Length	11940 mm (470.07 in)	11990 mm (472.04 in)
Width	3350 mm (131.88 in)	3350 mm (131.88 in)
Height	3600 mm (141.73 in)	3670 mm (144.48 in)

Main body dimensions

Main body width See machine overall dimensions
 Main body length See machine overall dimensions
 Upper side swing body width 3040 mm (120 in)
 Cab width 1000 mm (39.37 in)
 Main body height 3270 mm (128.73 in)
 Tail swing radius 3620 mm (142.51 in)
 Distance of rear swing body 3600 mm (171.73 in)
 Ground clearance for upperstructure 1330 mm (52.36)
 Center-to-center of wheels 4400 mm (173.22)
 Overall track length 5450 mm (214.56)
 Maximum track width 3350 mm (131.88 in)
 Center-to-center for track 2750 mm (108.26)
 Width of track shoe 600 mm (23.62 in) (Optional: 750 mm (29.52 in))
 Minimum ground clearance (To bottom of lower frame) 540 mm (21.25)

Case Cx460 Tier3 Crawler Excavator Shop Manual

Full download: <http://manualplace.com/download/case-cx460-tier3-crawler-excavator-shop-manual/>
1002-12

Engine

Name ISUZU, 6UZ1
Type: Water-cooled, 4-cycle diesel, 6-cylinder in line, direct injection
..... (electronic control), turbocharger with air cooled intercooler, without cooling fan.
No. of cylinders - bore x stroke 6-dia. 120 mm x 145 mm
Displacement 9.839 L (2.599 gal)
Compression ratio 17.5
Rated output 270 kW / 1950 min⁻¹
Maximum torque 1435 Nm / apprex. 1500 min⁻¹
Dry weight Approximately 840 kg
Engine dimensions (LxWxH) 1235x953x1272 mm (48.62x37.51x50.07 in)
Oil pan All direction 35°, inclinable
Cooling fan Remote (diameter 1016 mm (39.99 in) suction type-6 blades resin & steel)
Oil pan capacity Maximum: 36 L (9.51 gal) Minimum: 25 L (6.60 gal) (excluding oil filter)
Direction of rotation Right (as seen from fan)
Starter, reduction type 24 V, 5.5 kW
Alternator, AC type 24 V, 50 A
Battery 2 x 12V, 128 Ah/5 Hr

Cooling system

Fan drive system Hydraulic drive
Fan type Ø 1016 mm (39.99 in), 6 blades, air intake
Radiator
 Fin type wavy
 Fin pitch 2.0 mm (0.078 in)
Oil cooler
 Fin type wavy
 Fin pitch 1.75 mm (0.069 in)
Inter-cooler
 Fin type triangular straight
 Fin pitch 2.0 mm (0.078 in)
Fuel cooler
 Fin type wavy
 Fin pitch 2.0 mm (0.078 in)

Capacity of coolant and lubricants

Coolant 38 L (10.03 gal)
Fuel 611 L (161.41 gal)
Lubricant for engine 36 L (9.51 gal)
Lubricant for travel reduction gear (per side) 15 L (3.96 gal)
Lubricant for swing reduction gear (per side) 10.5 L (2.77 gal)
Hydraulic oil 460 L (121.51 gal)
Capacity of hydraulic oil tank 230 L (60.76 gal)

Hydraulic oil filter

Suction filter (inside tank) 150 mesh
Return filter (inside tank) 10 µm
Nephron filter (inside housing) 1 µm
Pilot line filter (inside housing) 10 µm

Fuel filter

Main filter 4 µm
Pre-filter 10 µm