

**584/585/586**  
**Power Shuttle Forklift**  
**Operators Manual**

9-2923

Reprinted

**CASE**



***This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.***

SB001

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

1. GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.
2. MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.



**IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.**

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.

LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE, CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Case dealer for additional operator's manuals, parts catalogs, and service manuals.

## TABLE OF CONTENTS

SAFETY RULES .....	2
SERIAL NUMBER LOCATION .....	4
RIGHT-HAND AND LEFT-HAND .....	5
TO THE OWNER AND OPERATOR .....	6
SPECIFICATIONS .....	7
Dimensions .....	7
Operating Data .....	7
Model 584 .....	7
Model 585 .....	9
Model 586 .....	9
Tires .....	10
Turning Clearance Circle .....	10
Travel Speeds .....	10
Hydraulic System .....	11
Shipping Weights .....	11
OPERATING INSTRUCTIONS .....	13
Indicators and Controls .....	13
Tractor .....	13
Forklift .....	18
Engine Operation .....	19
Starting .....	19
Stopping .....	20
Forklift Operation .....	20
Machine Stability .....	20
Load Limits .....	23
Chart of Load Limits .....	25
MAINTENANCE .....	26
Lubrication .....	26
Lubrication Points .....	26
Mast Lubrication .....	27
Hydraulic System .....	27
Capacity .....	27
Recommended Oil .....	27
Oil Level .....	28
Reservoir Servicing .....	29
Filter Condition Gauge .....	31
ROPS .....	32
EXTRA EQUIPMENT .....	34