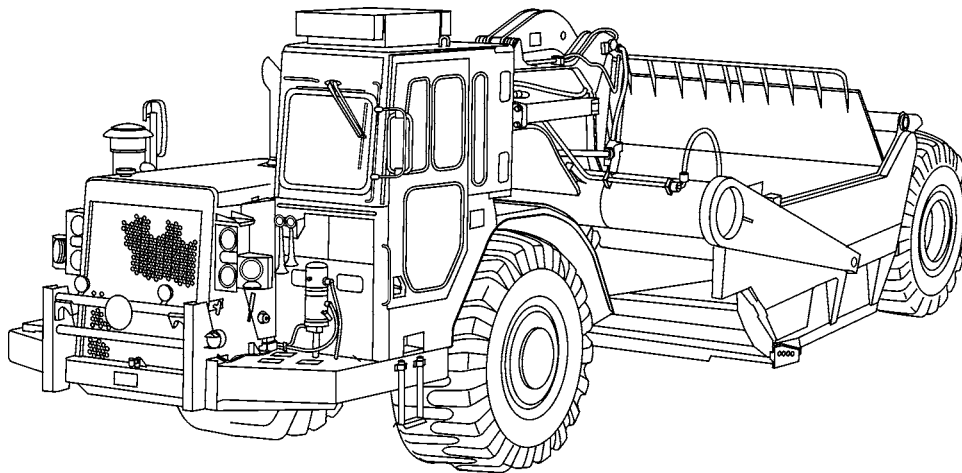

TECHNICAL MANUAL

Unit and Direct Support Maintenance

FOR

**SCRAPER, EARTH MOVING,
MOTORIZED, DIESEL ENGINE DRIVEN**

**MODEL 621B
(NSN 3805-01-153-1854) (EIC: EH3)**



SUPERSEDURE NOTICE - This manual supersedes TM 5-3805-248-14&P-2 and TM 5-3805-248-14&P-3, dated 19 August 1985

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

FEBRUARY 2006

WARNING SUMMARY

This warning summary contains general safety warnings and hazardous materials warnings that must be understood and applied during operation and maintenance of this equipment. Failure to observe these precautions could result in serious injury or death to personnel. Also included are explanations of safety and hazardous materials icons used within the technical manual.



BIOLOGICAL - abstract symbol bug shows that a material may contain bacteria or viruses that present a danger to life or health.



CHEMICAL - drops of liquid on hand shows that the material will cause burns or irritation to human skin or tissue.



EAR PROTECTION - Headphones over ears show that noise level will harm ears.



ELECTRICAL - electrical wire to arm with electricity symbol running through human body shows that shock hazard is present.



EYE PROTECTION - person with goggles shows that the material will injure the eyes.



FIRE - flame shows that a material may ignite and cause burns.



FLYING PARTICLES - arrows bouncing off face with face shield shows that particles flying through the air will harm face.



HEAVY PARTS - hand with heavy object on top shows that heavy parts can crush and harm.



HEAVY OBJECT - human figure stooping over heavy object shows physical injury potential from improper lifting technique.



HEAVY PARTS - heavy object on human figure shows that heavy parts present a danger to life or limb.



HOT AREA - hand over object radiating heat shows that part is hot and can burn.



HYDRAULIC FLUID PRESSURE - hydraulic fluid spraying human figure shows that fluid escaping under great pressure can cause injury or death to personnel.



POISON - skull and crossbones shows material is poisonous or is a danger to life.



RADIOACTIVE - identifies a material that emits radioactive energy and can injure human tissue or organs.



SLICK FLOOR - wavy line on floor with legs prone shows that slick floor presents a danger from falling.



VAPOR - human figure in a cloud shows that material vapors present a danger to life or health.

FOR INFORMATION ON FIRST AID, REFER TO FM 4-25.11.



WARNING

CARBON MONOXIDE (EXHAUST GASES) CAN KILL!

- Carbon monoxide is a colorless, odorless, deadly poison which, when breathed, deprives the body of oxygen and causes suffocation. Exposure to air containing carbon monoxide produces symptoms of headache, dizziness, loss of muscular control, apparent drowsiness, and coma. Permanent brain damage or death can result from severe exposure.
 - Carbon monoxide occurs in exhaust fumes of internal combustion engines. Carbon monoxide can become dangerously concentrated under conditions of inadequate ventilation. The following precautions must be observed to ensure safety of personnel when engine of tractor is operated.
1. DO NOT operate engine in enclosed areas.
 2. DO NOT idle engine without adequate ventilation.
 3. DO NOT drive with inspection plates or cover plates removed.
 4. BE ALERT for exhaust poisoning symptoms. They are:
 - Headache
 - Dizziness
 - Sleepiness
 - Loss of muscular control
 5. If you see another person with exhaust poisoning symptoms:
 - Remove person from area.
 - Expose to fresh air.
 - Keep person warm.
 - Do not permit physical exercise.
 - Administer cardiopulmonary resuscitation (CPR), if necessary.
 - Notify a medic.
 6. BE AWARE. The field protective mask for nuclear-biological-chemical (NBC) protection will not protect you from carbon monoxide poisoning.

The Best Defense Against Carbon Monoxide Poisoning Is Good Ventilation!



- To avoid injury, eye protection and acid-resistant gloves must be worn when working around batteries. Do not smoke, use open flame, make sparks or create other ignition sources around batteries. If a battery is giving off gases, it can explode and cause injury to personnel. Remove all jewelry such as rings, ID tags, watches, and bracelets. If jewelry or a tool contacts a battery terminal, a direct short will result in instant heating, damage to equipment, and injury to personnel.
- Sulfuric acid contained in batteries can cause serious burns. If battery corrosion or electrolyte makes contact with skin, eyes or clothing, take immediate action to stop the corrosive burning effects. Failure to follow these procedures may result in death or serious injury to personnel.
 - a. **Eyes.** Flush with cold water for no less than 15 minutes and seek medical attention immediately.
 - b. **Skin.** Flush with large amounts of cold water until all acid is removed. Seek medical attention as required.
 - c. **Internal.** If corrosion or electrolyte is ingested, drink large amounts of water or milk. Follow with milk of magnesia, beaten egg or vegetable oil. Seek medical attention immediately.
 - d. **Clothing/Equipment.** Wash area with large amounts of cold water. Neutralize acid with baking soda or household ammonia.



Compressed air used for cleaning or drying purposes, or for clearing restrictions, should never exceed 30 psi (207 kPa). Use protective equipment and exercise caution to avoid injury to personnel.



Solvent cleaning compound MIL-PRF-680 Type III is an environmentally compliant and low toxic material. However, it may be irritating to the eyes and skin. Use protective gloves and goggles. Use in well-ventilated areas. Keep away from open flames and other sources of ignition.



WARNING

ETHER COLD START SYSTEM



Ether fuel is extremely flammable and toxic. DO NOT smoke and make sure you are in a well-ventilated area away from heat, open flames or sparks. Wear eye protection. Avoid contact with skin and eyes and avoid breathing ether fumes. If fluid enters or fumes irritate the eyes, wash immediately with large quantities of clean water for 15 minutes. Seek medical attention immediately if ether is inhaled or causes eye irritation. Failure to follow this warning may cause death or serious injury to personnel.



WARNING

FUEL HANDLING

- DO NOT smoke or permit any open flame in area of machine while you are servicing diesel fuel system. Be sure hose nozzle is grounded against filler tube during refueling to prevent static electricity. Failure to follow this warning may result in injury to personnel or equipment damage.
- DO NOT perform fuel system checks, inspections or maintenance while smoking or near fire, flames or sparks. Fuel may ignite, causing damage to machine and injury or death to personnel.
- Operating personnel must wear fuel-resistant gloves when handling fuels. If exposed to fuel, promptly wash exposed skin and change fuel-soaked clothing.



WARNING

HAZARDOUS WASTE DISPOSAL

When servicing this machine, performing maintenance, or disposing of materials such as engine coolant, hydraulic fluid, lubricants, battery acids or batteries, and CARC paint, consult your unit/local hazardous waste disposal center or safety office for local regulatory guidance. If further information is needed, please contact The Army Environmental Hotline at 1-800-872-3845.



WARNING

HEARING PROTECTION

Hearing protection is required when operating machine or when within 23 feet of machine when it is operating. Failure to wear hearing protection may result in hearing loss.



WARNING

NBC EXPOSURE



- If NBC exposure is suspected, personnel wearing protective equipment should handle all air cleaner media. Consult your NBC Officer or NBC NCO for appropriate handling or disposal procedures.
- NBC contaminated filters must be handled using adequate precautions and must be disposed of by trained personnel.



To order this NBC decal use:

National Stock Number (NSN) - 7690-01-114-3702

Part Number (PN) - 12296626

Commercial and Government Entity Code (CAGEC) - 19207

WARNING

OPERATION SAFETY

- Use caution and maintain three-point contact at all times when mounting and dismounting machine, to avoid injury to personnel.
- DO NOT allow riders on machine. Failure to follow this warning may result in serious injury or death to personnel.
- DO NOT operate machine unless seat belt has been fastened. Failure to follow this warning may result in serious injury or death, in the event of an accident.
- BE ALERT for personnel in the area while operating machine. Always check to ensure area is clear of personnel and obstructions before starting engine, moving machine or lowering or raising scraper bowl. Failure to follow this warning may result in serious injury or death to personnel or damage to equipment.
- Never leave the operator's position without applying the parking brake. Failure to follow this warning may result in death to injury to personnel or damage to equipment.
- Never use starting fluid or spray to aid in starting the engine, other than the on-board ether cold start system. Failure to follow this warning may result in death or injury to personnel or damage to equipment.
- Always use a ground guide when driving machine up or down ramps in preparation for highway or marine. Failure to use a ground guide may result in death or injury to personnel or damage to equipment.
- When loaded and traveling across a hillside, reduce speed significantly BEFORE turning uphill. Failure to do so may cause machine to roll over, resulting in injury or death to personnel.

Do NOT operate machine if parking brake was applied due to a malfunction of airbrake system or parking brake. Correct any problem before attempting to operate machine. Personal injury or death can result from a brake malfunction.



WARNING

PREPARATION FOR TRANSPORT

- Use caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable lift capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may cause death or injury to personnel.
- Always use a ground guide when moving machine during preparation for transport procedures (driving up and down ramps or onto rail flatcars). Failure to use a ground guide may result in death or injury to personnel or damage to equipment.
- Use assistance and handle windshield with caution to ensure it does not become damaged. Failure to do so may damage windshield or cause personnel injury from cut glass if windshield breaks.
- Use extreme caution when climbing on ladder. Failure to exercise caution may result in a fall, causing injury to personnel.



WARNING

PRESSURIZED COOLING SYSTEM



- DO NOT service cooling system unless engine has been allowed to cool down. This is a pressurized cooling system and escaping steam or hot coolant will cause serious burns.
- DO NOT remove cooling system radiator cap when engine is hot. Allow engine to cool down. Failure to follow this warning may cause serious burns.
- Wear effective eye, glove, and skin protection when handling coolants. Failure to do so may cause injury.



WARNING

SLAVE STARTING

- When slave starting tractor, use NATO slave cable that DOES NOT have loose or missing insulation.
- DO NOT proceed if suitable cable is not available.
- DO NOT use civilian-type jumper cables.
- DO NOT allow disabled and booster machines to come in contact with each other at any time during slave starting.

WARNING

TIRES

- Operating machine with underinflated or defective tire may lead to tire failure and loss of traction or control. Damage to equipment or injury to personnel may result.
- If tire pressure is 0 psi (0 kPa) do NOT inflate. Notify Unit Maintenance.
- Use a self-inflating chuck and stand at a distance behind tire when inflating tire. Failure to do so could result in injury or death to personnel.

WARNING

WORK SAFETY



- Lifting cables, chains, hooks, and slings used for lifting machine must be in good condition and of suitable capacity. Failure to follow this warning may result in injury or death to personnel and damage to equipment.



- Improper use of lifting equipment and improper attachment of cables to machine can result in serious personnel injury and equipment damage. Observe all standard rules of safety.
- Ensure engine compartment access door is securely supported in open position. Failure to do so could cause door to slam shut, causing serious injury to personnel.



- Hitch and steering movement can reduce clearances suddenly and cause personnel injury. Always stop engine BEFORE working in area of hitch link.
- Configuration changes to cutting edge should NEVER be attempted without first securing the bowl by blocking it so that it is firmly supported. Failure to follow this warning may cause injury to personnel.



- Use extreme caution when handling heavy parts. Provide adequate support and use assistance during procedure. Ensure that any lifting device used is in good condition and of suitable load capacity. Keep clear of heavy parts supported only by lifting device. Failure to follow this warning may result in death or injury to personnel.

LIST OF EFFECTIVE PAGES/WORK PACKAGES

Date of issue for original manual is:

Original 15 February 2006

TOTAL NUMBER OF PAGES FOR FRONT AND REAR MATTER IS 66 AND TOTAL NUMBER OF WORK PACKAGES IS 263 CONSISTING OF THE FOLLOWING:

Page/WP No.	*Change No.
Cover/(Back Blank)	0
a to h	0
A/(B Blank)	0
i to xii	0
WP 0001 00 to 0256 00	0
WP 0333 00 to 0339 00	0
Index-1 to Index-27/(Index-28 Blank)	0

* Zero in this column indicates an original page or work package.

A/(B blank)

Unit and Direct Support Maintenance

FOR

**SCRAPER, EARTH MOVING,
MOTORIZED, DIESEL ENGINE DRIVEN
MODEL 621B
(NSN 3805-01-153-1854) (EIC: EH3)**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (*Recommended Changes to Equipment Technical Publications*), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is <https://aeeps.ria.army.mil/>. The DA Form 2028 is located under the Public Applications section in the AEPS Public Home Page. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or e-mail your letter or DA Form 2028 direct to: AMSTA-LC-LMIT/TECH PUBS, TACOM-RI, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The e-mail address is: TACOM-TECH-PUBS@ria.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

SUPERSEDURE NOTICE - This manual supersedes TM 5-3805-248-14&P-2 and TM 5-3805-248-14&P-3, dated 19 August 1985

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

Table of Contents

	Page Number
VOLUME I	
Warning Summary	a
How To Use This Manual	xiii
CHAPTER 1 INTRODUCTORY INFORMATION WITH THEORY OF OPERATION	
WP 0001 00 General Information	0001 00-1
WP 0002 00 Equipment Description and Data	0002 00-1
WP 0003 00 Theory of Operation	0003 00-1
CHAPTER 2 TROUBLESHOOTING PROCEDURES	
WP 0004 00 Troubleshooting Introduction	0004 00-1
WP 0005 00 Electrical System Schematic	0005 00-1
WP 0006 00 Air System Schematic	0006 00-1
WP 0007 00 Hydraulic System Schematic	0007 00-1
WP 0008 00 Troubleshooting Symptom Index	0008 00-1
WP 0009 00 Engine, Exhaust and Cooling System Troubleshooting Procedures	0009 00-1
WP 0010 00 Battery, Starting and Charging System Troubleshooting Procedures	0010 00-1

Table of Contents - Continued

	Page Number
WP 0012 00 Lighting System Troubleshooting Procedures	0012 00-1
WP 0013 00 Transmission Troubleshooting Procedures	0013 00-1
WP 0014 00 Brake System Troubleshooting Procedures	0014 00-1
WP 0015 00 Steering/Hydraulic System Troubleshooting Procedures	0015 00-1
CHAPTER 3 UNIT FIELD MAINTENANCE	
WP 0016 00 Service Upon Receipt and General Maintenance Information	0016 00-1
WP 0017 00 General Maintenance Instructions	0017 00-1
WP 0018 00 Electrical General Maintenance Instructions	0018 00-1
WP 0019 00 Preventive Maintenance Checks and Services (PMCS) Introduction	0019 00-1
<i>Engine</i>	
WP 0020 00 Unit Preventive Maintenance Checks and Services (PMCS)	0020 00-1
WP 0021 00 Valve Cover and Base Replacement	0021 00-1
WP 0022 00 Engine Oil and Oil Filter Element Replacement	0022 00-1
WP 0023 00 Crankcase Breather Replacement	0023 00-1
WP 0024 00 Engine Oil Gage and Guide Assembly Replacement	0024 00-1
WP 0025 00 Oil Filler Tube Assembly Replacement	0025 00-1
WP 0026 00 Engine Oil Filter Base Maintenance	0026 00-1
WP 0027 00 Oil Filter Lines and Fittings Replacement	0027 00-1
WP 0028 00 Barring Engine Over	0028 00-1
WP 0029 00 Cylinder Balance Test	0029 00-1
<i>Fuel System Maintenance</i>	
WP 0030 00 Fuel Injection Lines Replacement	0030 00-1
WP 0031 00 Air Cleaner Assembly Replacement	0031 00-1
WP 0032 00 Dust Ejector and Inlet Piping and Mounting Maintenance	0032 00-1
WP 0033 00 Turbocharger Air Lines Replacement	0033 00-1
WP 0034 00 Fuel Tank and Cap Assembly Maintenance	0034 00-1
WP 0035 00 Fuel Lines Replacement	0035 00-1
WP 0036 00 Emergency Fuel Shut-Off Replacement	0036 00-1
WP 0037 00 Secondary Fuel Filter and Base Replacement	0037 00-1
WP 0038 00 Primary Fuel Filter and Base Maintenance	0038 00-1
WP 0039 00 Ether Injector Cylinder and Lines Replacement	0039 00-1
WP 0040 00 Fuel Priming Pump Replacement	0040 00-1
<i>Exhaust System</i>	
WP 0041 00 Muffler, Tube and Pipe Replacement	0041 00-1
<i>Cooling System</i>	
WP 0042 00 Changing Coolant	0042 00-1
WP 0043 00 Radiator Cap Maintenance	0043 00-1
WP 0044 00 Radiator Assembly, Support Assembly and Mounting Maintenance	0044 00-1
WP 0045 00 Radiator Fan Shield Replacement	0045 00-1
WP 0046 00 Thermostat and Housing Replacement	0046 00-1
WP 0047 00 Aftercooler Water Lines and Fittings Replacement	0047 00-1
WP 0048 00 Water Pump Lines and Fittings, and Engine Oil Cooler Water Lines and Fittings Replacement	0048 00-1
WP 0049 00 Radiator Hoses Replacement	0049 00-1
WP 0050 00 Coolant Filter Replacement	0050 00-1

Table of Contents - Continued

	Page Number
<i>Cooling System - Continued</i>	
WP 0051 00 Coolant Filter Mounting, Hoses and Fittings Replacement	0051 00-1
WP 0052 00 Water Pump Replacement	0052 00-1
WP 0053 00 Fan Belts Maintenance	0053 00-1
WP 0054 00 Fan Belts Tensioner Maintenance	0054 00-1
<i>Electrical System</i>	
WP 0055 00 Alternator Replacement	0055 00-1
WP 0056 00 Alternator Belt Replacement	0056 00-1
WP 0057 00 Starting Motor Replacement	0057 00-1
WP 0058 00 Coolant Temperature Gage and Converter/Retarder Temperature Gage Replacement	0058 00-1
WP 0059 00 Ammeter Replacement	0059 00-1
WP 0060 00 Hour Meter Replacement	0060 00-1
WP 0061 00 Low Air Pressure Warning Lamp Replacement	0061 00-1
WP 0062 00 Ether Starting Switch Replacement	0062 00-1
WP 0063 00 Windshield Wiper Switch Replacement	0063 00-1
WP 0064 00 Worklight Switch Replacement	0064 00-1
WP 0065 00 Low Air Pressure Horn Override Switch Replacement	0065 00-1
WP 0066 00 Air Horn Switch Replacement	0066 00-1
WP 0067 00 Light Switch Assembly Replacement	0067 00-1
WP 0068 00 Starter Switch Replacement	0068 00-1
WP 0069 00 Panel Lamp Replacement	0069 00-1
WP 0070 00 Circuit Breakers Replacement	0070 00-1
WP 0071 00 Left Panel Replacement	0071 00-1
WP 0072 00 Right Panel Replacement	0072 00-1
WP 0073 00 Ground Driven Steering Pump Indicator Light Replacement	0073 00-1
WP 0074 00 Battery Disconnect Switch Replacement	0074 00-1
WP 0075 00 Fuse and Fuse Block Replacement	0075 00-1
WP 0076 00 Main Circuit Breaker Replacement	0076 00-1
WP 0077 00 Windshield Wiper Capacitors Replacement	0077 00-1
WP 0078 00 Worklight, High Beam, Low Beam and BackUp Alarm/Horn Relays Replacement	0078 00-1
WP 0079 00 Head Lamp Dimmer Switch Replacement	0079 00-1
WP 0080 00 Turn Signal and Hazard Warning Switch Replacement	0080 00-1
WP 0081 00 Turn Signal Flasher Replacement	0081 00-1
WP 0082 00 Blackout Drive Light Assembly Replacement	0082 00-1
WP 0083 00 Front Worklights Replacement	0083 00-1
WP 0084 00 Headlights Replacement	0084 00-1
WP 0085 00 Headlights and Worklight Brackets Replacement	0085 00-1
WP 0086 00 Cutting Edge Worklight Replacement	0086 00-1
WP 0087 00 Service Stop/Tail Light Replacement	0087 00-1
WP 0088 00 Blackout Stop and Tail Light Maintenance	0088 00-1
WP 0089 00 Directional Light Indicator Light Replacement	0089 00-1
WP 0090 00 Directional Light Assembly (Front) Replacement	0090 00-1
WP 0091 00 Directional Light Assembly (Rear) Replacement	0091 00-1
WP 0092 00 Water Temperature Sending Unit Replacement	0092 00-1
WP 0093 00 Converter/Retarder Temperature Sending Unit Replacement	0093 00-1

Table of Contents - Continued

	Page Number
<i>Electrical System - Continued</i>	
WP 0094 00 Low Air Pressure Warning Lamp Switch Replacement	0094 00-1
WP 0095 00 Low Air Pressure Warning Alarm Switch Maintenance	0095 00-1
WP 0096 00 Stoplight Switch Replacement	0096 00-1
WP 0097 00 Hour Meter Switch Replacement	0097 00-1
WP 0098 00 Ether Start Sending Unit Replacement	0098 00-1
WP 0099 00 Low Air Pressure Warning Horn Replacement	0099 00-1
WP 0100 00 Backup Alarm Replacement	0100 00-1
WP 0101 00 Backup Alarm Switch Replacement	0101 00-1
WP 0102 00 Battery Box Cover Replacement	0102 00-1
WP 0103 00 Battery and Holddown Replacement	0103 00-1
WP 0104 00 Battery Cables Replacement	0104 00-1
WP 0105 00 Battery Box Replacement	0105 00-1
WP 0106 00 Operator Compartment Wiring Harness Replacement	0106 00-1
WP 0107 00 Engine Compartment Wiring Harness Replacement	0107 00-1
WP 0108 00 BackUp Alarm Switch Wiring Harness Replacement	0108 00-1
WP 0109 00 Heater, Defroster and Front Wiper Wiring Harness Replacement	0109 00-1
WP 0110 00 Main Circuit Breaker-to-Starting Motor Solenoid Wire Replacement	0110 00-1
WP 0111 00 Battery Disconnect Switch-To-Starting Motor Wire Replacement	0111 00-1
WP 0112 00 Starting Motor Ground Wire Replacement	0112 00-1
WP 0113 00 Alternator Ground Wire Replacement	0113 00-1
WP 0114 00 Engine Front Cover-to-Support Ground Wire Replacement	0114 00-1
WP 0115 00 Aftercooler to Operator Compartment Ground Wire Replacement	0115 00-1
WP 0116 00 Air Dryer Wire Replacement	0116 00-1
WP 0117 00 Headlight, Worklight and Starting Aid Wiring Harness Replacement	0117 00-1
WP 0118 00 Vehicle Front Blackout Light Wire Replacement	0118 00-1
WP 0119 00 Rear Light Harness Replacement	0119 00-1
WP 0120 00 Rear Harnesses Replacement	0120 00-1
WP 0121 00 Scraper Harnesses (Intermediate) Replacement	0121 00-1
WP 0122 00 Cutting Edge Worklight and Supplemental Steering Pump Switch Harness Replacement	0122 00-1
WP 0123 00 Front Turn Signal Harness Replacement	0123 00-1
WP 0124 00 Radio Interference Suppression Components Replacement	0124 00-1
<i>Transmission</i>	
WP 0125 00 Shift Control Cable Maintenance	0125 00-1
WP 0126 00 Shift Control Lever and Housing Maintenance	0126 00-1
WP 0127 00 Transmission Oil Sampling Valve Replacement	0127 00-1
WP 0128 00 Transmission Oil Drain and Refill	0128 00-1
WP 0129 00 Transmission Oil Filter Replacement	0129 00-1
WP 0130 00 Magnetic Strainer Replacement	0130 00-1
WP 0131 00 Oil Pump Suction Screen Replacement	0131 00-1
WP 0132 00 Transmission Breather Replacement	0132 00-1
WP 0133 00 Flywheel Lubrication Screen Replacement	0133 00-1
WP 0134 00 Torque Converter Oil Cooler Replacement	0134 00-1
WP 0135 00 Oil Lines Replacement	0135 00-1
WP 0136 00 Temperature By-Pass Valve Replacement	0136 00-1

Table of Contents - Continued

	Page Number
<i>Transmission - Continued</i>	
WP 0137 00 Torque Converter Oil Cooler Lines Replacement	0137 00-1
WP 0138 00 Flywheel Lubrication Lines and Fittings Replacement	0138 00-1
WP 0139 00 Transmission Hold Pedal Replacement	0139 00-1
WP 0140 00 Retarder Oil Cooler Lines Replacement	0140 00-1
<i>Transfer and Final Drive Assemblies</i>	
WP 0141 00 Front Axle Maintenance	0141 00-1
WP 0142 00 Differential Breather Replacement	0142 00-1
WP 0143 00 Final Drive Maintenance	0143 00-1
<i>Brake System</i>	
WP 0144 00 Retarder Air Lines Replacement	0144 00-1
WP 0145 00 Park and Emergency Valve Maintenance	0145 00-1
WP 0146 00 Park and Emergency Valve Hoses and Fittings Replacement	0146 00-1
WP 0147 00 Tractor Brake Camshaft and Slack Adjustor Maintenance	0147 00-1
WP 0148 00 Scraper Brake Camshaft and Slack Adjustor Maintenance	0148 00-1
WP 0149 00 Adjustment of Brakes	0149 00-1
WP 0150 00 Brake Shoe Assembly Replacement	0150 00-1
WP 0151 00 Brake Actuator Replacement	0151 00-1
WP 0152 00 Air Dryer Replacement	0152 00-1
WP 0153 00 Tractor Air Tanks and Lines and Fittings Replacement	0153 00-1
WP 0154 00 Scraper Air Tank Replacement	0154 00-1
WP 0155 00 Brake Pedal and Control Valve Replacement	0155 00-1
WP 0156 00 Tractor Quick Release and Holding Valve Replacement	0156 00-1
WP 0157 00 Scraper Quick Release and Holding Valve Replacement	0157 00-1
WP 0158 00 Double Check Valve Replacement	0158 00-1
WP 0159 00 Tractor Air Brake Relay Valve Replacement	0159 00-1
WP 0160 00 Scraper Air Brake Relay Valve Replacement	0160 00-1
WP 0161 00 Brake Control Valve Lines and Fittings Replacement	0161 00-1
WP 0162 00 Tractor Brake Actuator Lines and Fittings Replacement	0162 00-1
WP 0163 00 Tractor Air Brake Lines and Fittings Replacement	0163 00-1
WP 0164 00 Tractor to Scraper Lines and Fittings Replacement	0164 00-1
WP 0165 00 Scraper Air Tank Lines and Fittings Replacement	0165 00-1
WP 0166 00 Scraper Brake Actuator Lines and Fittings Replacement	0166 00-1
WP 0167 00 Air Compressor Replacement	0167 00-1
WP 0168 00 Air Compressor Governor Maintenance	0168 00-1
WP 0169 00 Air Compressor Lines and Fittings Replacement	0169 00-1
WP 0170 00 Transmission Hold Air Lines Replacement	0170 00-1
WP 0171 00 Differential Lock Pedal Replacement	0171 00-1
WP 0172 00 Differential Lock Lines Replacement	0172 00-1
WP 0173 00 Differential Lock Control Valve Assembly Maintenance	0173 00-1
WP 0174 00 Transmission Hold Control Valve Assembly Maintenance	0174 00-1
WP 0175 00 Mechanical Steering Assembly Adjustment	0175 00-1
<i>Steering System</i>	
WP 0176 00 Steering Gear Replacement	0176 00-1
WP 0177 00 Steering Wheel Replacement	0177 00-1
WP 0178 00 Steering Column and Shaft Replacement	0178 00-1

Table of Contents - Continued

	Page Number
<i>Steering System - Continued</i>	
WP 0179 00 Mechanical Linkage Replacement	0179 00-1
WP 0180 00 Steering Hoses, Lines and Fittings Replacement	0180 00-1
WP 0181 00 Steering Cylinders Replacement	0181 00-1
WP 0182 00 Hydraulic Steering Servo-Sender Cylinder Maintenance	0182 00-1
WP 0183 00 Bleeding Follow-Up Circuit	0183 00-1
WP 0184 00 Hydraulic Steering Pressure Reducing Valve Replacement	0184 00-1
<i>Body, Cab, Hood and Hull</i>	
WP 0185 00 Front Bumper Replacement	0185 00-1
WP 0186 00 Towing Pin Replacement	0186 00-1
WP 0187 00 Frame Step Assembly Replacement	0187 00-1
WP 0188 00 Radiator Guard Replacement	0188 00-1
WP 0189 00 Hood, Brackets and Mounting Replacement	0189 00-1
WP 0190 00 Engine Compartment Access Doors Replacement	0190 00-1
WP 0191 00 Engine Compartment Shields Replacement	0191 00-1
WP 0192 00 Operator Compartment Upper Front Access Plates Replacement	0192 00-1
WP 0193 00 Literature Compartment Replacement	0193 00-1
WP 0194 00 Operator Compartment Side Panel Liner Replacement	0194 00-1
WP 0195 00 Operator Compartment Side Panel Replacement	0195 00-1
WP 0196 00 Operator Compartment Side Panel Plate Replacement	0196 00-1
WP 0197 00 Operator Compartment Lower Front Access Plate Replacement	0197 00-1
WP 0198 00 Floor Mat and Cab Step Replacement	0198 00-1
WP 0199 00 Operator Compartment Rear Liner Replacement	0199 00-1
WP 0200 00 Step Assembly Replacement	0200 00-1
WP 0201 00 Crankcase Guard Replacement	0201 00-1
WP 0202 00 Rollover Protection Door Maintenance	0202 00-1
WP 0203 00 Rollover Protection Structure (ROPS) Replacement	0203 00-1
WP 0204 00 Right Side Fender Replacement	0204 00-1
WP 0205 00 Left Side Fender Replacement	0205 00-1
WP 0206 00 Vent Window Assembly Replacement	0206 00-1
WP 0207 00 Windshield Assembly Replacement	0207 00-1
WP 0208 00 Sliding Window Assembly Replacement	0208 00-1
WP 0209 00 Stationary Windows Replacement	0209 00-1
WP 0210 00 Tractor Safety Treads Replacement	0210 00-1
WP 0211 00 Seat Assembly Replacement	0211 00-1
WP 0212 00 Seat Suspension Assembly Adjustment	0212 00-1
WP 0213 00 Seat Hoses, Lines and Fittings Replacement	0213 00-1
WP 0214 00 Seat Strainer Assembly Replacement	0214 00-1
WP 0215 00 Height Control Valve Replacement	0215 00-1
WP 0216 00 Tractor Storage Compartment Replacement	0216 00-1
WP 0217 00 Windshield Wiper Assembly Replacement	0217 00-1
WP 0218 00 Air Horn Replacement	0218 00-1
WP 0219 00 Air Horn Solenoid and Hose Assembly Replacement	0219 00-1
WP 0220 00 Rearview Mirrors Replacement	0220 00-1
<i>Accessory Items and Winterization Equipment</i>	
WP 0221 00 Defroster Fan Replacement	0221 00-1
WP 0222 00 Control Console Assembly Replacement	0222 00-1

Table of Contents - Continued

Page
Number

Accessory Items and Winterization Equipment - Continued

WP 0223 00	Air Return Console Assembly Replacement	0223 00-1
WP 0224 00	Heater Assembly Replacement	0224 00-1
WP 0225 00	Heater Assembly and Air Return Console Filters Replacement	0225 00-1
WP 0226 00	Heater Assembly Lines and Fittings Replacement	0226 00-1
WP 0227 00	Instruction and Data Plates Replacement	0227 00-1

Hydraulic System

WP 0228 00	Bowl Lifting Check Valve Assembly Replacement	0228 00-1
WP 0229 00	Hydraulic Tank Maintenance	0229 00-1
WP 0230 00	Breaker Relief Valve Assembly Replacement	0230 00-1
WP 0231 00	Hydraulic Tank Filler Cap and Strainer Assembly Replacement	0231 00-1
WP 0232 00	Hydraulic Control Valve Hoses, Lines and Fittings Replacement	0232 00-1
WP 0233 00	Hydraulic Tank Hoses, Lines and Fittings Replacement	0233 00-1
WP 0234 00	Hitch Hoses, Lines and Fittings Replacement	0234 00-1
WP 0235 00	Hitch To Draft Frame Intermediate Hoses, Lines and Fittings Replacement	0235 00-1
WP 0236 00	Draft Frame Hoses, Lines and Fittings Replacement	0236 00-1
WP 0237 00	Apron Cylinder Hoses, Lines and Fittings Replacement	0237 00-1
WP 0238 00	Hoses (With Crossover Tube), Lines and Fittings to Bowl Cylinders Replacement	0238 00-1
WP 0239 00	Bowl Cylinders Hoses, Lines and Fittings Replacement	0239 00-1
WP 0240 00	Bowl Intermediate Hoses, Lines and Fittings Replacement	0240 00-1
WP 0241 00	Ejector Cylinder Hoses, Lines and Fittings Replacement	0241 00-1
WP 0242 00	Bowl Lift Cylinders Replacement	0242 00-1
WP 0243 00	Ejector Cylinder Replacement	0243 00-1
WP 0244 00	Apron Cylinder Replacement	0244 00-1
WP 0245 00	Hydraulic Tank Replacement	0245 00-1
WP 0246 00	Hydraulic Tank Components Replacement	0246 00-1
WP 0247 00	Tachometer Replacement	0247 00-1

Non-Electrical Gages

WP 0248 00	Tachometer Drive Cable Assembly Replacement	0248 00-1
WP 0249 00	Oil Pressure Gage Replacement	0249 00-1
WP 0250 00	Air Pressure Gage Replacement	0250 00-1
WP 0251 00	Air Cleaner Service Indicator Replacement	0251 00-1

Earth Moving Equipment Components

WP 0252 00	Cutting Edges Replacement	0252 00-1
WP 0253 00	Blocking the Apron	0253 00-1
WP 0254 00	Adjusting the Apron	0254 00-1
WP 0255 00	Rear Fenders, Left and Right Replacement	0255 00-1
WP 0256 00	Scraper Bowl Assembly Plate Assembly Replacement	0256 00-1

CHAPTER 5 SUPPORTING INFORMATION

WP 0333 00	Preparation for Storage and Shipment	0333 00-1
WP 0334 00	Illustrated List of Manufactured Items	0334 00-1
WP 0335 00	Torque Limits	0335 00-1
WP 0336 00	References	0336 00-1
WP 0337 00	Maintenance Allocation Chart (MAC) Introduction	0337 00-1

Table of Contents - Continued

	Page Number
WP 0338 00 Maintenance Allocation Chart (MAC)	0338 00-1
WP 0339 00 Expendable and Durable Items List	0339 00-1

VOLUME II

CHAPTER 4 DIRECT SUPPORT FIELD MAINTENANCE

Engine

WP 0257 00 Engine Assembly Replacement	0257 00-1
WP 0258 00 Engine Mounts Replacement	0258 00-1
WP 0259 00 Cylinder Head Assembly Maintenance	0259 00-1
WP 0260 00 Crankshaft Pulley and Damper Replacement	0260 00-1
WP 0261 00 Flywheel Replacement	0261 00-1
WP 0262 00 Flywheel Housing Replacement	0262 00-1
WP 0263 00 Valves and Springs Maintenance	0263 00-1
WP 0264 00 Valve Lifters Replacement	0264 00-1
WP 0265 00 Push Rods and Arms Replacement	0265 00-1
WP 0266 00 Valve Bridges Maintenance	0266 00-1
WP 0267 00 Lubrication Oil Pump Replacement	0267 00-1
WP 0268 00 Oil Pan Maintenance	0268 00-1
WP 0269 00 Engine Oil Cooler Replacement	0269 00-1
WP 0270 00 Exhaust Manifold Replacement	0270 00-1
WP 0271 00 Accessory Drive Group Replacement	0271 00-1

Fuel System Maintenance

WP 0272 00 Injector Valve and Nozzle Maintenance	0272 00-1
WP 0273 00 Fuel Injection Pump Housing and Governor Assembly Replacement	0273 00-1
WP 0274 00 Fuel Injection Pump Housing and Governor Adjustment	0274 00-1
WP 0275 00 Fuel Transfer Pump Maintenance	0275 00-1
WP 0276 00 Turbocharger Replacement	0276 00-1
WP 0277 00 Aftercooler Replacement	0277 00-1
WP 0278 00 Automatic Timing Advance Unit Maintenance	0278 00-1
WP 0279 00 Fuel Pump Drive Replacement	0279 00-1
WP 0280 00 Governor Control Maintenance	0280 00-1

Cooling System

WP 0281 00 Water Pump Repair	0281 00-1
WP 0282 00 Fan and Fan Drive Maintenance	0282 00-1

Transmission

WP 0283 00 Linkage Adjustment	0283 00-1
WP 0284 00 Control Group Pressure Test	0284 00-1
WP 0285 00 Shift Point Adjustment	0285 00-1
WP 0286 00 Transmission Replacement	0286 00-1
WP 0287 00 Transmission Filler Replacement	0287 00-1
WP 0288 00 Flywheel Scavenge Retarder Pump Maintenance	0288 00-1
WP 0289 00 Hydraulic Retarder Maintenance	0289 00-1
WP 0290 00 Retarder Coolant Lines Replacement	0290 00-1
WP 0291 00 Retarder Oil Cooler Assembly Replacement	0291 00-1
WP 0292 00 Retarder Control Valve Maintenance	0292 00-1