
Full download. http://manualplace.com/download/caterpillar-cp-533e-and-cs-533e-vibrator

## **INTERACTIVE SCHEMATIC**



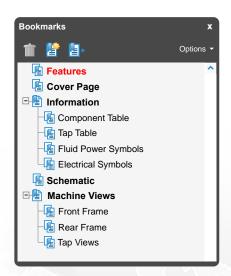

## This document is best viewed at a screen resolution of 1024 X 768.

To set your screen resolution do the following:

RIGHT CLICK on the DESKTOP.

Select **PROPERTIES**.


**CLICK** the **SETTINGS TAB**.

**MOVE THE SLIDER** under **SCREEN RESOLUTION** 

until it shows 1024 X 768.

**CLICK OK** to apply the resolution.

The Bookmarks panel will allow you to quickly navigate to points of interest.

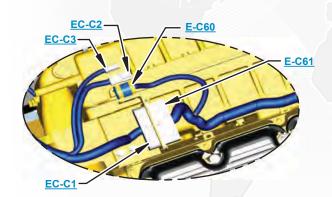

Click on <u>any text that is BLUE and underlined</u>. These are hyperlinks that can be used to navigate the schematic and machine views.

**VIEW ALL CALLOUTS** 

When only one callout is showing on a machine view this button will make all of the callouts visible. This button is located in the top right corner of every machine view page.

HOTKEYS (Keyboard Shortcuts)		
	FUNCTION	KEYS
+	Zoom In	"CTRL" / "+"
	Zoom Out	"CTRL" / "-"
	Fit to Page	"CTRL" / "0" (zero)
$\mathcal{L}_{\mathcal{M}}$	Hand Tool	"SPACEBAR" (hold down)
	Find	"CTRL" / "F"



