
CATERPILLAR®

Custom Track Service Handbook

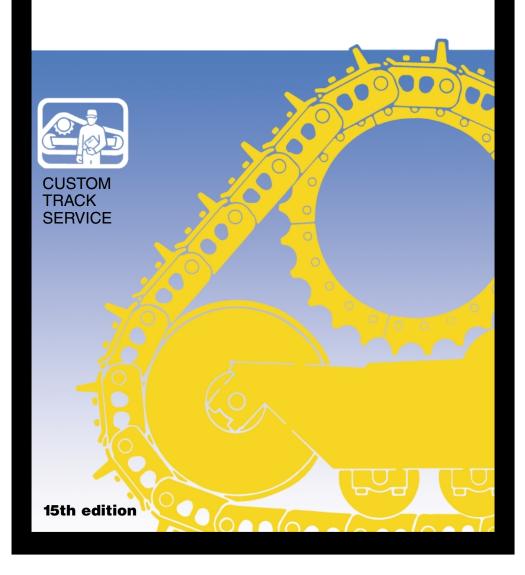

CATERPILLAR® CUSTOM TRACK SERVICE HANDBOOK

15th EDITION

© 1971, 1973, 1974, 1976, 1977, 1979, 1982, 1985, 1987, 1989, 1991, 1993, 1998, 2003 Caterpillar, Inc.

CATERPILLAR®

Printed in U.S.A. PEKP9400-03

Table of Contents

Ι.	. General Information	
	Measurement Tools	8
	Variables That Affect Undercarriage Life	
	Controllable Variables	11
	Non-Controllable Variables	21
	Partially Controllable Variables	25
	Percent Worn Charts	
	Component Discussions	
	Links	
	Former Link Service Limits	34
	Sealed and Lubricated Track Pins and Bushings	36
	Sealed Track Pins and Bushings	44
	Shoes	51
	Idlers	56
	Carrier Rollers	59
	Track Rollers	61
	Sprockets	66
	Guards	71
	Track Management Destruction Wear Limits Track Seal Replacement Recommendations CTS Inspection Report Calculations The Total Life Scale Cost Per Hour CTS on the Personal Computer Competitive Machine Undercarriage Conversion	74 75 76 81 87
III.	Elevated Sprocket Machines	
	Management	96
	D4H, D5M, D5N, 561M, 561N	
	D5H, D6M, D6N, 517	
	D6H, D6R, 527	
	D7H, D7R, 572R	
	D8L, D8N, D8R, 578, 583R	
	D9N, D9R	
	D9L, 589	
	D10N, D10R	
	D10	
	D11N, D11R	236

IV.	Low Sprocket Machines	
	Management	248
	Genuine Cat® Undercarriage	
	D3, D4B, D4C, D4G, 931, 933, 935	258
	D4, D4D, D4E, 941	278
	D5C, D5G, 939	294
	D5, D5B, 951, 955, 561	310
	D6, D6B, D6C, D6D, 955	
	D7, D7D, D7E, D7F, D7G, 977, 571, 572	348
	D8, 983	366
	D9, 594	378
	Cat Classic Undercarriage	
	D5B	390
	D6	400
	D7	410
	D8	418
\ /	Undragtetia Landora	
V.	Hydrostatic Loaders	420
	Management	
	943	
	953	
	963	
	973	472
VI.	. Excavators	
	Management	490
	307, 308	
	311, 312, 313, 314	508
	315, 317, 318, 320, 322, 320 FM	516
	320S, 322 FM, 325, 325 FM	530
	330	544
	330 FM, 345	556
	350	566
	365, 375, 385, 5080, 5090	574
	5110	584
	5130	592
	5230	602
	205, 211, 213	608
	215	
	225, 219, 215S.A., FB221, FB217, DL221	630
	225	
	227, 229, 231, 225S.A., LL225	
	235, LL235	666
	235	
	245	692

Table of Contents

E70B	
E110B, E120B	720
E140	
E180, EL180	736
E200B, EL200B	
EL240B, E240B, EL240, E240	752
E300B, EL300B, EL300	760
E300	768
E450	776
E650	784
VII. Paving Products/Drive Belts	
PR1000, PR750B, SF550, SF500, TR500	794
AP1050	800
PR450B, SF350, SF250B, TR225B	808



Edition Fifteen is a comprehensive update to the CTS Handbook. Nearly every wear chart in the book was updated. The General Information section, the Management & Merchandising section and the Management section of the four product types were also updated.

Some of the changes you will notice include:

- Cat Classic was added as a new section following Low Sprocket Machines.
- Nearly all wear charts were updated to some extent.
 - The rounding was removed from all measurements for the Ultrasonic Wear Indicator.
 - The carrier roller wear limits were increased for use with Heavy Duty, Rotating Bushing and Extended Wear Life Track.
 - Track roller wear charts for elevated sprocket machines now extend to the point at which the wear surface meets the retainer bolt holes.
 - Greater and Lesser Allowable wear columns were combined into one for large excavators.
- The machine layout is now similar to the PSK, starting with small machines and ascending to the large ones.
- The machine models are up-to-date.
- Pipelayer model numbers were added to the applicable section headers.
- The three excavator sections, the 300-Family, 200-Family and E-Family, can be more easily located with the new, individual tabs.
- Undercarriage Codes for use with the CTS computer program were updated and included in the front of each section and below each wear chart.
- The track seal replacement guidelines were updated.

MEASUREMENT TOOLS



6V9413 CTS Tool Kit

Separate Tools

Part		
Number	Description	Use
6V7784	CTS Pouch	Carrying Tools
8H8580	Scraper	Cleaning U/C Components
5P3920	12" Steel Rule	With Caliper And Depth Gauge
4S9404	4" Caliper	Bushing O.D.
8T7790	6" Caliper	D11N, D11R Bushing O.D.
4S9405	12" Caliper	Roller Diameter
5P3277	12'. Tape	Track Pitch, D4H-D11R Sprockets
5P8616	Sprocket Gauge	D4-D5-D6 Sized Segments
5P8617	Sprocket Gauge	D7-D8-D9 Sized Segments
6V9410*	Depth Gauge	Multi-Purpose All Models

^{*} Replacement parts for the 6V9410 Multi-Purpose Depth Gauge:

6V9409 — 10" Probe 6V9408 — 4" Probe

The complete CTS tool kit allows you to quickly and accurately measure all undercarriage components. Order the complete kit or individual tools from Parts Distribution.

The tools provided in the Caterpillar CTS tool kit are high quality, high accuracy tools which will allow measurements to the closest 0.01" or 0.25 mm. Locally purchased substitutes should have this accuracy and the depth gauge should have at least an 18" base to be used for track roller measurement.

MEASUREMENT TOOLS



168-7720 Ultrasonic Wear Indicator III Group

Separate Tools

Part	
Number	Description
168-7720	Ultrasonic Wear Indicator III Group
168-7721	Ultrasonic Wear Indicator III
168-7722	Ultrasonic Probe
9U-7981	Couplant
4C-5490	Couplant Holder
6V-7145	Case (without foam insert)
4C-4772	Foam Insert
4C-3024	Battery Charger (120 or 230 volts, 50/60 Hertz)
9U-6000	Paper Towels (16 towels)
1U-7445	Rechargeable Batteries, Nickel Cadmium (AA)
9U-6175*	Ultrasonic Wear Indicator Soft Protective Case
1U-9533*	Non-rechargeable Batteries, Alkaline (AA)
4C-5488*	Cable Assembly, 9-pin female connector, for PC
4C-5489*	Cable Assembly, 25-pin female connector, for PC
4C-5897*	Cable Assembly for Telephone Modem
NEHS0730	Tool Operating Manual

^{*}Not included with the Ultrasonic Wear Indicator Group

NOTE: A 12-volt automotive power supply adapter (6 volts DC) and an earphone are available through many electronic supply retailers.

MEASUREMENT TOOLS

Ultrasonic Wear Indicator


The ultrasonic wear indicator measures component thickness by sending high frequency sound waves through the material to be measured. The elapsed time between sending and receiving the sound waves allows the tool to determine thickness.

This electronic CTS tool has the following key features and benefits:

- Ultrasonic wave emitting probe
- Reduces time spent cleaning parts (especially bushings and shoes).
- Eliminates measurement errors due to dirt packing around parts.
- Measures bushings after turning.
- Eliminates errors due to measurement technique differences among inspectors.
- Measures idler center flange wear.
- Reduces on-site measurement recording.
- Stores inspections for 64 machines.
- Downloads to CTS computer program for automatic percent worn and projected life calculations.
- Uploads previous inspections from CTS computer program to improve speed and quality
- English, French, German, Portuguese, Spanish
- Allows users to hear "Coupled" beeping indicator
- Allows users to see the display in poor lighting conditions

• Memory

- Language capability
- Earphone connector
- · Backlight feature

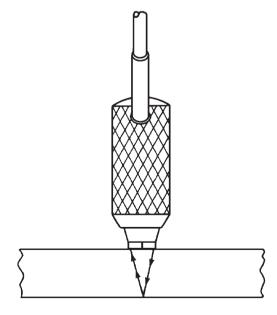

Variables That Affect Undercarriage Life

The variables that determine complete undercarriage system life and wear balance between components can be divided into three major groupings. The first are those which, to a great extent, are controllable. Controllable variables include track tension adjustment (controlled by user operating and/or maintenance personnel), shoe width (controlled by user operating and purchasing personnel) and on some models, alignment (controlled by user and/or dealer service personnel).

The second major group, non-controllable variables, discussed later in this major section include those life determining factors which are "givens." They come with the job. They are 100 percent determined by the underfoot conditions and include impact, abrasiveness, packing, moisture, terrain and even application, meaning what the machine is doing.

The final major group is sometimes called partially controllable variables and mainly involve machine operator controllable events such as "habits."

A thorough knowledge of each of the elements of all these three major groups is essential if the CTS expert is going to be able to not only explain "what has happened," but also "what could be expected to happen," especially as any of these variables were to change. Awareness of the relative interplay between these variables on the final wear or structural life of specific components, and even on the system is so important that their discussion has been placed at the front of this book. To use the rest of the book before understanding these would be counterproductive.

Controllable Variables

Controllable variables that affect undercarriage life must be separated out for discussion because, in the case of at least the first two, they can have major economic effect on the operation of undercarriage systems.

Track adjustment can have a very large effect on external bushing life, even to the extent of deciding whether a costly turn will or will not be required to use up the link-roller system. Track tension can also affect track seal integrity. Track adjustment is controllable because the user can change it.

Shoe width, for which a detailed discussion follows, is controllable because the user, with your advice, chooses which shoe to order on his new machine and/or changes to when the machine changes tracks or even jobs. Shoe width as you will learn can effect such widely ranging items as track seal and lubricant integrity to link cracking to roller flange wear to bushing wear rate.

Alignment, the third and least critical controllable variable is discussed here because, particularly on low sprocket machines, it is wrongly blamed as a cause for many symptoms. It is beneficial to know how misalignment does and does not affect wear patterns so you can better identify the real cause, controllable or not. A short discussion on track-excited vibration is also placed in this area even though it is only controllable at machine design time.

Track Adjustment

Although the method of measuring the reference sag and adjusting the track varies by machine type, the importance for these different machine types does not. As discussed earlier, track over-tightening can drastically affect external bushing life (increasing wear rate as much as three times) and for this reason alone is listed frequently as a "cause" or "accelerator" under the wear and structural problems section for many components. See separate machine sections for complete instructions on track adjustment.

SHOE WIDTH

Shoe Width For Track-type Machines

Track shoe width and degree of impact (bumpiness) can affect the wear life of the undercarriage. Since shoe width is a controllable variable, you can improve performance and wear life of the components by choosing the right shoe.

Use the chart on page 54 to help choose the right shoe for a customer based on the following factors.

Factors Affecting Machine Production

Flotation

Choose shoe width to provide adequate flotation, but not more than is needed. The narrowest shoe which provides adequate flotation will prevent the machine from digging in or sinking into underfoot material. Flotation increases proportionally to shoe width.

Penetraction-Traction

Additional shoe width does not provide greater penetration or traction and consequently does not increase production assuming adequate flotation.

Maneuverability

Additional shoe width increases turning resistance, making the machine harder to handle and decreases productivity.

Versatility

Increased shoe width improves machine versatility allowing it to change from "hard" to "softer" underfoot conditions without losing flotation. However, increased shoe width accelerates wear and structural damage.

Undercarriage System Wear and Structural Life Factors

Shoe Wear Life

Wider shoes do not improve wear life. The extra wear material provided by wider grousers gives a little extra life. The largest variable affecting shoe wear life is slippage.

Shoe Structural Life

Bending stress on the shoe increases proportionately to the distance from the outer edge of the link to the end of the shoe. Cracking, bending and hardware loosening increases as shoe width increases.

Basic Rule of Thumb: Always specify the narrowest shoe possible that will provide adequate flotation and traction without excessive track slippage. See chart on following page.

Link-Roller-Idler Wear Life


Wear rates increase on link rail sides, rollers and idler flanges as shoe width increases because of increased load interference. Increased shoe width can also aggravate link cracking.

Pin and Bushing Wear Life

External bushing wear rate on Sealed and Sealed and Lubricated Track and internal wear rate on Sealed Track increases as shoe width increases in a given underfoot condition. This is due to the increased loads, weight and twisting.

Pin and Bushing Structural Life

Too wide shoes in high impact or steep terrain can cause pins and bushings to loosen in the link bores. This becomes more evident with high single grouser shoes. Loss of pin and bushing retention prevents successful turn and replacement maintenance. The following chart shows the effect of track link assembly bending stresses as shoe width increases.

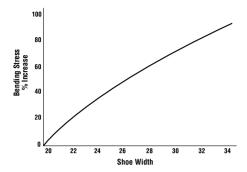

Sealed and Lubricated Track Joint Life

The most costly effect of too wide shoes in high impact conditions and/or steep terrain is the loss of lubricant and seal life resulting in premature dry joints. The wider the shoe, plus the higher the impact, the greater the chance of a pressed track joint "opening up," allowing loss of lubricant. The loss of lubricant occurs when the bushing slides back and forth along the pin. The clearance between the links created by this "opening up" is called end play. End play is permanent and can only be eliminated by pressing the components tight as at initial assembly or when track press work is performed. For maximum lubricant and seal life the machine should be equipped with the narrowest possible shoes which will provide adequate flotation.

In addition, shoes may have grouser corners cut off to reduce turning resistance and bonding forces without loss of flotation and with little loss of overall wear life.

Conclusion

Users should be aware of all the advantages and effects in productivity and wear/structural life factors when choosing shoe width. If all the symptoms of wide shoes are considered on the user's machine and the causes are explained then he will be able to choose the shoe width based on a better compromise between productivity and wear life.

ALIGNMENT

Alignment for all Track Type Machines excluding *D9R (SN 7TL1212-up and 8BL1422-up) *D10R (SN 3KR1331-up) and *D11R (SN 9TR202-up and 9XR154-up).

Proper roller frame, idler and sprocket alignment is important to avoid accelerated, unbalanced wear on moving undercarriage components (roller tread and flanges, link rails and rail sides and sprocket segment or rim sides).

As a general rule any wear pattern differences between left and right, inner and outer, or front and rear may be due to

improper alignment of one or more parts of the roller frame, idlers or sprocket.

Complete discussion on checking and measuring roller frame alignment plus straightening procedures are discussed in Special Instruction SEHS8146-01 available from Service Publications.

Here is a description of the more common types of alignment problems, their cause, effect, and the steps required to correct the cause:

*Note: These machines have unique Track Roller Frame alignment to increase link and roller life. This is further detailed in Service Magazine SEPD0469.

Roller Frame

(including diagonal brace)


Toe-In and/or Toe-Out

When viewed from the top, either or both of the roller frames is not parallel to the center line of the tractor.

CAUSE: temporarily (during load only) or permanently bent diagonal brace or roller frame

EFFECT: unbalanced wear when comparing inboard versus outboard roller and idler flanges and rail sides — rollers worsen from rear to front

REMEDY: straighten diagonal braces and repair mounting bearings

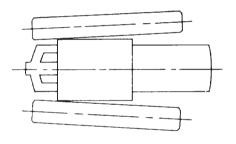


Tilt

When viewed from front or rear the roller frame tilts toward or away from tractor.

CAUSE: permanently bent diagonal brace, broken mountings or bearings

EFFECT: unbalanced wear when comparing inboard versus outboard roller, idler, link treads and flanges — unbalance from front to rear on rollers

REMEDY: straighten diagonal brace and/ or repair mountings

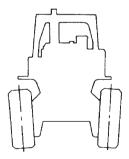

ALIGNMENT

Bow

Similar to toe-in and toe-out, but roller frame is bent and curves in or out with respect to tractor.

CAUSE: bent roller frame

EFFECT: similar to toe-in and toe-out

except rear rollers are not affected REMEDY: straighten roller frame





When viewed from the front, the roller frame is twisted, with the front end of the roller frame tilted out.

CAUSE: roller frame twisted around a horizontal axis parallel to the tractor

EFFECT: similar to effect of tilt except that rear rollers should not be affected

REMEDY: straighten roller frame

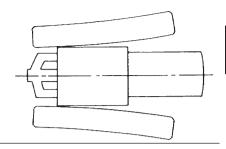

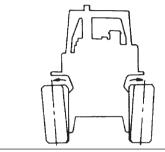

Idler Mounting


Toe-in or Toe-out

When viewed from top, idler is not parallel to center line of roller frame.

CAUSE: bent idler support box sections or bent idler yoke

EFFECT: wears inner rail sides and idler flanges most — may affect wear on front roller flanges

REMEDY: straighten idler support box sections or yoke

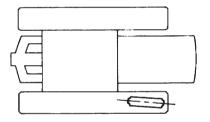

Idler Height

The distance that the tread of the track idler is above the tread of the adjacent track roller.

CAUSE: insufficient or excessive idler height

EFFECT: as track roller tread wear and damage, deterioration or loss of bogie pads occur, and excessive machine vibration may result. Vibration is the result of insufficient idler height. Excessive idler height results in poor dozing control, particularly while performing finish dozing operations.

REMEDY: correct shimming

ALIGNMENT


Lateral Displacement

When viewed from top, idler is parallel to, but moved toward or away with respect to the tractor and roller frame.

CAUSE: improper shimming

EFFECT: wears inner or outer idler flanges and inner rail sides selectively and may

affect front roller(s) if severe REMEDY: correct shimming

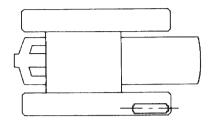


Twist — Tilt

When viewed from front, idler tilts out of vertical plane.

CAUSE: bent idler support box frame (inner and/or outer up and/or down with respect to each other)

EFFECT: same as toe-in or toe-out REMEDY: same as toe-in or toe-out

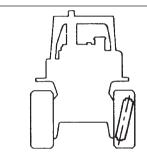

Sprocket


Toe-in, Toe-out

When viewed from top, sprocket not parallel to center line of roller frame.

CAUSE: sprocket shaft bent forwards or backwards

EFFECT: wears both inner link sides and both sides of segments

REMEDY: straighten or replace sprocket shaft

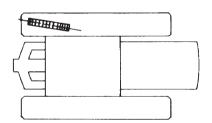


Twist

When viewed from rear, sprocket is leaned or tilted in or out with respect to the roller frame.

CAUSE: sprocket shaft bent up or down

EFFECT: inboard or outboard sprocket sides and rail insides worn selectively, may affect rear roller flanges

REMEDY: straighten sprocket shaft

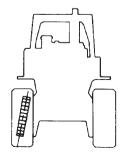


Lateral Displacement

When viewed from top or rear, sprocket is parallel to but moved in or out with respect to tractor and roller frame.

CAUSE: sprocket not pressed proper distance onto shaft

EFFECT: inboard or outboard sprocket sides and rail insides worn selectively, may affect rear roller flanges

REMEDY: re-position sprocket on shaft

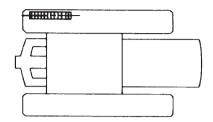

General Statements about Alignment Problems, Symptoms, Causes, Effects and Remedies:

- 1. The larger and heavier the machine and the more severe impact, the greater likelihood of temporary and permanent alignment problems.
- Alignment problems of roller frame idler and sprocket will affect all links the same.
- 3. Alignment problems of roller frame, idler and sprocket will affect rollers unequally from front to rear and from inner to outer flanges and treads.
- 4. Horizontal straightness of roller frame will not affect track but will affect front and/or rear roller treads compared to center.
- Snaky track will not cause near the degree of damage as compared to misalignment.

- Carrier rollers can be used as a more visual indicator of roller frame alignment but are not as reliable as comparing track rollers.
- 7. If left side of tractor has different misalignment-type wear patterns than right side, the problem is probably due to permanent, rather than temporary, (working loads) causes.
- Unbalanced loads due to side hill operation will result in front to rear and left side to right side similarly in wear patterns on all parts affected.
- 9. If misalignment is suspected, it is important to at least measure the misalignment degree, if not completely correct it before installing new undercarriage components.
- 10. Tight track increases the effect of all types of alignment problems because it increases the loads between the interfering components.

For more complete descriptions and cross reference of specific component wear patterns that may be caused by misalignment, refer to the discussions under each component and model.

VIBRATION

Track-Excited Vibration

Track-excited vibration is the most widely encountered vibration on track-type machines. However, it is not understood by many persons who work with these machines. As the machine moves, each link, as part of an endless rail, makes contact with two curved surfaces — each with a different radius. These are the idler and the track rollers. Contact between the links, idler and rollers results in wearing of the links' once-straight surface. The contact between the idler and the link creates a worn radius in the center of the link similar to that of the idler.

The track rollers have a similar effect on the ends of the links, which are narrowed to permit them to overlap where they are connected together. Because this overlap isn't 100 percent, the greatest amount of wear is near the ends of the links, and the size of the worn area has a radius similar to that of the track rollers. As a result of this wear, a scallop pattern is formed on the surface of each track link. (See page 30).

This type of link wear can be accelerated by three factors — abrasiveness and moisture content of the soil, machine weight and travel speed and underfoot conditions. Rough underfoot conditions can place higher loads at a given point on a link. It is possible, on rocky or rough terrain, to have a higher load on a link on one side of the machine than on the other side. Although rough terrain can accelerate wear, it is sometimes possible that track-excited vibration will go unnoticed on rough terrain, yet be apparent when the machine is working on a smooth surface.

Along with the depth of scallop, the scallop-roller spacing relationship is what determines how smoothly the machine will travel on the links. If the spacing of the track rollers and scallops are uneven, so that some of the rollers are on the high points of the links while others are over the low points, the machine will move across the scallops smoothly. However, if the spacing is the same, the rollers will rise

and fall in unison with each scallop as they pass over the links, thus creating vibration.

Two factors, machine speed and the depth of the scallops, affect the amount of vibration. The speed of the machine determines the frequency of the vibration while the depth of the scallops controls the amplitude of the vibration. In addition, natural frequencies, which occur in all structures, can respond to the vibration. Because of this response, it is possible for certain parts of a machine, such as the roll-over protection structure, sheet metal components, or, sometimes, the whole machine, to respond to the initial frequency and begin vibrating.

The vibration can be reduced by replacing deteriorated isolation mounts where necessary, replacing any broken or missing fasteners and by generally keeping the machine in good repair. A change in operating speed or technique, or a change of counterweights or attachments may reduce the effect.

Testing and Adjusting Front Idler Position and Machine Balance (D4H to D7R)

Operator complaints of ride arise when a machine is vibrating more than normal. Abnormal vibration is generally caused by an idler that is lower than the track rollers, a machine that is not balanced, or scalloped track links.

Special Instruction entitled "Adjustment of the Position of the Front Idlers and the Balance of the Machine for Improved Ride or Improved Fine Dozing," REHS0862-02, dated June 01, 2001, covers the following topics:

- Correct Track Installation
- Measuring Grouser Rise Height
- Verify the Installation of the Correct Idlers
- Measuring the Depth of the Link Scallop
- · Shim Charts for Idlers
- Measuring the Height of the Front Idler Tread

- · Checking the Balance of the Machine
- Adjusting the Height of Center Tread Idlers

Procedure to Determine Idler Height (D8L, D8N, D8R, D9L, D9N, D10, D10N, D11N Tractors)

Model	Applicable Serial Numbers
D8L	All
D8N	All
D8R	All
D9L	All
D9N	All
D9R	All
D10	All
D10N	All
D10R	All
D11N	All
D11R	All

As track roller tread wear and damage, deterioration or loss of bogie pads occur, and excessive machine vibration may result. This vibration is the result of insufficient idler height. Idler height is the distance that the tread of the track idler is above the tread of the adjacent track roller. See Illustration 1 for the area to be measured.

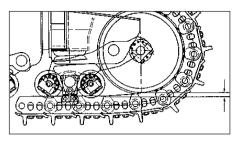


Illustration 1. Idler Height.

Under typical operating conditions, wear causes the diameter of the track roller treads to decrease at approximately twice the rate of the track idlers. When the front or rear rollers reach approximately 70 percent wear, the idler height may approach the minimum recommended value. Variations in operating conditions influence the wear rates.

Additionally, the installation of new or rebuilt idlers on machines with partially worn track rollers directly affects idler height.

To measure idler height, use the following procedure.

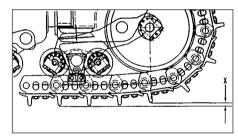


Illustration 2. Measurement points on a hard surface.

1. Move the machine to a hard, level surface. Inspect to make sure all bogie pads are in place. If any pads are missing or unserviceable, they should be replaced.

Chart A				
Model	Front Idler Nominal	Front Idler Minimum	Rear Idler Nominal	Rear Idler Minimum
D8L	29 mm (1.142 in)	17 mm (.670 in)	34 mm (1.339 in)	10 mm (.394 in)
D8N, D8R	15 mm (.591 in)	10 mm (.394 in)	16 mm (.630 in)	10 mm (.394 in)
D9L	23 mm (.906 in)	11 mm (.433 in)	27 mm (1.063 in)	11 mm (.433 in)
D9N, D9R	24 mm (.945 in)	11 mm (.433 in)	21 mm (.827 in)	11 mm (.433 in)
D10	25 mm (.984 in)	14 mm (.551 in)	32 mm (1.260 in)	12 mm (.472 in)
D10N, D10R	26 mm (1.024 in)	14 mm (.551 in)	23 mm (.906 in)	12 mm (.472 in)
D11N, D10R	32 mm (1.260 in)	14 mm (.551 in)	23 mm (.906 in)	12 mm (.472 in)