

TM 5-3805-290-23P

TECHNICAL MANUAL

FIELD MAINTENANCE MANUAL

REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL)

FOR

**LOADER, LIGHT, SCOOP:
2.5 CUBIC YARD MULTIPURPOSE (MP) CLAMSHELL BUCKET,
DIESEL ENGINE DRIVEN (DED), 4-WHEEL DRIVE
NSN 3805-01-533-1768
MODEL 924G**



DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

HEADQUARTERS, DEPARTMENT OF THE ARMY

NOVEMBER 2007



TM 5-3805-290-23P

LIST OF EFFECTIVE PAGES/WORK PACKAGES

Date of issue for original manual is:

Original 30 November 2007

TOTAL NUMBER OF PAGES FOR FRONT AND REAR MATTER IS 24 AND TOTAL NUMBER OF WORK PACKAGES IS 4 CONSISTING OF THE FOLLOWING:

Page/WP No.	*Change No.
Front Cover (2 pp.)	0
TOC (10 pp.)	0
WP 0001 00 (6 pp.)	0
WP 0002 00 (406 pp.)	0
WP 0003 00 (12 pp.)	0
WP 0004 00 (96 pp.)	0
Back Cover (2 pp.)	0

* Zero in this column indicates an original page or work package.

A/(B Blank)



TM 5-3805-290-23P

TECHNICAL MANUAL
TM 5-3805-290-23P

HEADQUARTERS
DEPARTMENT OF THE ARMY
Washington, D.C. 30 November 2007

TECHNICAL MANUAL

FIELD MAINTENANCE MANUAL

REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL)

FOR

**LOADER, LIGHT, SCOOP:
2.5 CUBIC YARD MULTIPURPOSE (MP) CLAMSHELL BUCKET,
DIESEL ENGINE DRIVEN (DED), 4-WHEEL DRIVE
NSN 3805-01-533-1768
MODEL 924G**

REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this publication. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Submit your DA Form 2028 (Recommended Changes to Equipment Technical Publications), through the Internet, on the Army Electronic Product Support (AEPS) website. The Internet address is: <https://aeprs.ria.army.mil>. The DA Form 2028 is located under the Public Applications section in the AEPS Public Home Page. Fill out the form and click on SUBMIT. Using this form on the AEPS will enable us to respond quicker to your comments and better manage the DA Form 2028 program. You may also mail, fax or E-mail your letter or DA Form 2028 direct to: TACOM Life Cycle Management Command, ATTN: AMSTA-LC-LMPP/TECH PUBS, 1 Rock Island Arsenal, Rock Island, IL 61299-7630. The E-mail address is ROCK-TACOM-TECH-PUBS@conus.army.mil. The fax number is DSN 793-0726 or Commercial (309) 782-0726.

DISTRIBUTION STATEMENT A - Approved for public release; distribution is unlimited.

TABLE OF CONTENTS

WP 0001 00 FIELD MAINTENANCE (UNIT AND DIRECT SUPPORT MAINTENANCE) REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL) INTRODUCTION

WP 0002 00 REPAIR PARTS LIST

GROUP 01 ENGINE

0100 ENGINE ASSEMBLY		0002 00-3
ENGINE AND ENGINE MOUNTING	1	0002 00-3
0101 CRANKCASE, BLOCK, CYLINDER HEAD		0002 00-5
CYLINDER HEAD AND RELATED PARTS	2	0002 00-5
0102 CRANKSHAFT		0002 00-7
REAR AND FRONT MAIN SEAL	3	0002 00-7
VIBRATION DAMPER AND PULLEY	4	0002 00-9
0103 FLYWHEEL ASSEMBLY		0002 00-11
FLYWHEEL ASSEMBLY AND HOUSING	5	0002 00-11
0105 VALVES, CAMSHAFTS, AND TIMING SYSTEM		0002 00-13
ROCKER ARM	6	0002 00-13
VALVE COVER	7	0002 00-15
FRONT HOUSING AND TIMING GEAR	8	0002 00-17
0106 ENGINE LUBRICATION SYSTEM		0002 00-19
BREATHER TUBE	9	0002 00-19
ENGINE OIL SAMPLING VALVE	10	0002 00-21
ENGINE OIL PUMP, BYPASS VALVE, AND PISTON COOLING JETS	11	0002 00-23
ENGINE OIL FILTER, OIL COOLER LINES, FITTINGS, HOSES, AND CORE	12	0002 00-25
ENGINE OIL FILLER	13	0002 00-27
OIL PAN AND RELATED PARTS	14	0002 00-29
ENGINE OIL DRAIN	15	0002 00-31
0108 MANIFOLDS		0002 00-33
INTAKE AND EXHAUST MANIFOLD AND RELATED PARTS	16	0002 00-33

GROUP 03 FUEL SYSTEM

0301 CARBURETOR, FUEL INJECTOR		0002 00-35
FUEL INJECTOR ASSEMBLY	17	0002 00-35
0302 FUEL PUMPS		0002 00-37
FUEL TRANSFER PUMP AND LINES	18	0002 00-37
FUEL INJECTION PUMP, LINES, AND RELATED PARTS	19	0002 00-39
0304 AIR CLEANER		0002 00-41
AIR CLEANER, HOUSING, PRECLEANER, AND RESTRICTION INDICATOR	20	0002 00-41
0305 SUPERCHARGER, BLOWER, TURBOCHARGER OR ALTITUDE COMPENSATOR		0002 00-43
TURBOCHARGER AND RELATED PARTS	21	0002 00-43

TABLE OF CONTENTS (Con't)

	Illus/Fig	Page
AFTERCOOLER AND MOUNTING	22	0002 00-45
TURBOCHARGER AND AFTERCOOLER AIR LINES AND CLAMPS	23	0002 00-47
0306 TANKS, LINES, FITTINGS, HEADERS		0002 00-51
FUEL LINES	24	0002 00-51
FUEL TANK, STANDARD	25	0002 00-53
0309 FUEL FILTERS		0002 00-55
PRIMARY AND SECONDARY FUEL FILTERS (FUEL/WATER SEPARATOR AND BASE)	26	0002 00-55
0311 ENGINE STARTING AIDS		0002 00-57
ETHER STARTING AID LINE	27	0002 00-57
ETHER STARTING AID AND MOUNTING	28	0002 00-59
0312 ACCELERATOR, THROTTLE OR CHOKE CONTROLS		0002 00-61
THROTTLE PEDAL AND RELATED PARTS	29	0002 00-61
GROUP 04 EXHAUST SYSTEM		
0401 MUFFLER AND PIPES		0002 00-63
EXHAUST PIPE	30	0002 00-63
MUFFLER	31	0002 00-65
GROUP 05 COOLING SYSTEM		
0501 RADIATOR, EVAPORATIVE COOLER, OR HEAT EXCHANGER ..		0002 00-67
RADIATOR AND MOUNTING	32	0002 00-67
0503 WATER MANIFOLD, HEADERS, THERMOSTATS AND HOUSING GASKET		0002 00-69
THERMOSTAT AND HOUSING	33	0002 00-69
COOLANT TANK LINES	34	0002 00-71
RADIATOR HOSES AND FITTINGS	35	0002 00-73
0504 WATER PUMP		0002 00-75
WATER PUMP AND MOUNTING	36	0002 00-75
0505 FAN ASSEMBLY		0002 00-77
HYDRAULIC FAN, MOTOR, AND RELATED PARTS	37	0002 00-77
GROUP 06 ELECTRICAL SYSTEM		
0601 GENERATOR, ALTERNATOR		0002 00-79
ALTERNATOR, V-BELT, AND RELATED PARTS	38	0002 00-79
0603 STARTING MOTOR		0002 00-81
STARTING MOTOR (STARTER)	39	0002 00-81

TABLE OF CONTENTS (Con't)

	Illus/Fig	Page
0607 INSTRUMENT OR ENGINE CONTROL PANEL		0002 00-83
WIPER SWITCH.....	40	0002 00-83
CONTROL SWITCHES AND PANEL.....	41	0002 00-85
INSTRUMENT PANEL (BLACKOUT)	42	0002 00-87
CAB WIRING HARNESS AND CONTROL SWITCHES (RIGHT SIDE).....	43	0002 00-91
0608 MISCELLANEOUS ITEMS.....		0002 00-95
MACHINE (TRANSMISSION) ECM	44	0002 00-95
ENGINE ECM.....	45	0002 00-97
POWER CONVERTER AND RELAYS.....	46	0002 00-99
0609 LIGHTS		0002 00-101
WORKLIGHTS AND RELATED PARTS	47	0002 00-101
LIGHTS (SERVICE, REAR, BLACKOUT DRIVE, AND TURN SIGNAL)	48	0002 00-103
0610 SENDING UNITS AND WARNING SWITCHES		0002 00-105
HYDRAULIC OIL FILTER BYPASS SWITCH	49	0002 00-105
BRAKE CHARGING PRESSURE SENSOR	50	0002 00-107
ELECTRICAL SENSORS, SWITCHES, AND RELATED PARTS.....	51	0002 00-113
FUEL LEVEL SENDING UNIT	52	0002 00-117
0611 HORN, SIREN.....		0002 00-119
HORN	53	0002 00-119
BACKUP ALARM	54	0002 00-121
0612 BATTERIES, STORAGE.....		0002 00-123
BATTERY (STANDARD AND ARCTIC).....	55	0002 00-123
BATTERY BOX AND WIRING (STANDARD)	56	0002 00-127
0613 HULL OR CHASSIS WIRING HARNESS		0002 00-131
SECONDARY STEERING WIRING	57	0002 00-131
ENGINE CONTROL WIRING HARNESS	58	0002 00-133
RIDE CONTROL WIRING	59	0002 00-135
WORKLIGHT WIRING	60	0002 00-137
CAB WIRING.....	61	0002 00-139
ENGINE WIRING HARNESS	62	0002 00-141
REAR WIRING HARNESS.....	63	0002 00-143
FRONT WIRING HARNESS	64	0002 00-145
TRANSMISSION CONTROL WIRING	65	0002 00-147
GROUP 07 TRANSMISSION		
0705 TRANSMISSION SHIFTING COMPONENTS		0002 00-149
TRANSMISSION CONTROL AND RELATED PARTS.....	66	0002 00-149
0710 TRANSMISSION ASSEMBLY.....		0002 00-151
TORQUE CONVERTER.....	67	0002 00-151

TABLE OF CONTENTS (Con't)

	Illus/Fig	Page
TRANSMISSION AND TRANSMISSION MOUNTING.....	68	0002 00-153
0714 SERVE UNIT.....		0002 00-157
TRANSMISSION CONTROL VALVE AND RELATED PARTS.....	69	0002 00-157
0721 COOLERS, PUMPS, MOTORS.....		0002 00-159
TRANSMISSION OIL FILLER.....	70	0002 00-159
TRANSMISSION OIL STRAINER.....	71	0002 00-161
TRANSMISSION AND HYDRAULIC COOLER.....	72	0002 00-163
TRANSMISSION OIL LINES AND FILTER.....	73	0002 00-165
TRANSMISSION OIL PUMP AND MOUNTING.....	74	0002 00-167
TORQUE CONVERTER OIL COOLER LINES.....	75	0002 00-169
GROUP 09 PROPELLER, PROPELLER SHAFTS, UNIVERSAL JOINTS, COUPLER AND CLAMP ASSEMBLY		
0900 PROPELLER SHAFTS.....		0002 00-171
DRIVE SHAFTS AND RELATED PARTS.....	76	0002 00-171
GROUP 10 FRONT AXLE		
1000 FRONT AXLE ASSEMBLY.....		0002 00-173
FRONT AXLE ASSEMBLY.....	77	0002 00-173
GROUP 11 REAR AXLE		
1100 REAR AXLE ASSEMBLY.....		0002 00-175
REAR AXLE ASSEMBLY.....	78	0002 00-175
GROUP 12 BRAKES		
1201 HAND BRAKES.....		0002 00-177
PARKING BRAKE CONTROL AND RELATED PARTS.....	79	0002 00-177
PARKING BRAKE HANDLE AND RELATED PARTS.....	80	0002 00-179
1202 SERVICE BRAKES.....		0002 00-181
SERVICE BRAKE CONTROL AND RELATED PARTS.....	81	0002 00-181
1204 HYDRAULIC BRAKE SYSTEM.....		0002 00-183
SERVICE BRAKE LINES.....	82	0002 00-183
1206 MECHANICAL BRAKE SYSTEM.....		0002 00-187
BRAKE PEDALS.....	83	0002 00-187
GROUP 13 WHEELS AND TRACKS		
1311 WHEEL ASSEMBLY.....		0002 00-189
WHEEL ASSEMBLY AND RELATED PARTS.....	84	0002 00-189
1313 TIRES, TUBES, TIRE CHAINS.....		0002 00-191
TIRES.....	85	0002 00-191

TABLE OF CONTENTS (Con't)

	Illus/Fig	Page
GROUP 14 STEERING		
1401 MECHANICAL STEERING GEAR ASSEMBLY.....		0002 00-193
STEERING WHEEL AND RELATED PARTS	86	0002 00-193
1410 HYDRAULIC PUMP OR FLUID MOTOR ASSEMBLY.....		0002 00-195
SECONDARY STEERING AND METERING PUMPS	87	0002 00-195
HYDRAULIC STEERING PUMP	88	0002 00-197
1411 HOSES, LINES, FITTINGS.....		0002 00-199
STEERING LINES.....	89	0002 00-199
1412 HYDRAULIC OR AIR CYLINDERS.....		0002 00-203
STEERING CYLINDER AND MOUNTING	90	0002 00-203
1414 STEERING SYSTEM VALVES		0002 00-205
SECONDARY STEERING RELIEF VALVE	91	0002 00-205
GROUP 15 FRAME, TOWING ATTACHMENTS, DRAWBARS, AND ARTICULATION SYSTEMS		
1501 FRAME ASSEMBLY		0002 00-207
REAR AXLE STOP.....	92	0002 00-207
COMPONENT VALVE MOUNTING	93	0002 00-209
RADIATOR FRAME AND RELATED PARTS	94	0002 00-211
REMOTE LUBRICATION LINES.....	95	0002 00-215
WORKLIGHT FRAME AND MOUNTING	96	0002 00-217
FRAME	97	0002 00-219
1502 COUNTERWEIGHTS.....		0002 00-221
COUNTERWEIGHTS	98	0002 00-221
1503 PINTLES AND TOWING ATTACHMENTS.....		0002 00-223
ARTICULATING HITCH AND RELATED PARTS	99	0002 00-223
GROUP 18 BODY, CAB, HOOD AND HULL		
DASH ASSEMBLY	100	0002 00-225
REAR COVER AND RELATED PARTS.....	101	0002 00-227
CAB MOUNTING.....	102	0002 00-229
CAB	103	0002 00-231
DOOR ASSEMBLY (LEFT SIDE).....	104	0002 00-233
DOOR ASSEMBLY (RIGHT SIDE)	105	0002 00-235
CHASSIS GUARDS AND COVERS.....	106	0002 00-237
LADDER AND RELATED PARTS.....	107	0002 00-239
HOOD, SIDE COVERS, AND RELATED PARTS	108	0002 00-241
JOYSTICK CONSOLE	109	0002 00-243

TABLE OF CONTENTS (Con't)

	Illus/Fig	Page
1802 FENDERS, RUNNING BOARDS WITH MOUNTING AND ATTACHING PARTS, OUTRIGGERS, WINDSHIELD, GLASS, ETC.....		0002 00-245
FRONT FENDER	110	0002 00-245
CAB WINDOWS	111	0002 00-247
1806 UPHOLSTERY SEATS AND CARPETS.....		0002 00-249
SEAT	112	0002 00-249
CAB LINERS	113	0002 00-251
1808 STOWAGE RACKS, BOXES, STRAPS, CARRYING CASES, CABLE REELS, HOSE REELS, ETC.....		0002 00-253
TOOLBOX AND RIFLE RACK	114	0002 00-253
GROUP 22 BODY, CHASSIS AND HULL ACCESSORY ITEMS		
2202 ACCESSORY ITEMS.....		0002 00-255
WINDSHIELD WASHER PUMP AND RELATED PARTS.....	115	0002 00-255
WINDSHIELD WIPER AND RELATED PARTS	116	0002 00-257
REAR VIEW MIRROR.....	117	0002 00-259
CAB DEFROSTER	118	0002 00-261
CAB HEATER LINES	119	0002 00-263
A/C INTAKE COVER.....	120	0002 00-265
2207 WINTERIZATION EQUIPMENT.....		0002 00-267
AIR DUCT.....	121	0002 00-267
CAB AIR FILTER.....	122	0002 00-269
2210 DATA PLATES AND INSTRUCTION HOLDERS		0002 00-273
DATA PLATES AND INSTRUCTION HOLDERS.....	123	0002 00-273
GROUP 24 HYDRAULIC AND FLUID SYSTEMS		
2401 PUMP AND MOTOR		0002 00-275
BRAKING AND HYDRAULIC FAN PUMP	124	0002 00-275
2402 MANIFOLD AND/OR CONTROL VALVES		0002 00-277
MAIN HYDRAULIC CONTROL VALVE.....	125	0002 00-277
TILT CONTROL VALVE (COMBINATION)	126	0002 00-279
DEAD ENGINE LOWERING CONTROL VALVE	127	0002 00-281
PILOT OPERATED HYDRAULIC CONTROL VALVE AND LOCKOUT VALVE.....	128	0002 00-283
RIDE CONTROL VALVE.....	129	0002 00-285
COUPLER VALVE.....	130	0002 00-287
2403 HYDRAULIC CONTROLS AND/OR MANUAL CONTROLS.....		0002 00-289
PILOT OPERATED HYDRAULIC CONTROLS AND RELATED PARTS.....	131	0002 00-289
DIRECTIONAL CONTROL HANDLE	132	0002 00-291
PILOT OIL ACCUMULATOR.....	133	0002 00-293
RIDE CONTROL ACCUMULATOR.....	134	0002 00-295

TABLE OF CONTENTS (Con't)

	Illus/Fig	Page
2404 TILT CYLINDERS AND TILT CRANK.....		0002 00-297
TILT CYLINDER	135	0002 00-297
2405 MAST COLUMN.....		0002 00-299
HYDRAULIC LIFT CYLINDER	136	0002 00-299
2406 STRAINERS, FILTERS, LINES AND FITTINGS, ETC.		0002 00-301
HYDRAULIC LINES	137	0002 00-301
PILOT LINES (HYDRAULIC).....	138	0002 00-305
HYDRAULIC OIL FILTER AND SAMPLING VALVE	139	0002 00-309
LIFT CYLINDER LINES.....	140	0002 00-313
TILT CYLINDER LINES.....	141	0002 00-317
QUICK COUPLER LINES	142	0002 00-321
COUPLER LINES (THIRD FUNCTION, SECONDARY)	143	0002 00-323
HYDRAULIC FAN MOTOR LINES	144	0002 00-325
RIDE CONTROL LINES	145	0002 00-327
HYDRAULIC OIL LINES.....	146	0002 00-331
COUPLER LINES.....	147	0002 00-337
BUCKET HYDRAULIC LINES.....	148	0002 00-341
FAN SUPPLY LINES (STANDARD).....	149	0002 00-343
2407 HYDRAULIC CYLINDERS.....		0002 00-347
COUPLER CYLINDER	150	0002 00-347
BUCKET HYDRAULIC CYLINDER	151	0002 00-349
2408 LIQUID TANKS OR RESERVOIRS		0002 00-351
HYDRAULIC TANK AND MOUNTING	152	0002 00-351
GROUP 33 SPECIAL PURPOSE KITS		
3303 WINTERIZATION KITS.....		0002 00-353
FUEL LEVEL SENDING UNIT (ARCTIC).....	153	0002 00-353
FAN SUPPLY LINES (ARCTIC)	154	0002 00-355
HEATER (ARCTIC)	155	0002 00-359
LADDER AND RELATED PARTS (ARCTIC)	156	0002 00-361
HEATER WIRING (ARCTIC).....	157	0002 00-363
BATTERY BOX (ARCTIC).....	158	0002 00-365
BATTERY WIRING (ARCTIC).....	159	0002 00-367
CHASSIS GUARDS AND COVERS (ARCTIC).....	160	0002 00-369
3307 SPECIAL PURPOSE KITS.....		0002 00-371
FORKLIFT ASSEMBLY	161	0002 00-371
GROUP 52 REFRIGERATION, AIR CONDITIONER HEATER, AND AIR CONDITIONING COMPONENTS		
5200 AIR CONDITIONER/HEATER ASSEMBLY AND GAS COMPRESSOR ASSEMBLY		0002 00-373
A/C COMPRESSOR.....	162	0002 00-373
A/C AND MOUNTING	163	0002 00-377

TABLE OF CONTENTS (Con't)

	Illus/Fig	Page
5217 REFRIGERANT PIPING		0002 00-381
A/C LINES	164	0002 00-381
5221 REFRIGERANT ACCUMULATOR.....		0002 00-385
A/C ACCUMULATOR.....	165	0002 00-385
5230 CONDENSER		0002 00-387
A/C CONDENSER AND MOUNTING	166	0002 00-387
5241 EVAPORATOR		0002 00-389
A/C EVAPORATOR.....	167	0002 00-389
5243 BLOWER ASSEMBLY		0002 00-391
A/C BLOWER MOTOR.....	168	0002 00-391
5245 AIR FILTERS.....		0002 00-393
A/C FILTER	169	0002 00-393
5247 HEATING UNITS.....		0002 00-395
A/C HEATER COIL.....	170	0002 00-395
GROUP 74 CRANES, SHOVELS, AND EARTH MOVING EQUIPMENT COMPONENTS		
7436 LIFT ARMS AND PIVOT ASSEMBLIES		0002 00-397
QUICK COUPLER	171	0002 00-397
IMPLEMENT CONTROL	172	0002 00-399
7437 LOADER BUCKET ASSEMBLY OR FORKLIFT		0002 00-401
BUCKET AND RELATED PARTS.....	173	0002 00-401
GROUP 94 REPAIR KITS		
9401 REPAIR KITS.....		0002 00-403
KITS.....	KITS	0002 00-403
GROUP 95 GENERAL USE STANDARDIZED PARTS		
9501 HARDWARE SUPPLIES AND BULK MATERIEL, COMMON		0002 00-405
BULK	BULK	0002 00-405
WP 0003 00 SPECIAL TOOLS LIST		
GROUP 26 TOOLS AND TEST EQUIPMENT		
2604 SPECIAL TOOLS		0003 00-5
UNIT SUPPORT SPECIAL TOOLS	174	0003 00-5
DIRECT SUPPORT SPECIAL TOOLS	175	0003 00-11
WP 0004 00 CROSS-REFERENCE INDEXES		
NSN CROSS-REFERENCE INDEX.....		0004 00-1
P/N CROSS-REFERENCE INDEX		0004 00-31



FIELD MAINTENANCE (UNIT AND DIRECT SUPPORT MAINTENANCE) REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL) INTRODUCTION

0001 00

SCOPE

This RPSTL lists and authorizes spares and repair parts; special tools; special test, measurement, and diagnostic equipment (TMDE); and other special support equipment required for performance of Unit and Direct Support maintenance of the 924G Loader, Light Type II. It authorizes the requisitioning, issue, and disposition of spares, repair parts, and special tools as indicated by the source, maintenance, and recoverability (SMR) codes.

GENERAL

In addition to the Introduction work package, this RPSTL is divided into the following work packages:

1. **Repair Parts Lists Work Package.** Work package containing lists of spares and repair parts authorized by this RPSTL for use in the performance of maintenance. This work package also includes parts which must be removed for replacement of the authorized parts. Parts lists are composed of functional groups in ascending alphanumeric sequence, with the parts in each group listed in ascending figure and item number sequence. Sending units, brackets, filters, and bolts are listed with the component they mount on. Bulk materials are listed by item name in FIG. BULK at the end of the work package. Repair parts kits are listed separately in their own functional group. Items listed are shown on the associated illustrations.
2. **Special Tools List Work Package.** Work package containing lists of special tools, special TMDE, and special support equipment authorized by this RPSTL [as indicated by Basis of Issue (BOI) information in the DESCRIPTION AND USABLE ON CODE (UOC) column]. Tools that are components of common tool sets and/or Class VII are listed.
3. **Cross-Reference Indexes Work Package.** There are two cross-reference indexes in this RPSTL: National Stock Number Index and Part Number Index. The National Stock Number (NSN) Index work package, and the Part Number (P/N) Index work package (*If reference designator is used enter: and the Reference Designator Index work package*). The National Stock Number Index work package refers you to the figure and item number. The Part Number Index work package refers you to the figure and item number. (*If reference designator is used enter: The Reference Designator Index work package refers you to the figure and item number*).

EXPLANATION OF COLUMNS IN THE REPAIR PARTS LISTS AND SPECIAL TOOLS LIST WORK PACKAGES

1. **Item No. (Column 1).** Indicates the number used to identify items called out in the illustration.
2. **SMR Code (Column 2).** The SMR code containing supply/requisitioning information, maintenance level authorization criteria, and disposition instruction, as shown in the following breakout:

SOURCE CODE	MAINTENANCE CODE		RECOVERABILITY CODE
XXxxx	xxXXx		xxxxX
1st two positions	3rd position	4th position	5th position
How you get an item.	Who can install, replace or use the item.	Who can do complete repair* on the item.	Who determines disposition action on an unserviceable item.

* *Complete Repair:* Maintenance capacity, capability, and authority to perform all corrective maintenance tasks of the "Repair" function in a use/user environment in order to restore serviceability to a failed item.

- a. **Source Code.** The source code tells you how to get an item needed for maintenance, repair, or overhaul of an end item/equipment. Explanations of source codes follow:

FIELD MAINTENANCE (UNIT AND DIRECT SUPPORT MAINTENANCE) REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL) INTRODUCTION - CONTINUED

0001 00

EXPLANATION OF COLUMNS IN THE REPAIR PARTS LISTS AND SPECIAL TOOLS LIST WORK PACKAGES - CONTINUED

Source Code

Application/Explanation

NOTE

Items coded PC are subject to deterioration.

PA	Stocked items; use the applicable NSN to request/requisition items with these source codes. They are authorized to the maintenance category indicated by the code entered in the third position of the SMR code.
PB	
PC	
PD	
PE	
PF	
PG	

KD	Items with these codes are not to be requested/requisitioned individually. They are part of a kit which is authorized to the maintenance level indicated in the third position of the SMR code. The complete kit must be requisitioned and applied.
KF	
KB	

MO - Made at Unit/ AVUM level	Items with these codes are not to be requested/requisitioned individually. They must be made from bulk materiel which is identified by the part number in the DESCRIPTION AND USABLE ON CODE (UOC) column and listed in the bulk materiel group work package of the RPSTL. If the item is authorized to you by the third position of the SMR code, but the source code indicates it is made at a higher level, order the item from the higher level of maintenance.
MF - Made at DS/AVIM Level	
MH - Made at GS Level	
ML - Made at SRA	
MD - Made at Depot	

AO-Assembled by Unit/ AVUM level	Items with these codes are not to be requested/requisitioned individually. The parts that make up the assembled item must be requisitioned or fabricated and assembled at the level of maintenance indicated by the source code. If the third position of the SMR code authorizes you to replace the item, but the source code indicates the item is assembled at a higher level, order the item from the higher level of maintenance.
AF-Assembled by DS/ AVIM level	
AH-Assembled by GS level	
AL-Assembled by SRA	
AD-Assembled by Depot	

XA	Do not requisition an "XA" coded item. Order the next higher assembly. (Refer to NOTE below).
XB	If an item is not available from salvage, order it using the CAGEC and P/N.
XC	Installation drawings, diagrams, instruction sheets, field service drawings; identified by manufacturer's P/N.
XD	Item is not stocked. Order an XD-coded item through normal supply channels using the CAGEC and P/N given, if no NSN is available.

NOTE

Cannibalization or controlled exchange, when authorized, may be used as a source of supply for items with the above source codes, except for those source coded "XA" or those aircraft support items restricted by requirements of AR 750-1.

FIELD MAINTENANCE (UNIT AND DIRECT SUPPORT MAINTENANCE) REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL) INTRODUCTION - CONTINUED

0001 00

EXPLANATION OF COLUMNS IN THE REPAIR PARTS LISTS AND SPECIAL TOOLS LIST WORK PACKAGES - CONTINUED

b. **Maintenance Code.** Maintenance codes tell you the level(s) of maintenance authorized to use and repair support items. The maintenance codes are entered in the third and fourth positions of the SMR code as follows:

- (1) Third Position. The maintenance code entered in the third position tells you the lowest maintenance level authorized to remove, replace, and use an item. The maintenance code entered in the third position will indicate authorization to one of the following levels of maintenance:

Maintenance Code

Application/Explanation

- C. Crew or Operator maintenance done within Unit/AVUM maintenance.
- O Unit Level/AVUM maintenance can remove, replace, and use the item.
- F. Direct Support/AVIM maintenance can remove, replace, and use the item.
- H General Support maintenance can remove, replace, and use the item.
- L Specialized Repair Activity (SRA) can remove, replace, and use the item.
- D Depot Maintenance can remove, replace, and use the item.

- (2) Fourth Position. The maintenance code entered in the fourth position tells you whether or not the item is to be repaired and identifies the lowest maintenance level with the capability to do complete repair (perform all authorized repair functions).

NOTE

Some limited repair may be done on the item at a lower level of maintenance, if authorized by the Maintenance Allocation Chart (MAC) and SMR codes.

Maintenance Code

Application/Explanation

- O Unit/AVUM is the lowest level that can do complete repair of the item.
- F. Direct Support/AVIM is the lowest level that can do complete repair of the item.
- H General Support is the lowest level that can do complete repair of the item.
- L. Specialized Repair Activity (SRA) is the lowest level that can do complete repair of the item.
- D Depot is the lowest level that can do complete repair of the item.
- Z. Nonreparable. No repair is authorized.
- B. No repair is authorized. No parts or special tools are authorized for the maintenance of a "B"-coded item. However, the item may be reconditioned by adjusting, lubricating, etc., at the user level.

FIELD MAINTENANCE (UNIT AND DIRECT SUPPORT MAINTENANCE) REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL) INTRODUCTION - CONTINUED

0001 00

EXPLANATION OF COLUMNS IN THE REPAIR PARTS LISTS AND SPECIAL TOOLS LIST WORK PACKAGES - CONTINUED

- c. **Recoverability Code.** Recoverability codes are assigned to items to indicate the disposition action on unserviceable items. The recoverability code is entered in the fifth position of the SMR code as follows:

<u>Recoverability Code</u>	<u>Application/Explanation</u>
Z	Nonreparable item. When unserviceable, condemn and dispose of the item at the level of maintenance shown in the third position of the SMR code.
O	Reparable item. When uneconomically reparable, condemn and dispose of the item at the Unit level maintenance.
F	Reparable item. When uneconomically reparable, condemn and dispose of the item at Direct Support level.
H	Reparable item. When uneconomically reparable, condemn and dispose of the item at General Support level.
D	Reparable item. When beyond lower level repair capability, return to depot. Condemnation and disposal of item are not authorized below depot level.
L	Reparable item. Condemnation and disposal of item not authorized below Specialized Repair Activity (SRA).
A	Item requires special handling or condemnation procedures because of specific reasons (e.g., precious metal content, high dollar value, critical material, or hazardous material). Refer to appropriate manuals/directives for specific instructions.

- 3. **NSN - (Column 3).** The NSN for the item is listed in this column.
- 4. **CAGEC (Column 4).** The Commercial and Government Entity Code (CAGEC) is a five-digit code which is used to identify the manufacturer, distributor, or Government agency/activity that supplies the item.
- 5. **PART NUMBER (Column 5).** Indicates the primary number used by the manufacturer (individual, company, firm, corporation, or Government activity), which controls the design and characteristics of the item by means of its engineering drawings, specifications, standards, and inspection requirements to identify an item or range of items.

NOTE

When you use an NSN to requisition an item, the item you receive may have a different part number from the part ordered.

- 6. **DESCRIPTION AND USABLE ON CODE (UOC) (Column 6).** This column includes the following information:
 - a. The Federal item name and, when required, a minimum description to identify the item.
 - b. Part Numbers (P/Ns) of bulk materials are referenced in this column in the line entry to be manufactured or fabricated.
 - c. Hardness Critical Item (HCI). A support item that provides the equipment with special protection from electromagnetic pulse (EMP) damage during a nuclear attack.
 - d. The statement END OF FIGURE appears just below the last item description in column (6) for a given figure in both the repair parts list and special tools list work packages.

FIELD MAINTENANCE (UNIT AND DIRECT SUPPORT MAINTENANCE) REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL) INTRODUCTION - CONTINUED

0001 00

EXPLANATION OF COLUMNS IN THE REPAIR PARTS LISTS AND SPECIAL TOOLS LIST WORK PACKAGES - CONTINUED

7. **QTY (Column 7).** The QTY (quantity per figure) column indicates the quantity of the item used in the breakout shown on the illustration/figure, which is prepared for a functional group, subfunctional group, group or an assembly. A “V” appearing in this column in lieu of a quantity indicates that the quantity is variable and the quantity may vary from application to application.

EXPLANATION OF CROSS-REFERENCE INDEXES WORK PACKAGE FORMAT AND COLUMNS

1. **National Stock Number (NSN) Index Work Package.**
 - a. **STOCK NUMBER Column.** This column lists the NSN by National Item Identification Number (NIIN) sequence. The NIIN consists of the last nine digits of the NSN (i.e., NSN 5305-01-674-1467). When using this column to locate an item, ignore the first four digits of the NSN. However, the complete NSN should be used when ordering items by stock number.
 - b. **FIG. Column.** This column lists the number of the figure where the item is identified/located. The figures are in numerical order in WP 0002 00 and WP 0003 00.
 - c. **ITEM Column.** The item number identifies the item associated with the figure listed in the adjacent FIG. column. This item is also identified by the NSN listed on the same line.
2. **Part Number (P/N) Index Work Package.** Part numbers in this index are listed in ascending alphanumeric sequence (i.e., vertical arrangement of letter and number combination which places the first letter or digit of each group in order A through Z, followed by the numbers 0 through 9 and each following letter or digit in like order).
 - a. **PART NUMBER Column.** Indicates the P/N assigned to the item.
 - b. **FIG. Column.** This column lists the number of the figure where the item is identified/located in the repair parts list and special tools list work packages.
 - c. **ITEM Column.** The item number is the number assigned to the item as it appears in the figure referenced in the adjacent figure number column.

SPECIAL INFORMATION

1. **Usable On Code (UOC).** The UOC appears in the lower left corner of the DESCRIPTION column heading. Usable on codes are shown as “UOC:” in the Description Column (justified left) on the first line under the applicable item/nomenclature. Uncoded items are applicable to all models. Identification of the UOC’s used in the RPSTL are:

<u>Code</u>	<u>Used On</u>
924	924G Loader, Light Type II

2. **Fabrication Instructions.** Bulk materials required to manufacture items are listed in the Bulk Materiel functional group of this RPSTL. Part numbers for bulk materiel are also referenced in the Description Column of the line item entry for the item to be manufactured/fabricated. Detailed fabrication instructions for items source coded to be manufactured or fabricated are found in TM 5-3805-290-23-1 and TM 5-3805-290-23-2.
3. **Index Numbers.** Items which have the word BULK in the figure column will have an index number shown in the item number column. This index number is a cross-reference between the NSN/P/N Index work package and the bulk materiel list in the repair parts list work package.

FIELD MAINTENANCE (UNIT AND DIRECT SUPPORT MAINTENANCE) REPAIR PARTS AND SPECIAL TOOLS LISTS (RPSTL) INTRODUCTION - CONTINUED

0001 00

SPECIAL INFORMATION - CONTINUED

4. **Associated Publications.** The publication(s) listed below pertain to the 924G Loader, Light Type II and its components:

Publication	Short Title
TM 5-3805-290-10	Operator's Manual for Loader, Light Type II
TM 5-3805-290-23-1	Field Maintenance Manual for Loader, Light Type II
TM 5-3805-290-23-2	Field Maintenance Manual for Loader, Light Type II

HOW TO LOCATE REPAIR PARTS

1. **When NSNs or Part Numbers Are Not Known.**

- a. Using the table of contents, determine the assembly group to which the item belongs. This is necessary since figures are prepared for assembly groups and subassembly groups, and lists are divided into the same groups.
- b. Find the figure covering the functional group or the subfunctional group to which the item belongs.
- c. Identify the item on the figure and note the number(s).
- d. Look in the repair parts list work packages for the figure and item numbers. The NSNs and part numbers are on the same line as the associated item numbers.

2. **When National Stock Number is Known:**

- a. **First.** If you have the NSN, look in the STOCK NUMBER column of the NSN index work package. The NSN is arranged in NIIN sequence. Note the figure and item number next to the NSN.
- b. **Second.** Turn to the figure and locate the item number. Verify that the item is the one you are looking for.

3. **When Part Number is Known:**

- a. **First.** If you have the P/N and not the NSN, look in the PART NUMBER column of the P/N index work package. Identify the figure and item number.
- b. **Second.** Look up the item on the figure in the applicable repair parts list work package.

ABBREVIATIONS

For standard abbreviations see ASME Y14.38-1999, *Abbreviations and Acronyms*.

<u>Abbreviations</u>	<u>Explanation</u>
NIIN	National Item Identification Number (consists of the last 9 digits of the NSN)
RPSTL	Repair Parts and Special Tools Lists
SMR	Source, Maintenance, and Recoverability Code
TMDE	Test, Measurement, and Diagnostic Equipment

END OF WORK PACKAGE