


QUCM CCM

Installation and Programming Manual

This Manual describes the QUCM application for interfacing CATERPILLAR CCM devices to a POWERLOGIC system.

Effective: 15 December, 2005

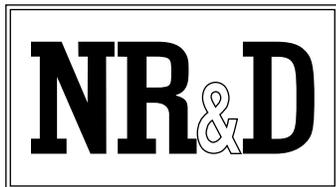

Niobrara Research & Development Corporation
P.O. Box 3418 Joplin, MO 64803 USA

Telephone: (800) 235-6723 or (417) 624-8918

Facsimile: (417) 624-8920

www.niobrara.com

POWERLOGIC, SY/MAX, and Square D are registered trademarks of Square D Company.

CATERPILLAR, CCM, M5X, and EMCP are trademarks of Caterpillar, Inc.

Subject to change without notice.

© Niobrara Research & Development Corporation 2000-2005. All Rights Reserved.

Contents

1 Introduction	5
2 Installation	7
Module Installation	7
Software Installation	7
Serial Connections to the QUCM-S	7
Port 1 to CCM	7
Port 2 to the Personal Computer	8
Loading the Applications into the QUCM	9
EMCP II Device Register List	11
3500B Engine Device Register List	16
Fault Identifiers (FID)	20
3 Web Server	23
Main Page	23
Actual Data Page	24
Configure QUCM	25
Add Device	27
Serial Port Configuration	28
Save Settings to FLASH	29
Statistics Page	29

Figures

Figure 2-1 QUCM-OE to RS-232 CCM Port (25-pin) (MM16 Cable)	8
Figure 2-2 QUCM-OE Layout	8
Figure 2-3 QUCM-OE to RS-232 PC DCE Port (9-pin) (MM1 Cable)	9
Figure 3-1 Main Web Page	24
Figure 3-2 Web Server Actual Data Page	25
Figure 3-3 Enter Password Page	26
Figure 3-4 Configuration Page	27
Figure 3-5 Add Device Page	28
Figure 3-6 Serial Port Page	29
Figure 3-7 Statistics Web Page	30