



Service Manual

Models

TL642

TL943

S/N TBK00100 & After

S/N TBL00100 & After

31200292

Revised

September 22, 2011

EFFECTIVITY PAGE

September 29, 2006 - A - Original Issue Of Manual

August 3, 2007 - B - Revised pages 2-6, 2-7, 2-8, 2-9, 4-2, 4-7, 4-8, 8-5, 8-8 & 8-9.

March 31, 2011 - C - Revised pages 2-3 thru 2-9, 2-11 thru 2-21, 3-1 thru 3-25, 4-2 thru 4-9, 5-3, 6-3, 7-3 thru 7-5, 7-7, 7-9 thru 7-11, 8-2, 8-3, 8-7 thru 8-12, 8-14 thru 8-16, 8-25, 8-26, 9-2 thru 9-6, 9-8 thru 9-22, 9-29, 9-30 & 9-33 thru 9-46.

September 22, 2011 - D - Added pages 9-41 thru 9-46.

EFFECTIVITY PAGE

SECTION CONTENTS

Section	Subject	Page
Section 1		
Safety Practices		1-1
1.1	Introduction	1-2
1.2	Disclaimer	1-2
1.3	Operation & Maintenance Manual	1-2
1.4	Do Not Operate Tags	1-2
1.5	Safety Information	1-2
1.6	Safety Instructions	1-3
1.7	Safety Decals	1-4
Section 2		
General Information and Specifications		2-1
2.1	Replacement Parts and Warranty Information	2-2
2.2	Torque Charts	2-3
2.3	Specifications	2-11
2.4	Fluids and Lubricant Capacities	2-13
2.5	Service and Maintenance Schedules	2-16
2.6	Lubrication Schedules	2-19
Section 3		
Boom		3-1
3.1	Boom System Component Terminology	3-3
3.2	Boom System - Three Section	3-4
3.3	Boom Assembly Maintenance	3-4
3.4	Complete Boom Removal/Installation	3-5
3.5	Boom Section Removal/Installation	3-6
3.6	Extend/Retract Chain Removal/Installation	3-14
3.7	Push Beam - Extend/Retract Cylinder Removal/Installation	3-16
3.8	Boom Section Separation Adjustment	3-20
3.9	Quick Coupler Assembly	3-21
3.10	Boom Head - Mounted Winch	3-22
3.11	Boom Wear Pads	3-23
3.12	Boom Extend and Retract Chains	3-24
3.13	Forks	3-27
3.14	Troubleshooting	3-28
3.15	Push Beam Temporary Brackets	3-31
Section 4		
Cab and Covers		4-1
4.1	Operator Cab and Covers Component Terminology	4-2
4.2	Operator Cab	4-4
4.3	Cab Components	4-4
4.4	Cab Removal	4-10
4.5	Cab Installation	4-11

Section	Subject	Page
Section 5		
Axles, Drive Shafts, Wheels and Tires		5-1
5.1	Axles, Drive Shafts, Wheels and Tires Component Terminology	5-2
5.2	General Information	5-3
5.3	Axle Assemblies	5-3
5.4	Drive Shafts	5-9
5.5	Wheels and Tires	5-10
5.6	Brakes	5-11
5.7	Towing a Disabled machine	5-11
Section 6		
Transmission		6-1
6.1	Transmission Assembly Component Terminology	6-2
6.2	Transmission Serial Number	6-3
6.3	Transmission Specifications and Maintenance Information	6-3
6.4	Transmission Replacement	6-3
6.5	Torque Converter Diaphragm	6-6
6.6	Troubleshooting	6-7
Section 7		
Engine		7-1
7.1	Introduction	7-2
7.2	Engine Serial Number	7-4
7.3	Specifications and Maintenance Information	7-4
7.4	Engine Cooling System	7-4
7.5	Engine Electrical System	7-6
7.6	Fuel System	7-7
7.7	Engine Exhaust System	7-8
7.8	Air Cleaner Assembly	7-9
7.9	Engine Replacement	7-10
7.10	Engine Drive Plate	7-13
7.11	Troubleshooting	7-14
Section 8		
Hydraulic System		8-1
8.1	Hydraulic Component Terminology	8-2
8.2	Safety Information	8-3
8.3	Hydraulic Pressure Diagnosis	8-3
8.4	Hydraulic Circuits	8-4
8.5	Hydraulic Reservoir	8-13
8.6	Engine Implement Pump	8-14
8.7	Control Valves	8-15
8.8	Hydraulic Cylinders	8-22

Section 9

Electrical System		9-1
9.1	Electrical Component Terminology	9-3
9.2	Specifications	9-5
9.3	Safety Information	9-5
9.4	Fuses and Relays	9-5
9.5	Electrical System Schematics	9-11
9.6	Circuit Breakdowns	9-23
9.7	Engine Start Circuit	9-26
9.8	Charging Circuit	9-27
9.9	Window Wiper/Washer Windshield Wiper Motor	9-28
9.10	Cab Heater/AC and Fan	9-29
9.11	Switches, Solenoids and Senders	9-30
9.12	Gauges and Display Monitor	9-34
9.13	Dash Switches	9-36
9.14	Hand Held Analyzer	9-38
9.15	Tilt/Auxiliary Calibration Menu (S/N TBL01599 & After including TBL01551 & TBL01585)	9-41
9.16	Engine Diagnostic and Event Codes (S/N TBL01599 & After including TBL01551 & TBL01585; S/N TBL01599 & After including TBL01551 & TBL01585)	9-42



Section 1

Safety Practices

Contents

PARAGRAPH	TITLE	PAGE
1.1	Introduction	1-2
1.2	Disclaimer	1-2
1.3	Operation & Maintenance Manual	1-2
1.4	Do Not Operate Tags	1-2
1.5	Safety Information	1-2
1.5.1	Safety Alert System and Signal Words	1-2
1.6	Safety Instructions	1-3
1.6.1	Personal Hazards	1-3
1.6.2	Equipment Hazards	1-3
1.6.3	General Hazards	1-3
1.6.4	Operational Hazards	1-4
1.7	Safety Decals	1-4



Safety Practices

1.1 INTRODUCTION

This service manual provides general directions for accomplishing service and repair procedures. Following the procedures in this manual will help assure safety and equipment reliability.

Read, understand and follow the information in this manual, and obey all locally approved safety practices, procedures, rules, codes, regulations and laws.

These instructions cannot cover all details or variations in the equipment, procedures, or processes described, nor provide directions for meeting every possible contingency during operation, maintenance, or testing. When additional information is desired consult the local Caterpillar dealer.

Many factors contribute to unsafe conditions: carelessness, fatigue, overload, inattentiveness, unfamiliarity, even drugs and alcohol, among others. For optimal safety, encourage everyone to think, and to act, safely.

Appropriate service methods and proper repair procedures are essential for the safety of the individual doing the work, for the safety of the operator, and for the safe, reliable operation of the machine. All references to the right side, left side, front and rear are given from the operator seat looking in a forward direction.

Supplementary information is available from the manufacturer in the form of Service Bulletins, Service Campaigns, Service Training Schools, the service website, other literature, and through updates to the manual itself.

1.2 DISCLAIMER

All information in this manual is based on the latest product information available at the time of publication. The manufacturer reserves the right to make changes and improvements to its products, and to discontinue the manufacture of any product, at its discretion at any time without public notice or obligation.

1.3 OPERATION & MAINTENANCE MANUAL

The mechanic must not operate the machine until the Operation & Maintenance Manual has been read & understood, training has been accomplished and operation of the machine has been completed under the supervision of an experienced and qualified operator.

An Operation & Maintenance Manual is supplied with each machine and must be kept in the manual holder located in the cab. In the event that the Operation & Maintenance Manual is missing, consult your local service distributor before proceeding.

1.4 DO NOT OPERATE TAGS

Place Do Not Operate Tags on the ignition key switch and the steering wheel before attempting to perform any service or maintenance. Remove key and disconnect battery leads.

1.5 SAFETY INFORMATION

To avoid possible death or injury, carefully read, understand and comply with all safety messages.

In the event of an accident, know where to obtain medical assistance and how to use a first-aid kit and fire extinguisher/fire suppression system. Keep emergency telephone numbers (fire department, ambulance, rescue squad/paramedics, police department, etc.) nearby. If working alone, check with another person routinely to help assure personal safety.

1.5.1 Safety Alert System and Signal Words



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.