

WIRING DIAGRAMS

CONTENTS

	page		page
AIR CONDITIONING-HEATER	8W-42-1	POWER DISTRIBUTION	8W-10-1
AIRBAG SYSTEM	8W-43-1	POWER DOOR LOCKS	8W-61-1
ANTI-LOCK BRAKES	8W-35-1	POWER MIRRORS	8W-62-1
AUDIO SYSTEM	8W-47-1	POWER SEAT	8W-63-1
BODY CONTROL MODULE	8W-45-1	POWER SUNROOF	8W-64-1
CHARGING SYSTEM	8W-20-1	POWER WINDOWS	8W-60-1
COMPONENT INDEX	8W-02-1	REAR LIGHTING	8W-51-1
CONNECTOR PIN-OUTS	8W-80-1	REAR WINDOW DEFOGGER	8W-48-1
CONNECTOR/GROUND LOCATIONS	8W-90-1	SPLICE INFORMATION	8W-70-1
FRONT LIGHTING	8W-50-1	SPLICE LOCATIONS	8W-95-1
FUEL/IGNITION SYSTEM	8W-30-1	STARTING SYSTEM	8W-21-1
GENERAL INFORMATION	8W-01-1	TRANSMISSION CONTROL SYSTEM	8W-31-1
GROUND DISTRIBUTION	8W-15-1	TRAVELER	8W-46-1
HORN/CIGAR LIGHTER/POWER OUTLET	8W-41-1	TURN SIGNALS	8W-52-1
INSTRUMENT CLUSTER	8W-40-1	VEHICLE SPEED CONTROL	8W-33-1
INTERIOR LIGHTING	8W-44-1	VEHICLE THEFT SECURITY SYSTEM	8W-39-1
JUNCTION BLOCK	8W-12-1	WIPERS	8W-53-1

8W-01 GENERAL INFORMATION

INDEX

	page		page
DESCRIPTION AND OPERATION		TROUBLESHOOTING TESTS	9
CIRCUIT FUNCTIONS	4	TROUBLESHOOTING TOOLS	8
CIRCUIT INFORMATION	4	TROUBLESHOOTING WIRING PROBLEMS	10
CONNECTOR INFORMATION	7	SERVICE PROCEDURES	
ELECTROSTATIC DISCHARGE (ESD)		CONNECTOR AND TERMINAL REPLACEMENT	11
SENSITIVE DEVICES	8	CONNECTOR REPLACEMENT	10
INTRODUCTION	1	DIODE REPLACEMENT	13
NOTES, CAUTIONS, and WARNINGS	7	TERMINAL REPLACEMENT	12
SECTION IDENTIFICATION	5	TERMINAL/CONNECTOR REPAIR- AUGAT	
SPLICE LOCATIONS	7	CONNECTORS	12
SYMBOLS	5	WIRING REPAIR	10
TAKE OUTS	8	SPECIAL TOOLS	
TERMINOLOGY	7	WIRING/TERMINAL	14
DIAGNOSIS AND TESTING			
INTERMITTENT AND POOR CONNECTIONS	9		

DESCRIPTION AND OPERATION

INTRODUCTION

Chrysler wiring diagrams are designed to provide information regarding the vehicles wiring content. In order to effectively use Chrysler wiring diagrams to diagnose and repair a Chrysler vehicle, it is important to understand all of their features and characteristics.

Diagrams are arranged such that the power (B+) side of the circuit is placed near the top of the page, and the ground (B-) side of the circuit is placed near the bottom of the page.


All switches, components, and modules are shown in the at rest position with the doors closed and the key removed from the ignition.

Components are shown two ways. A solid line around a component indicates that the component is complete. A dashed line around a component indicates that the component being shown is not complete. Incomplete components have a reference number to indicate the page where the component is shown complete.


It is important to realize that no attempt is made on the diagrams to represent components and wiring as they appear on the vehicle. For example, a short piece of wire is treated the same as a long one. In addition, switches and other components are shown as simply as possible, with regard to function only.

DESCRIPTION AND OPERATION (Continued)

DIAGRAMS ARE ARRANGED WITH THE POWER B+ SIDE OF THE CIRCUIT NEAR THE TOP OF THE PAGE, AND THE GROUND SIDE OF THE CIRCUIT NEAR THE BOTTOM OF THE PAGE.

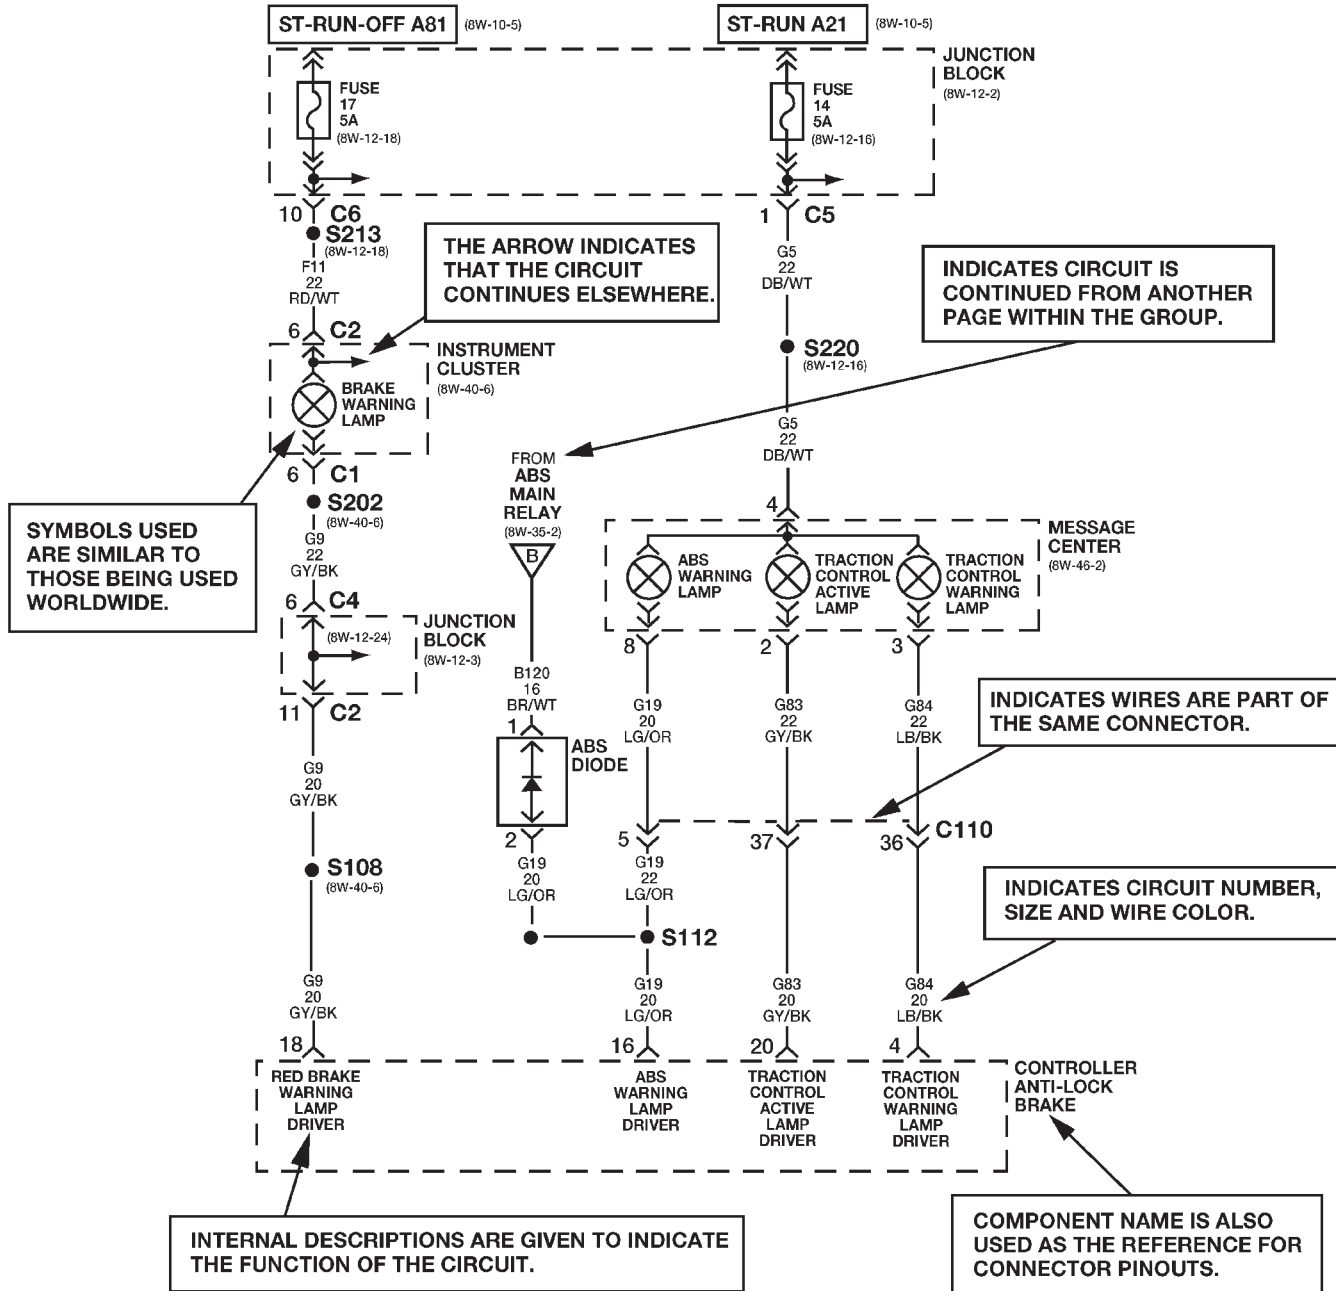

DESCRIPTION AND OPERATION (Continued)

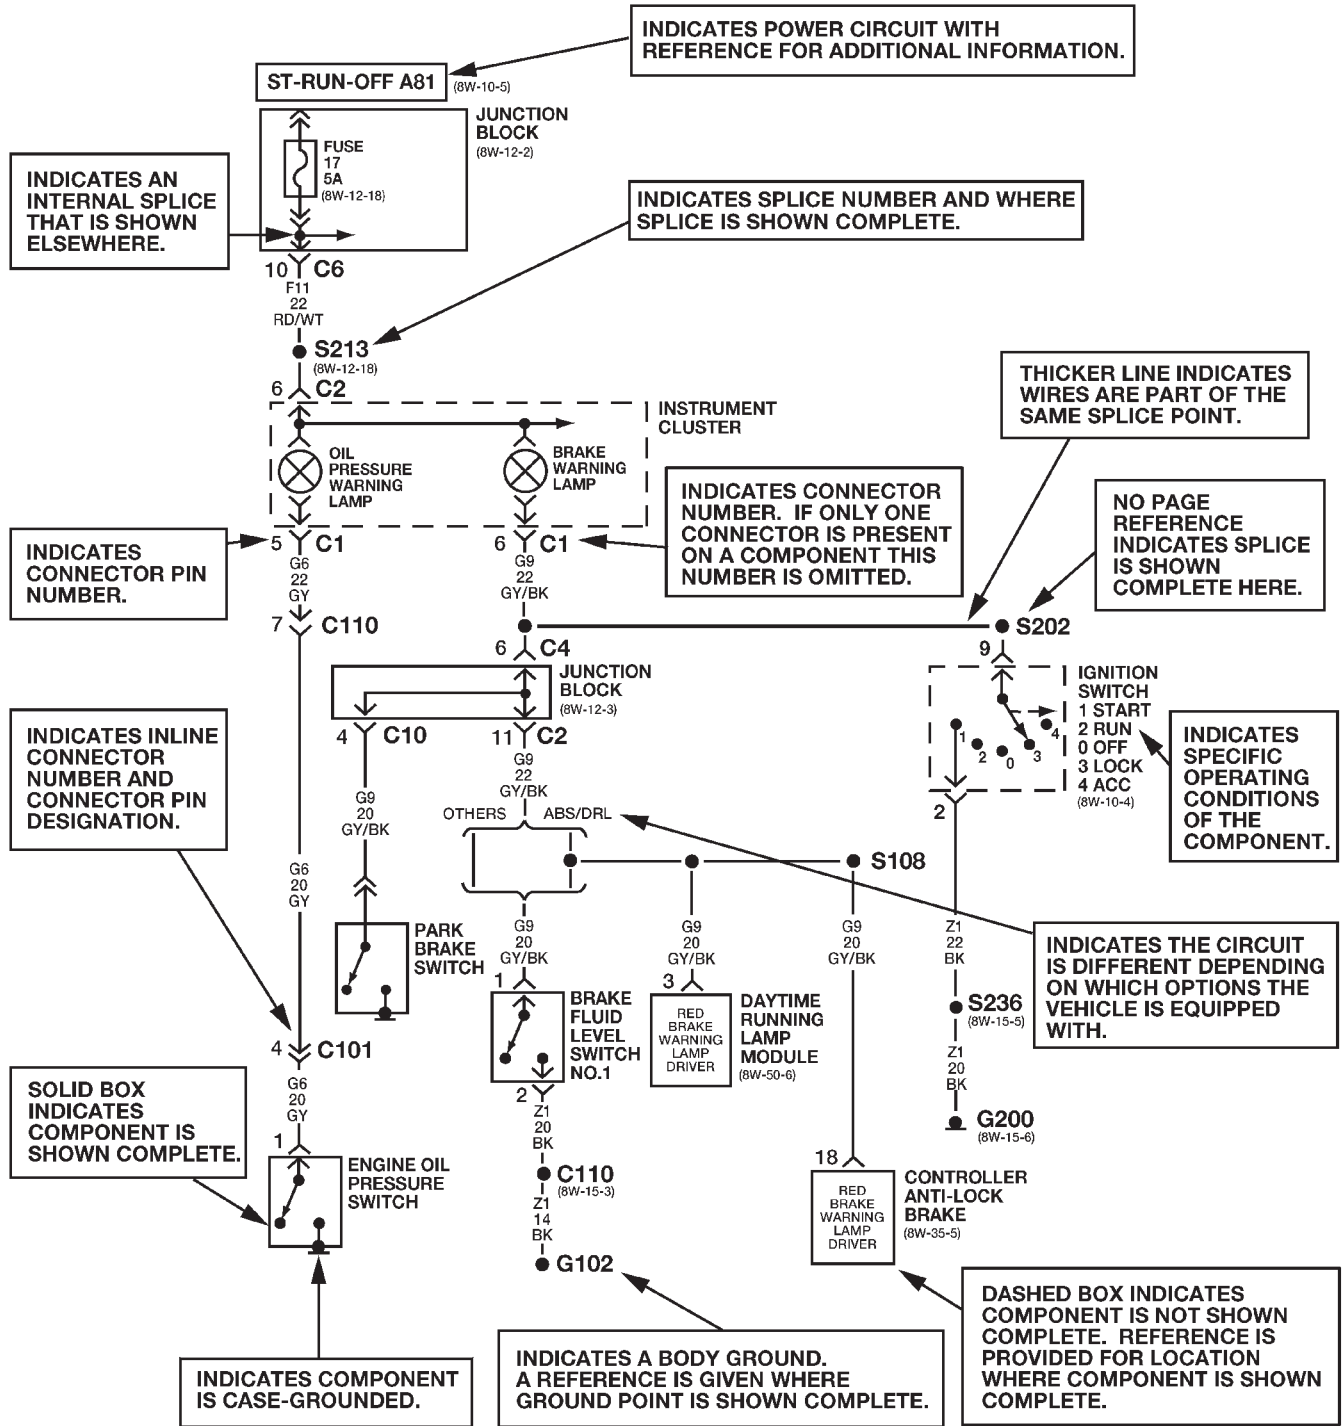

DESCRIPTION AND OPERATION (Continued)

CIRCUIT INFORMATION

Each wire shown in the diagrams contains a code which identifies the main circuit, part of the main circuit, gage of wire, and color (Fig. 1).

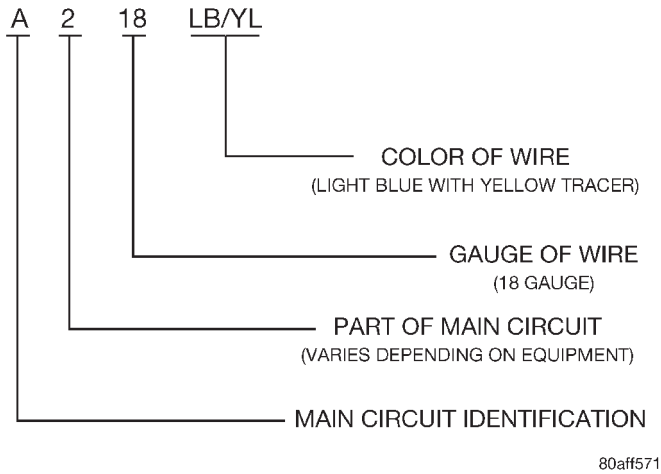


Fig. 1 Wire Code Identification

COLOR CODE	COLOR	STANDARD TRACER COLOR
BL	BLUE	WT
BK	BLACK	WT
BR	BROWN	WT
DB	DARK BLUE	WT
DG	DARK GREEN	WT
GY	GRAY	BK
LB	LIGHT BLUE	BK
LG	LIGHT GREEN	BK
OR	ORANGE	BK
PK	PINK	BK or WT
RD	RED	WT
TN	TAN	WT
VT	VIOLET	WT
WT	WHITE	BK
YL	YELLOW	BK
*	WITH TRACER	

CIRCUIT FUNCTIONS

All circuits in the diagrams use an alpha/numeric code to identify the wire and its function. To identify which circuit code applies to a system, refer to the Circuit Identification Code Chart. This chart shows the main circuits only and does not show the secondary codes that may apply to some models.

CIRCUIT	FUNCTION
A	BATTERY FEED
B	BRAKE CONTROLS
C	CLIMATE CONTROLS
D	DIAGNOSTIC CIRCUITS
E	DIMMING ILLUMINATION CIRCUITS
F	FUSED CIRCUITS
G	MONITORING CIRCUITS (GAUGES)
H	OPEN
I	NOT USED
J	OPEN
K	POWERTRAIN CONTROL MODULE
L	EXTERIOR LIGHTING
M	INTERIOR LIGHTING
N	NOT USED
O	NOT USED
P	POWER OPTION (BATTERY FEED)
Q	POWER OPTIONS (IGNITION FEED)
R	PASSIVE RESTRAINT
S	SUSPENSION/STEERING
T	TRANSMISSION/TRANSAXLE/TRANSFER CASE
U	OPEN
V	SPEED CONTROL, WIPER/WASHER
W	OPEN
X	AUDIO SYSTEMS
Y	OPEN
Z	GROUND

DESCRIPTION AND OPERATION (Continued)

SECTION IDENTIFICATION












 











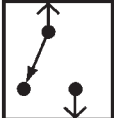










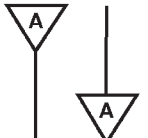






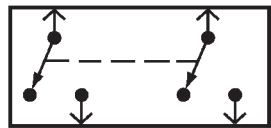


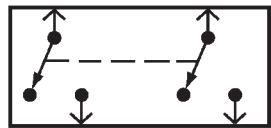

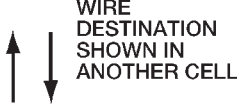



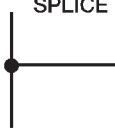

The wiring diagrams are grouped into individual sections. If a component is most likely found in a particular group, it will be shown complete (all wires, connectors, and pins) within that group. For example, the Auto Shutdown Relay is most likely to be found in Group 30, so it is shown there complete. It can, however, be shown partially in another group if it contains some associated wiring.

SYMBOLS

International symbols are used throughout the wiring diagrams. These symbols are consistent with those being used around the world.

GROUP	TOPIC
8W-01 thru 8W-09	General Information and Diagram Overview
8W-10 thru 8W-19	Main Sources of Power and Vehicle Grounding
8W-20 thru 8W-29	Starting and Charging
8W-30 thru 8W-39	Powertrain/Drivetrain Systems
8W-40 thru 8W-49	Body Electrical items and A/C
8W-50 thru 8W-59	Exterior Lighting, Wipers, and Trailer Tow
8W-60 thru 8W-69	Power Accessories
8W-70	Splice Information
8W-80	Connector Pin Outs
8W-90	Connector Locations (including grounds)
8W-95	Splice Locations

DESCRIPTION AND OPERATION (Continued)

 BATTERY  GENERATOR STATOR COILS	 2 C123 IN-LINE CONNECTORS  2 C123
 FUSIBLE LINK  FUSE  CIRCUIT BREAKER	MULTIPLE CONNECTOR  8  5  2 C123 MALE CONNECTOR  4 C1 FEMALE CONNECTOR  6 C3
 BATT A0 HOT BAR  CHOICE BRACKET (8W-30-10) PAGE REFERENCE	 SINGLE FILAMENT LAMP  DUAL FILAMENT LAMP  ANTENNA
 CLOCKSPRING  GROUND G101  SCREW TERMINAL	NPN TRANSISTOR  PNP TRANSISTOR  TONE GENERATOR 
 OPEN SWITCH  CLOSED SWITCH	 LED  PHOTODIODE  DIODE  ZENER DIODE
 GANGED SWITCH  SLIDING DOOR CONTACT	 OXYGEN SENSOR  GAUGE  PIEZOELECTRIC CELL
 WIRE ORIGIN & DESTINATION SHOWN WITHIN CELL  WIRE DESTINATION SHOWN IN ANOTHER CELL	 RESISTOR  POTENTIOMETER  VARIABLE RESISTOR  HEATER ELEMENT
EXTERNAL SPLICE  S350 INTERNAL SPLICE  INCOMPLETE SPLICE (INTERNAL) 	NON-POLARIZED CAPACITOR  POLARIZED CAPACITOR  VARIABLE CAPACITOR 
 ONE SPEED MOTOR  TWO SPEED MOTOR  REVERSIBLE MOTOR	 COIL  SOLENOID  SOLENOID VALVE

DESCRIPTION AND OPERATION (Continued)

TERMINOLOGY

This a list of terms with there definitions used in the wiring diagrams.

- Built-Up-Export Vehicles Built For Sale In Markets Other Than North America
- Except-Built-Up-Export Vehicles Built For Sale In North America
- LHD Left Hand Drive Vehicles
- RHD Right Hand Drive Vehicles
- ATX Automatic Transmission-Front Wheel Drive
- MTX Manual Transmission-Front Wheel Drive
- AT Automatic Transmission-Rear Wheel Drive
- MT Manual Transmission-Rear Wheel Drive
- SOHC Single Over Head Cam Engine
- DOHC Dual Over Head Cam Engine

CONNECTOR INFORMATION


CAUTION: Not all connectors are serviced. Some connectors are serviced only with a harness. A typical example might be the Supplemental Restraint System connectors. Always check parts availability before attempting a repair.

IDENTIFICATION

In-line connectors are identified by a number, as follows:


- In-line connectors located on the **engine compartment harness** are **C100** series numbers.
- Connectors located on the **instrument panel harness** are **C200** series numbers.
- Connectors located on the **body harness** are **C300** series numbers.
- **Jumper harness connectors** are **C400** series numbers.
- **Grounds and ground connectors** are identified with a “G” and follow the same series numbering as the in-line connector.

Component connectors are identified by the component name instead of a number (Fig. 2). Multiple connectors on a component use a C1, C2, etc. identifier (Fig. 3).

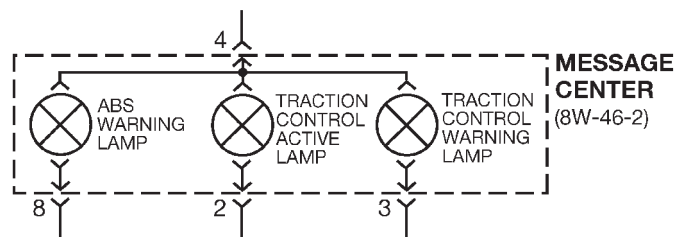

80aff5a3

Fig. 2 Component Identification

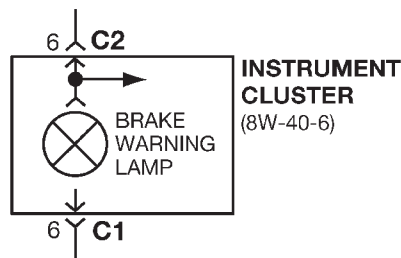

80aff5a4

Fig. 3 Connector Identification

LOCATIONS

Section 8W-90 contains connector/ground location illustrations. The illustrations contain the connector name (or number)/ground number and component identification. Connector/ground location charts in Section 8W-90 reference the illustration number for components and connectors.

Section 8W-80 shows each connector and the circuits involved with that connector. The connectors are identified using the name/number on the Diagram pages.

SPLICE LOCATIONS

Splice Location charts in Section 8W-70 show the entire splice, and provide references to other sections the splice serves.

Section 8W-95 contains illustrations that show the general location of the splices in each harness. The illustrations show the splice by number, and provide a written location.

NOTES, CAUTIONS, and WARNINGS

Throughout this group additional important information is presented in three ways; Notes, Cautions, and Warnings.

NOTES are used to help describe how switches or components operate to complete a particular circuit. They are also used to indicate different conditions that may appear on the vehicle. For example, an up-to and after condition.

CAUTIONS are used to indicate information that could prevent making an error that may damage the vehicle.

WARNINGS provide information to prevent personal injury and vehicle damage. Below is a list of general warnings that should be followed any time a vehicle is being serviced.

WARNING: ALWAYS WEAR SAFETY GLASSES FOR EYE PROTECTION.

WARNING: USE SAFETY STANDS ANYTIME A PROCEDURE REQUIRES BEING UNDER A VEHICLE.

DESCRIPTION AND OPERATION (Continued)

WARNING: BE SURE THAT THE IGNITION SWITCH ALWAYS IS IN THE OFF POSITION, UNLESS THE PROCEDURE REQUIRES IT TO BE ON.

WARNING: SET THE PARKING BRAKE WHEN WORKING ON ANY VEHICLE. AN AUTOMATIC TRANSMISSION SHOULD BE IN PARK. A MANUAL TRANSMISSION SHOULD BE IN NEUTRAL.

WARNING: OPERATE THE ENGINE ONLY IN A WELL-VENTILATED AREA.

WARNING: KEEP AWAY FROM MOVING PARTS WHEN THE ENGINE IS RUNNING, ESPECIALLY THE FAN AND BELTS.

WARNING: TO PREVENT SERIOUS BURNS, AVOID CONTACT WITH HOT PARTS SUCH AS THE RADIATOR, EXHAUST MANIFOLD(S), TAIL PIPE, CATALYTIC CONVERTER, AND MUFFLER.

WARNING: DO NOT ALLOW FLAME OR SPARKS NEAR THE BATTERY. GASES ARE ALWAYS PRESENT IN AND AROUND THE BATTERY.

WARNING: ALWAYS REMOVE RINGS, WATCHES, LOOSE HANGING JEWELRY, AND LOOSE CLOTHING.

TAKE OUTS

The abbreviation T/O is used in the component location section to indicate a point in which the wiring harness branches out to a component.

ELECTROSTATIC DISCHARGE (ESD) SENSITIVE DEVICES

All ESD sensitive components are solid state and a symbol (Fig. 4) is used to indicate this. When handling any component with this symbol comply with the following procedures to reduce the possibility of electrostatic charge build up on the body and inadvertent discharge into the component. If it is not known whether the part is ESD sensitive, assume that it is.


(1) Always touch a known good ground before handling the part. This should be repeated while handling the part and more frequently after sliding across a seat, sitting down from a standing position, or walking a distance.

(2) Avoid touching electrical terminals of the part, unless instructed to do so by a written procedure.

(3) When using a voltmeter, be sure to connect the ground lead first.

(4) Do not remove the part from its protective packing until it is time to install the part.

(5) Before removing the part from its package, ground the package to a known good ground on the vehicle.

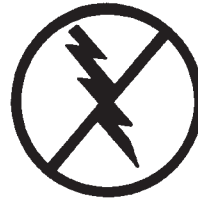

948W-193

Fig. 4 Electrostatic Discharge Symbol

DIAGNOSIS AND TESTING

TROUBLESHOOTING TOOLS

When diagnosing a problem in an electrical circuit there are several common tools necessary. These tools are listed and explained below.

- Jumper Wire - This is a test wire used to connect two points of a circuit. It can be used to bypass an open in a circuit.

WARNING: NEVER USE A JUMPER WIRE ACROSS A LOAD, SUCH AS A MOTOR, CONNECTED BETWEEN A BATTERY FEED AND GROUND.

- Voltmeter - Used to check for voltage on a circuit. Always connect the black lead to a known good ground and the red lead to the positive side of the circuit.

CAUTION: Most of the electrical components used in today's vehicle are solid state. When checking voltages in these circuits use a meter with a 10-megohm or greater impedance rating.

- Ohmmeter - Used to check the resistance between two points of a circuit. Low or no resistance in a circuit means good continuity.

CAUTION: - Most of the electrical components used in today's vehicle are Solid State. When checking resistance in these circuits use a meter with a 10-megohm or greater impedance rating. In addition, make sure the power is disconnected from the circuit. Circuits that are powered up by the vehicle electrical system can cause damage to the equipment and provide false readings.

DIAGNOSIS AND TESTING (Continued)

• **Probing Tools** - These tools are used for probing terminals in connectors (Fig. 5). Select the proper size tool from Special Tool Package 6807, and insert it into the terminal being tested. Use the other end of the tool to insert the meter probe.

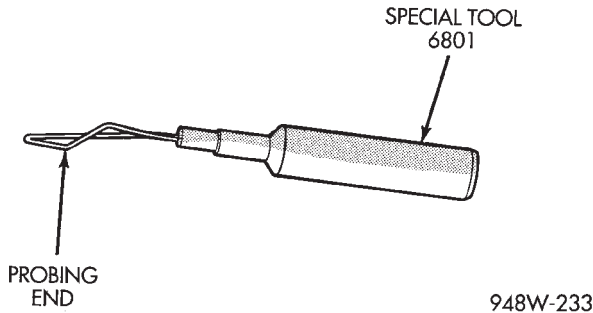


Fig. 5 Probing Tool

INTERMITTENT AND POOR CONNECTIONS

Most intermittent electrical problems are caused by faulty electrical connections or wiring. It is also possible for a sticking component or relay to cause a problem. Before condemning a component or wiring assembly check the following items.

- Connectors are fully seated
- Spread terminals, or terminal push out
- Terminals in the wiring assembly are fully seated into the connector/component and locked in position
- Dirt or corrosion on the terminals. Any amount of corrosion or dirt could cause an intermittent problem
- Damaged connector/component casing exposing the item to dirt and moisture
- Wire insulation that has rubbed through causing a short to ground
- Some or all of the wiring strands broken inside of the insulation covering.
- Wiring broken inside of the insulation

TROUBLESHOOTING TESTS

Before beginning any tests on a vehicles electrical system use the Wiring Diagrams and study the circuit. Also refer to the Troubleshooting Wiring Problems in this section.

TESTING FOR VOLTAGE POTENTIAL

- (1) Connect the ground lead of a voltmeter to a known good ground (Fig. 6).
- (2) Connect the other lead of the voltmeter to the selected test point. The vehicle ignition may need to be turned ON to check voltage. Refer to the appropriate test procedure.

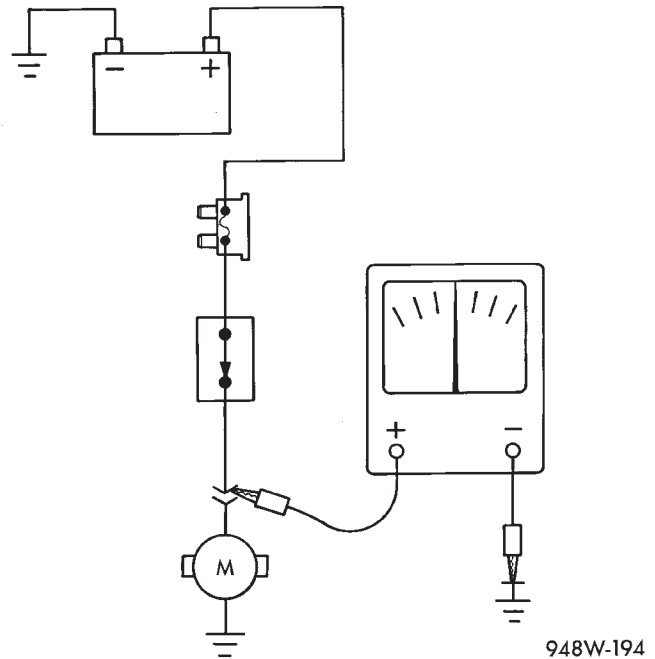


Fig. 6 Testing for Voltage Potential

TESTING FOR CONTINUITY

- (1) Remove the fuse for the circuit being checked or, disconnect the battery.
- (2) Connect one lead of the ohmmeter to one side of the circuit being tested (Fig. 7).
- (3) Connect the other lead to the other end of the circuit being tested. Low or no resistance means good continuity.

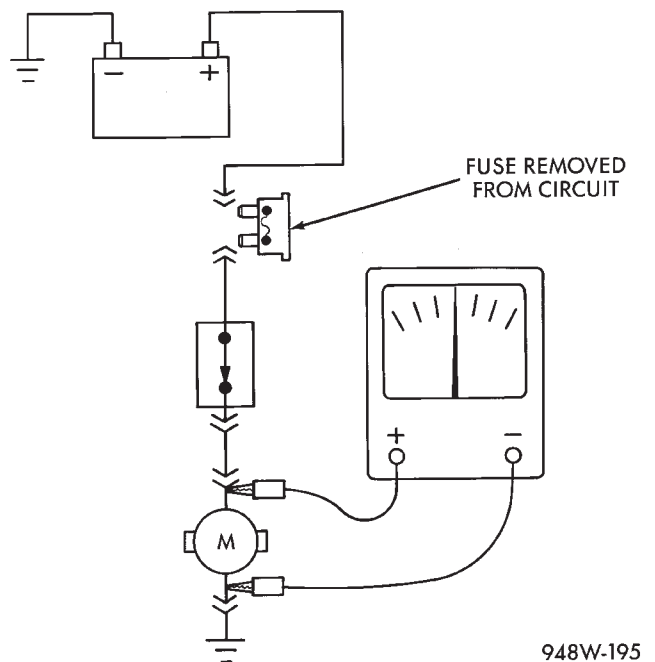


Fig. 7 Testing for Continuity

DIAGNOSIS AND TESTING (Continued)

TESTING FOR A SHORT TO GROUND


- (1) Remove the fuse and disconnect all items involved with the fuse.
- (2) Connect a test light or a voltmeter across the terminals of the fuse.
- (3) Starting at the fuse block, wiggle the wiring harness about six to eight inches apart and watch the voltmeter/test lamp.
- (4) If the voltmeter registers voltage or the test lamp glows, there is a short to ground in that general area of the wiring harness.

TESTING FOR A SHORT TO GROUND ON FUSES POWERING SEVERAL LOADS

- (1) Refer to the wiring diagrams and disconnect or isolate all items on the suspected fused circuits.
- (2) Replace the blown fuse.
- (3) Supply power to the fuse by turning ON the ignition switch or re-connecting the battery.
- (4) Start connecting the items in the fuse circuit one at a time. When the fuse blows the circuit with the short to ground has been isolated.

TESTING FOR A VOLTAGE DROP

- (1) Connect the positive lead of the voltmeter to the side of the circuit closest to the battery (Fig. 8).
- (2) Connect the other lead of the voltmeter to the other side of the switch or component.
- (3) Operate the item.
- (4) The voltmeter will show the difference in voltage between the two points.

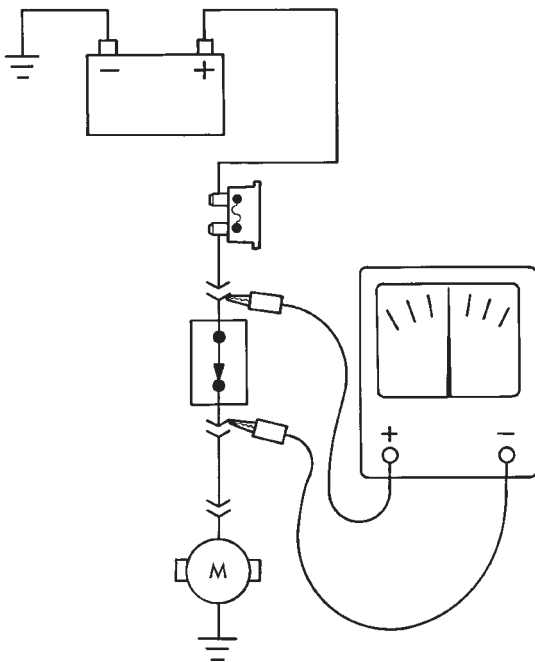

948W-196

Fig. 8 Testing for Voltage Drop**TROUBLESHOOTING WIRING PROBLEMS**

When troubleshooting wiring problems there are six steps which can aid in the procedure. The steps are listed and explained below. Always check for non-factory items added to the vehicle before doing any diagnosis. If the vehicle is equipped with these items, disconnect them to verify these add-on items are not the cause of the problem.

- (1) Verify the problem.
- (2) Verify any related symptoms. Do this by performing operational checks on components that are in the same circuit. Refer to the wiring diagrams.
- (3) Analyze the symptoms. Use the wiring diagrams to determine what the circuit is doing, where the problem most likely is occurring and where the diagnosis will continue.
- (4) Isolate the problem area.
- (5) Repair the problem.
- (6) Verify proper operation. For this step check for proper operation of all items on the repaired circuit. Refer to the wiring diagrams.

SERVICE PROCEDURES**WIRING REPAIR**

When replacing or repairing a wire, it is important that the correct gage be used as shown in the wiring diagrams. The wires must also be held securely in place to prevent damage to the insulation.

- (1) Disconnect battery negative cable
- (2) Remove 1 inch of insulation from each end of the wire.
- (3) Place a piece of heat shrink tubing over one side of the wire. Make sure the tubing will be long enough to cover and seal the entire repair area.
- (4) Spread the strands of the wire apart on each part of the exposed wire (example 1). (Fig. 9)
- (5) Push the two ends of wire together until the strands of wire are close to the insulation (example 2) (Fig. 9)
- (6) Twist the wires together (example 3) (Fig. 9)
- (7) Solder the connection together using rosin core type solder only. **Do not use acid core solder.**
- (8) Center the heat shrink tubing over the joint, and heat using a heat gun. Heat the joint until the tubing is tightly sealed and sealant comes out of both ends of the tubing.
- (9) Secure the wire to the existing ones to prevent chafing or damage to the insulation
- (10) Connect battery and test all affected systems.

CONNECTOR REPLACEMENT

- (1) Disconnect battery.
- (2) Disconnect the connector that is to be repaired from its mating half/component

SERVICE PROCEDURES (Continued)

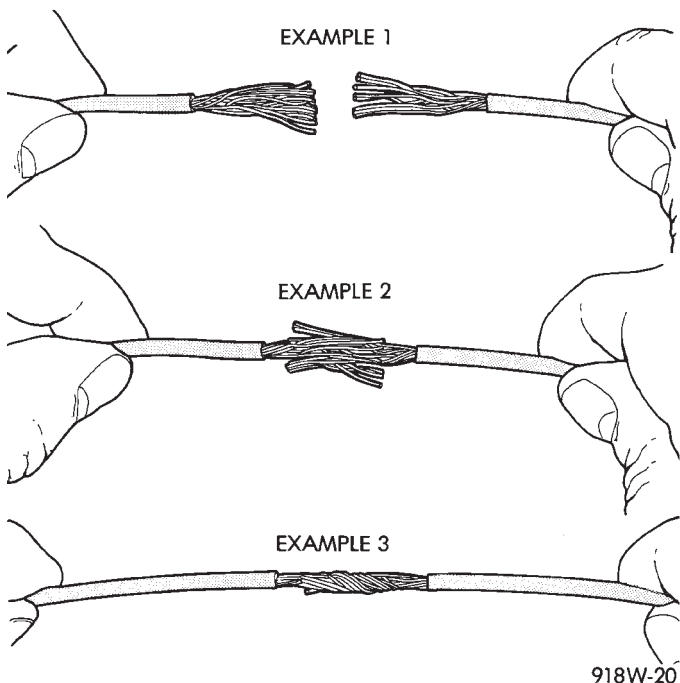


Fig. 9 Wire Repair

(3) Remove the connector locking wedge, if required (Fig. 10)

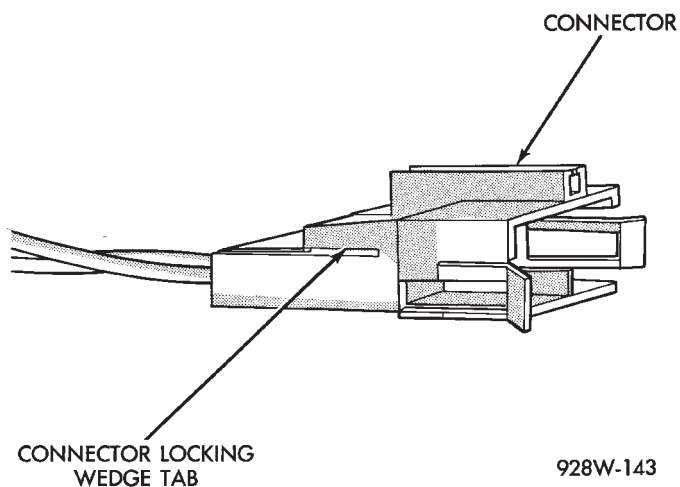


Fig. 10 Connector Locking Wedge

(4) Position the connector locking finger away from the terminal using the proper pick from special tool kit 6680. Pull on the wire to remove the terminal from the connector (Fig. 11) (Fig. 12).

(5) Reset the terminal locking tang, if it has one.

(6) Insert the removed wire in the same cavity on the repair connector.

(7) Repeat steps four through six for each wire in the connector, being sure that all wires are inserted into the proper cavities. For additional connector pin-out identification, refer to the wiring diagrams.

(8) Insert the connector locking wedge into the repaired connector, if required.

(9) Connect connector to its mating half/component.

(10) Connect battery and test all affected systems.

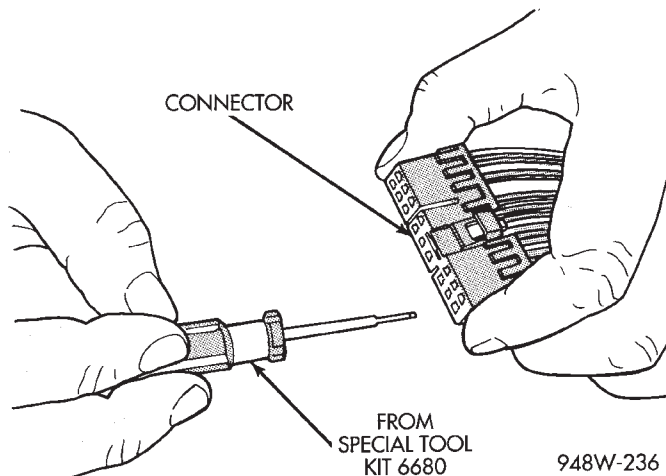


Fig. 11 Terminal Removal

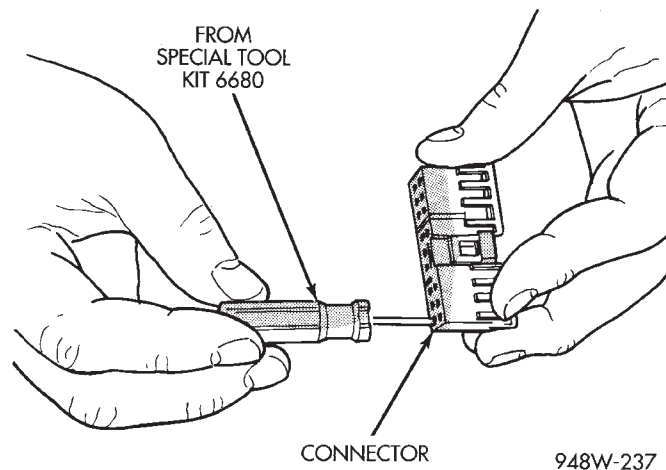


Fig. 12 Terminal Removal Using Special Tool

CONNECTOR AND TERMINAL REPLACEMENT

(1) Disconnect battery.

(2) Disconnect the connector (that is to be repaired) from its mating half/component.

(3) Cut off the existing wire connector directly behind the insulator. Remove six inches of tape from the harness.

(4) Stagger cut all wires on the harness side at 1/2 inch intervals (Fig. 13).

(5) Remove 1 inch of insulation from each wire on the harness side.

(6) Stagger cut the matching wires on the repair connector assembly in the opposite order as was done on the harness side of the repair. Allow extra length for soldered connections. Check that the overall length is the same as the original (Fig. 13).

(7) Remove 1 inch of insulation from each wire.

SERVICE PROCEDURES (Continued)

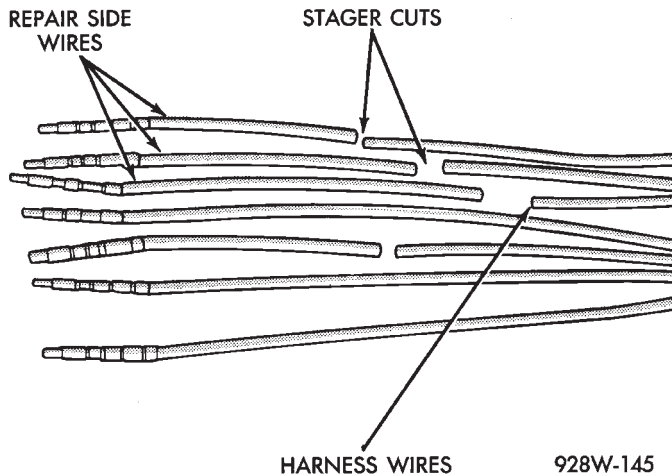


Fig. 13 Stagger Cutting Wires

(8) Place a piece of heat shrink tubing over one side of the wire. Be sure the tubing will be long enough to cover and seal the entire repair area.

(9) Spread the strands of the wire apart on each part of the exposed wires.

(10) Push the two ends of wire together until the strands of wire are close to the insulation.

(11) Twist the wires together.

(12) Solder the connection together using rosin core type solder only. **Do not use acid core solder.**

(13) Center the heat shrink tubing over the joint and heat using a heat gun. Heat the joint until the tubing is tightly sealed and sealant comes out of both ends of the tubing

(14) Repeat steps 8 through 13 for each wire.

(15) Re-tape the wire harness starting 1-1/2 inches behind the connector and 2 inches past the repair.

(16) Re-connect the repaired connector.

(17) Connect the battery, and test all affected systems.

TERMINAL/CONNECTOR REPAIR- AUGAT CONNECTORS

(1) Disconnect battery.

(2) Disconnect the connector from its mating half/component.

(3) Push down on the yellow connector locking tab to release the terminals (Fig. 14).

(4) Using special tool 6932, push the terminal to remove it from the connector (Fig. 15).

(5) Repair or replace the connector or terminal as necessary.

(6) When re-assembling the connector, the locking wedge must be placed in the locked position to prevent terminal push out.

TERMINAL REPLACEMENT

(1) Disconnect battery.

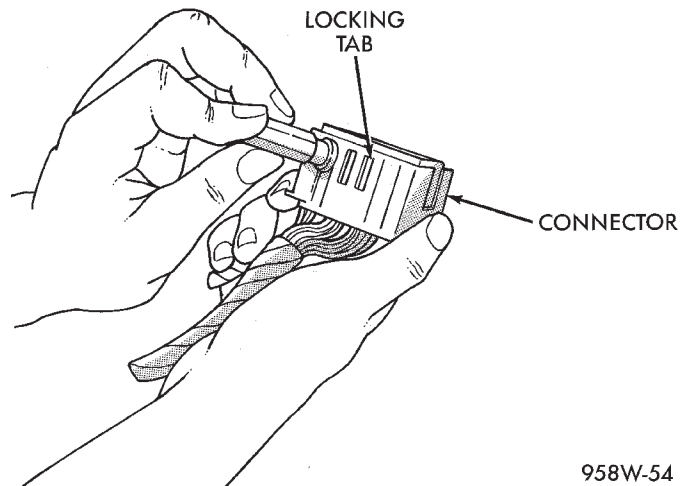


Fig. 14 Augat Connector Repair

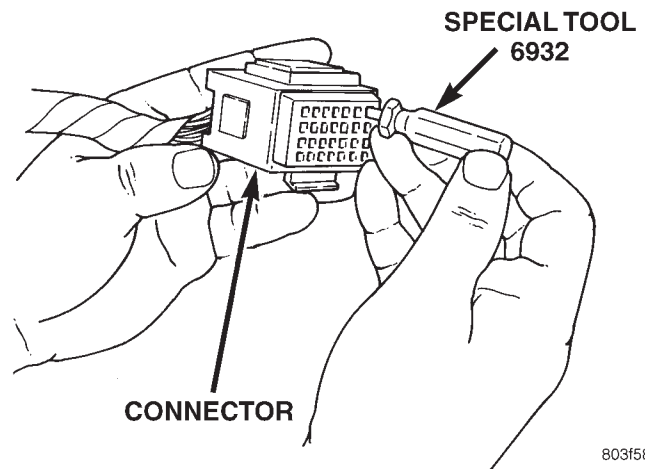


Fig. 15 Using Special Tool 6932

(2) Disconnect the connector being repaired from its mating half. Remove connector locking wedge, if required (Fig. 16).

(3) Remove connector locking wedge, if required (Fig. 16).

(4) Position the connector locking finger away from the terminal using the proper pick from special tool kit 6680. Pull on the wire to remove the terminal from the connector (Fig. 17) (Fig. 18).

(5) Cut the wire 6 inches from the back of the connector.

(6) Remove 1 inch of insulation from the wire on the harness side.

(7) Select a wire from the terminal repair assembly that best matches the color wire being repaired.

(8) Cut the repair wire to the proper length and remove 1 inch of insulation.

(9) Place a piece of heat shrink tubing over one side of the wire. Make sure the tubing will be long enough to cover and seal the entire repair area.

(10) Spread the strands of the wire apart on each part of the exposed wires.

SERVICE PROCEDURES (Continued)

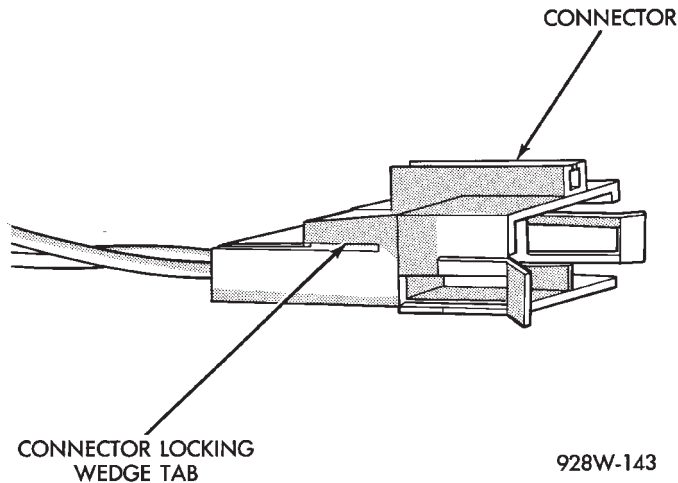


Fig. 16 Connector Locking Wedge Tab (Typical)

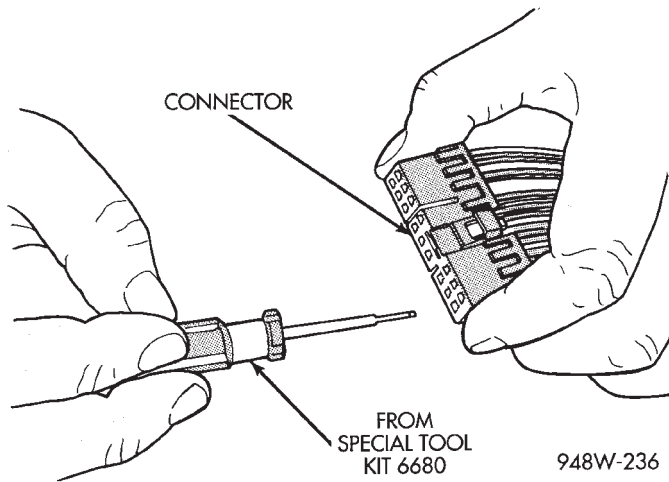


Fig. 17 Terminal Removal

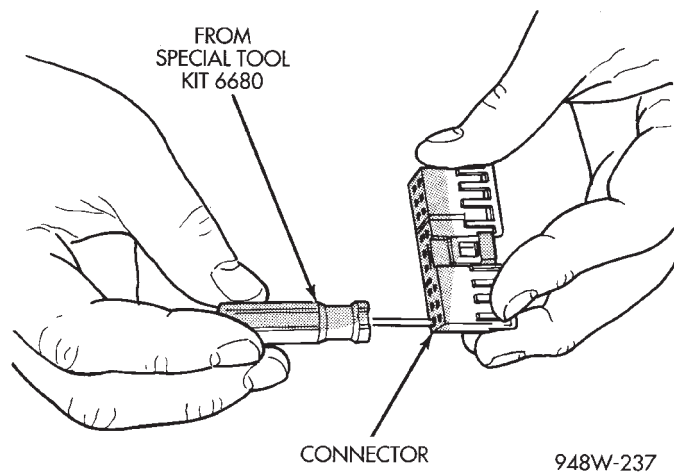


Fig. 18 Terminal Removal Using Special Tool

- (11) Push the two ends of wire together until the strands of wire are close to the insulation.
- (12) Twist the wires together.

(13) Solder the connection together using rosin core type solder only. **Do not use acid core solder.**

(14) Center the heat shrink tubing over the joint and heat using a heat gun. Heat the joint until the tubing is tightly sealed and sealant comes out of both ends of the tubing.

(15) Insert the repaired wire into the connector.

(16) Install the connector locking wedge, if required, and reconnect the connector to its mating half/component.

(17) Re-tape the wire harness starting 1-1/2 inches behind the connector and 2 inches past the repair.

(18) Connect battery, and test all affected systems.

DIODE REPLACEMENT

- (1) Disconnect the battery.
- (2) Locate the diode in the harness, and remove the protective covering.
- (3) Remove the diode from the harness, pay attention to the current flow direction (Fig. 19).

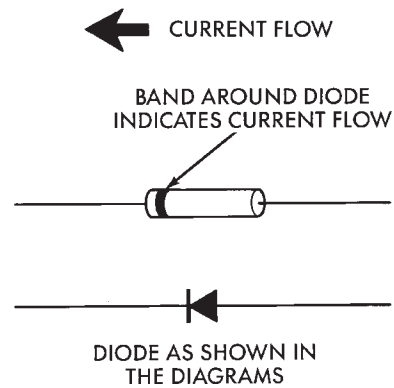


Fig. 19 Diode Identification

(4) Remove the insulation from the wires in the harness. Only remove enough insulation to solder in the new diode.

(5) Install the new diode in the harness, making sure current flow is correct. If necessary refer to the appropriate wiring diagram for current flow.


(6) Solder the connection together using rosin core type solder only. **Do not use acid core solder.**

(7) Tape the diode to the harness using electrical tape making, sure the diode is completely sealed from the elements.


(8) Re-connect the battery, and test affected systems.

SPECIAL TOOLS


WIRING/TERMINAL

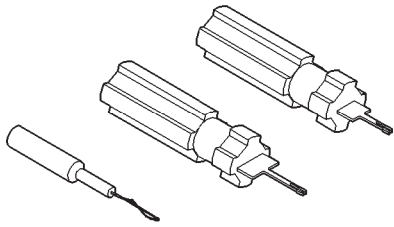


Probing Tool Package 6807

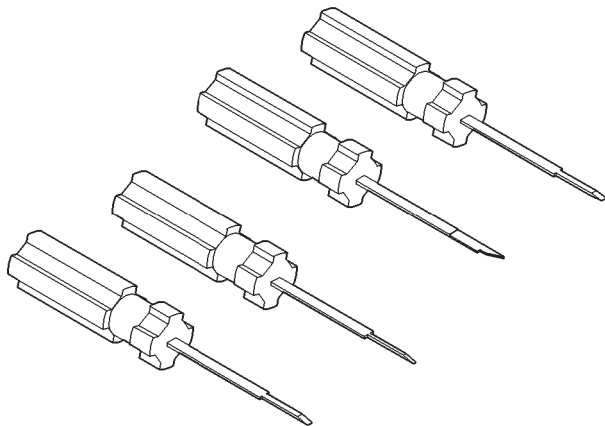

Terminal Pick 6680

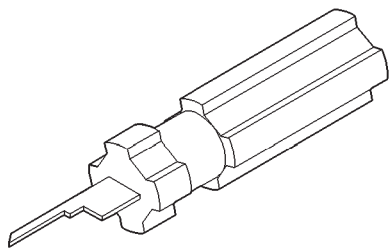

Terminal Removing Tool 6932

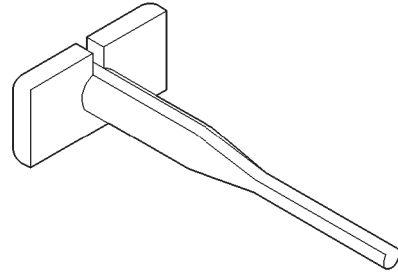

Terminal Removing Tool 6934

8W-02 COMPONENT INDEX

Component	Page	Component	Page
2-4 Pressure Switch8W-31	Fuses (JB)8W-12
2-4 Solenoid8W-31	Fuses (PDC).8W-10
A/C Compressor Clutch8W-42	Fusible Link8W-20
A/C Compressor Clutch Relay8W-42	Gauges.8W-40
A/C Evaporator Temperature Sensor8W-42, 45	Generator.8W-20
A/C Pressure Transducer8W-30, 42	Glove Box Lamp8W-44
A/C- Heater Control.8W-42	Grounds.8W-15
Airbag Control Module.8W-43	Headlamp Delay Relay8W-50
Airbag Squibs8W-43	Headlamp Leveling Motors8W-50
Ambient Temperature Sensor8W-30	Headlamp Leveling Switch8W-50
Antenna.8W-47	Headlamp Switch.8W-50
Antenna Cable.8W-47	Headlamp Washer Module.8W-53
Ash Receiver Lamp8W-44	Headlamp Washer Pump8W-53
Automatic Shut Down Relay8W-30	Headlamps.8W-50
Autostick Switch8W-31	Heated Seat Switch8W-63
Back-Up Lamp Switch.8W-51	Horizontal Motor8W-63
Back-Up Lamps8W-51	Horn Relay8W-41
Battery8W-20	Horn Switches8W-41, 45
Blower Motor Resistor Block8W-42	Horns.8W-41
Body Control Module8W-45	Idle Air Control Motor8W-30
Brake Warning Pressure Switch8W-35	Ignition Coil Pack8W-30
Camshaft Position Sensor8W-30	Ignition Switch8W-10
Center High Mounted Stop Lamp8W-51	Indicators.8W-40
Cigar Lighter/Power Outlet8W-41	Instrument Cluster8W-40
Circuit Breakers8W-12	Intake Air Temperature Sensor8W-30
Clockspring No. 18W-33, 41	Intake Air Temperature/Manifold Absolute Pressure Sensor8W-30
Clockspring No. 28W-43	Intermittent Wiper Relay.8W-53
Cluster Illumination Lamps8W-40, 44	Junction Block8W-12
Clutch Pedal Position Switch.8W-21	Key-In Switch8W-45
Combination Flasher8W-52	Knock Sensor.8W-30
Controller Anti-Lock Brake8W-35	License Lamps.8W-51
Crankshaft Position Sensor8W-30	Low/Reverse Pressure Switch8W-31
Data Link Connector8W-30	Low/Reverse Solenoid8W-31
Daytime Running Lamp Module8W-50	Manifold Absolute Pressure Sensor8W-30
Distributor.8W-30	Master Power Window Switch.8W-60
Dome Lamp8W-44	Mode Door Actuator.8W-42
Door Ajar Switches8W-45	Noise Suppressor8W-30
Door Arm/Disarm Switches8W-39	Oil Pressure Switch.8W-40
Driver Heated Seat Module8W-63	Output Shaft Speed Sensor8W-31
Duty Cycle Evap/Purge Solenoid8W-30	Overdrive Pressure Switch8W-31
Electronic EGR Transducer Solenoid8W-30	Overdrive Solenoid.8W-31
Engine Coolant Temperature Sensor8W-30	Overhead Map Lamps8W-44
Engine Starter Motor.8W-21	Oxygen Sensors8W-30
Engine Starter Motor Relay.8W-21	Panel Lamps Dimmer Switch8W-44
Fog Lamp Switch.8W-50	Park Brake Switch.8W-35, 40, 50
Fog Lamps8W-50, 51	Park/Turn Signal Lamps8W-50
Front Vertical Motor8W-63	Passenger Heated Seat Module8W-63
Fuel Injectors.8W-30	Power Amplifier.8W-47
Fuel Level Sensor8W-40	Power Antenna8W-47
Fuel Pump Module8W-30		
Fuel Pump Relay8W-30		

Component	Page	Component	Page
Power Distribution Center8W-10	Sunroof Switch8W-64
Power Door Lock Motors8W-45, 61	Tail/Stop Lamps8W-51
Power Door Lock Switches8W-61	Throttle Position Sensor8W-30
Power Mirror Switch8W-62	Transmission Control Module8W-31
Power Mirrors8W-48, 62	Transmission Control Relay8W-31
Power Seat Switch8W-63	Transmission Range Sensor8W-31
Power Steering Pressure Switch8W-30	Transmission Solenoid And Pressure Switch Assembly8W-31
Power Window Motors8W-60	Traveler8W-46
Power Window Switches8W-60	Trunk Ajar Switch8W-44
Powertrain Control Module8W-30	Trunk Key Cylinder Switch8W-39
PRNDL Illumination LED8W-44	Trunk Lamp8W-44
Radiator Fan Motor Assembly8W-42	Turbine Speed Sensor8W-31
Radiator Fan Relays8W-42	Turn Lamps8W-52
Radio8W-47	Turn Signal/Hazard Warning Switch8W-52
Rear Fog Lamp Switch8W-51	Underdrive Solenoid8W-31
Rear Vertical Motor8W-63	Up-Shift Lamp8W-40
Rear Window Defogger8W-48	Vehicle Speed Control Servo8W-33
Rear Window Defogger Relay8W-48	Vehicle Speed Control Switch8W-33, 41
Recline Motor8W-63	Vehicle Speed Sensor8W-30
Remote Keyless Entry Antennas8W-61	Visor/Vanity Lamps8W-44
Seat Belt Switch8W-40	VTSS Set LED8W-39, 40
Sentry Key Immobilizer Module8W-39	Warning Lamps8W-40
Side Repeaters8W-52	Wheel Speed Sensors8W-35
Speakers8W-47	Windshield Washer Pump8W-53
Splice Information8W-70	Windshield Wiper Motor8W-53
Stop Lamp Switch8W-33, 51	Wiper High/Low Relay8W-53
Sunroof Control Module8W-64	Wiper Switch8W-53
Sunroof Motor8W-64		
Sunroof Position Sensor8W-64		

8W-10 POWER DISTRIBUTION

Component	Page	Component	Page
A/C Compressor Clutch.	8W-10-17	Fuse 13 (JB)	8W-10-15
A/C Compressor Clutch Relay	8W-10-12, 17	Fuse 13 (PDC).	8W-10-7, 14
Automatic Shutdown Relay.	8W-10-8, 9	Fuse 14 (JB)	8W-10-11
Battery	8W-10-7	Fuse 14 (PDC).	8W-10-7, 14
Body Control Module.	8W-10-11, 15	Fuse 15 (JB)	8W-10-11
Circuit Breaker 1 (JB)	8W-10-15	Fuse 15 (PDC).	8W-10-7, 15
Circuit Breaker 2 (JB)	8W-10-16	Fuse 16 (JB)	8W-10-16
Clutch Pedal Position Switch	8W-10-11	Fuse 16 (PDC).	8W-10-7, 16
Combination Flasher	8W-10-9	Fuse 17 (JB)	8W-10-11
Controller Anti-Lock Brake	8W-10-8, 13, 14	Fuse 17 (PDC).	8W-10-7, 17
Daytime Running Lamp Module.	8W-10-15	Fuse 18 (PDC).	8W-10-7, 17
Downstream Heated Oxygen Sensor.	8W-10-8	Fuse 19 (PDC).	8W-10-7, 17
Driver Heated Seat Module	8W-10-13	G301	8W-10-10
Engine Starter Motor	8W-10-10	Headlamp Delay Relay	8W-10-15
Engine Starter Motor Relay	8W-10-10, 11	Headlamp Switch	8W-10-15
Fuel Pump Module	8W-10-10, 12	Headlamp Washer Module	8W-10-17
Fuel Pump Relay.	8W-10-10, 13	High Speed Radiator Fan Relay	8W-10-12, 17
Fuse 1 (JB)	8W-10-16	Ignition Switch	8W-10-10, 11, 16
Fuse 1 (PDC)	8W-10-8, 9	Instrument Cluster	8W-10-10, 12
Fuse 2 (PDC)	8W-10-7, 8	Intermittent Wiper Relay	8W-10-17
Fuse 3 (PDC)	8W-10-7, 8	Junction Block	8W-10-9, 10, 11, 14, 15, 16
Fuse 4 (JB)	8W-10-16	Low Speed Radiator Fan Relay.	8W-10-12, 17
Fuse 4 (PDC)	8W-10-7, 9	Passenger Heated Seat Module.	8W-10-13
Fuse 5 (JB)	8W-10-9	Power Distribution Center	8W-10-7, 8, 9, 10, 11,12,13,14, 15, 16, 17
Fuse 5 (PDC)	8W-10-7, 9	Powertrain Control Module.	8W-10-9, 13
Fuse 6 (JB)	8W-10-14	Radiator Fan Motor Assembly.	8W-10-17
Fuse 6 (PDC)	8W-10-7, 9	Rear Window Defogger	8W-10-14
Fuse 7 (JB)	8W-10-14	Rear Window Defogger Relay	8W-10-14
Fuse 7 (PDC).	8W-10-7, 10	Sentry Key Immobilizer Module	8W-10-9, 12
Fuse 8 (JB)	8W-10-14	Stop Lamp Switch.	8W-10-9
Fuse 8 (PDC).	8W-10-7, 10	Transmission Control Module	8W-10-8, 11
Fuse 9 (JB)	8W-10-15	Transmission Control Relay	8W-10-8
Fuse 9 (PDC).	8W-10-11, 12	Transmission Solenoid And Pressure Switch Assembly.	8W-10-8
Fuse 10 (JB)	8W-10-15	Traveler	8W-10-12
Fuse 10 (PDC).	8W-10-11, 13	Windshield Wiper Motor	8W-10-17
Fuse 11 (JB)	8W-10-11	Wiper High/Low Relay	8W-10-17
Fuse 11 (PDC).	8W-10-7, 13		
Fuse 12 (JB)	8W-10-15		
Fuse 12 (PDC).	8W-10-7, 14		

