



**CITROËN**

---

## **TECHNICAL TRAINING**

# **OPERATING PRINCIPLE - BOSCH ME7.4.4 / M7.4.4 AND EOBD**

DOCUMENT REF N°: 1.3.277 September 2000

---

**DEALER QUALITY  
DEVELOPMENT DIVISION**

#### **NOTE TO READERS**

This document contains information of a confidential nature.  
It is therefore strictly reserved for the use of CITROËN trainers and may not be  
distributed to people outside the relevant departments.

## BROCHURE SUMMARY

### OPERATING PRINCIPLE - BOSCH ME7.4.4/M7.4.4 AND EOBD

The aim of this document is to define the composition and operation of the BOSCH ME7.4.4 and M.7.4.4 petrol engine management systems.

These devices consist of a digital ECU which analyses information from the various sensors and then operates the injectors and ignition coils at the right moment. It is also responsible for operating the petrol vapour recycling electrovalve, the gas throttle or idle regulation motor and an air injection to the exhaust pump.

The following subjects will be dealt with in this document:

- General details and presentation of the systems.
- Description and operation of the components.
- Wiring diagrams.
- Diagnostics.

EOBD is dealt with at the end of the document.

---

# CONTENTS

<b>CHAPTER 1: FOREWORD .....</b>	<b>1</b>
<b>CHAPTER 2: DESCRIPTION OF THE COMPONENTS .....</b>	<b>9</b>
I - INLET AIR PRESSURE SENSOR.....	9
II - ENGINE SPEED SENSOR.....	11
III - KNOCK SENSOR .....	13
IV - MOTORISED THROTTLE HOUSING (ME7.4.4) .....	14
V - ACCELERATOR PEDAL POSITION SENSOR (ME7.4.4).....	18
VI - COOLANT TEMPERATURE SENSOR .....	20
VII - COOLANT TEMPERATURE THERMOCONTACT.....	22
VIII - PRESSURESTAT .....	23
IX - IGNITION COIL.....	24
X - POWER STEERING OIL PRESSURE SWITCH * .....	26
XI - FUEL PRESSURE REGULATOR.....	27
XII - INJECTORS.....	28
XIII - FUEL PUMP .....	28
XIV - FUEL FILTER .....	29
XIV - DOUBLE MULTIFUNCTION RELAY.....	30
XVI - CANISTER RESERVOIR .....	31
XIX - DOWNSTREAM OXYGEN SENSOR.....	34
XX - CATALYTIC CONVERTER .....	36
XXI - STEPPER MOTOR ( M7.4.4 ) .....	37

---

# CONTENTS

<b>CHAPTER 3: DIAGNOSTIC ASSISTANCE .....</b>	<b>43</b>
I - IDENTIFICATION .....	43
II - HISTORY .....	44
III - READ FAULTS .....	44
IV - ASSOCIATED VARIABLES .....	47
V - ERASE FAULTS.....	47
VI - PARAMETER MEASUREMENT .....	48
VII - ACTUATOR TESTS .....	50
VIII - INITIALISING AUTOADAPTIVES .....	51
IX - TELECODING .....	52
X - DOWNLOADING .....	53
<b>CHAPTER 4: WIRING DIAGRAM .....</b>	<b>55</b>
I - LAYOUT DIAGRAM .....	55
II - PARTS LIST .....	56
<b>CHAPTER 5: EOBD - GENERAL DETAILS .....</b>	<b>57</b>
<b>CHAPTER 6: OPERATING FAULTS DETECTED .....</b>	<b>59</b>

## **OPERATING PRINCIPLE - BOSCH ME7.4.4/M7.4.4 AND EOBD**