

CONDOR



Boom Supported Elevation Work Platform Models T80 AND T86J

Illustrated Parts Manual

This manual covers M-T80
M-T86J

At TIME CONDOR Corp., we are dedicated to continuously improving our products in order to bring you state of the art features and models required in today's competitive market place. Thus, product specifications are subject to change without notice.

Our commitment to quality in design, manufacturing, process control, customer service, and parts support is evident with the "New" CONDOR. Therefore, we encourage you to notify us of any discrepancies in this manual. Please write or fax the Technical Publications team:

Technical Publications Department e-mail:
condorservice@timecondor.com

Phone (254) 420-5200
Fax 800-443-5803

TIME CONDOR Corp.
P.O. Box 21447
Waco, TX 76702-1447

TIME CONDOR Corp.
8300 Imperial Drive
Waco, TX 76712

Please visit the TIME CONDOR Corp. Web Site at:
www.timecondor.com

Effectivity Page

Effectivity Page



Table of Contents

Service Information	v
How to Order Parts	vii
Service Parts Fax Order Form	ix
Recommended Spare Parts List	x
Section One	Final Installation
Figure 1-1	Specification T-80 1-2
Figure 1-2	Final Installation T-80..... 1-3
Figure 1-3	Specification T-86J..... 1-4
Figure 1-4	Final Installation T-86J 1-5
Section Two	Decals
Figure 2-1	Decal Installation 2-2
Section Three	Chassis
Figure 3-1	Chassis Assembly 3-2
Figure 3-2	Chassis Rotation Assembly 3-4
Figure 3-3	Torque Hub 3-6
Figure 3-4	Steer Cylinder 3-8
Figure 3-5	Rear Axle Assembly 3-10
Figure 3-6	Front Axle Assembly 3-12
Figure 3-7	Drive Valve Installation 3-14
Figure 3-8	Idler Hub Bearing Assembly 3-16
Figure 3-9	2 Steer Valve Assembly 3-18
Figure 3-10	Tire Installation 3-19
Figure 3-11	Hydraulic Swivel 3-20
Figure 3-12	Electrical Slip Ring Assembly 3-22
Section Four	Turret
Figure 4-1	Turret Assembly 4-2
Figure 4-2	Turret Rotation Assembly 4-4
Figure 4-3	Turret Cylinder 4-6
Figure 4-4	Lower Control Box 4-8
Figure 4-5	Engine Pump Filter Assembly 4-10
Figure 4-6	Air Cleaner Installation 4-12
Figure 4-7	Engine Installation 4-14

Table of Contents

Figure 4-8	Limit Switch	4-16
Figure 4-9	Master Level Cylinder	4-18
Figure 4-10	Hose Kit	4-20
Section Five	Tray	
Figure 5-1	Tray Installation	5-2
Figure 5-2	Valve Installation with Oscillating Axle	5-4
Figure 5-3	Valve Installation without Oscillating Axle	5-6
Figure 5-4	Fuel Tank Assembly	5-8
Figure 5-5	Hydraulic Tank Assembly	5-10
Figure 5-6	Return Line Filter	5-12
Figure 5-7	Emergency Pump	5-14
Section Six	Boom	
Figure 6-1	Boom Assembly	6-2
Figure 6-2	Main Boom Assembly	6-4
Figure 6-3	Base Boom Assembly	6-6
Figure 6-4	Mid Boom Assembly	6-8
Figure 6-5	Tip Boom Assembly	6-10
Figure 6-6	Cylinder Assembly	6-12
Figure 6-7	Length Sensor	6-14
Figure 6-8	Angle Sensor	6-16
Figure 6-9	Skirt Assembly T-80	6-18
Figure 6-10	Skirt Assembly T-86J	6-20
Section Seven	Platform	
Figure 7-1	Platform Assembly	7-2
Figure 7-2	Upper Control Box	7-4
Figure 7-3	Boom Control and Jib Control Joystick	7-6
Figure 7-4	Drive Control Joystick	7-8
Figure 7-5	Main Boom Joystick	7-10
Section Eight	Hose	
Figure 8-1	Hose Installation	8-2

Table of Contents

Section Nine	Schematics	
Figure 9-1	Harness, Nissan H25 Gase	9-2
Figure 9-2	Harness, LP Tank	9-3
Figure 9-3	Platform 110V Plug w/ Cable	9-4
Figure 9-4	Harness, Duetz Panel/Engine	9-5
Figure 9-5	Wiring Assembly, Gas Engine Panel	9-6
Figure 9-6	Harness, Main Valve	9-8
Figure 9-7	Harness, Main Valve	9-10
Figure 9-8	Dual Fuel Installation	9-12
Figure 9-9	Deutz Engine Wiring Panel	9-14