Full download: http://manualplace.com/download/condor-scissors-lift-v2648xl-v2653xl-92357-parts-book/



SELF-PROPELLED ELEVATING WORK PLATFORM


MODEL V2648XL, V2648

Serial Number X51597001

MODEL V2653XL, V2653

Serial Number X53597001

ILLUSTRATED PARTS MANUAL

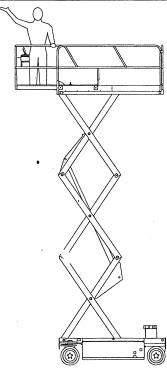

SHIPPING ADDRESS

CONDOR®

TIME CONDOR Corporation 8300 Imperial Drive Waco, Texas 76712 (254) 420-5200

MAILING ADDRESS

CONDOR®

TIME CONDOR Corporation P.O. Box 21447 Waco, Texas 76.702-1447 (254) 420-5200

MANUAL 92357-003



CONDOR® SERVICE INFORMATION

1. If you need assistance or have any service or maintenance questions, TIME CONDOR Corportion service and parts personnel are always available by phone or fax. The telephone numbers are:

> (254) 420-5200 Telephone (254) 420-5298 Voice Mail (800) 443-5803 FAX

- 2. There are numerous written Maintenance Procedures available for this **CONDOR**®. These procedures are available through the TIME CONDOR Corporation Service Department to anyone who requests them.
- 3. Service and maintenance are not a substitute for trained, qualified service technicians. TIME CONDOR Corporation conducts service schools on a continuing basis. Call any of our service or sales persons for a schedule. Remember, training of mechanics is the responsibility of their employer, but TIME CONDOR Corporation Service Schools help you provide this training.
- 4. TIME CONDOR CorporationService School Training Manuals are available for purchase through the parts department. The part numbers for these manuals are: #92333 for self-propelled models and #92334 for truck-mounted models.

TIME CONDOR Corporation

INTRODUCTION

The primary purpose of this manual is to provide the user with a thorough understanding of the proper operating procedures necessary to comply with the intended use of the CONDOR®, and to provide the information necessary to maintain and service the CONDOR®.

THE OPERATOR'S MANUAL MUST BE RETAINED ON THE CONDOR® AT ALL TIMES.

Do not attempt to operate or service the CONDOR® until you have read and understood all information provided in this manual. Familiarize yourself with the functions and operations of the upper and lower controls. A good understanding of the controls, their limitations, and their capabilities will maximize operating efficiency. The various decals attached to this CONDOR® also contain vital operational instructions. Read the decals before operating this CONDOR®.

It is YOUR RESPONSIBILITY to follow procedures while operating the **CONDOR®**. The manufacturer of this **CONDOR®** cannot control the wide range of applications that may be used in carrying out a variety of jobs. Therefore, it is THE USER'S RESPONSIBILITY to consider all personnel when making decisions regarding the **CONDOR®**'s intended use.

It is also YOUR RESPONSIBILITY to understand and obey all federal, state, and local regulations regarding the operation and use of aerial work platforms. A copy of the ANSI/SIA 92.6-1990 Manual of Responsibilities is attached for your use.

TIME CONDOR Corporation reserves the right to modify, improve, add, and/or delete certain design features of its products without any obligation to incorporate new features into products previously sold. Our manuals are continually updated to reflect these changes.

DO NOT ALTER OR MODIFY THIS CONDOR® WITHOUT PRIOR WRITTEN APPROVAL FROM THE MANAGEMENT OF TIME CONDOR CORPORATION

SERVICE & MAINTENANCE

Many of the parts used in the manufacture of the **CONDOR®** have specific properties, and the manufacturer recommends that replacement parts be purchased through TIME CONDOR Corporation in order to ensure the original integrity of the product. Repairs and adjustments should only be made by trained and qualified personnel. Please refer to the maintenance and parts sections of the TIME CONDOR Corporation Operation, Maintenance, & Parts Manual for information on service and maintenance of the **CONDOR®**.


NOTE: Please refer to the TIME CONDOR Corporation Parts section of the Operation, Maintenance, & Parts Manual for information pertaining to your machine.

1

CONDOR® MODEL V2648/53 & V2648/53XL ILLUSTRATED PARTS MANUAL

TABLE OF CONTENTS

FABLE OF CONTENTS 1 FIGURE DESCRIPTION PAGE A Serial Number Location 2 B Recommended Spare Parts List 3 C How to Order Parts 4,5 1 Final Installation 6 2 Decal Installation 8 3 Chassis Assembly 10 4 -Hose Kit 14 5 -Steer Cylinder 16 6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 44 18 Platform Installation	INTRODUCTION				
B Recommended Spare Parts List 3 C How to Order Parts 4,5 1 Final Installation 6 2 Decal Installation 8 3 Chassis Assembly 10 4 -Hose Kit 14 5 -Steer Cylinder 16 6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 34 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To			1 PAGE		
C How to Order Parts 4,5 1 Final Installation 6 2 Decal Installation 8 3 Chassis Assembly 10 4 -Hose Kit 14 5 -Steer Cylinder 16 6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) </td <td>A</td> <td> Serial Number Location</td> <td> 2</td>	A	Serial Number Location	2		
C How to Order Parts 4,5 1 Final Installation 6 2 Decal Installation 8 3 Chassis Assembly 10 4 -Hose Kit 14 5 -Steer Cylinder 16 6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) </td <td>В</td> <td> Recommended Spare Parts List</td> <td> 3</td>	В	Recommended Spare Parts List	3		
2 Decal Installation 8 3 Chassis Assembly 10 4 -Hose Kit 14 5 -Steer Cylinder 16 6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
3 Chassis Assembly 10 4 -Hose Kit 14 5 -Steer Cylinder 16 6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58	1	Final Installation	6		
4 -Hose Kit 14 5 -Steer Cylinder 16 6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58	2	Decal Installation	8		
4 -Hose Kit 14 5 -Steer Cylinder 16 6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58	3	Chassis Assembly	10		
6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24 VDC Assembly 24 13 Valve Installation 26 14 Charger 115 V/60 Hz-25 A/24 VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
6 -Brake Cylinder 17 7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24 VDC Assembly 24 13 Valve Installation 26 14 Charger 115 V/60 Hz-25 A/24 VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58	5	Steer Cylinder	16		
7 -Hub Motor Assembly 18 8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
8 -Rear Hub Assembly 19 9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24 VDC Assembly 24 13 Valve Installation 26 14 Charger 115 V/60 Hz-25 A/24 VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
9 Belly Pan Assembly 20 10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24 VDC Assembly 24 13 Valve Installation 26 14 Charger 115 V/60 Hz-25 A/24 VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
10 Motor & Pump Assembly 22 11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
11 Pump Assembly 23 12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
12 Motor 24VDC Assembly 24 13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58	11	Pump Assembly	23		
13 Valve Installation 26 14 Charger 115V/60Hz-25A/24VDC 30 15 Wiring Installation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58	12	Motor 24 VDC Assembly	24		
15 WiringInstallation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 PlatformInstallation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
15 WiringInstallation 34 16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 PlatformInstallation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58	14	Charger 115V/60Hz-25A/24VDC	30		
16 Lower Control Box Assembly 36 17 Armstack Assembly 44 18 Platform Installation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
17 Armstack Assembly 44 18 PlatformInstallation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58					
18 PlatformInstallation 50 19 Upper Control Box Assembly 52 20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58		=			
20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58		•			
20 110 Volt Extension To Platform 56 21 Travel Alarm (Option) 57 22 Motion Alarm (Option) 58	19	Upper Control Box Assembly	52		
21 57 22 Motion Alarm (Option) 58					
22 Motion Alarm (Option)					
		· - · · · · · · · · · · · · · · · · · ·			
43		·			
24 Descend Alarm (Option)					
25					
26					
27					
28Low-Voltage Warning Interrupt (XL-Option)					
29					

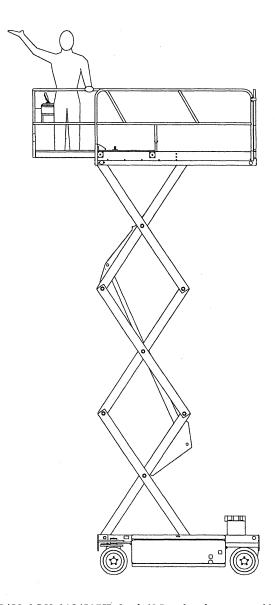

 $The CONDOR @ \,Model \,V2648/53 \,\&V2648/53 XL \,Serial \,Number \,is \,stamped \,in \,two \,locations \,on \,the \,machine.$

- 1. The first place to find the serial number is on the data plate affixed to the chassis, at the rear between fork lift pockets.
- 2. The second place to find the serial number is at the front steering knuckle kingpin.

CONDOR® MODEL V2648/53 & V2648/53XL (1 UNIT—1 YEAR OPERATION)

PARTNUMBER	DESCRIPTION	V2648/53 QTY	V2648/53XL QTY
91029	Nut Lug ½"	5	5
	Stud Wheel 1/2"-20 x 1 3/4"		
	Cable Assembly, Emergency Lowering		
	Coupling Nut, 10-32 UNF		
	Latch Door		
	Element, Hydraulic Filter P/N 33430		
	Fitting, Swivel 90° Elbow 6-6		
	Switch Limit Body Only		
	Offset Head Limit Switch		
	Limit Switch, Arm Short		
	Fuse, 15 Amp		
	Fuse Holder		
	Solenoid 24V		
	Diode		
	Relay, 24V SPDT Bosch		
	Jumper		
	Decal Installation, V2648		
	Decal histaliation, v2048		
	Decal Installation, V2653		
	Decal histaliation, v2033 Decals, V2653 Essentials		
	Hose Kit		
	Toggle Switch		
	Switch		
	Operator, Red P-Pull		
	Base, 1 NC Contact		
	Operator, 3 Pos Key		
	Base, 2 NO Contacts		
	Charger		
	Plunger, Hand Retract Spring		
	Spring Loaded Pull-Up Latch		
	Controller, Drive/Steer		
	Decal Installation, V2648XL		
	Decal Instantation, V2048XL Decals, V2648XL Essentials		
	Decal Installation, V2653XL		
	Decal installation, V2033AL		
	Spring-Deck Latch		
	Receptacle		
	•		
	Mounting Base		
	Operator, 3 Pos. Rot.		
	Base, NO/NC Contacts		
	Operator, Black P-Button		
	Base, 1 NO Contact		
	Operator, Green P-Button		
54913	Operator, Black/Black Db. P-Button		1

Condor Scissors Lift V2648xl V2653xl 92357 Parts Book

- 1. When ordering parts for your CONDOR®, ensure that you are able to give the model and serial numbers of all units for which parts are needed. The serial number(s) will assist the TIME CONDOR Corporation Parts Department in providing the correct parts for your machine(s). Please refer to FIGURE A for Serial Number Location on this model.
- 2. If known, please specify the TIME CONDOR Corporation part number(s) for the part(s) you require, and always provide a complete description of all parts.
- 3. Fax orders are preferable, though parts may also be ordered by mail and telephone. A sample parts order (with fax number) follows this page.
- 4. Parts needed for a warranty repair must be purchased through the TIME CONDOR Corporation Parts Department. Credit will be authorized through the Service Department after a Warranty Claim has been submitted to TIME CONDOR Corporation A Warranty Claim is to be filed for any part received as "defective". See Maintenance Manual for Warranty Procedures.
- 5. TIME CONDOR Corporation will ship parts as per our customers' request at the time of the order—i.e., UPS, Federal Express, or preferred truck line. When shipping Federal Express, your customer account must be given at the time of the order.
- 6. TIME CONDOR Corporation classifies its orders in the following ways:
 - Emergency (unit out of service) Top priority. Shipping deadline for emergency

orders to ship same day is 2.00 p.m. Central Standard Time. Any emergency order received after 2.00 p.m. will be shipped the

following day.

Stock Order to be shipped within 1 week.

- 7. Condor Div. has a \$25.00 Net Minimum Billing charge per order.
- 8. All price quotations will be valid for 90 days.
- 9. Parts shown as shipped on the TIME CONDOR Corporation packing list and subsequent invoice but <u>not received</u> by the dealer/customer MUST be reported within 10 days after the date of shipment. If the parts are still required, a NEW parts order must be submitted. Shortages and discrepancies will be reviewed on an individual basis by the Parts staff and adjustments will be made accordingly.
- 10. Invoice discrepancies regarding incorrect prices or discounts should be reported immediately to the Parts Department. Report the Sales Order number, Purchase Order number, and Invoice number. Your request will be reviewed and adjustments will be made accordingly.