


LT2180 Tractor  
Air Cleaner

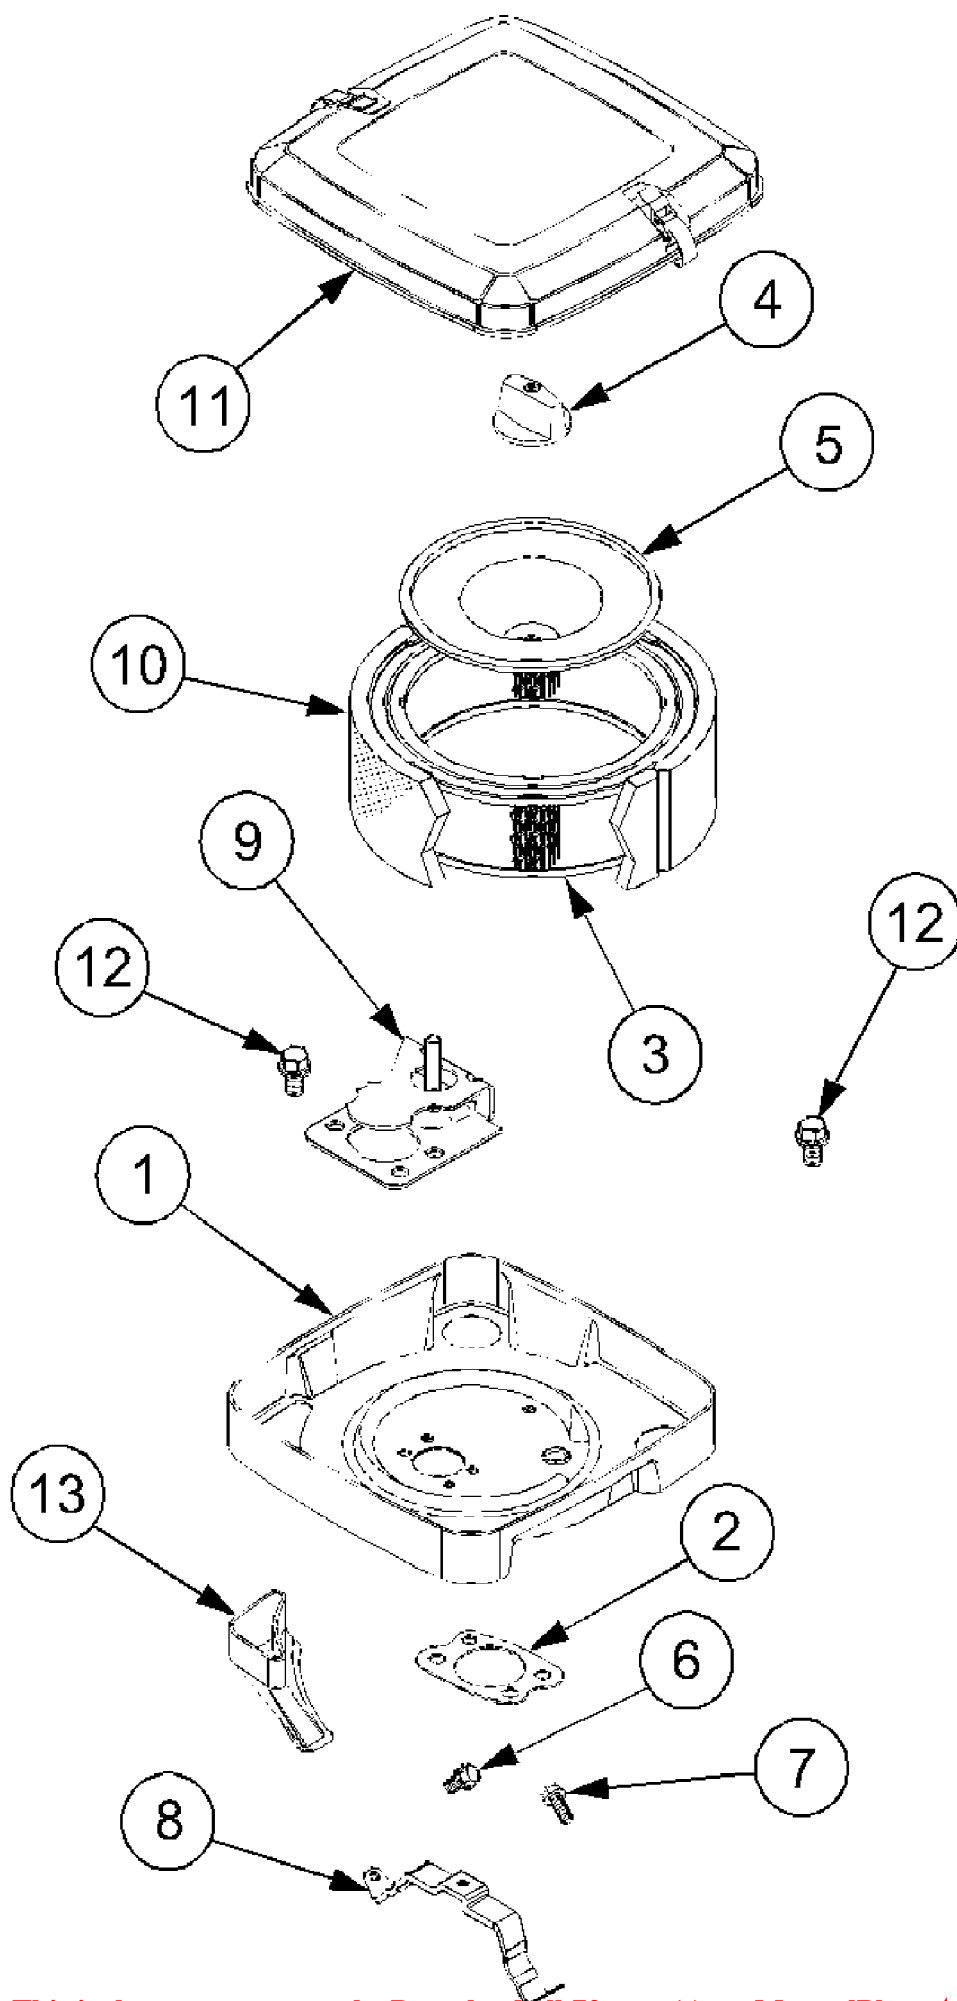


LT2180 Tractor  
Air Cleaner

Page 2 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	BS-691561	1	/P	Base, Air Cleaner
2	BS-692081	1	/P	Gasket, Air Cleaner
3	BS-394018	1	S	Filter, Air Cleaner Cartridge
4	BS-691985	1	/P	Knob, Air Cleaner
5	BS-692079	1	/P	Retainer, Air Filter
6	BS-692539	1		Screw, Cleaner Mounting Strap
7	BS-690872	1		Screw, Cleaner Mounting Strap
8	BS-692153	1	/P	Strap, Air Cleaner Mounting
9	BS-691577	1	/P	Shield, Carburetor
10	BS-272490	1	S	Pre Cleaner, Filter
11	BS-692097	1	S	Cover, Air Cleaner
12	BS-807084	2		Screw, Air Cleaner Base
13	BS-690743	1	/P	Duct, Air

LT2180 Tractor  
Battery, Electrical Components And Switches

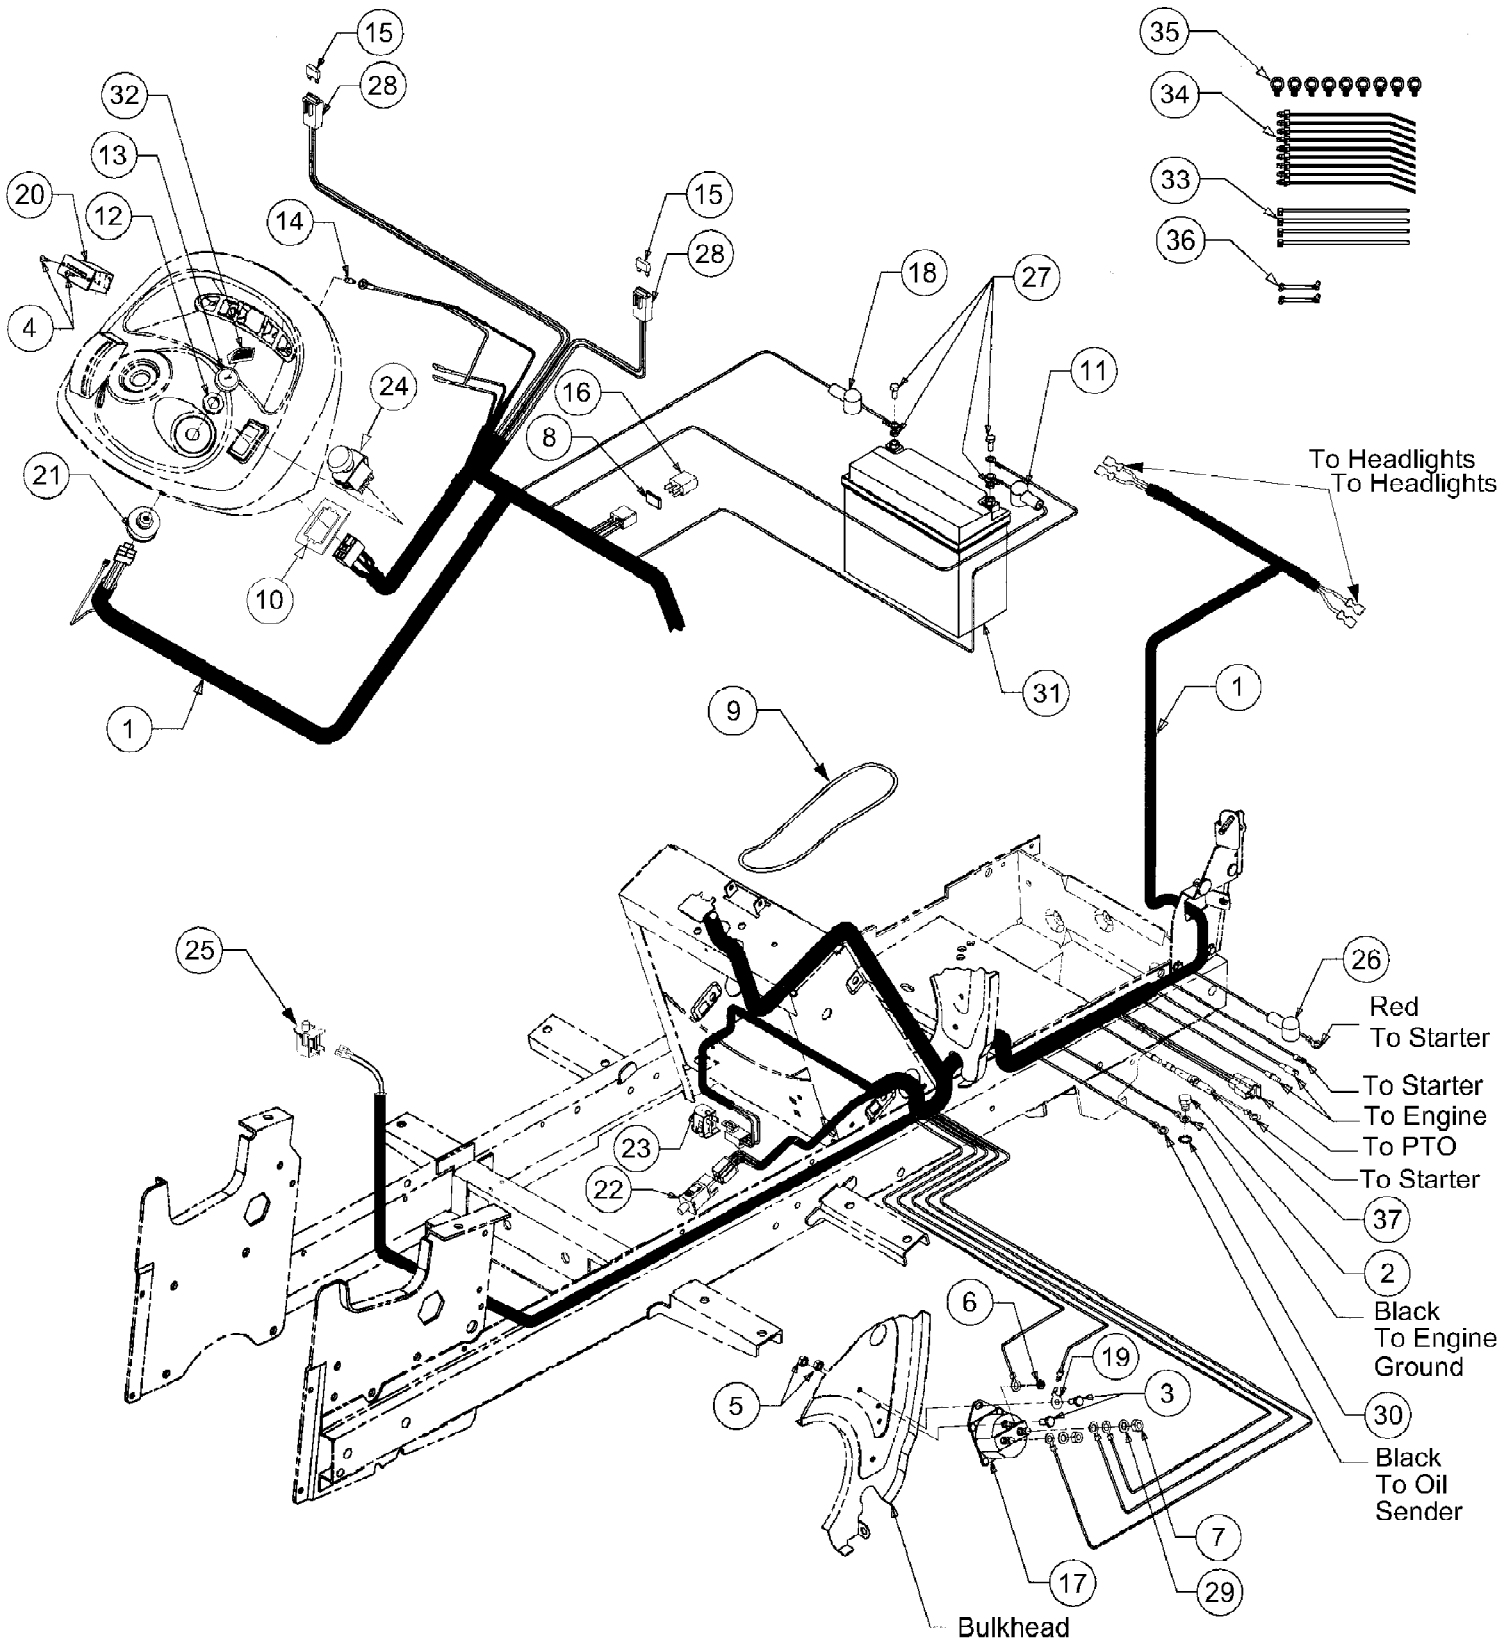


LT2180 Tractor  
Battery, Electrical Components And Switches

Page 4 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	629-3067	1	S	Wire Harness, Main
2	710-0168	1	/P	Screw, Hex Cap, 3/8-16 x .50
3	710-0751	2	/P	Screw, Hex Cap, 1/4-20 x .625
4	710-0936	2		Screw, Truss Hd Tapp, #6 x .62
5	712-0271	2	/P	Nut, Hex Sems, 1/4-20
6	712-0349	1	/P	Nut, Hex, #10-32
7	712-3010	2	S	Nut, Hex, 5/16-18 GR5
8	721-0342	1	S	Gasket, Silicone
9	723-04016	1		Strap, Battery Retainer
10	783-0462	1	/P	Bracket, PTO Switch Retainer
11	725-0340	1		Cover, Terminal Black
12	725-1346	1	S	Nut, Ignition Switch
13	725-1347	1	/P	Cap, Ignition Switch
14	725-1365	1	S	Bulb, Indicator
15	725-3243	2		Fuse, 25 Amp
16	725-1648	1	S	Relay
17	725-3001	1	S	Solenoid, Starter
18	725-3007A	1	/P	Cover, Terminal Red
19	725-3147	1		Lug, Quick Connect
20	725-3159	1	S	Hour Meter
21	725-3163	1	S	Switch, Ignition
22	725-3164A	1	S	Switch, Interlock (Brake)
23	725-3166	1	S	Switch, Snap Mount - Normally Closed
24	725-3233	1	S	Switch, PTO
25	725-3166	1	S	Switch, Seat
26	725-3237	3		Cover, Terminal Red
27		1		Battery Cable Hardware
	710-3015	2	/P	Screw
	712-0271	2	/P	Sems Nut
28	729-0357	2		Holder, Fuse w/Mounting Clip
29	736-0119	2	S	Washer, Lock, 5/16
30	736-0148	1	/P	Washer, External Lock, 3/8
31	725-1707D	1	S	Battery
32	759-3476A	1	S	Key, Ignition (Set of 2)
33	725-0157	4	/P	Tie, Self-Clinch Cable
34	726-0154	9	S	Tie, Pushmount
35	726-3055	9		Clip, Cable
36	726-0161	2		Clip, Cable
37	759-3689	1	S	Diode Assembly w/Lead

LT2180 Tractor  
Blower Housing

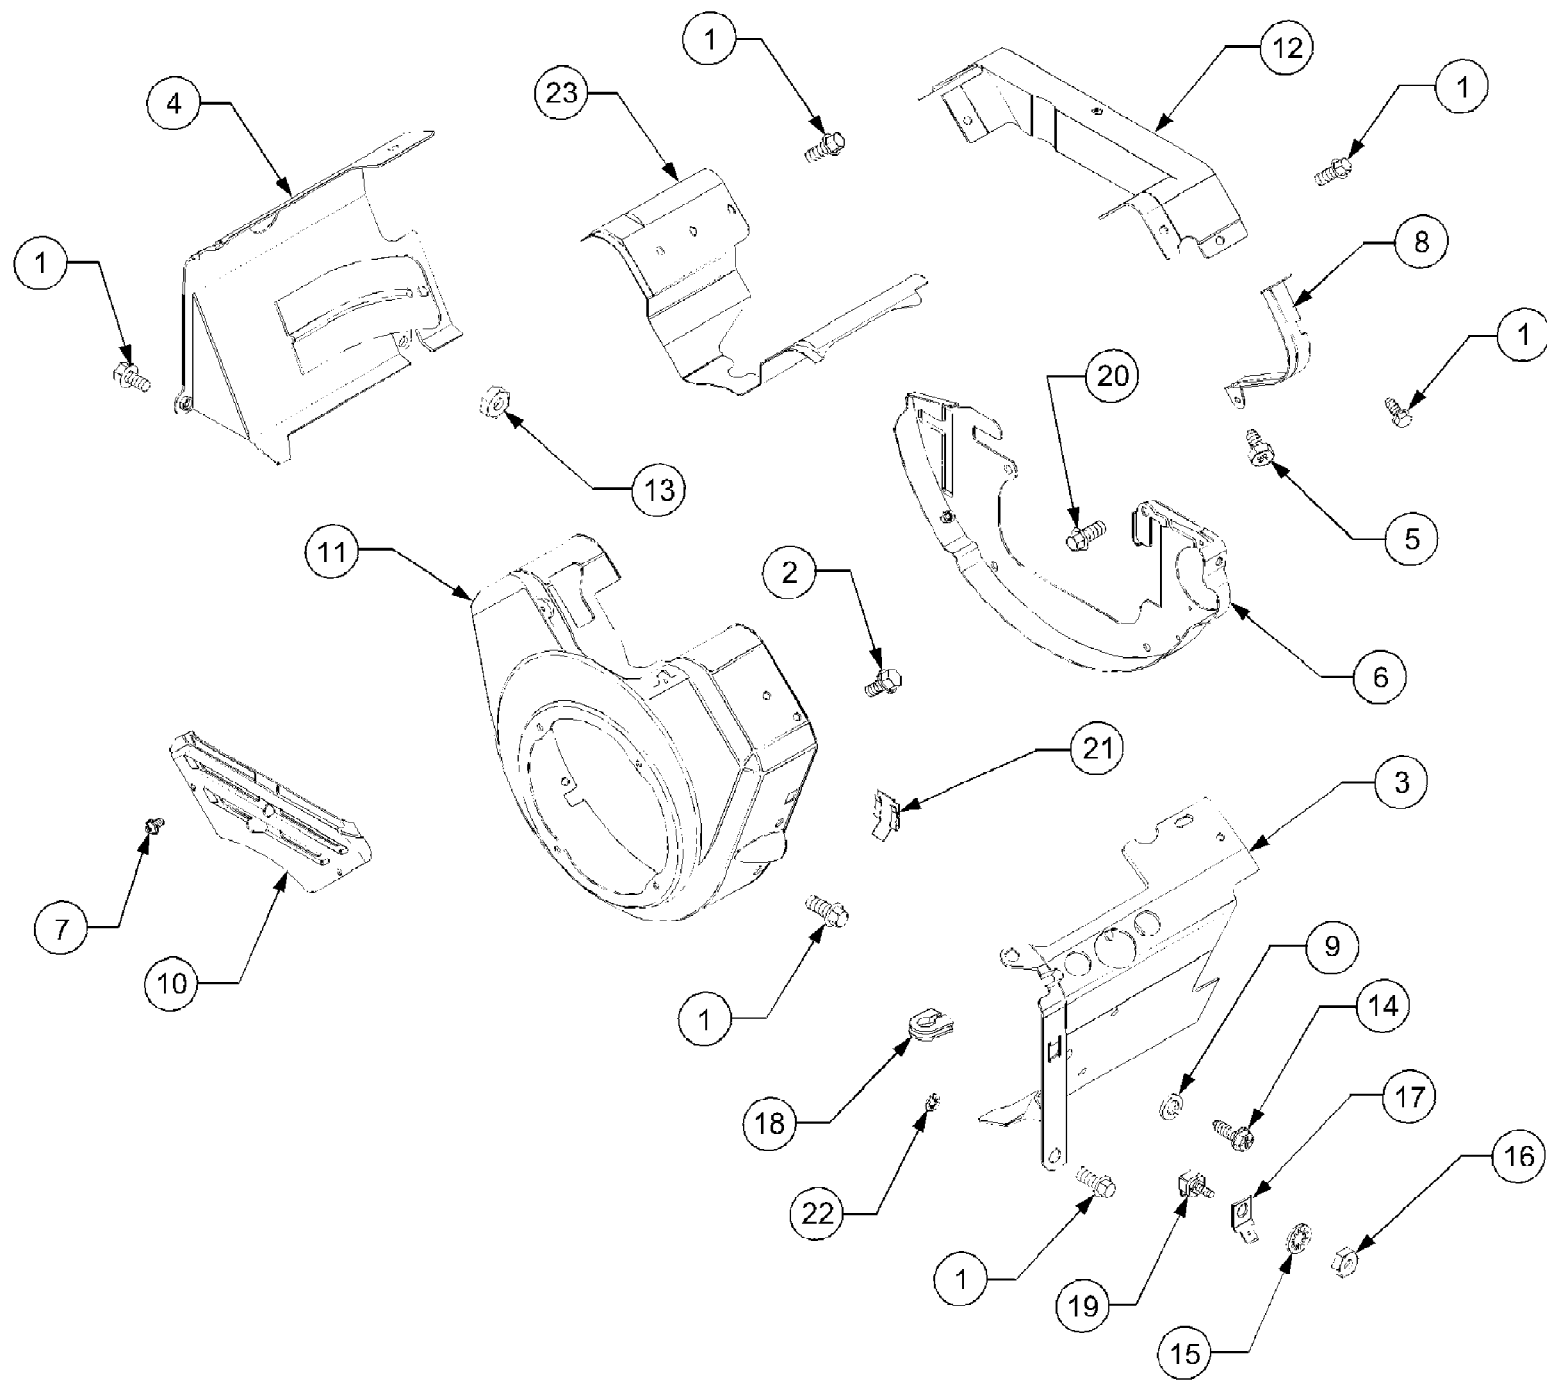

LT2180 Tractor  
Blower Housing

Page 6 of 72

Ref #	Part Number	Qty	S/P/F	Description
1	BS-692539	AR		Screw, Hex
2	BS-692056	1	/P	Screw, Hex
3	BS-806545	1		Cover, Cylinder #1
4	BS-806544	1		Cover, Cylinder #2
5	BS-690688	1	/P	Screw Hex
6	BS-690902	1	/P	Plate, Back
7	BS-690677	2	/P	Screw, Sems
8	BS-690714	1		Cover, Starter Drive
9	BS-690706	2		Washer, Lock
10	BS-690757	1	/P	Cover, Carburetor
11	BS-690929	1	/P	Housing, Blower
12	BS-690908	1		Cover, Air Guide
13	BS-690238	1		Nut, Hex
14	BS-692067	2	/P	Screw, Mtg.
15	BS-691077	1	/P	Washer, Lock, Internal Tooth
16	BS-691612	1		Nut, Hex
17	BS-691084	1	/P	Terminal, Ground
18	BS-690744	2	/P	Grommet, Cable
19	BS-691972	1	/P	Insulator Assembly
20	BS-807163	4		Screw, Hex
21	BS-690451	1	/P	Clip, Debris
22	BS-691551	1		Washer
23	BS-690750	1		Cover, Air Guide

LT2180 Tractor  
Brake And Control Pedals

