


RZT22
Air Filter, Blower Housing And Engine Air Guides

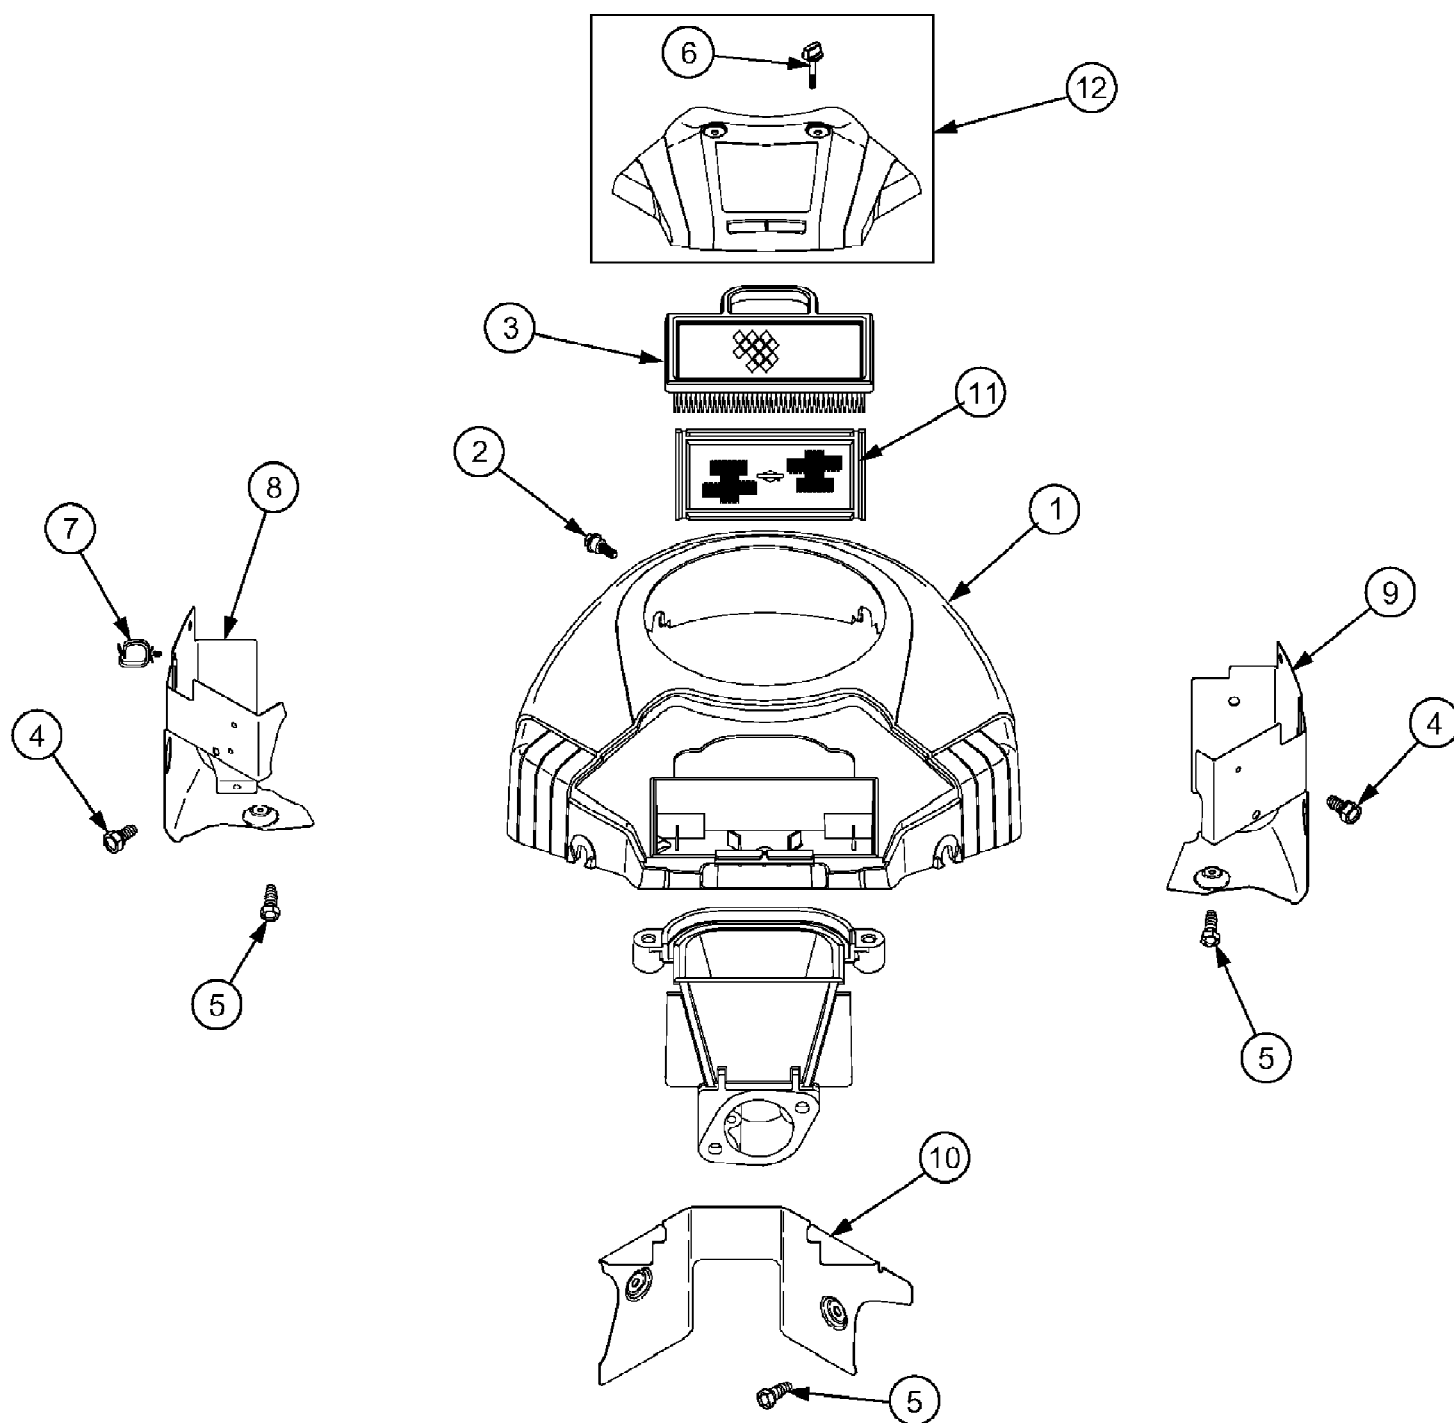




RZT22

Page 2 of 44

Air Filter, Blower Housing And Engine Air Guides

Ref #	Part Number	Qty	S/P/F	Description
1	BS-695277	1	S	Housing, Blower
2	BS-691005	6		Screw (Blower Housing)
3	BS-499486	1		Filter, Air Cleaner Cartridge
4	BS-691003	2	/P	Screw (Air Guide Cover)
5	BS-691108	4	/P	Screw (Air Guide Cover)
6	BS-691008	2		Knob, Air Cleaner
7	BS-691010	1		Clip
8	BS-691012	1		Cover, Air Guide
9	BS-691014	1		Cover, Air Guide
10	BS-691015	1		Cover, Air Guide
11	BS-273638	1	S	Filter, Pre Cleaner
12	BS-499788	1	S	Cover, Air Cleaner

RZT22
Carburetor And Intake Manifold

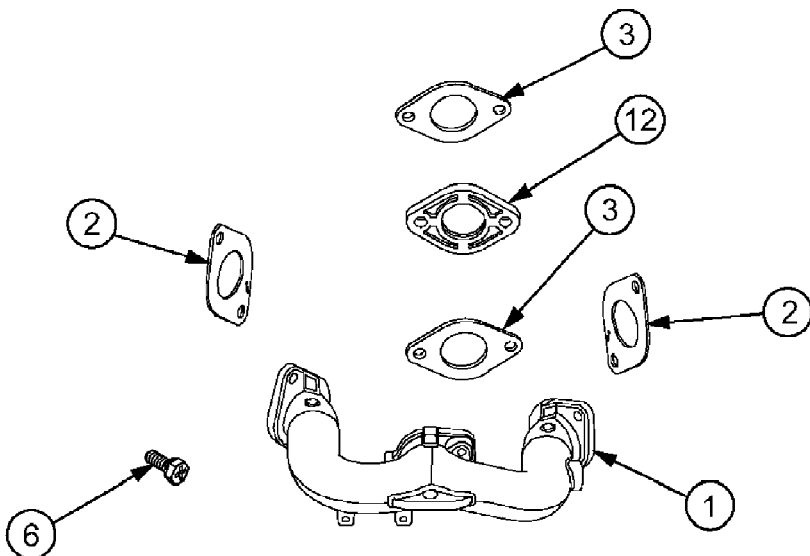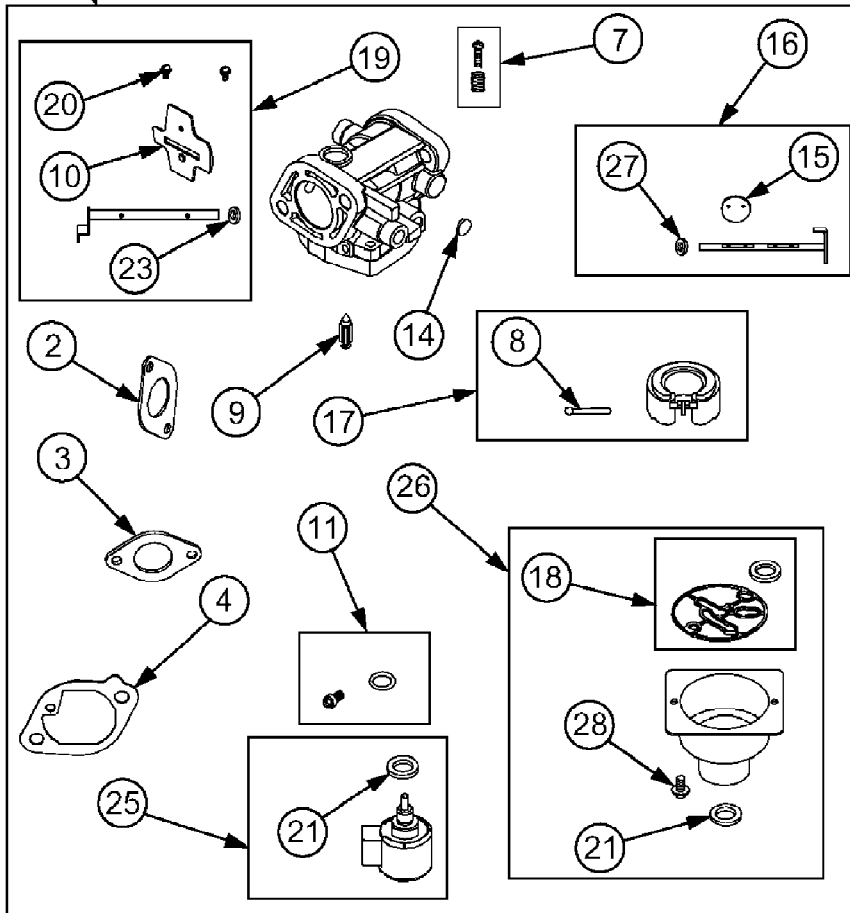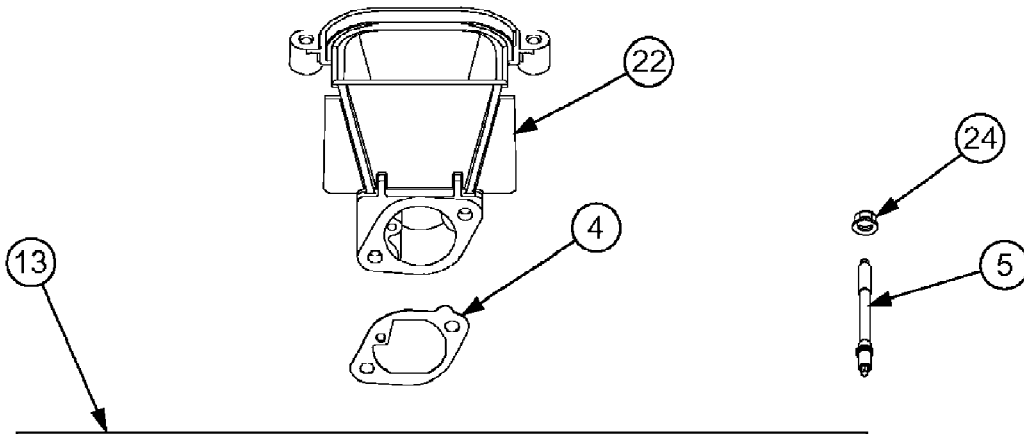

RZT22

Page 4 of 44

Carburetor And Intake Manifold

Ref #	Part Number	Qty	S/P/F	Description
1	BS-699801	1		Manifold, Intake
2	BS-690949	2		Gasket, Intake
3	BS-699803	2		Gasket, Intake
4	BS-699800	1		Gasket, Inake
5	BS-690951	1		Stud, Carburetor
6	BS-699816	4		Screw (Intake Manifold)
7	BS-699721	1		Kit, Idle Speed
8	BS-694918	1		Pin, Float
9	BS-698537	1		Valve, Float Needle
10	BS-699808	1		Valve, Choke
11	BS-698784	1	S	Jet, Main (Standard)
	BS-699820	1		Jet, Main (High Altitude)
12	BS-699802	1		Spacer, Carburetor
13	BS-699807	1		Carburetor
14	BS-699810	1		Plug, Welch
15	BS-699809	1		Valve, Throttle
16	BS-699812	1		Kit, Throttle Shaft
17	BS-694914	1		Float, Carburetor
18	BS-698781	1	/P	Gasket, Float Bowl
19	BS-699811	1		Kit, Choke Shaft
20	BS-690718	2		Screw (Choke Valve)
21	BS-695410	1		Washer, Sealing
22	BS-699806	1		Elbow, Intake
23	BS-695414	2		Seal, Choke/Throttle Shaft
24	BS-690958	2	/P	Nut (Carburetor)
25	BS-699728	1		Solenoid, Fuel
26	BS-699502	1		Bowl, Float
27	BS-699813	1		Seal, Throttle Shaft
28	BS-695407	1		Screw (Float Bowl)