



Parts Manual

Cummins **Onan**

Performance you rely on.™



Engine

P216G (Spec A-H)
P218G (Spec A-H)
P220G (Spec A-H)
OL16 (Spec A-H)
OL18 (Spec A-H)
OL20 (Spec A-H)
LX720 (Spec A-H)
LX770 (Spec A-H)
LX790 (Spec A-H)

MODEL IDENTIFICATION

To avoid errors or delay in filling your parts order, always give the MODEL, SPEC NO. and SERIAL NO. from the Onan nameplate.

For handy reference, insert your nameplate information in the spaces below.

MODEL AND SPEC NO.

SERIAL NO.

DIGITAL CONTROL SOFTWARE VERSION
AND DATE (IF APPLICABLE)

SAFETY PRECAUTIONS

The following symbols are used in Onan manuals to alert users to the potentially dangerous conditions relating to maintenance of equipment and replacement of parts. Please read and observe.



This symbol warns of immediate hazards which will result in severe personal injury or death.



This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



This symbol refers to a hazard or unsafe practice which can result in severe personal injury or product or property damage.

PRODUCT SAFETY PRECAUTIONS



Service and repair of Onan equipment must be performed by trained, experienced personnel only. Improper service or repair may result in property damage, severe personal injury or death. Do not use this catalog as a guide to servicing your equipment. Read and follow the IMPORTANT SAFETY INSTRUCTIONS in the Service Manual appropriate for the equipment you are working on.



Contact with USED ENGINE OILS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking or changing engine oils take all necessary precautions not to ingest, breathe the fumes or contact the used oil.



Contact with ASBESTOS has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When handling engine gaskets take all necessary precautions not to ingest, breathe or contact the dust from the gaskets! Use adequate ventilation and wear protective gloves, masks and clothing!



Contact with BENZINE and LEAD, found in gasoline, fuel additives and solvents has been identified by a United States federal agency and some USA state agencies as causing CANCER or REPRODUCTIVE TOXICITY. When checking, draining or adding gasoline and fuel additives or using solvents take all necessary precautions not to ingest, breathe the fumes or contact the liquids. Use adequate ventilation and wear protective gloves, masks and protective clothing!



Servicing and replacement of MARINE CRITICAL PARTS must be carried out by persons trained and experienced with marine gasoline engine-generator safety requirements!

Introduction

This parts manual applies to the standard Performer horizontal engine as listed in the Engine Data Table. Parts are arranged in groups of related items and each illustrated part is identified by a reference number corresponding to the same reference number in the parts list. Parts illustrations are typical. Throughout this manual, left and right sides are determined by facing the oil cooler (front) end of the engine.

Using the MODEL and SPECIFICATION NUMBER from the nameplate, consult the SALES OPTION CODE TABLE in the back of the book to identify factory installed parts that are unique to your engine (Note: The diagonal line (/) in the model and specification number separates engine characteristics from the specification number/letter. The specification number denotes customer requested features. The specification letter advances [A to B, B to C, etc] with major manufacturing changes.)

Engine Data Table

MODEL	RATING
P216G-I/*	16 Horse Power
P218G-I/*	18 Horse Power
P220G-I/*	20Horse Power
OL16/*	16 Horse Power
OL18/*	18 Horse Power
OL20/*	20 Horse Power
LX720/*	16 Horse Power
LX770/*	18 Horse Power
LX790/*	20 Horse Power

Index

- Adapter, Air Intake – Carburetor, **39**
- Adapter, Arm – Governor, **43**
- Adapter, Cleaner – Remote Air, **39**
- Adapter, Clutch, **40**
- Adapter, Clutch – Electric, **40**
- Adapter, Exhaust, **53**
- Adapter, Filter – Oil, **47 , 48**
- Adapter, Gas – LP, **29**
- Adapter, Governor Arm, **54**
- Adapter, Plate – Bearing, **7**
- Adapter, Pump – Hydraulic, **9**
- Alternator, **15**
- Arm Assy, Control – Governor, **43**
- Arm, Governor, **15**

- Baffle, Base – Oil, **51**
- Baffle, Tube – Breather, **9**
- Baffle, Valve – Breather, **7**
- Ball, Bearing – Governor Shaft, **15**
- Band, Cleaner – Air, **38**
- Base, Filter – Remote Oil, **48**
- Base, Oil, **51**
- Bearing, Camshaft, **7**
- Bearing, Crankshaft – Front, **7**
- Bearing, Crankshaft – Rear, **7**
- Bearing, Shaft – Governor, **15**
- Block, Cylinder, **7 , 9**
- Bracket Assy, Choke, **35**
- Bracket, Adjust – Governor, **45**
- Bracket, Cable, **43**
- Bracket, Cable – Choke, **33 , 34**
- Bracket, Choke, **35**
- Bracket, Control – Governor, **43**
- Bracket, Converter – LP, **31**
- Bracket, Filter – Remote Oil, **48**
- Bracket, Governor, **17**
- Bracket, Lifting, **45**
- Bracket, Line – Fuel, **17 , 39**
- Bracket, Mounting – Regulator, **30**
- Bracket, Solenoid – Remote Choke, **35**
- Bracket, Solenoid – Two Speed Governor, **17**
- Bracket, Support – Muffler, **53**
- Bracket, Tube – Oil Fill, **46**
- Bushing, Arm – Control, **43**
- Bushing, Control – Governor, **17 , 43**
- Bushing, Reducer – Natural Gas, **30**

- Cable, Governor, **17**
- Cable, Plug – Spark, **16**
- Camshaft, **10**
- Cap Assy, End – Starter, **21**
- Cap, Breather, **9**
- Cap, Fill – Oil, **46**
- Cap, Fitting – Fuel, **23**
- Cap, Limiter – Idle, **28**
- Cap, Port – Vacuum, **15**
- Cap, Solenoid – Starter, **19**
- Cap, Valve, **7**

- Capacitor, **37 , 39**
- Carburetor Components, Gasoline, **26 , 27**
- Carburetor Components, Gasoline – Auto Choke, **28**
- Carburetor, Components – LP Gas, **29**
- Carburetor, Gasoline, **25**
- Carburetor, LP, **32**
- Choke, Manual, **54**
- Choke, Remote, **35**
- Cleaner, Air, **37 , 38**
- Cleaner, Air – Remote, **38**
- Clip, Cable – Choke, **33 , 34**
- Clip, End – Rod, **25 , 32 , 45**
- Clip, Lock – Remote Choke, **35**
- Clip, Retaining – Control, **15**
- Clip, Retaining – Control Rod, **25 , 32 , 45**
- Clip, Wire, **16**
- Clip, Wire – Blower Housing, **45**
- Clip, Wire – Fuel Line, **25**
- Clutch Assy, Starter, **20**
- Codes, Sales (Definitions), **75**
- Coil, Ignition – Battery, **16**
- Components, Carburetor, **26**
- Components, Carburetor – Gasoline, **27**
- Components, Carburetor – Gasoline Auto Choke, **28**
- Components, Starter, **19 , 20 , 21**
- Connector, Line – Oil, **47**
- Connector, Male, **48**
- Connector, Male – Inverted, **29**
- Control, Choke – Front Pull, **34**
- Control, Choke – Rear Pull, **33**
- Control, Ignition, **15**
- Cover Assy, Starter, **21**
- Cover, Cleaner – Air, **37**
- Cover, Element – Air Cleaner, **37**
- Cover, Pad – Oil Filter, **47**
- Cover, Regulator – Voltage, **43**
- Cover, Tube – Exhaust, **53**
- Cover, Valve, **7**
- Crankshaft, **11**
- Cup, Governor, **10**
- Cup, Intake – Oil Pump, **51**

- Decal, Control Panel, **54**
- Deflector, Carburetor, **29**
- Drain, Filter – Oil, **47**

- Elbow, Adapter – LP, **29**
- Elbow, Brass – LP Carburetor Kit, **32**
- Elbow, Brass – LP Converter Kit, **31**
- Elbow, Brass – Natural Gas Regulator, **30**
- Elbow, Gas – LP, **29**
- Elbow, Inlet – Air, **38 , 39**
- Elbow, Main Jet – LP Regulator, **29**
- Elbow, Male – Oil Hose, **48**
- Elbow, Street, **30**
- Elbow, Street – LOPKO, **48 , 49**
- Elbow, Street – Oil Line, **47**
- Elbow, Street – Pressure Sender, **50**

Index

- Element, Cleaner – Air, **37**
Exhaust System, **53**
- Filter, Fuel, **23**
Filter, Oil, **47 , 48**
Filter, Oil – Remote, **48**
Filter, Tube – Breather, **37 , 39**
Fitting, Barbed, **25**
Flywheel, **13**
Fuel System – Gasoline, **25**
Fuel System – LP Gas, **29**
Fuse, 30A Blade, **57 , 58 , 59**
Fuse, 30A Cartridge, **58**
- Gasket, Adapter – Oil Filter, **47 , 48**
Gasket, Base – Oil, **51**
Gasket, Carburetor – Gasoline, **25**
Gasket, Carburetor – LP, **32**
Gasket, Cleaner – Air, **29 , 37**
Gasket, Cover – Valve, **7**
Gasket, Exhaust, **53**
Gasket, Filter – Oil, **47**
Gasket, Fitting – Hose, **37**
Gasket, Head – Cylinder, **7**
Gasket, Horn – Air, **29**
Gasket, Manifold – Exhaust, **53**
Gasket, Manifold – Gasoline Intake, **25**
Gasket, Manifold – LP Intake, **32**
Gasket, Mounting – Gearcase, **15**
Gasket, Plate – Bearing, **7**
Gasket, Plate – Ignition, **9**
Gasket, Plug – Hex Head, **51**
Gear, Camshaft, **10**
Gear, Crankshaft, **11**
Gear, Drive, **21**
Gear, Ring, **13**
Gearcase, **15**
Governor, **43 , 45**
Governor, Speed – Two, **17**
Grommet, Bracket – Fuel Line, **17**
Grommet, Cleaner – Air, **32**
Grommet, Cleaner – Remote Air, **39**
Grommet, Seal – Air, **45 , 48**
Grommet, Support – Air Cleaner, **37**
Grommet, Tube – Breather, **37**
Guard, Stationary, **45**
Guide, Valve, **7**
- Harness, Control, **54**
Harness, Engine (Code 35AZ), **60**
Harness, Engine (Code 35BB, 35BD, 35BH, 35CG), **55**
Harness, Engine (Code 35BC, 35BZ, 35CC, 35CH, 35CJ, 35DB), **56 , 58**
Harness, Engine (Code 35BE), **57**
Harness, Engine (Code 35BJ), **60**
Harness, Engine (Code 35BK), **59**
Harness, Interface (Code 35AW), **61**
Harness, Interface (Code 47AW), **61**
- Harness, Wiring – LOPKO, **49**
Head, Cylinder, **7**
Holder, Brush, **20**
Holder, Cartridge Fuse, **58**
Hose, Breather, **25 , 32 , 39**
Hose, Fuel, **23 , 25 , 29 , 32**
Hose, Inlet – Air, **32**
Hose, Oil, **48**
Housing, Blower, **43 , 45**
Housing, Cleaner – Air, **37**
Housing, Cylinder – Air, **43**
Hub, Cup – Governor, **10**
Hub, Plate – Drive, **40**
- Ignition, Electric, **16**
Indicator, Fill – Oil, **46**
Insert, Seat – Valve, **7**
Insulator, Module – Ignition, **15**
- Jet, Idle, **27 , 28**
Jet, Power, **26 , 27 , 28**
Joint, Ball, **45**
- Key, Crankshaft, **11**
Key, Flywheel, **13**
Key, Gear – Crankshaft, **11**
Key, Machine – PTO Shaft, **13**
Key, Woodruff – Camshaft Gear, **10**
Kit, Bracket – Mounting, **19**
Kit, Brush – Starter, **19 , 20**
Kit, Bushing – Starter, **19 , 20**
Kit, Carburetor, **25**
Kit, Carburetor – LP, **32**
Kit, Cleaner – Air, **37**
Kit, Clutch – Starter, **19**
Kit, Converter – LP, **31**
Kit, Float, **27 , 28**
Kit, Gasket, **28**
Kit, Gasket – Oil Pump, **7**
Kit, Hardware – Starter, **19 , 20**
Kit, Intake Manifold, **25**
Kit, Lever – Choke, **27**
Kit, Lever – Starter Shift, **19 , 20**
Kit, Repair – Gasoline Carburetor, **27**
Kit, Repair – Starter, **21**
Kit, Ring – Piston, **9**
Kit, Screw and Plug, **28**
Kit, Seal – Dust, **19**
Kit, Shaft – Choke, **27**
Kit, Shaft – Throttle, **27 , 28**
Kit, Solenoid – Starter, **19 , 20**
Kits, Gasket, **7 , 62**
Knob, Cleaner – Air, **37**
- Labels, **62**
Lever, Choke, **34 , 35**
Lever, Control, **54**

Index

Lever, Governor, **45**
Line, Oil – Flex, **47**
Line, Pulse, **23**
Link, Choke, **34 , 35**
Link, Control – Governor, **43**
Lock, Spring – Valve, **7**

Manifold, Exhaust, **53**
Manifold, Intake, **25 , 32**
Muffler, **53**

Nameplate, **45**
Needle, Carburetor, **28**
O–Ring, Carburetor – Gasoline, **25**
O–Ring, Carburetor – LP, **29**
O–Ring, Valve – Shutoff, **29**

Paint, **62**
Panel, Control, **54**
Pin, Alignment – Gear Cover, **7**
Pin, Center – Camshaft, **10**
Pin, Cotter – Choke Lever, **34**
Pin, Cotter – Governor, **43 , 45**
Pin, Cotter – Two Speed Governor, **17**
Pin, Dowel – Governor Cup Stop, **15**
Pin, Drive – Bearing Stop, **7**
Pin, Piston, **9**
Piston, **9**
Plate, Bearing – Rear, **7**
Plate, Cap – Starter, **21**
Plate, Cover – Ignition Plunger, **9**
Plate, Deflector – Air, **37**
Plate, Support – Air Cleaner, **37**
Plug, Black Nylon – Stationary Guard, **45**
Plug, Cap, **34**
Plug, Countersunk – Oil Pad Cover, **47**
Plug, Dot Button – Blower Housing, **39**
Plug, Hex Head – Oil Base, **51**
Plug, Hole – Breather, **9**
Plug, Hole – Core, **7**
Plug, Spark, **16**
Plug, Square Head – Adapter, **47**
Plug, Square Head – Oil Base, **51**
Plug, Welch – Camshaft, **7**
Plunger, Valve – Bypass, **7 , 48**
Pre–Cleaner, Air, **38**
Pulley, **41**
Pulley, Drive – Alternator, **41**
Pump, Fuel, **23**
Pump, Fuel – Vacuum, **23**
Pump, Oil, **7**

Regulator, Gas – LP, **29**
Regulator, Gas – Natural, **30**
Regulator, Voltage, **15**
Retainer, Bolt – Starter, **21**
Ring, Retaining – Camshaft, **10**
Ring, Retaining – Crankshaft, **11**
Ring, Retaining – Piston Pin, **9**
Rod, Choke, **35**
Rod, Connecting, **9**
Rod, Control, **45**
Rod, Control – Governor, **25 , 32**
Rod, Governor, **45**
Rotor, Ignition, **16**

Sales Code Definitions, **75**
Sales Option Code Table, **74**
Screen, Inlet – Air, **13**
Screen, Tube – Breather, **9**
Seal, Dust, **20 , 21**
Seal, O–Ring – Air Cleaner, **39**
Seal, O–Ring – Breather Cap, **9**
Seal, Oil – Crankshaft, **15**
Seal, Oil – Crankshaft Rear, **7**
Seal, Oil – Governor Shaft, **15**
Seal, Tube – Oil Fill, **46**
Seal, Valve – Intake, **7**
Sealant, Thread, **62**
Sender, Gauge – Oil Pressure, **50**
Sender, Pressure – Oil, **50**
Shaft, Governor, **15**
Shaft, PTO, **13**
Shim, End Play – Crankshaft, **7**
Sleeve, Bearing, **11**
Solenoid, **35**
Solenoid, Cutoff – Fuel, **27**
Solenoid, Governor – Two Speed, **17**
Spacer, Cleaner – Air, **32**
Spacer, LP Gas, **37**
Spacer, Nylon – Air Cleaner, **37**
Spacer, Stud – Air Cleaner, **37**
Spring, Governor, **17 , 43**
Spring, Governor Return, **54**
Spring, Needle – Power, **28**
Spring, Rod – Governor, **25 , 32**
Spring, Setting – Idle, **43**
Spring, Valve, **7**
Spring, Valve – Breather, **7**
Spring, Valve – Bypass, **7**
Starter, **18**
Starter, Inertia, **18**
Starter, Shift – Solenoid, **18**
Stator, **15**
Strap, Mounting – Regulator, **30**
Stud, Adjusting, **45**
Stud, Cover – Gear, **15**
Stud, Mounting, **7**
Support, Cleaner – Air, **37**
Support, Cover – Exhaust, **53**

Index

Support, Muffler, **53**
Switch – LOPKO, **49**
Switch, Ignition, **54**
Switch, LOPKO, **48 , 49**
Switch, Temperature – High, **41**
Switch, Temperature – Oil, **51**
Swivel, Lever – Choke, **17 , 34 , 45**
Swivel, Lever – Throttle, **43**
Swivel, Link, **35**

Tappet, Valve – Standard, **7**
Tube, Breather – Air Cleaner, **37**
Tube, Breather – Crankcase, **37 , 39**
Tube, Breather – Cylinder Block, **9**
Tube, Breather – LP Carburetor, **32**
Tube, Exhaust, **53**
Tube, Exhaust – Offset, **53**
Tube, Fill – Oil, **46**
Tube, Induction – Air, **38 , 39**

Tube, Intake – Air, **29 , 37**
Tube, Oil – Cylinder Block, **7**
Tube, Port – Vacuum, **15**

Valve, Breather, **9**
Valve, Exhaust, **7**
Valve, Intake, **7**
Valve, Magnetic, **30**
Valve, Shutoff – Fuel, **29**
Valve, Shutoff – LP Converter, **31**
Valve, Shutoff – Oil Base, **51**
Vaporizer, Gas – LP, **29**

Weight, Balance, **11**
Wheel, Blower, **13**
Wheel, Screen – Blower, **13**
Wrapper, Element – Air Cleaner, **37**

Yoke, Shaft – Governor, **15**



