



Service Manual

Our energy working for you.™



**Power
Generation**

Controller

PowerCommand® 1301

Table of Contents

SECTION	PAGE
Safety Precautions	ix
List of Acronyms	xiii
Glossary	xv
1. INTRODUCTION	1-1
About This Manual	1-1
System Overview	1-1
Test Equipment	1-1
How to Obtain Service	1-1
2. CIRCUIT BOARD	2-1
General	2-1
Base Board	2-3
TB1 Customer Connections	2-3
DS1 LED Status Indicator	2-3
S1 Sleep Mode Selection	2-3
3. CONTROL OPERATION	3-1
General	3-1
Control Panel Power on/Off Modes	3-1
Control Panel	3-3
Graphical Display	3-3
Display Text / Symbolic Versions	3-3
Display Menu Selection Buttons	3-4
Previous Main Menu Button	3-5
Off Button	3-5
Not in Auto Indicator	3-5
Shutdown Status Indicator	3-5
Warning Indicator	3-5
Remote Start Indicator	3-5
Auto Indicator	3-5
Manual Run Indicator	3-5
System Messages	3-6

SECTION	PAGE
Communication Messages	3-6
Event Messages	3-7
Fault Messages	3-7
Fault Acknowledgement	3-7
Selecting Auto, Manual Run and Off Modes	3-8
Entering the Mode Change Access Code	3-8
Selecting Auto Mode	3-9
Selecting Manual Run Mode	3-10
Aborting the Transition to Auto or Manual Run Mode	3-10
Operator Menus	3-11
Engine Status Menu	3-11
Alternator Status Menu	3-11
Alternator Line-to-Line Voltage Menu	3-11
Alternator Line-to-Neutral Voltage Menu	3-11
Alternator Single Phase Voltage Menu	3-11
Alternator Amperage Menu	3-11
Service Menus	3-14
Status Menu	3-14
Network Status Menus	3-14
History / About Menus	3-16
History Submenu	3-16
About Genset Submenu	3-16
About Control Submenu	3-16
About Display Submenu	3-16
Screen Adjust Menu	3-18
Adjusting Values/Parameters	3-18
Screen Adjust Menu	3-18
Fault History Menu	3-19
4. CONTROL ADJUSTMENT AND SERVICE	4-1
GENERAL	4-1
Circuit Board Removal/Replacement	4-2
Circuit Board Removal Safety Precautions	4-2
Setup Menu	4-3
Genset Service Menus	4-4

SECTION	PAGE
Viewing and Adjusting	4-4
Setup Password Menu	4-4
Adjusting Values/Parameters	4-4
Genset Service Submenus	4-6
Genset Menu, Part 1	4-6
Genset Menu, Part 2	4-6
Fuel System	4-6
Start/Stop Delay Menu	4-6
Cycle Crank Menu	4-8
AVR Setup Menu	4-8
Electronic Governor Menu	4-9
Genset Number Menu	4-9
Display Setup Menu	4-9
Automatic Voltage Regulator Submenus	4-11
Volts/Hz Rolloff Menu	4-11
Regulator Gains Menu	4-11
Electronic Governor Submenus	4-13
Governor Crank Fuel Menu	4-13
Electronic Governor Regulator Menu	4-13
Electronic Governor Menu	4-13
Electronic Governor Enable Speed Menu	4-13
Customer I/O Submenus	4-15
Customer Inputs	4-15
Customer Outputs	4-15
Metering Submenus	4-17
Meter Calib Menu	4-17
Freq. Adjust Menu	4-17
Metering Voltage Adjust Menu	4-17
Metering Current Adjust Menu	4-17
Annunciator Submenus	4-19
Annunciator Inputs	4-19
Annunciator Outputs	4-19
Modbus Submenus	4-22
Modbus Enable Menu	4-22

SECTION	PAGE
Modbus Setup Menu	4-22
Genset Setup Submenus	4-23
Viewing and Adjusting	4-24
Genset Setup Password Menu	4-24
Adjusting Values/Parameters	4-24
Genset Submenus	4-26
Genset Menu	4-26
Application Rating Select Menu	4-26
Standby kVA Rating Menu	4-26
Prime kVA Rating Menu	4-26
Battery Select Menu	4-28
Battery Thresholds Menus	4-28
Battery Delay Setup Menu	4-28
Oil Pressure Setup Menus	4-30
Voltage Protection Submenus	4-32
High AC Voltage Menu	4-32
Low AC Voltage Menu	4-32
Overfrequency Menu	4-32
Underfrequency Menu	4-32
Current Protection Submenus	4-34
High AC Current Warning Menu	4-34
High AC Current Shutdown Menu	4-34
Engine Protection Submenus	4-36
Engine Protection Overspeed Menu	4-36
Engine Protection Speed/Frequency Menu	4-36
Low Oil Pressure Warning Menu	4-36
Low Oil Pressure Shutdown Menu	4-38
High Coolant Temperature Warning Menu	4-38
High Coolant Temperature Shutdown Menu	4-38
Engine Protection Low Coolant Temperature and Battery Charger Menus 4-40	
TB1 Base Board Customer Connections	4-42
TB1 Customer Inputs	4-42
TB1 Customer Outputs	4-42

SECTION	PAGE
Engine Sensors	4-43
Magnetic Speed Pickup Unit (MPU) Installation	4-44
Current Transformer (CT) Installation	4-44
5. TROUBLESHOOTING	5-1
General	5-1
InPower Service Tool	5-1
Network Applications and Customer Inputs	5-1
Safety Considerations	5-2
Reading Fault Codes	5-2
Troubleshooting Procedure	5-3
Voltage/Continuity Testing	5-3
Relay K6	5-4
Relay K5	5-4
Run Relays K10, K11	5-4
Engine Does Not Crank in Manual Mode (No Fault Message)	5-5
POSSIBLE CAUSE	5-5
CORRECTIVE ACTION	5-5
Engine Does Not Crank in Remote Mode (No Fault Message)	5-6
POSSIBLE CAUSE	5-6
CORRECTIVE ACTION	5-6
Warning and Shutdown Codes	5-7
FAULT CODE	5-7
CORRECTIVE ACTION	5-7
Code 1/202 – High or Pre-high Coolant Temperature (Shutdown/Warning) ...	5-12
POSSIBLE CAUSE	5-12
CORRECTIVE ACTION	5-12
Code 2/215 – Low Oil or Pre-low Oil Pressure (Sender) (Warning/Shutdown) .	5-13
POSSIBLE CAUSE	5-13
CORRECTIVE ACTION	5-13
Code 12 – High AC Voltage (Shutdown)	5-14
POSSIBLE CAUSE	5-14
CORRECTIVE ACTION	5-14
Code 13 – Low AC Voltage (Shutdown)	5-14
POSSIBLE CAUSE	5-14

SECTION	PAGE
CORRECTIVE ACTION	5-14
Code 14 – Over Frequency (Shutdown)	5-15
POSSIBLE CAUSE	5-15
CORRECTIVE ACTION	5-15
Code 15 – Under Frequency (Shutdown)	5-15
POSSIBLE CAUSE	5-15
CORRECTIVE ACTION	5-15
Code 31 – Overspeed (Shutdown)	5-16
POSSIBLE CAUSE	5-16
CORRECTIVE ACTION	5-16
Code 45 – Speed Signal Lost (Shutdown)	5-16
POSSIBLE CAUSE	5-16
CORRECTIVE ACTION	5-16
Code 46 – High AC Current (Shutdown)	5-17
POSSIBLE CAUSE	5-17
CORRECTIVE ACTION	5-17
Code 72 – Fail to Crank (Shutdown) (Local or Remote)	5-18
POSSIBLE CAUSE	5-18
CORRECTIVE ACTION	5-18
Code 73 – Fail to Start (Shutdown) Mechanical Governed Engine	5-19
POSSIBLE CAUSE	5-19
CORRECTIVE ACTION	5-19
Code 73 – Fail to Start (Shutdown) Electronic Governed Engine	5-20
POSSIBLE CAUSE	5-20
CORRECTIVE ACTION	5-20
Code 74 – Fail to stop	5-22
Generator set continues to run after receiving a stop command from the controller 5-22	
POSSIBLE CAUSE	5-22
CORRECTIVE ACTION	5-22
Code 75/76 – Customer Input (Shutdown)	5-22
POSSIBLE CAUSE	5-22
CORRECTIVE ACTION	5-22

SECTION	PAGE
Code 202 – Pre-high Coolant Temp (Warning)	5-23
POSSIBLE CAUSE	5-23
CORRECTIVE ACTION	5-23
Code 203 – Low Coolant Temperature (Warning)	5-24
POSSIBLE CAUSE	5-24
CORRECTIVE ACTION	5-24
Code 204/205 – Customer Input (Warning)	5-25
POSSIBLE CAUSE	5-25
CORRECTIVE ACTION	5-25
Code 212 – Coolant Sensor Out of Range (High/Low) (Warning)	5-25
POSSIBLE CAUSE	5-25
CORRECTIVE ACTION	5-25
Code 213 – Low Battery (Warning)	5-26
POSSIBLE CAUSE	5-26
CORRECTIVE ACTION	5-26
Code 214 – High Battery Voltage (Warning)	5-26
POSSIBLE CAUSE	5-26
CORRECTIVE ACTION	5-26
Code 215 – Pre-low Oil Pressure (Sender) Warning)	5-27
POSSIBLE CAUSE	5-27
CORRECTIVE ACTION	5-27
Code 216 – High AC Current (Warning)	5-27
POSSIBLE CAUSE	5-27
CORRECTIVE ACTION	5-27
Code 217 – Oil Pressure Sensor Out of Range (Sender) (High/Low) (Warning)	5-28
POSSIBLE CAUSE	5-28
CORRECTIVE ACTION	5-28
Code 221 – Weak Battery (Warning)	5-29
POSSIBLE CAUSE	5-29
CORRECTIVE ACTION	5-29
Code 222/223/224 – Annunciator Fault #1 through #3 (Warning)	5-29
POSSIBLE CAUSE	5-29
CORRECTIVE ACTION	5-29
Code 225 – Annunciator Out Configuration Error (Warning)	5-29

SECTION	PAGE
POSSIBLE CAUSE	5-29
CORRECTIVE ACTION	5-29
APPENDIX A. SCHEMATICS	A-1

