

WORKSHOP MANUAL

TRW STEERING GEARS

Entire or partial copying or reproduction of the contents of this publication in any way without prior written approval by DAF BUS INTERNATIONAL is forbidden, save the legal limitation. This prohibition also applies to entire or partial editing.

CONTENTS	Page	Date
1. GENERAL INFORMATION	1-1	9635
1.1 Steering Gear Operation	1-1	9635
1.2 Steering Gear	1-4	9635
1.3 General view steering unit	1-5	9635
2. TECHNICAL DATA AND SPECIAL TOOLS	2-1	9635
2.1 Technical Data	2-1	9635
2.2 Special Tools	2-3	9635
3. POPPET VALVE ADJUSTMENT	3-1	9635
4. GEAR PLAY ADJUSTMENT	4-1	9635
5. PITMAN ARM REMOVAL AND INSTALLATION	5-1	9635
6. STEERING GEAR REMOVAL AND INSTALLATION	6-1	9635
7. STEERING GEAR SUPPORT REMOVAL AND INSTALLATION	7-1	9635
8. RELIEF VALVE REMOVAL AND INSTALLATION	8-1	9635
9. SECTOR SHAFT GASKET REMOVAL AND INSTALLATION	9-1	9635
10. WORM SHAFT SEAL REMOVAL AND INSTALLATION	10-1	9635

STEERING GEARS

7

Contents

5