Daf Dt615 Workshop Manaual Engine

Full download: http://manualplace.com/download/daf-dt615-workshop-manaual-engine/

Workshop manual

DD 575 DF 615 DT 615



Subject to modification

INTRODUCTION

This Repairs and Workshop Manual, which accompanies the DAF diesel engines of the 575 and 615 series, is intended for the workshops of our Service organisation. Likewise, these books are available for users who have the required special tools and skillful staff.

Our policy being one of continuous improvement and progress, it may happen that modifications to the engine have not been included in this manual.

However, new issues covering all modifications and including all supplements, will be published at regular intervals.

Should you have any questions regarding the engine or regarding the manual, please contact your DAF-Diesel dealer, who has the latest information available.

Finally, we shall be pleased to receive your remarks and comments upon this manual so as to enable us to continuously improve the quality of future issues. For this purpose you may use the enclosed service documentation information card (see section 0-05, page 1).

Please send this card, fully and clearly filled out, to your importer's address as mentioned on the enclosed list.

Many thanks!

DAF-DIESEL Service Promotion

February 1979.

All information applies both to the DD575 and to the DF and DT615 engines unless otherwise stated.

The specifications refer to brand-new parts.

SUBDIVISION

ENGINES 2

0

DD 575, DF 615, DT 615

DAF Diesel

Workshop manual

CONTENTS

Subgroup	Subject	Page(s)
03	Ordering parts	1
05	Information card - service documentation	1 – 3




Workshop manual

INFORMATION CARD


ORDERING PARTS

When ordering parts make sure to mention not only the engine number but also and especially the specification numbers as mentioned on the identity plate on the valve cover.

If these data are missing, it is impossible to guarantee a correct supply.

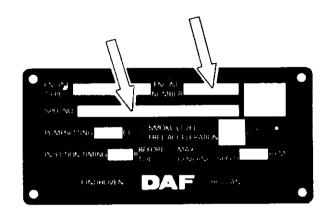

identity plate

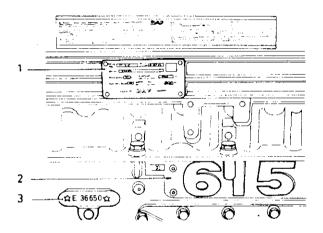

- 1. identity plate
- engine block type indication
 location of engine number in the engine block



CONTENTS

Subgroup	Subject	Page(s)
00	General:	
	Specifications	1
	Special tools	2-3
	Checks and adjustments	4
	Exhaust smoke measuring	5-7
10	Cylinder head	1-5
20	Valve gear	1-4
30	Vibration damper and pulleys	1-2
31	Engine block	1-6
32	Crankshaft, conrods and pistons	1-6
34	Flywheel and ring gear	1-3
35	Timing	1-4
36	Flywheel housing	1-2
38	Engine suspension	1-2
41	Lubrication system	1-8
51	Cooling system	1-16
61	Manifolds	1-4
63	Turbocharger	1-6



Workshop manual

GENERAL INFORMATION


GENERAL

SPECIFICATIONS

Generator

Make Type Number of cylinders Bore Stroke Cubic capacity Compression ratio Valve clearance cold/warm Thread Dry weight, incl. accessories but without clutch Firing order Injection timing Injection pressure Coolant operating temperature Lubricating system Lubricant Viscosity, below 0° C -5° to +30° C above +25° C Oil pressure to be measured at a coolant temperature at idling speed (new engine) ditto (at wear) at 2000 r.p.m. Capacity (incl. filter) ditto (incl. filter and cooler) ditto, double room sump Diesel fuel Starter motor

Water-cooled diesel engine with direct injection DT615: equipped with a turbocharger DD575: 100.6 mm, DF615 and DT615: 104.2 mm DD575, DF615 and DT615: 120.7 mm DD575: 5.76 litres DF615 and DT615: 6.17 litres 16:1 0.5 mm to ISO standards DD575: 530 kg, DF615: 530 kg, DT615: 570 kg 1-5-3-6-2-4 28° before T.D.C. (DD575 and DT615) 26° before T.D.C. (DT615) DD575 and DT615: 165 - 173 bar DT615: 216 - 224 bar 75-80° C CC or CD, max. sulphated ash content 1.5% **SAE 20 SAE 30 SAE 40** 75-80° C min. 1.0 bar min. 0.35 bar 3.5 - 4.2 bar 12 litres 13 litres Min. requirement British Standard no. 2869-1970 Class A2. Also refer to fuel system (fuel quality) bipolar A.C. · various versions

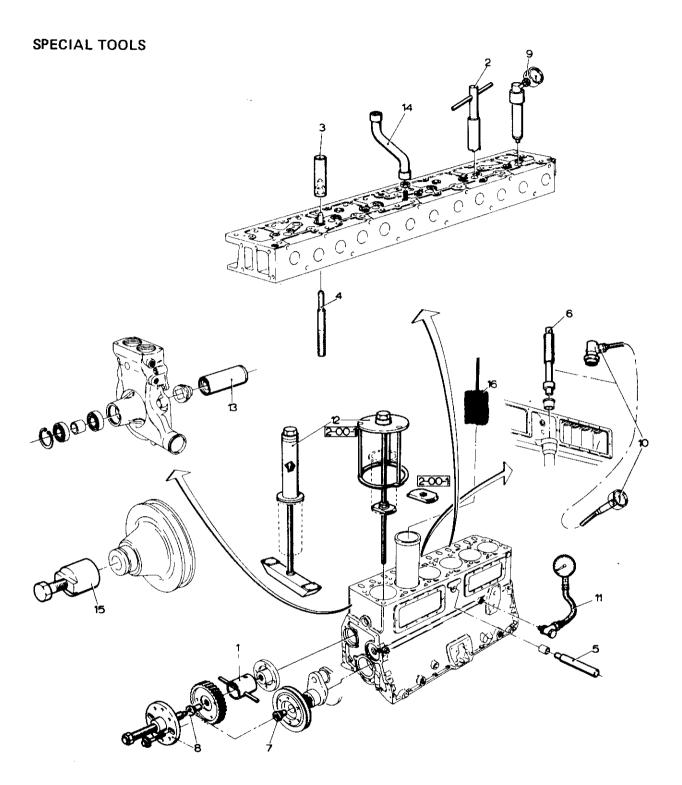

2-99-535047	9. Dummy injector, compression testing	2-99-535264
2-99-535058	10. Auxiliary tool for measuring engine speed	2-99-535265
2-99-535073	Gauge, oil pressure testing complete	2-99-535551
2-99-535074	Tool for removing and fitting cylinder	
	liners	2-99-535625
2-99-535076	Drift, waterpump seal	2-99-535655
2-99-535077	14. Bent box spanner	2-99-535704
	15. Puller for removing water pump pulley	2-99-535956
2-99-535144	16. Honing tool for cylinder liner	2-99-535948
	2-99-535058 2-99-535073 2-99-535074 2-99-535076 2-99-535077	10. Auxiliary tool for measuring engine 2-99-535058 speed 2-99-535073 11. Gauge, oil pressure testing complete 2-99-535074 12. Tool for removing and fitting cylinder liners 2-99-535076 13. Drift, waterpump seal 2-99-535077 14. Bent box spanner 15. Puller for removing water pump pulley