




ENGINE COMPLETION CATALOG




The engine company.

Catalog #999-9001 | Revised 1/09


Engine Completion Kit Index

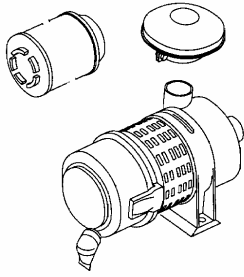


Air Cleaners / Attachments
Page 1-4

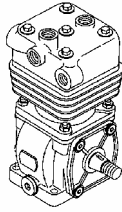


Air Compressors
Page 5-7

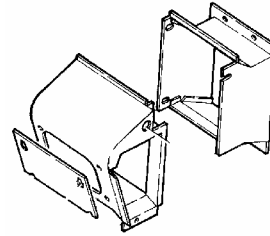


Air Discharge Ducting
Page 8

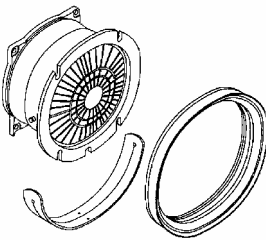


Air Intake Guide Ring
Page 9

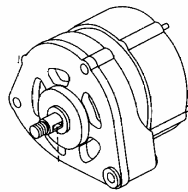


Alternators
Page 10-12

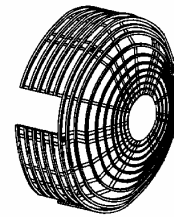


Blower Guards
Page 12

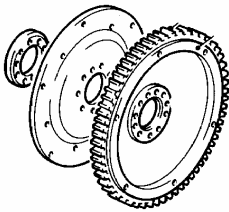


Flywheels
Page 12-14

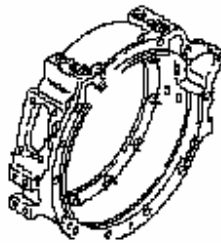


Housings
Page 15-16

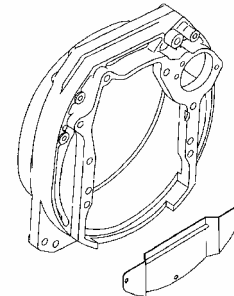


Housing Dust Cover
Page 16

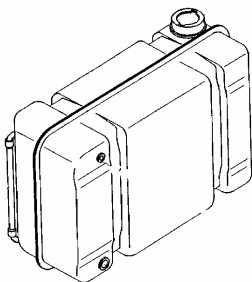

Fuel Tanks
Page 17

 


Fuel Filters / Fittings
Page 17

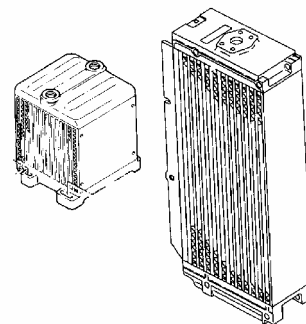


Hydraulic Oil Coolers
Page 18-19


Engine Completion Kit Index

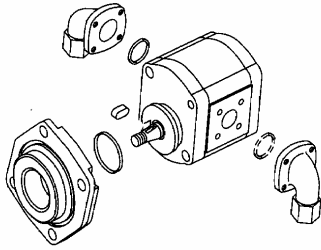


Hydraulic Oil Pumps
Page 19-22

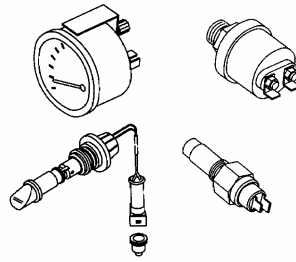

Switches, Sensors, Gauges
Page 23-25

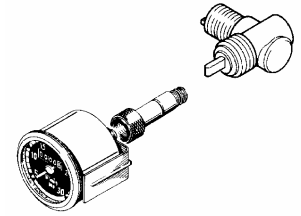


Tach/ Hourmeter/Angle Drive
Page 25

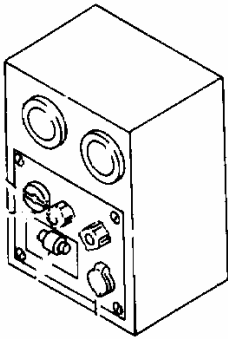


Panels / Safety Shutdown
Page 25-26




Lifting Eyes
Page 27

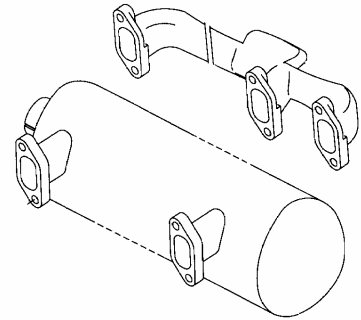


Manifolds / Mufflers
Page 27-31

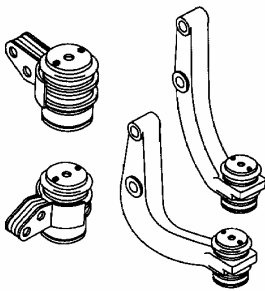

Engine Mounts
Page 32

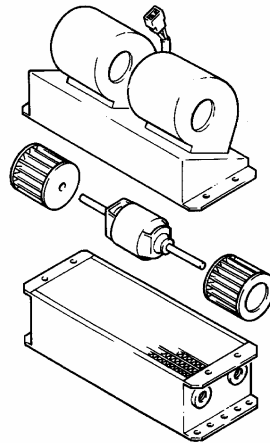


Oil-To-Air Cab Heaters
Page 33

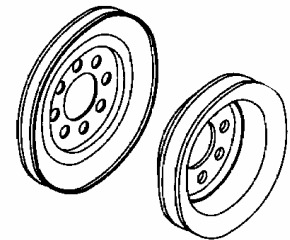


Pulleys / Drives
Page 33


Engine Completion Kit Index

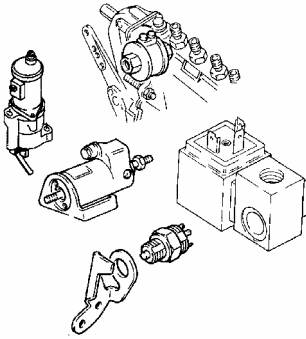


Shutdown Systems
Page 34-35

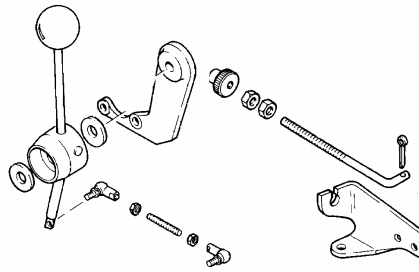


Speed Control
Page 36

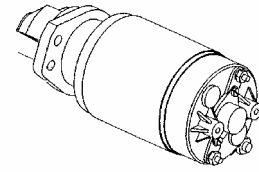


Starters
Page 37

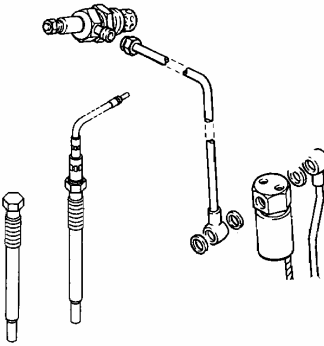


Starting Aids
Page 37-39

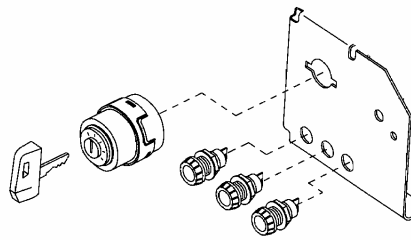

Starting Accessories
Page 39

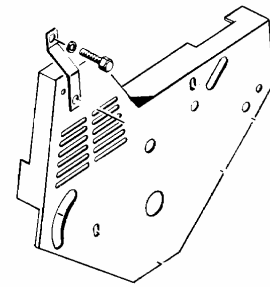


V-Belt Guards
Page 40

 

Wiring Counter plugs
Page 41




Remote Oil Filter
Page 33

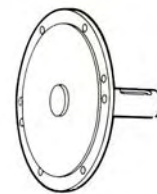


Stubshafts
Page 40



Clutch PTO
Page 45

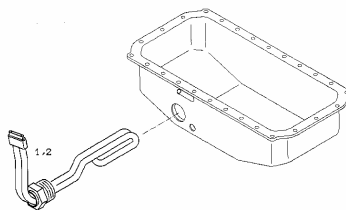


Engine Heaters / Oil Pans
Page 41

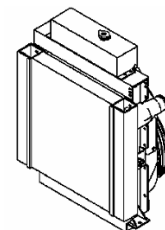

Radiators
Page 42-44

SECT. 1.1 AIR CLEANER, OIL BATH, ENGINE MOUNTED

ENGINE MODEL	KIT # / CODE	ETL PAGE	REMARKS
F3-6L 913	027-0463 SPL	05003499 05050413	4.8 CU. METER/MINUTE, PRECLEANER NOT INCLUDED, TOP AIR INLET, FOR ENGINES WITH INTAKE OPENING AT BLOWER END
F3-6L 913	027-0465 SPL	05003499 05003403	4.8 CU. METER/MINUTE, PRECLEANER NOT INCLUDED, SIDE AIR INLET, FOR ENGINES WITH INTAKE OPENING AT BLOWER END
F3-6L914 / D914 L3,4,5,6	027-7375 SPL	05003503 05079466	4.8 CU. METER/MINUTE, PRECLEANER NOT INCLUDED. CANNOT USE WITH MOUNTED AIR COMP.
F3-6L914 / D914 L3, L4	027-7374 SPL	05075055 05069131	FOR ENGINES WITH AIR COMPRESSOR 05075051 , 05079585
F6L 913	027-0556 SPL	05003504 05023330	5.6 CU. METER/MINUTE, PRECLEANER NOT INCLUDED, SIDE AIR INLET, FOR ENGINES WITH INTAKE OPENING AT BLOWER END
F5-6L914 / BF4L914 / D914 L6	027-0495 SPL	05003504 05003520	5.6 C.U. LOOSE SIDE MOUNT 05003521
F5-6L914 / D914 L5, L6	027-7451 SPL	05003504 05079606	5.6 CU. METER/MINUTE, PRECLEANER NOT INCLUDED. CANNOT USE WITH MOUNTED AIR COMP.
BF6L 913/C	027-2466 SPL	05003954 05018901 05023350	9.6 CU. METER/MINUTE (CANNOT USE WITH SA 27-2595 GUARD); INCLUDES PRECLEANER 05006618, 05003965, 05006620
BF6L914C / TCD914 L6	027-7362 SPL	05003954 05018901 05006618 05003965	FOR ENGINES EQUIPPED WITH FRONT TURBO 9.6 CU. METER/MINUTE (CANNOT USE WITH ALUMINUM V-BELT GUARD); INCLS. PRECLEANER 05006620, 05079573
F5-6L914 / BF4L914	027-0495 SPL	05003504 05003520	LOOSE, SIDE MOUNT 05003521
F6L 913	027-2451 SPL	05003956 05050265	LOOSE, LATERAL AIR INLET
BF6L 913 SP/CSP	027-2465 SPL	05004825 05023349 05050265	COMBINATION-TYPE AIR CLEANER, PAPER ELEMENT,PRE-CLEANER, SUPPLIED LOOSE 05003743, 05050617

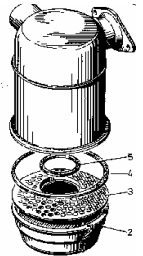

SECT. 1.2 AIR CLEANER, DRY TYPE, ENGINE MOUNTED

ENGINE MODEL	KIT # / CODE	ETL PAGE	REMARKS
F6L 913	027-6487 SPL	05075053 05075050	6.0 CU. METER/MINUTE, W/OUT SERVICE
F5-6L914	027-7367 SPL	05075053 05079579	INDICATOR, W/ RAIN CAP, FOR ENG. EQUIPPED
F3-4L914	027-7368 SPL	05075055 05069131 05079579	WITH INTAKE OPENING AT BLOWER END AND WITHOUT FRONT MOUNTED AIR COMPRESSOR
F3L-4L914 / D914 L3, L4	027-7476 SPL	05075052 05069129 05079587	4.5 CU. METER/MINUTE, W/OUT FRONT MTD. AIR COMPRESSOR

