Full download: http://manualplace.com/download/deutz-td-4l2009-engine-parts-manual-913282b-rs 19-telescopic-handler/

GEHL

Form No. 913282 Revision B September 2007

TD 4L2009

Deutz Engine



Parts Manual

NOTE: This parts manual identifies both standard and optional features for this model. Depending on the features of the machine, some of the items identified in the parts lists may, or may not be included with your machine.

The Table of Contents pages list the page locations of various component groups on the machine.

When ordering service parts, specify the part number, full description, quantity required, and the engine model and serial number.

Model and serial number for this engine are stamped on a plate located on the top of the valve cover. The following illustrations show the




location of the model and serial number.

"Right" and "left" are determined from a position sitting on the seat and facing forward.

GEHL Company reserves the right to make changes or improvements in the design or construction of any part of the unit without incurring the obligation to install such changes on any unit previously delivered.

Grease fittings and common attaching hardware, such as cotter pins, set screws, woodruff keys, screws and nuts are included in the parts list, indented below the part they are associated with, but NOT illustrated, except where a particular routing or special fastening arrangement must be maintained. The hardware listed is for mounting purposes and is NOT included when the part is ordered for replacement. Standard attaching hardware torque values are provided on the inside back cover. Unless otherwise specified, all capscrews are Grade 5, cadmium or zinc plated; hexagon nuts for Grade 5 capscrews or bolts are Grade 5.

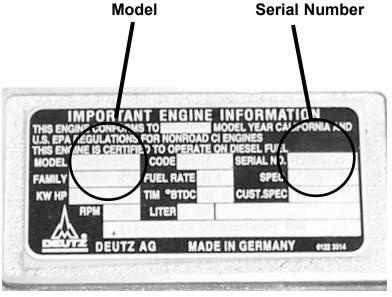

Deutz TD 4L2009

Table of Contents


Engine Block, Plugs, and Gasket Set	
Oil Pan	
Dipstick	
Front Housing Cover	
Front Housing Cover	
Oil Pump	
Idler Gear	
Camshaft	
Crankshaft	
Connecting Rod	
Piston	
Cylinder Head	
Valve Train	
Fuel Injector	
Valve Cover	
Fuel Injector Pump	
Fuel Injector Pump Drive	.19
Fuel Supply Pump	.20
Fuel Filter Group	.21
Fuel Lines (High Pressure)	.22
Fuel Lines (Supply and Return)	.23
Intake Manifold	
Oil Separator	
Radiator and Hoses	
Water Pump	
Fan	
Oil Cooler	
Exhaust Manifold	
Exhaust Heat Shield	
Turbocharger and Exhaust Adapter	
Turbocharger Intake Pipe and Oil Lines	
Flywheel Housing	
Flywheel	
Glow Plug	
Alternator	
Electrical Senders and Block Heater	
Numerical Index	

Full download: http://manualplace.com/download/deutz-td-4l2009-engine-parts-manual-913282b-rs5-19-telescopic-handler/

Engine

Deutz TD 4L2009

Engine Block, Plugs and Gasket Set

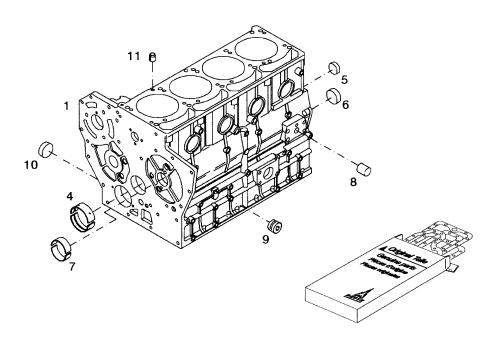

Ref. No.	Part No.		ty. ∋q.	Ref. No.	Part No.	Description Qty. Req.
01	105315	ENGINE BLOCK	. 1	08	105316	PLUG6
04	105312	MAIN BEARING	. 1	09	105496	PLUG1
05	105397	PLUG	. 1	10	105396	FREEZE PLUG 1
06	105318	PLUG	. 5	11	105399	STRAIGHT PIN 2
07	105308	CAMSHAFT BEARING	. 1	12	105249	GASKET SET (COMPLETE) 1