



8W-48 REAR WINDOW DEFOGGER


Component	Page	Component	Page
Backlite-Electric Heated	8W-48-2	G200	8W-48-2
Cluster	8W-48-2	G301	8W-48-2
Control-A/C-Heater	8W-48-2	Module-Totally Integrated Power	8W-48-2
Fuse 22	8W-48-2		

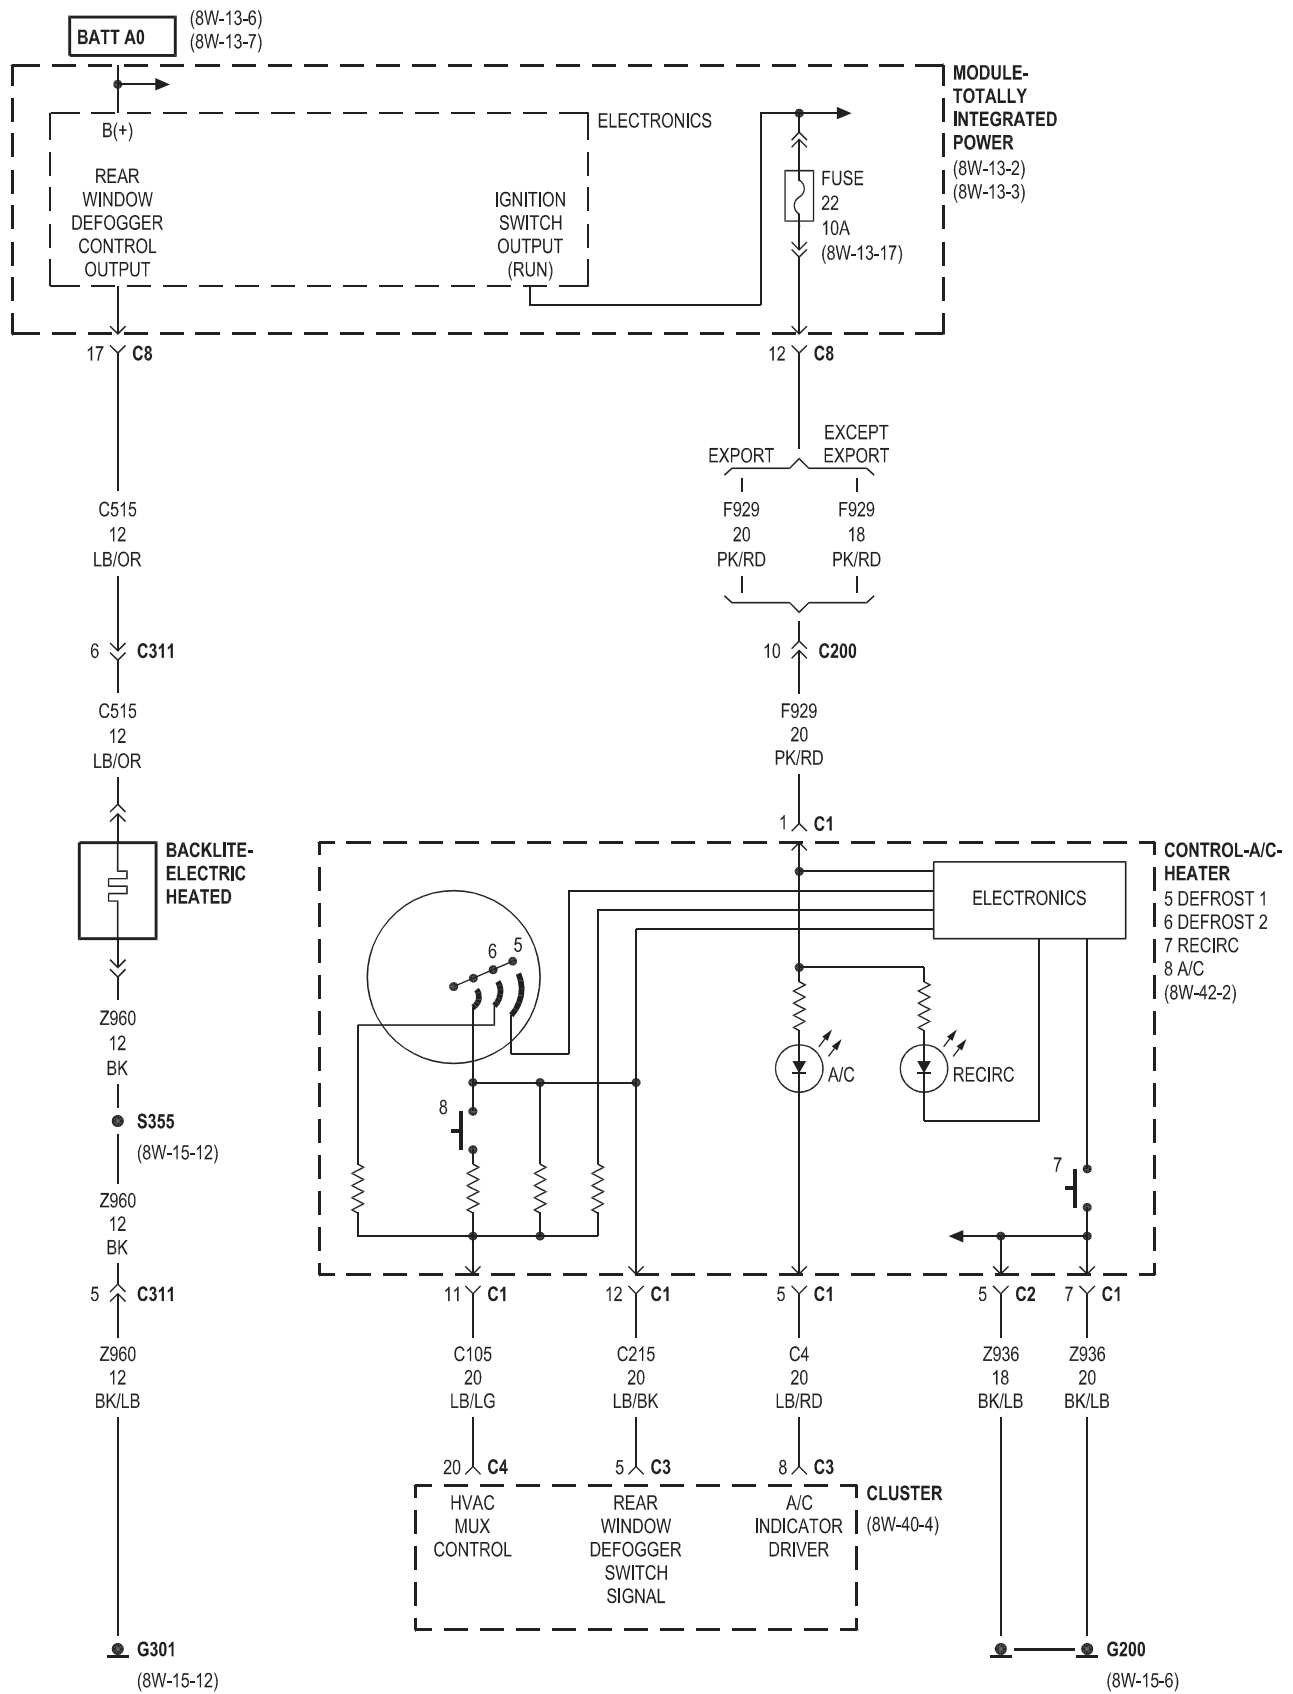


8W-49 OVERHEAD CONSOLE

Component	Page	Component	Page
Cluster	8W-49-2, 3	Lamp-Cargo	8W-49-3
Fuse 6	8W-49-2	Lamp-Dome	8W-49-3
Fuse 7	8W-49-2	Lamp-Vanity-Left	8W-49-2
Fuse 8	8W-49-2	Mirror-Inside Rearview	8W-49-4
Fuse 14	8W-49-2	Module-Electronic Overhead	8W-49-3
G200	8W-49-2, 3	Module-Totally Integrated Power	8W-49-2, 4
G250	8W-49-2, 4	Motor-Sunroof	8W-49-3

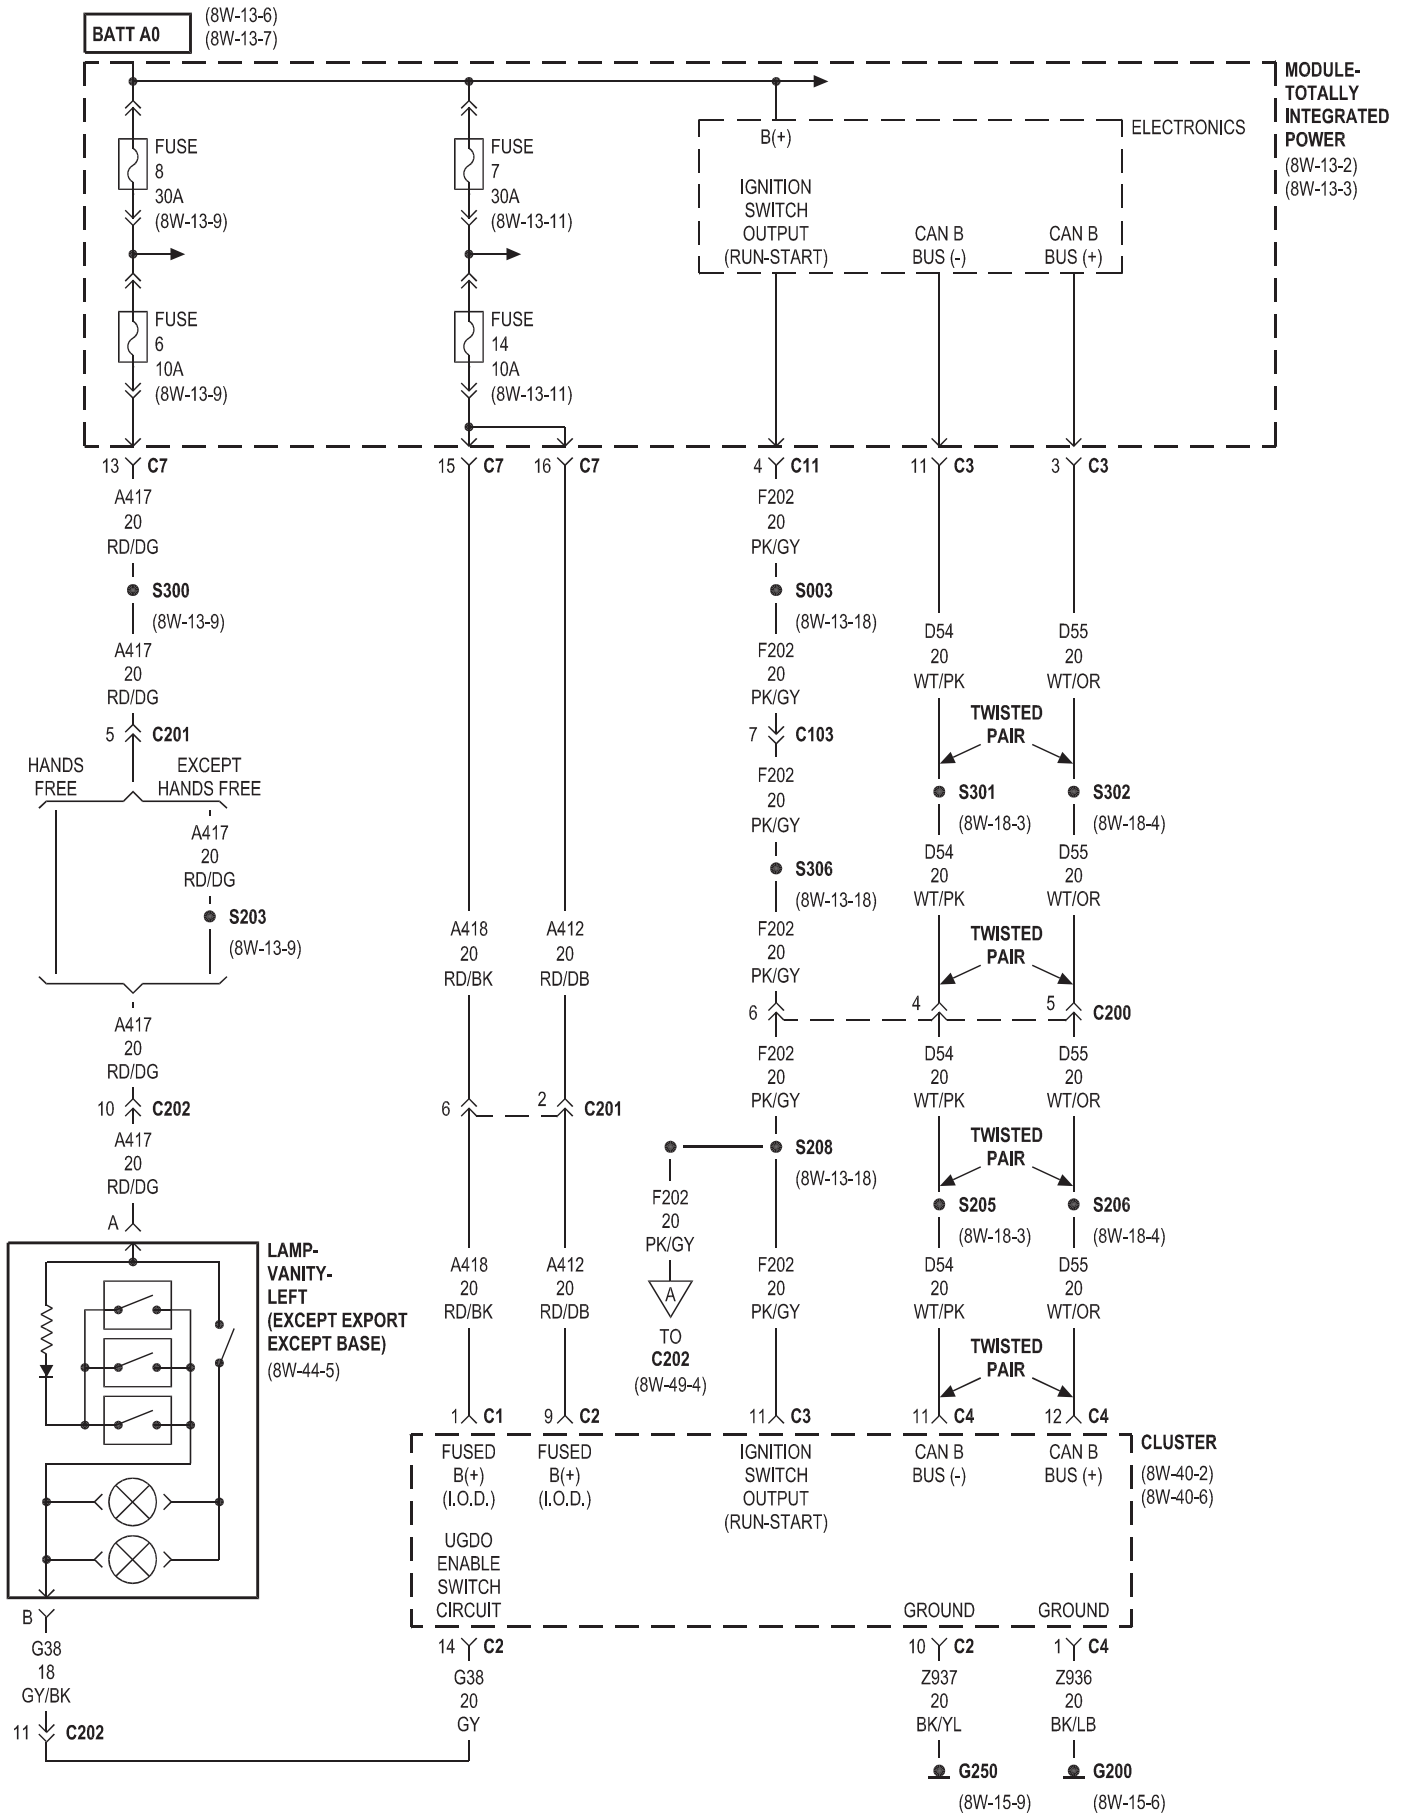


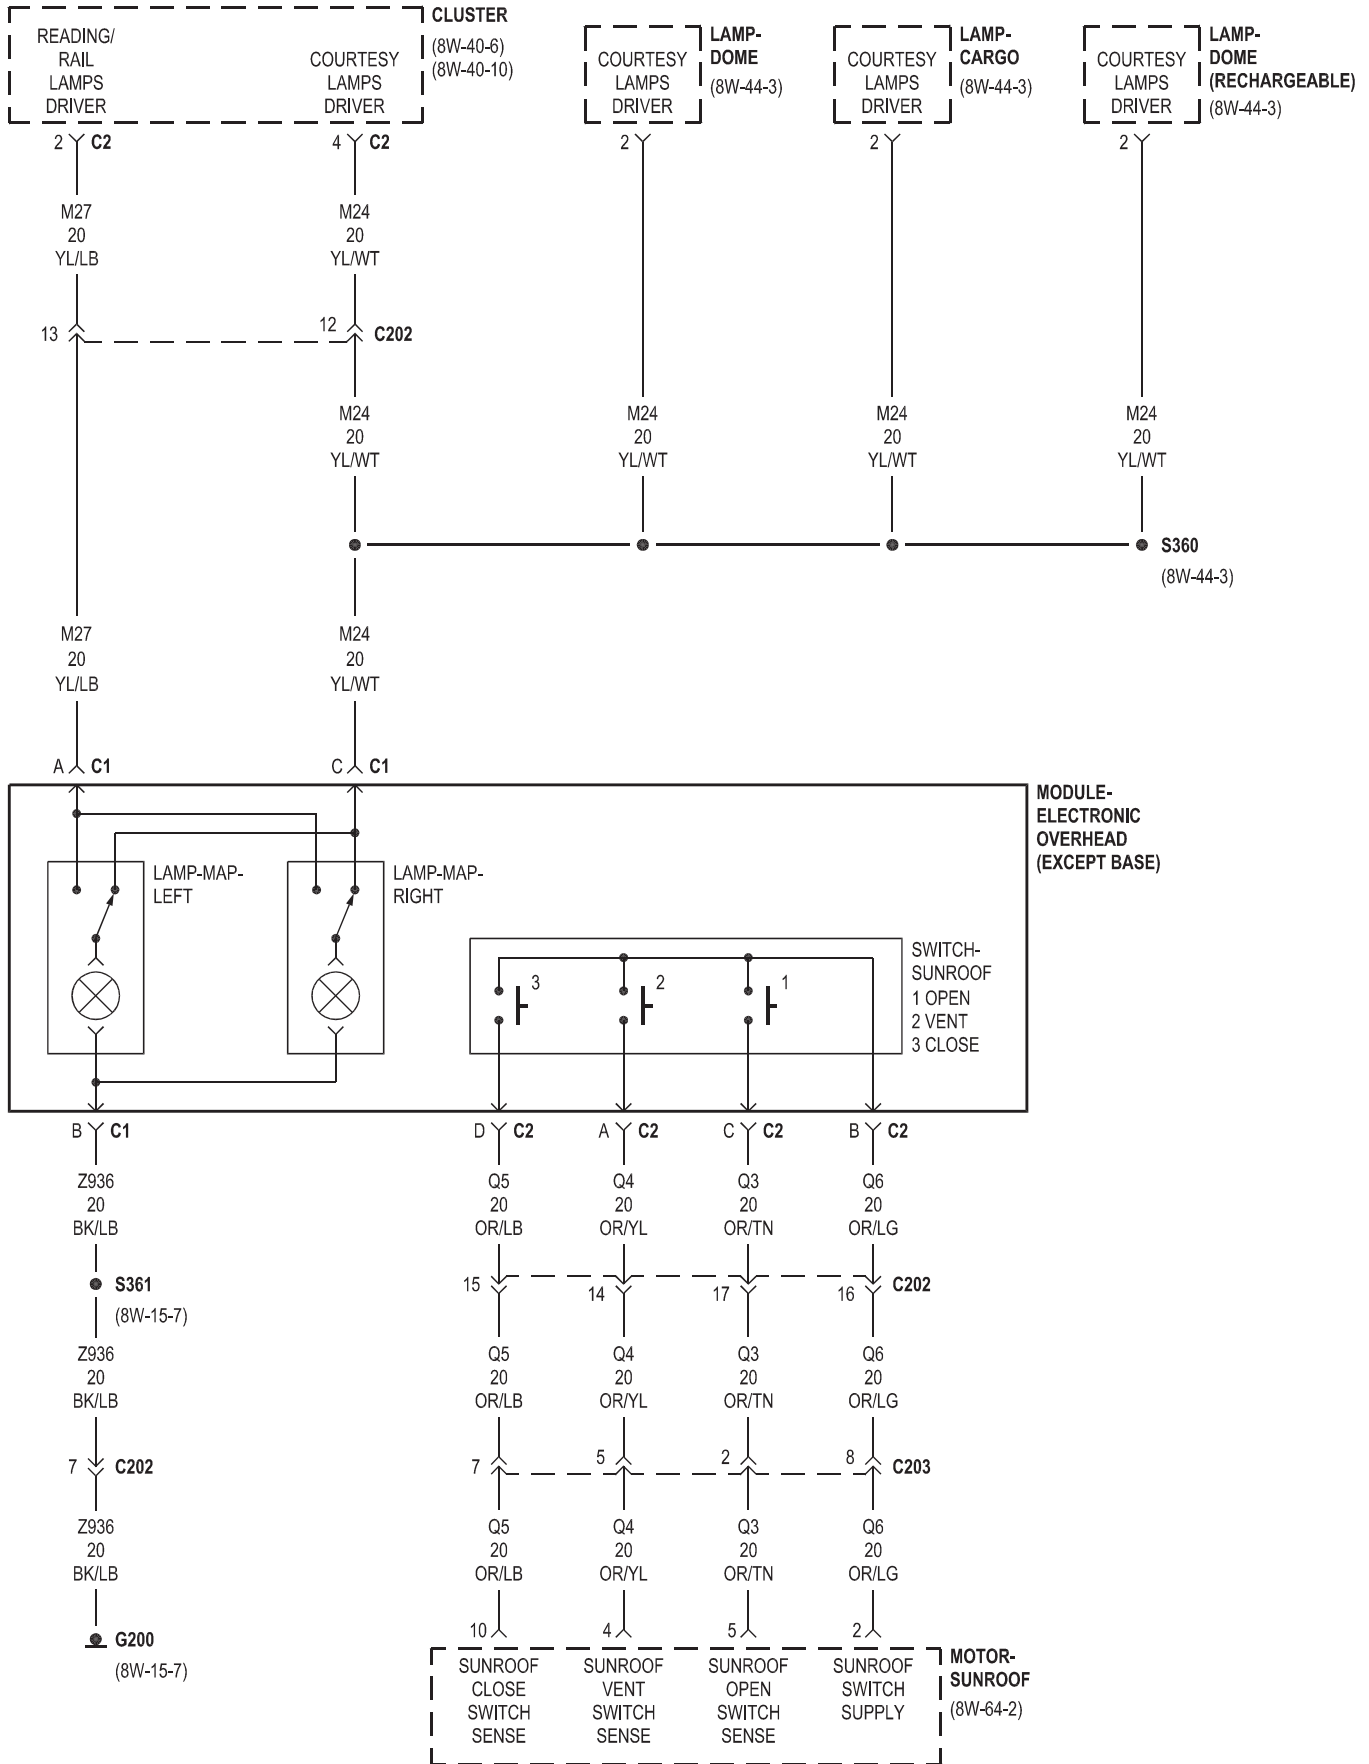


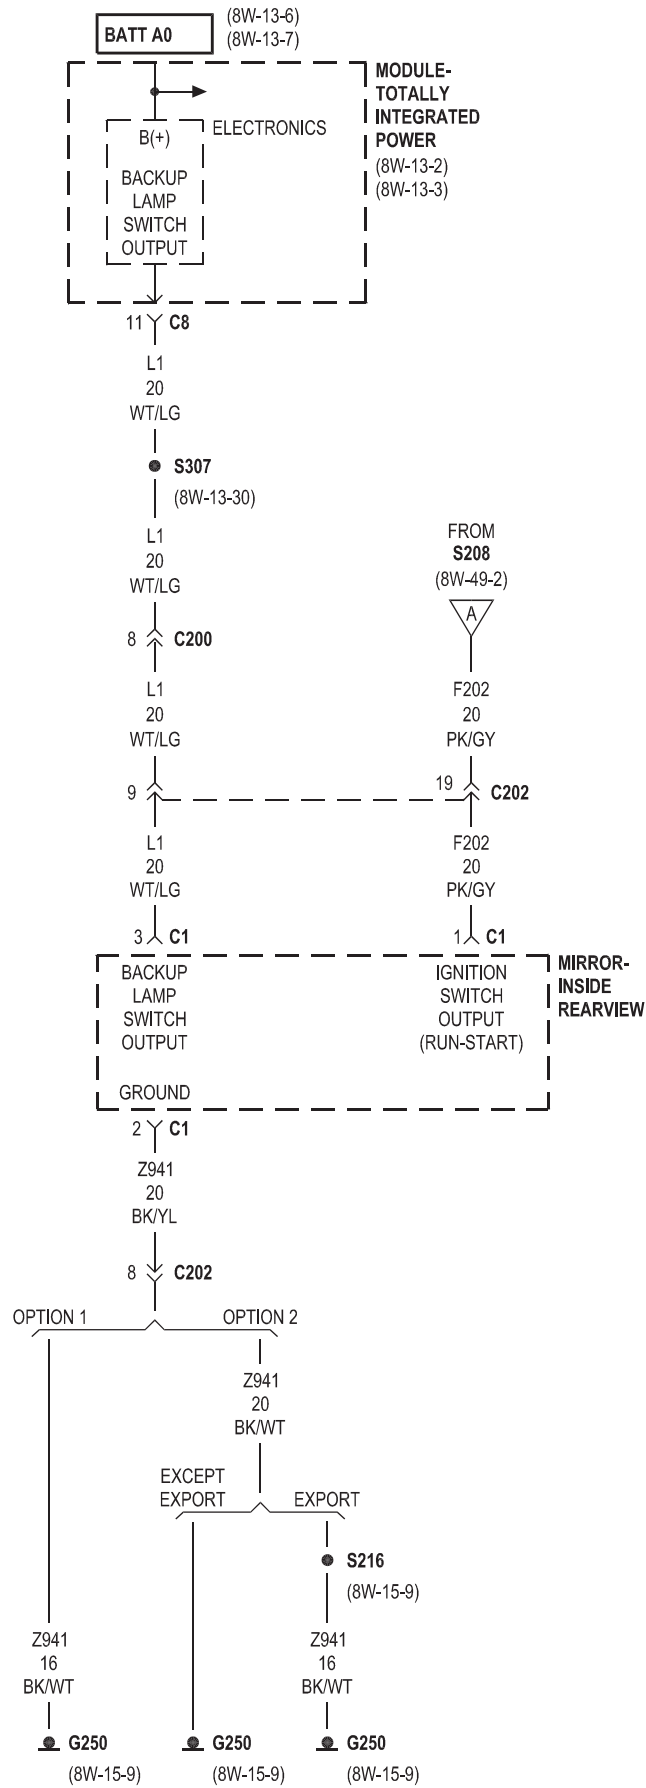



8W-50 FRONT LIGHTING


Component	Page	Component	Page
Cluster	8W-50-2	Lamp-Headlamp-Right	8W-50-3
Fuse 8	8W-50-2	Lamp-Park/Turn-Left Front	8W-50-6
Fuse 17	8W-50-2	Lamp-Park/Turn-Right Front	8W-50-6
Fuse 33	8W-50-2	Module-Headlamp Leveling-Left	8W-50-5
G110	8W-50-3, 4, 5, 6	Module-Headlamp Leveling-Right	8W-50-5
G112	8W-50-3, 4, 5, 6	Module-Steering Control	8W-50-2
G200	8W-50-2	Module-Totally Integrated	
Lamp-Fog-Left Front	8W-50-4	Power	8W-50-2, 3, 4, 5, 6
Lamp-Fog-Right Front	8W-50-4	Switch-Bank	8W-50-2
Lamp-Headlamp-Left	8W-50-3		

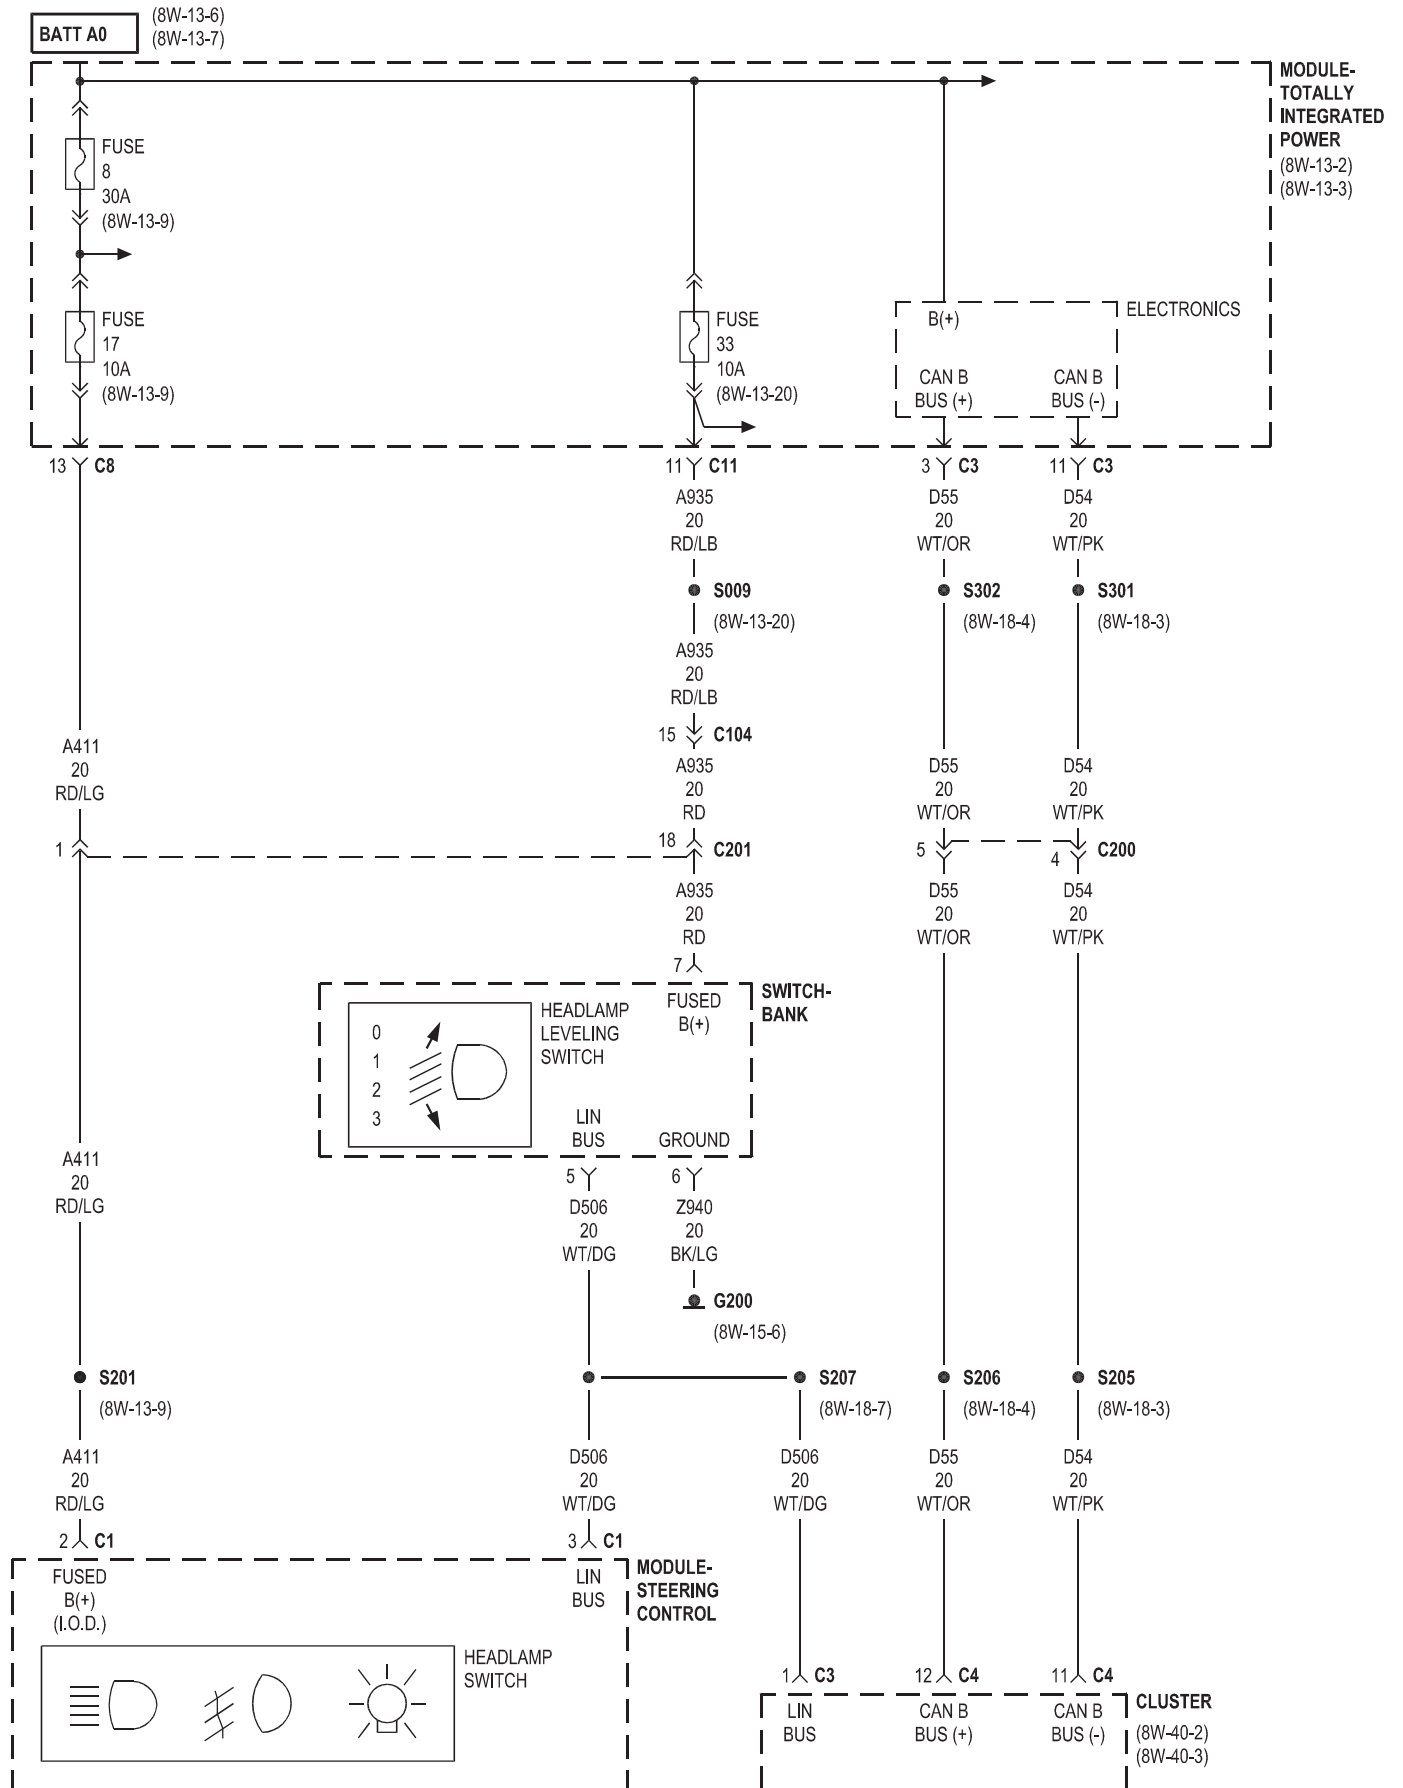

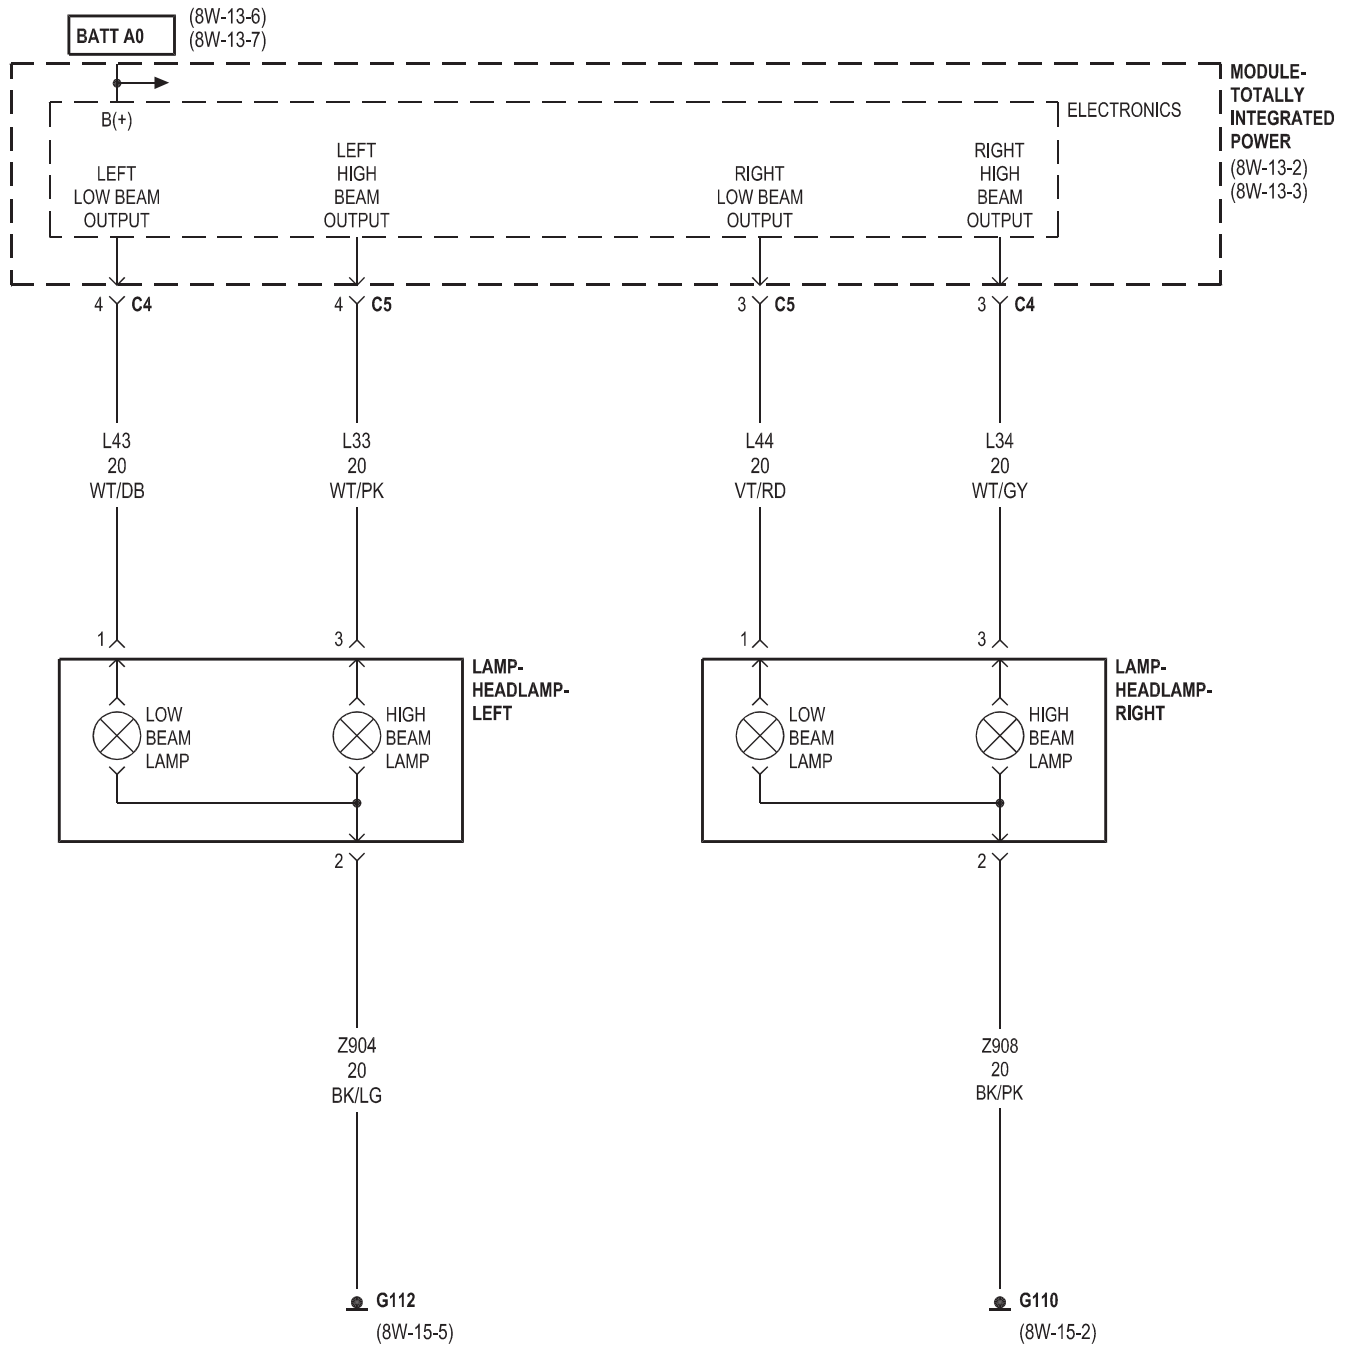

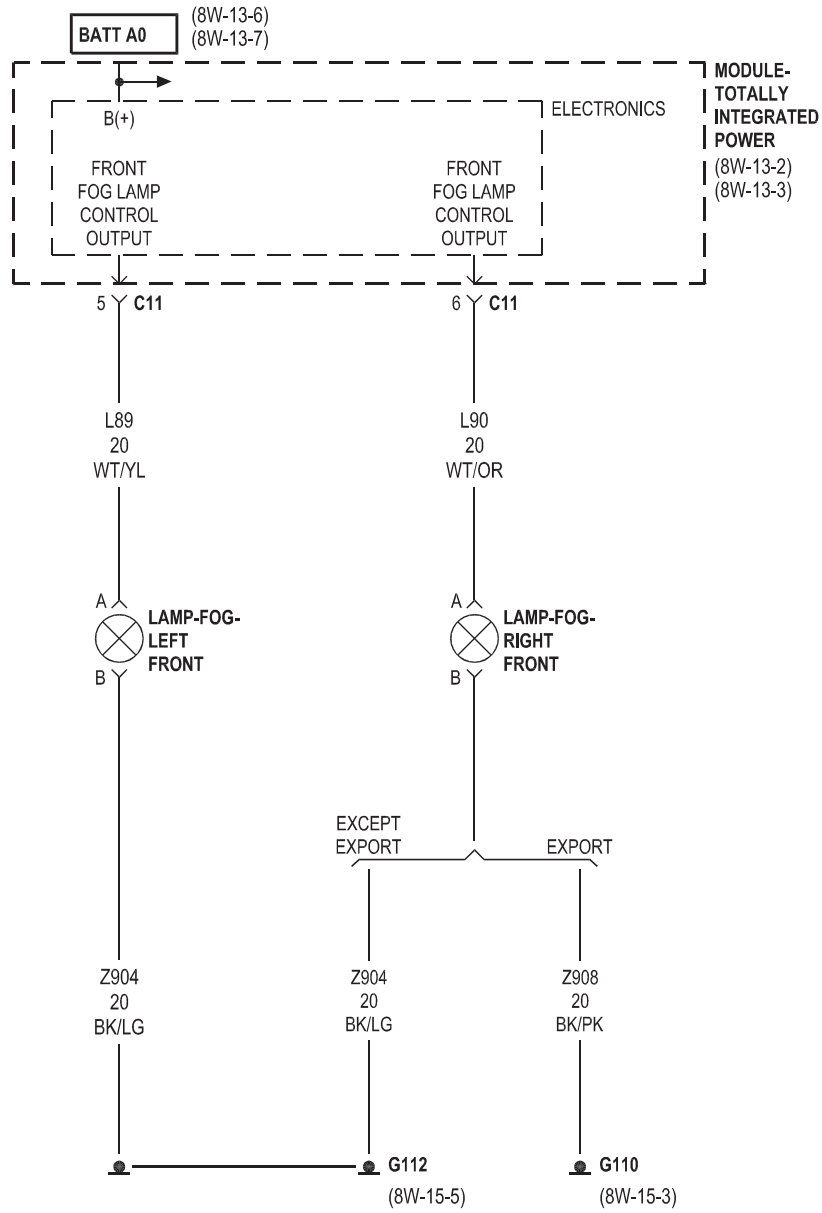


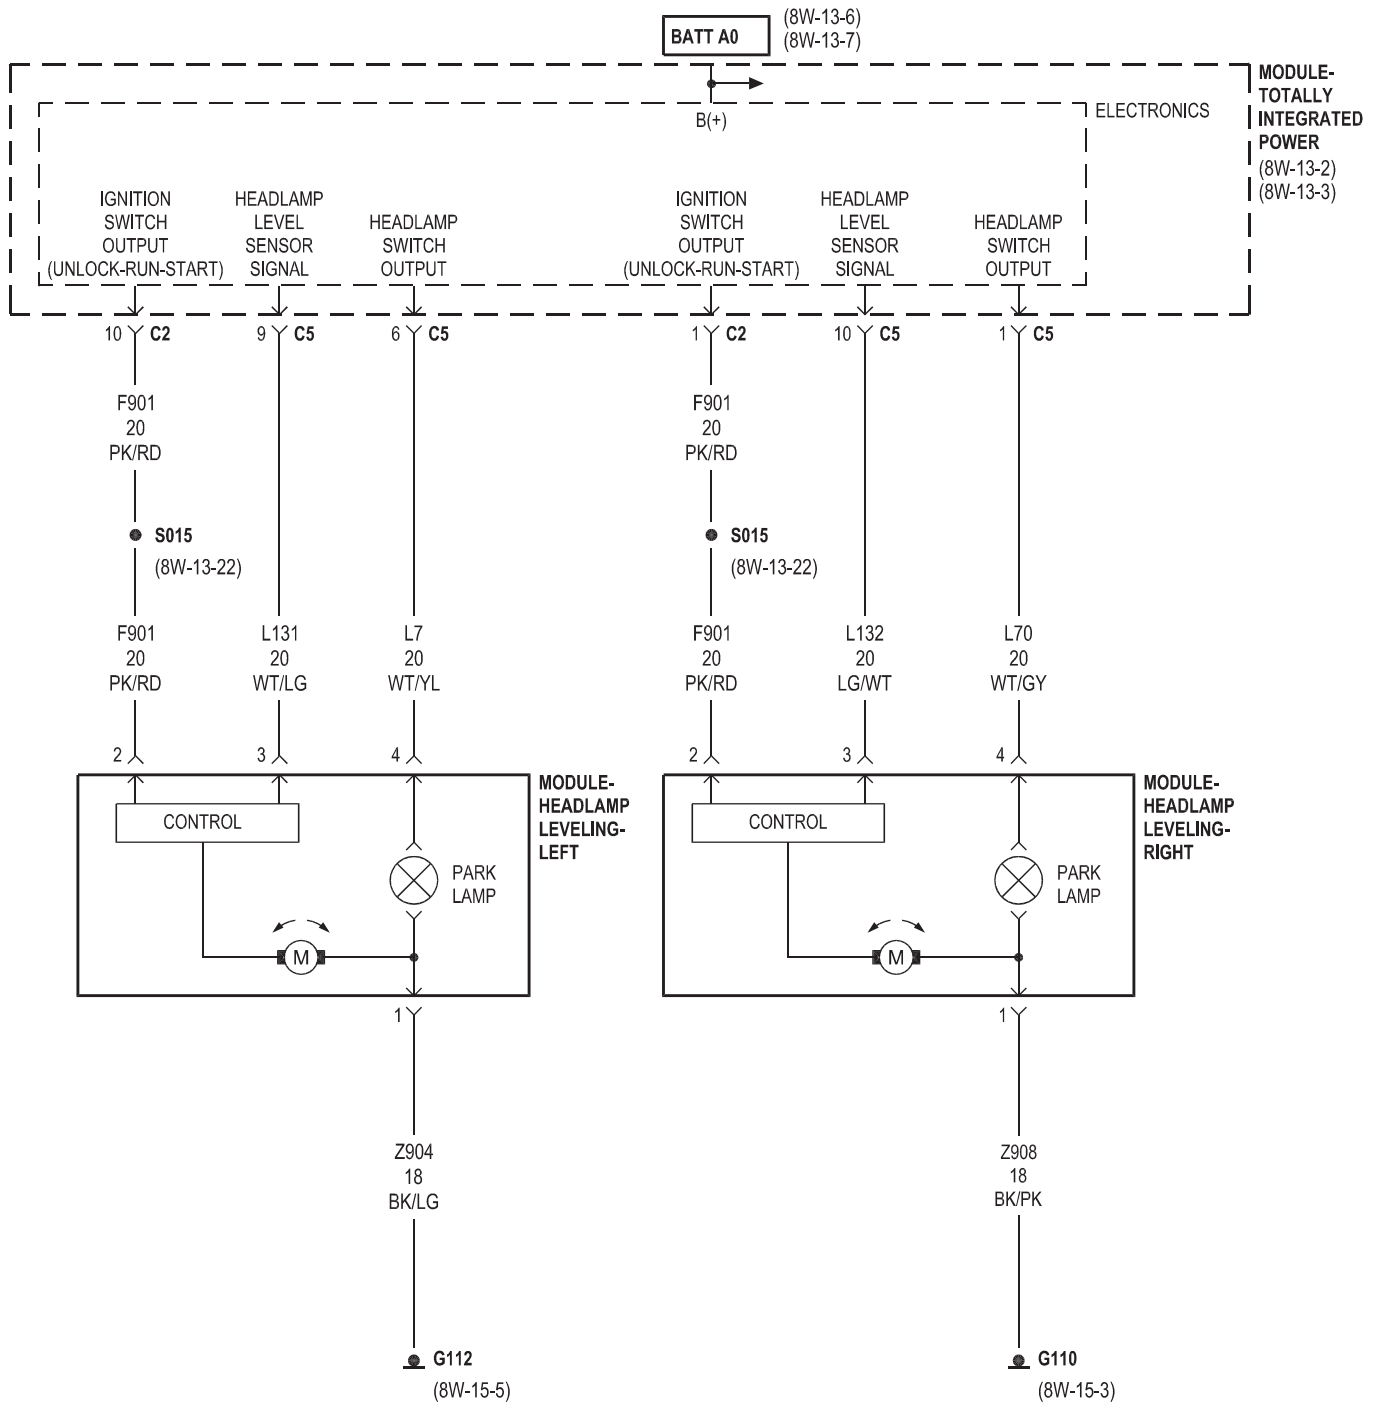


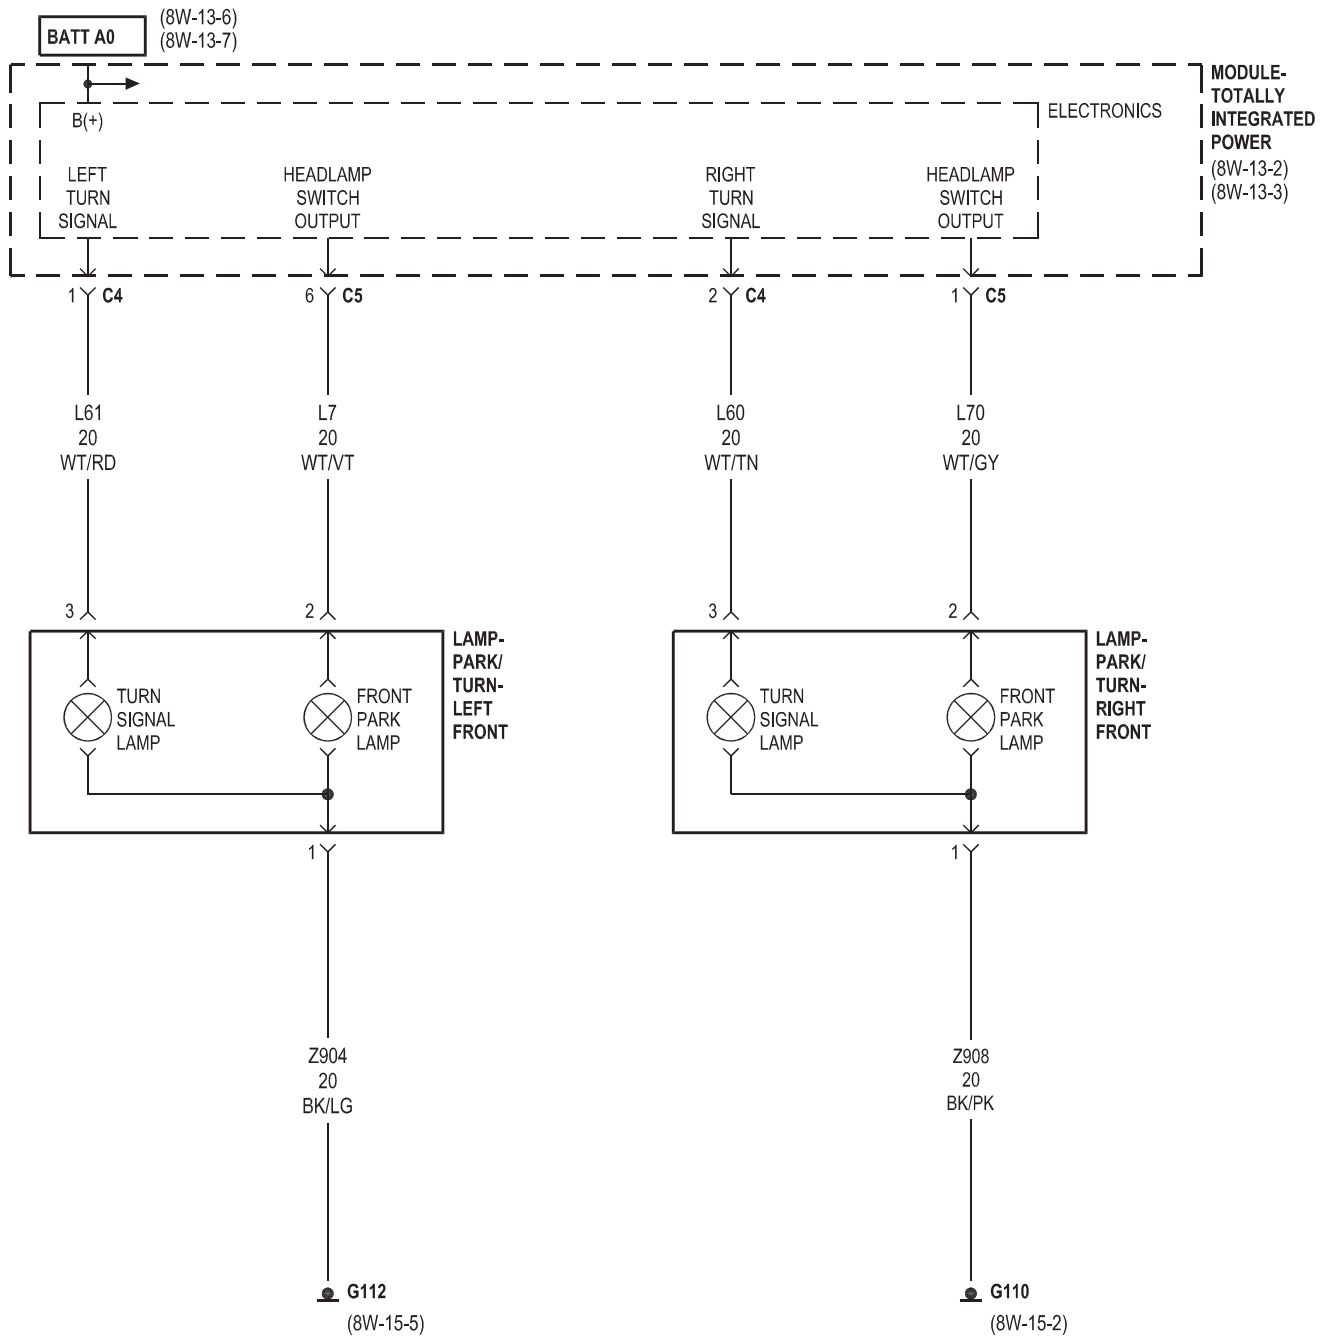


8W-51 REAR LIGHTING

Component	Page	Component	Page
Cluster	8W-51-2, 4	Lamp-Tail Turn-Left	8W-51-7
Fuse 3	8W-51-4	Lamp-Tail Turn-Right	8W-51-7
Fuse 8	8W-51-2	Lamp-Tail/Stop-Left	8W-51-5
Fuse 17	8W-51-2	Lamp-Tail/Stop-Right	8W-51-5
G200	8W-51-2	Lamp-Tail/Stop/Fog-Left	8W-51-6
G250	8W-51-2	Lamp-Tail/Stop/Fog-Right	8W-51-6
G301	8W-51-3, 4, 5, 6, 7	Module-Steering Control	8W-51-2
G303	8W-51-3, 5, 6, 7	Module-Totally Integrated	
Lamp-Backup-Left	8W-51-3	Power	8W-51-2, 3, 4, 5, 6, 7
Lamp-Backup-Right	8W-51-3	Switch-Backup Lamp	8W-51-3
Lamp-High Mounted Stop	8W-51-4	Switch-Stop Lamp	8W-51-4
Lamp-License	8W-51-7		

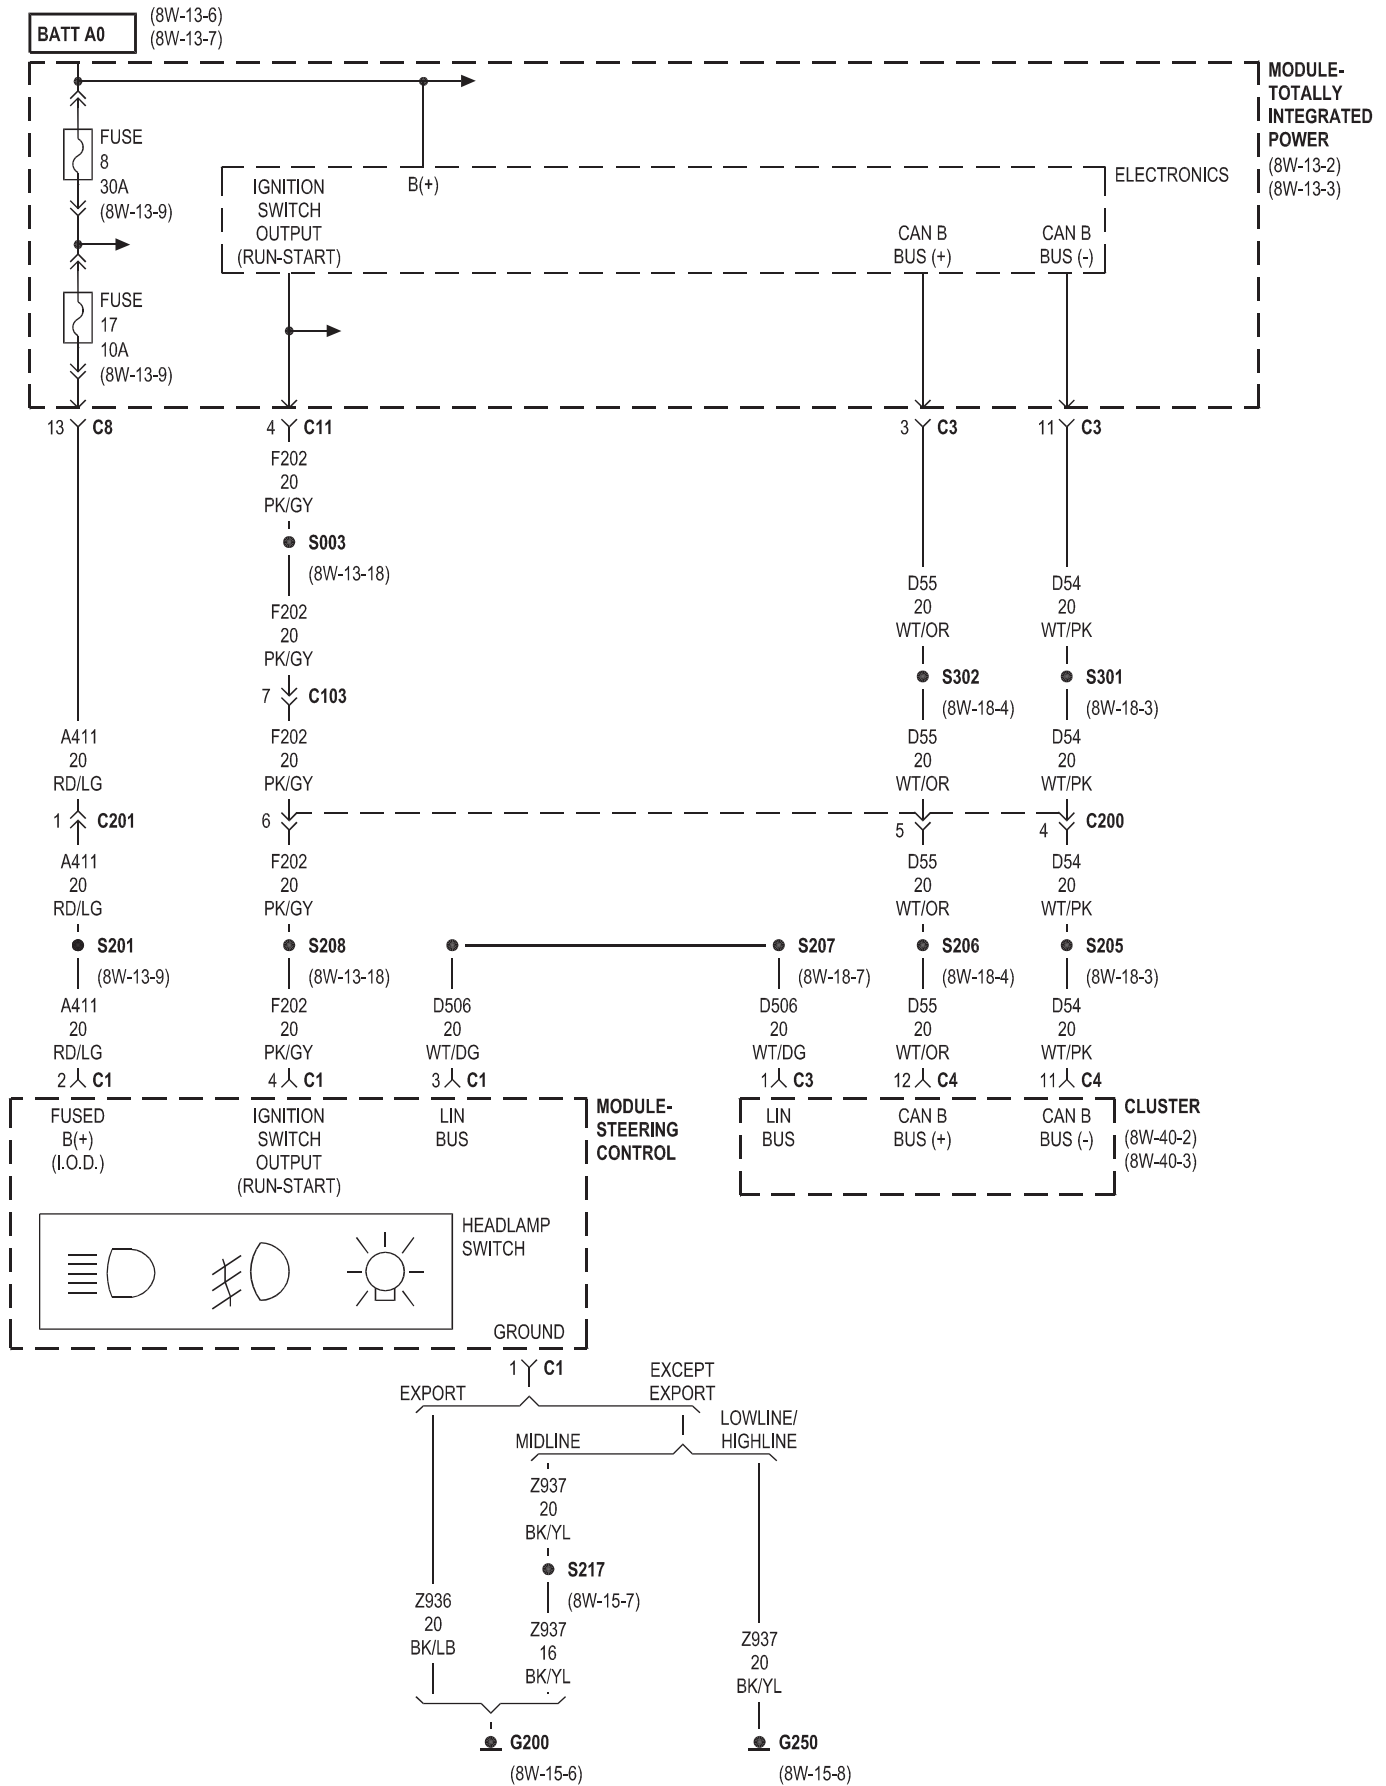

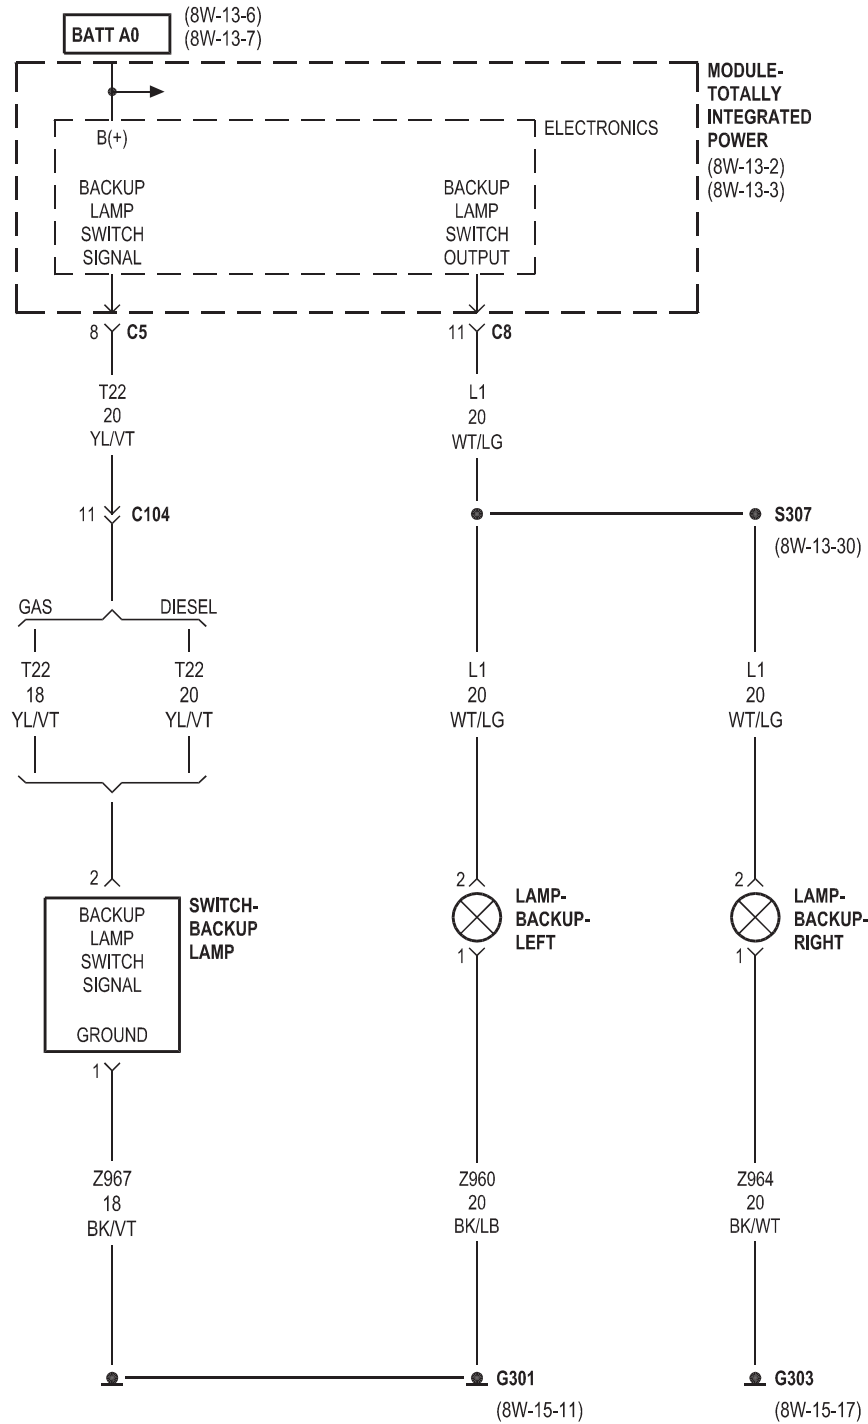

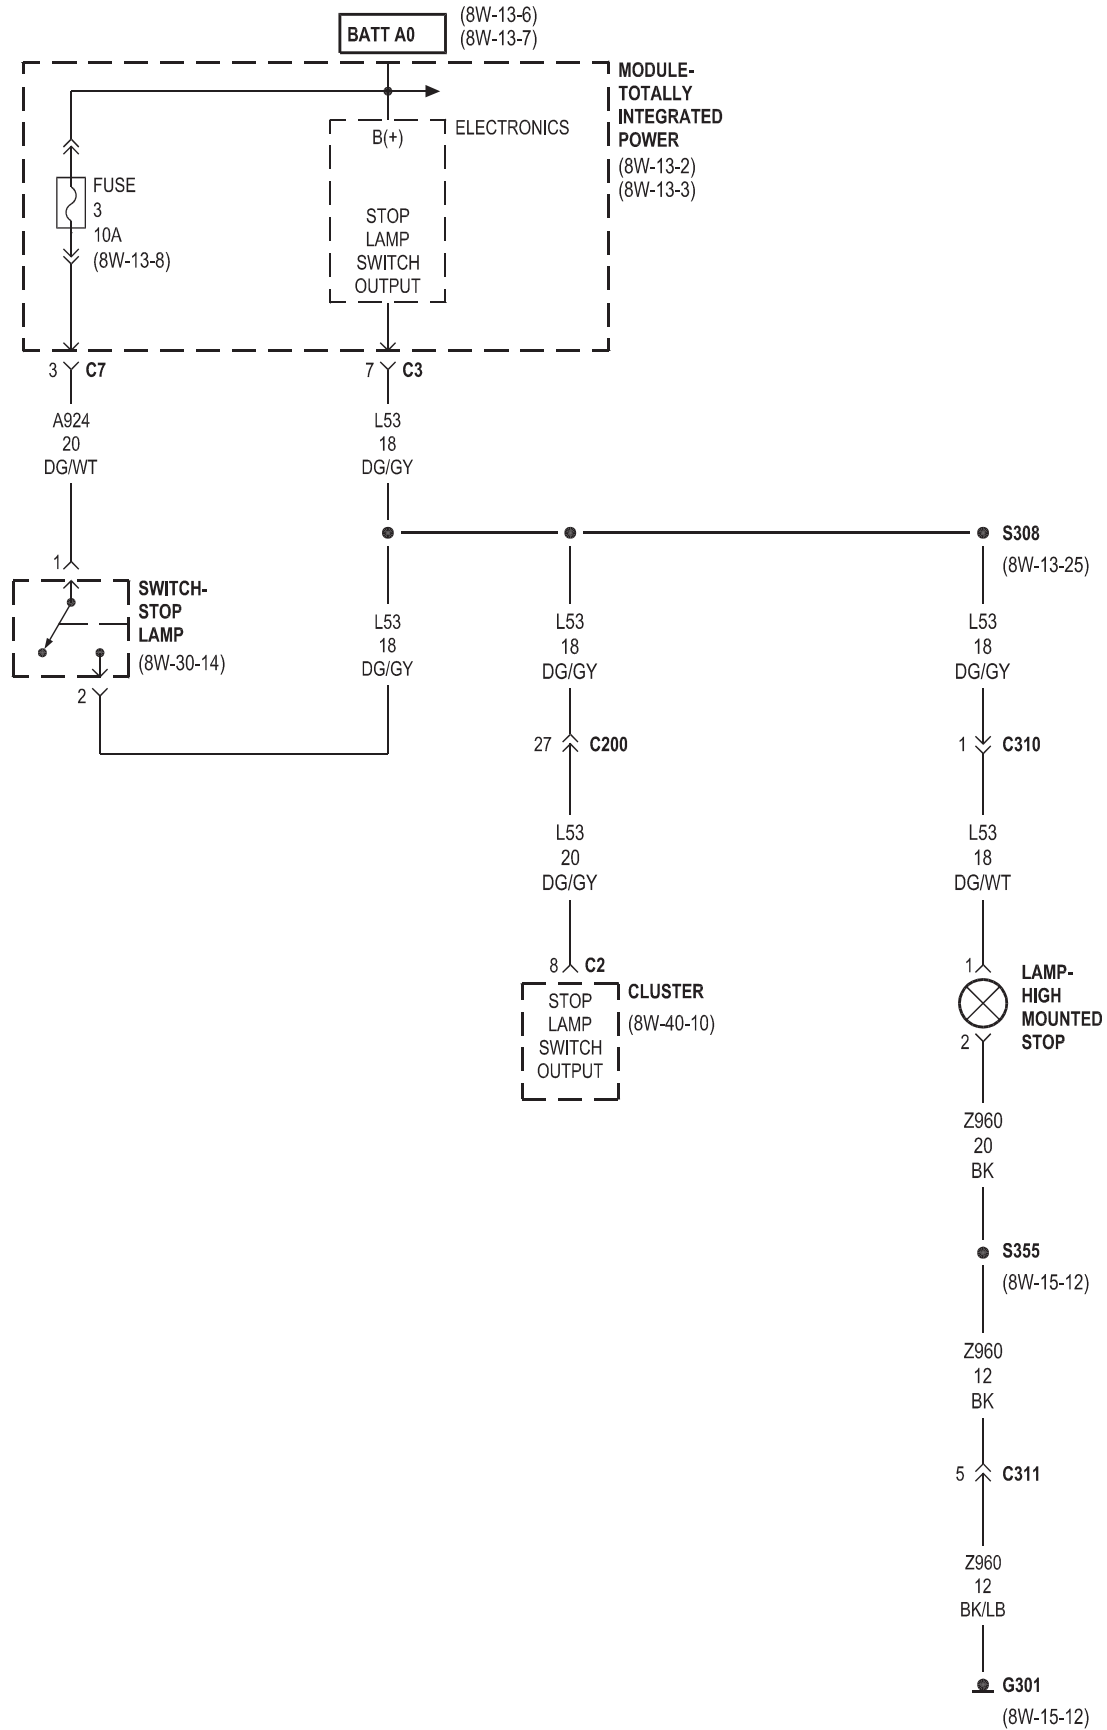

PM **8W-51 REAR LIGHTING EXCEPT EXPORT** 8W - 51 - 5

