



Forward and Reversing Vibrating Plate LG 140/160/200/250/300/450/500/550/700

Work Shop Manual WLGALLEN1, August 1998

These instructions apply from:

LG 140	PIN (S/N)	*31400001*
LG 160	PIN (S/N)	*31600001*
LG 200	PIN (S/N)	*32000001*
LG 250	PIN (S/N)	*32500001*
LG 300	PIN (S/N)	*33000001*
LG 450	PIN (S/N)	*34500001*
LG 500	PIN (S/N)	*35000050*
LG 550	PIN (S/N)	*35500049*
LG 700	PIN (S/N)	*37000001*

