



Forward and Reversible Vibrating Plate LH 300/700/800


Work Shop Manual Eccentricement WLHALLEN2, May 2002

These instructions apply from:

LH 300 S/N *30060138*

LH 700 S/N *70030178*

LH 800 S/N *80030180*

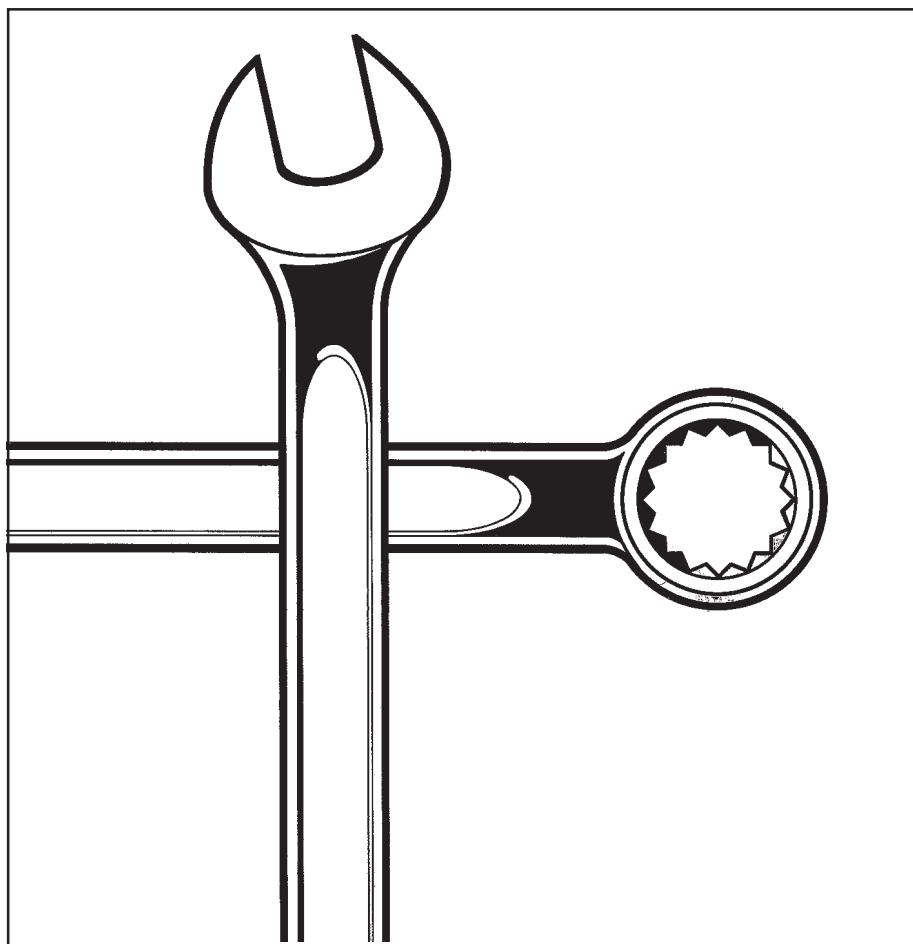

CONTENTS

	Page
Technical data	3
Other service information	3
Tightening torque tables	4
Principles of operation	5
Hydraulic diagram LH 300	6
Hydraulic diagram LH 700	7
Hydraulic diagram LH 800	8
Hydraulic System	9
Eccentric housing identification	10
Assembly of eccentric element – LH 300	11-15
Piston	11
Control shaft	12
Drive shaft	13
Eccentric housing assembly	14
Hydraulic motor	14
Marking of eccentric element	15
Assembly of eccentric element – LH 700	16-20
Piston	16
Control shaft	17, 18
Drive shaft	18, 19
Eccentric Element	19
Hydraulic motor	20
Eccentric housing assembly	20
Assembly of eccentric element – LH 800	21-25
Piston	21
Control shaft	22
Drive shaft	23
Hydraulic motor	24
Eccentric housing assembly	24
Filling oil in the eccentric housing	25
Check eccentric element oil	25
Draining oil from the eccentric housing	25
Troubleshooting	26

WARNING SYMBOLS

WARNING



Safety instructions – Personal safety

CAUTION



Special caution – Machine or component damage