

DYNAPAC


**Forward and Reversing Vibrating Plate
LH 300/700**

**Work Shop Manual
WLHALLEN1, October 2001**

These instructions apply from:

LH 300 S/N *30060138*

LH 700 S/N *70030178*

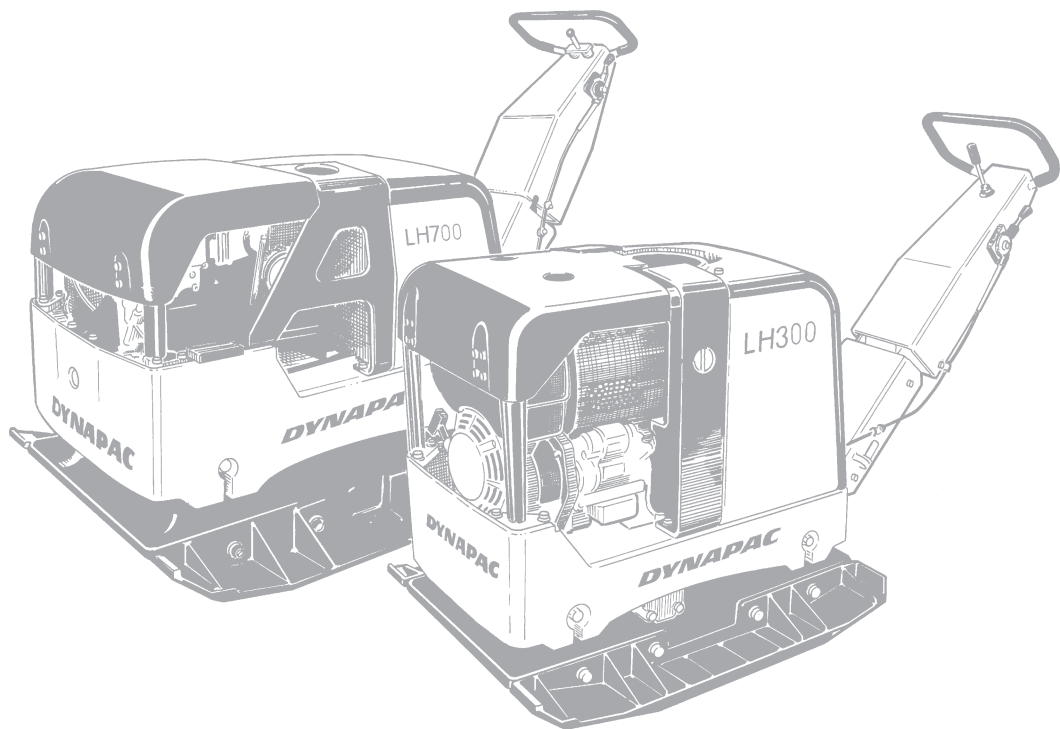

CONTENTS

	Page
Technical data	3
Other service information	3
Principles of operation	4
Hydraulic diagram LH 300	5
Hydraulic diagram LH 700	6
Hydraulic System	7
Eccentric housing identification - Control shaft LH 300	8
Assembly of eccentric element - Drive shaft LH 300	9
Assembly of eccentric element - Piston LH 300	10
Assembly of eccentric element - Hydraulic engine LH 300	11
Eccentric housing assembly LH 300	12
Marking of eccentric element	13
Assembly of eccentric element - Control shaft LH 700	14
Assembly of eccentric element - Drive shaft LH 700	15
Assembly of eccentric element - Eccentric Element LH 700 ..	16
Assembly of eccentric element - Piston LH 700	17
Assembly of eccentric element - Hydraulic engine LH 700	18
Eccentric housing assembly LH 700	18
Check eccentric element oil	19
Troubleshooting	20

WARNING SYMBOLS

WARNING



Safety instructions – Personal safety

CAUTION



Special caution – Machine or component damage