

Instructions manual

Operating & Maintenance

4812273397.pdf

Compact planer
PL500

Diesel engine
Cummins QSB 4.5

Serial number
1000902x0C003643 -



Translation of original instructions.

*Reservation for changes
Printed in China*

Table of Contents

Introduction	1
The machine	1
Intended use	1
Warning symbols.....	2
General	2
Safety - General instructions.....	3
Safety - when operating	5
Risk zones on the machine	5
Slopes	6
Safety (Optional).....	7
Conveyor (option).....	7
Roof (option)	8
Hydraulic chassis leg (option)	8
Special instructions	9
Standard lubricants and other recommended oils and fluids	9
Higher ambient temperatures, above +40°C (104°F).....	9
Lower ambient temperature - Freeze risk	9
Temperatures.....	9
High pressure cleaning	10
Fire fighting	10
Battery handling	10
Jump starting (24V).....	11
Technical specifications	13
Vibrations - Operator station	13
Noise level.....	13
Dimensions, side view.....	14
Dimensions, top view	15
Weights and volumes.....	16
Working capacity.....	17
General	17

Tightening torque	19
Machine description	21
Descriptions of assemblies and functions.....	21
Machine description	23
Identification	27
Product identification number on the frame	27
Machine plate.....	27
Explanation of 17PIN serial number.....	28
Conveyor plate.....	28
Engine plate (IIIA/T3).....	28
Decals.....	29
Positioning of labels, right-hand side	29
Positioning of labels, left-hand side.....	30
Safety decals.....	31
Info decals.....	33
Instruments/Controls	34
Control panel and controls	34
Functional description of control panel.....	35
Ergonomic panel and controls.....	38
Functional description, ergonomic panel.....	39
Display	40
Function description, Display	41
Description of Dialog boxes	41
Description of error codes, dialog boxes.....	48
Electrical system.....	50
Main fuses.....	51
Fuses, machine.....	52
Relays, machine.....	53
Functional description.....	53
Safety sensors - scraper	53
Locking device, scraper	54
Working lights.....	54
Emptying/Filling water tank	55
Stop valve, freewheel, milling drum	55

Vandalism protection.....	56
Hydraulic front plate - Milling housing	57
Bits - Tool holder	57
Typical wear marks on tool holder	58
Typical wear marks on bits.....	58
Bits - Checking - Fitting/Removing.....	59
Tool holder - Checking/Replacing	60
Rear door - Milling housing (Option)	61
Roof (Option)	62
Raise/lower the roof manually.....	62
Operation	63
Before starting	63
Master switch - Switching on.....	63
Operator's seat - Adjustment.....	63
Control unit, ergonomic panel	64
Unlock the vandalism protection	64
Instrument and lamp checks	65
Checking the working hours.....	65
View	65
Roof adjustment (option).....	66
Starting	67
Starting the engine	67
Driving	68
Positioning.....	68
Driving the machine	68
Driving on difficult surfaces	70
Drive wheels.....	70
Swivel chassis leg, hydraulic	71
Pointer.....	71
Milling/Levelling	72
Milling depth indicator, adjustment.....	72
Indication of milling edge.....	72

Spirit level.....	73
Manometer, scraper release pressure	73
Milling preparations	74
Milling without automatic levelling	75
Milling with automatic levelling (option).....	75
Stop milling.....	76
Milling instructions.....	77
Milling position.....	77
Resetting milling depth.....	77
Surface milling.....	78
Milling at edge of roadway or at shoulders.....	78
Milling at curb edge with folded out chassis leg.	79
Milling at curb edge with folded in chassis leg.	79
Breaking	80
Normal braking.....	80
Parking brake	80
Secondary brake	80
Emergency braking	80
Parking	81
Parking/Switching off.....	81
Master switch	81
Uncouple of conveyor - rigid	82
Uncouple of conveyor - foldable	83
Long-term parking.....	85
Battery.....	85
Engine	85
Watering system	85
Hoods, tarpaulin	85
Fuel tank	86
Hydraulic reservoir.....	86
Miscellaneous	87
Lifting	87

Lifting the planer.....	87
Lifting the conveyor.....	89
Towing/Recovery.....	90
Releasing the brakes and pump.....	90
Towing the planer.....	91
Transport.....	92
Machine prepared for transport.....	92
Operating instructions - Summary.....	95
Preventive maintenance.....	97
Acceptance and delivery inspection.....	97
Warranty.....	97
Maintenance - Lubricants and symbols.....	99
Maintenance - Maintenance schedule.....	101
Service and maintenance points.....	101
General.....	102
After the FIRST 10 hours of operation.....	102
Every 10 hours of operation (Daily).....	103
Every 50 hours of operation (Weekly).....	104
After the FIRST 100 hours of operation.....	104
After the FIRST 250 hours of operation.....	104
Every 250 hours of operation (Monthly).....	105
Every 500 hours of operation (Every three months).....	105
Every 1000 hours of operation (Every six months).....	105
Every 2000 hours of operation (Yearly).....	106
Maintenance - 10h.....	107
Diesel engine Check oil level.....	107
Hydraulic reservoir - Check fluid level.....	108
Fuel tank - Filling.....	108
Check the high-pressure hydraulic filter.....	109
Water tank - filling.....	109
Check return filter - suction side.....	110

Sprinkler system/nozzles	
Checking/Cleaning	110
Water filter - Checking/Replacing	111
Sprinkler system - Draining	112
Check of belt tension - belt rollers, conveyor belt	113
Milling drum - Drive belt - replacement	114
Brake function/Emergency stop - Check	115
Diesel engine - Checking the drive belt	116
Side shields - Check	116
Side plates/Wearing parts, right side - Replace	117
Side shields - Replace wear plates left side	117
Side plates/Wearing parts, left side - Replace	118
Water separator, fuel prefilter - Draining	119
Clean cooler	119
Check Hydraulic front plate - Milling housing	120
Maintenance - 50h	121
Air cleaner - emptying	121
Chassis leg, drive wheel Planetary gear - Check of oil level	122
Drum gearbox - Checking the oil level	122
Lubrication points	123
Chassis leg, right side	124
Guide, two-wheel variant	124
Guide, one-wheel variant	125
Conveyor - reversing (option)	125
Conveyor - drive (option)	126
Conveyor belt - swivel bracket	126
Hydraulic cylinder	127
Check of funnel rubber - sealing rubber, side guides	127

Check of scraper tool, milling housing	128
Maintenance - 250h	129
Battery	
Checking the electrolyte level	129
Coolant level - Check	130
Pump drive - Check of belt	130
Airfilter - Change mainfilter	131
Air cleaner	
- Cleaning	132
Slide plates, chassis leg - check	132
Adjust the clearance	132
Maintenance - 500h	133
Diesel engine - Oil change - Filter replacement	133
Fuel filter - Replacement	134
Fuel filter - Bleeding the filter	135
Water separator, fuel prefilter - Replacement	135
Hydraulic reservoir cap - Check	136
Hydraulic hoses	
Check	136
Clutch lining - check	137
Water tank - Emptying / Cleaning	138
Maintenance - 1000h	139
Clutch bearing	139
Tightening torque bolted joints - Milling housing	140
Maintenance - 2000h	141
Hydraulic reservoir	
Fluid change	141
Pump drive - Check - replacement of belt	142
High-pressure hydraulic filter - Replacement	142
Pump drive - adjusting the belt tension	143
Return oil filter suction side	
Replacement	144



Chassis leg, drive wheel - Planetary gear, oil draining	145
Drum gearbox - Oil change	145
Diesel engine - Replacing the drive belt.....	146
Release the pump drive	146
Fuel tank - Drainage.....	147