

Instruction manual

Operating & Maintenance

4812316023EN.pdf

**Pneumatic tire roller
CP142**

**Engine
Cummins QSB 3.3**

**Serial number
10000500x0B003739 -**



Translation of original instruction

*Reservation for changes
Printed in Brazil*



Table of Contents

Introduction	1
The machine	1
Intended use	1
Warning symbols.....	1
Safety information	1
CE marking and Declaration of conformity.....	2
General	2
Safety - General instructions.....	5
Safety - when operating	7
Driving near edges	7
Slopes	8
Special instructions	9
Standard lubricants and other recommended oils and fluids	9
Higher ambient temperatures, above +40°C (104°F).....	9
Lower ambient temperature - Freeze risk	9
Temperatures.....	9
High pressure cleaning	9
Fire fighting	10
Roll Over Protective Structure (ROPS), ROPS approved cab	10
Battery handling	10
Jump starting.....	11
Technical specifications	13
Vibrations - Operator station	13
Noise level.....	13
Technical specifications - Dimensions	15
Dimensions, side view.....	15
Dimensions, top view	16
Dimensions, front view	17
Weights and volumes.....	18
Working capacity	18

General	19
Tightening torque	20
ROPS - bolts	21
Hydraulic system	21
Machine description	23
Identification	23
Product identification number on the frame	23
Machine plate	23
Explanation of 17PIN serial number	24
Engine plates	24
Machine description- Decals	25
Location - decals	25
Safety decals	26
Info decals	27
Locations - Instruments and controls	28
Function descriptions	29
Electrical system	32
Fuses	32
Fuses and relays	33
Relays	33
Maxi-fuses	33
Operation	35
Before starting	35
Engine compartment cover	35
Master switch - Switching ON	35
Interlock	36
Operator's seat - Adjusting	36
Seat belt	37
Installation/removal - ballast boxes	38
View	39

Instruments and lamps - Checking.....	39
Operator position.....	40
Start of diesel engine	41
Driving	42
Freewheel	43
Operating the roller	44
Driving (Ground Pressure)	47
Ground pressure	47
Low tire pressure - 240 kPa (34.8 psi)	47
Normal tire pressure - 480 kPa (69.6 psi)	47
High tire pressure - 830 kPa (120.4 psi)	48
Ground pressure	48
Interlock/Emergency stop/Parking brake - Check	49
Braking	50
Normal braking.....	50
Emergency braking	51
Switching off.....	52
Chocking the wheels.....	52
Master switch	53
Long-term parking.....	55
Engine	55
Battery.....	55
Air cleaner, exhaust pipe.....	55
Sprinkler system.....	55
Fuel tank	55
Hydraulic reservoir	56
Steering cylinder, hinges, etc.	56
Tires	56
Hoods, tarpaulin	56
Watering system	56

Miscellaneous	57
Lifting	57
Lifting the roller	57
Towing/Recovering	57
Towing the roller	58
Trailer eye	59
Roller prepared for transport	59
Operating instructions - Summary	61
Preventive maintenance	63
Acceptance and delivery inspection	63
Warranty	63
Maintenance - Lubricants and symbols	65
Maintenance symbols	66
Maintenance - Maintenance schedule	67
Service and maintenance points	67
General	67
Every 10 hours of operation (Daily)	68
After the FIRST 50 hours of operation	68
Every 50 hours of hourly operation (Weekly)	69
Every 250 hours of operation (Monthly)	69
Every 500 hours of operation (Every three months)	69
Every 1000 hours of operation (Every six months)	70
Every 2000 hours of operation (Yearly)	70
Maintenance, 10h	71
Hydraulic reservoir, Level check - Filling	71
Air circulation - Check	71
Fuel tank - Filling	72
Coolant level - Check	72
Diesel engine Check oil level	73
Scapers Checking - Setting	73

Sprinkler system - Check/Cleaning	74
Nozzle - Dismantling/Cleaning	74
Water tank - Filling	75
Brakes - Check	76
Maintenance - 50h	79
Air intake system - Check	79
Air cleaner - Cleaning	79
Backup filter - Change	80
Tire pressure - Check	80
Tightening torque for wheel-nuts - check	81
Ballast bolts - Check	82
Steering cylinder suspension - Lubrication	82
Front oscillation axle - Lubrication	83
Steering cylinder - Lubrication	83
Maintenance - 250h	85
Radiator - Check/Cleaning	85
Diesel engine - Oil and filter replacement	86
Battery (maintenance-free)	87
Maintenance - 500h	89
Diesel engine - Oil and filter replacement	89
Hinges, controls - Lubrication	90
Diesel engine pre-filter - replacement/cleaning	90
Braking	91
Normal braking	91
Alternative testing with disconnected brake release	91
Pressure testing	94
Maintenance - 1000h	95
Hydraulic reservoir, Level check - Filling	96
Hydraulic fluid reservoir - Draining condensate	97

Maintenance - 2000h	99
Hydraulic reservoir - Fluid change	99
Fuel tank - Cleaning	100
Water tank - Filling	100

Introduction

The machine

Dynapac CP142 is a rubber wheel roller in the 12 tonnes class, with a working width of 1760 mm.

It has five guide wheels at the front and four drive wheels at the back. An exclusive modular ballast system comprising ballast boxes, allowing a precise control of wheel load.

Intended use

CP142 is mainly used for compaction of asphalt for surface sealing. It is also used for base courses, subbase courses and stabilized soil.

Warning symbols



WARNING ! Marks a danger or a hazardous procedure that can result in life threatening or serious injury if the warning is ignored.



CAUTION ! Marks a danger or hazardous procedure that can result in damage to the machine or property if the warning is ignored.

Safety information



It is recommended to at least train operators in handling and daily maintenance of the machine in accordance with the instruction manual. Passengers are not allowed on the machine, and you must sit in the seat when operating the machine.



The safety manual supplied with the machine must be read by all roller operators. Always follow the safety instructions. Do not remove the manual from the machine.



We recommend that the operator reads the safety instructions in this manual carefully. Always follow the safety instructions. Ensure that this manual is always easily accessible.



Read the entire manual before starting the machine and before carrying out any maintenance.



Replace immediately the instruction manuals if lost, damaged or unreadable.



Ensure good ventilation (extraction of air by fan) where the engine is run indoors.



Prevent persons from entering or remaining in the danger area, i.e. a distance of at least 7 m (23 ft) in all directions from operating machines. The operator may allow a person to remain in the risk zone, however he/she must be attentive and operate the machine only when the person is fully visible or has given a clear indication of where he or she is.

CE marking and Declaration of conformity

(Applies to machines marketed in EU/EEC)

This machine is CE marked. This shows that on delivery it complies with the basic health and safety directives applicable for the machine in accordance with machinery directive 2006/42/EC and that it also complies with other directives applicable for this machine.

A "Declaration of conformity" is supplied with this machine, which specifies the applicable directives and supplements, as well as the harmonized standards and other regulations that are applied.

General

This manual contains instructions for machine operation and maintenance.

The machine must be correctly maintained for maximal performance.

The machine should be kept clean so that any leakages, loose bolts and loose connections are discovered at as early a point in time as possible.

Inspect the machine every day, before starting. Inspect the entire machine so that any leakages or other faults are detected.

Check the ground under the machine. Leakages are more easily detected on the ground than on the machine itself.