



# Instructions manual

## Operating & Maintenance

**4812273203.pdf**

**Rubber wheel roller  
CP275 (IIIA/T3)**

**Diesel engine  
Cummins QSB4.5-C130**

**Serial number  
10000509x0C003425 -**



---

Original instructions.

Reservation for changes

Printed in China



## Table of contents

<b>Instruction .....</b>	1
The machine.....	1
Intended use .....	1
Warning symbols .....	1
Safety information .....	2
General .....	3
<b>Safety – General instructions.....</b>	5
<b>Safety – when operating .....</b>	7
Slopes.....	7
Driving near edges .....	8
<b>Safety (Optional) .....</b>	9
Air conditioning (Optional).....	9
<b>Special instructions .....</b>	11
Special instructions.....	11
Standard lubricants and other recommended oil and fluids .....	11
High ambient temperatures, above +40°C (104°F).....	11
Lower ambient temperature – Freeze risk.....	11
Temperatures.....	11
High pressure cleaning .....	12
Fire fighting .....	12
Roll Over Protective Structure (ROPS), ROPS approved cab .....	12
Jumping starting (24V) .....	14
<b>Technical specifications.....</b>	15
Technical specifications .....	15
Noise level .....	15
Technical specifications - Dimensions .....	16
Weights and volumes .....	17
Working capacity.....	18

## Contents

<b>General</b> .....	18
<b>Tightening torques</b> .....	19
<b>Machine description</b> .....	<b>21</b>
<b>Identification</b> .....	21
<b>Product identification number on the frame</b> .....	21
<b>Machine plate</b> .....	21
<b>Explanation of 17PIN serial number</b> .....	22
<b>Engine plate</b> .....	22
<b>Safety decals</b> .....	24
<b>Locations – Control panel and controls</b> .....	27
<b>Locations &amp; control, cab</b> .....	28
<b>Function description of instruments and controls in the cab</b> .....	29
<b>Using the cab controls</b> .....	30
<b>Defroster</b> .....	30
<b>Heat</b> .....	30
<b>AC</b> .....	30
<b>Electrical system</b> .....	31
<b>Fuse</b> .....	32
<b>Cab, fuse</b> .....	32
<b>Operation</b> .....	33
<b>Before starting</b> .....	33
<b>Master switch – Switching on</b> .....	33
<b>Before starting</b> .....	34
1. <b>Control panel and lights - Check</b> .....	34
2. <b>Forward and backward lever - Check</b> .....	34
3. <b>Parking brake - Check</b> .....	35
<b>View</b> .....	35
<b>Operator position</b> .....	36
<b>Interlock</b> .....	36
<b>Operating the roller</b> .....	37

Speed selecting .....	37
Operating on a slope .....	38
Checking the treads on the tires .....	39
Variable tire pressure (air-on-the-run) (Option) .....	39
Ballast box .....	40
Driving (Ground Pressure) .....	41
Ground pressure .....	41
Low tire pressure – 380kPa (55 psi) .....	42
Normal tire pressure – 510kPa (70 psi) .....	43
High tire pressure – 780kPa (78 psi) .....	43
Interlock/Emergency stop/Parking brake - Check .....	44
Normal braking .....	44
Emergency braking .....	45
Switching off .....	45
Chocking the wheels .....	45
Master switch .....	46
Long-term parking .....	47
Miscellaneous .....	49
Lifting .....	49
Lifting the roller .....	49
Lifting the roller with jack .....	49
Roller prepare for transport .....	50
Towing the roller .....	52
Operating instructions - Summary .....	53
Preventive maintenance .....	55
Maintenance – Lubricants and symbols .....	57
Maintenance – Maintenance schedules .....	59
Service and maintenance points .....	59
General .....	60
Every 10 hours of operation (Daily) .....	60

## Contents

After the FIRST 50 hours of operation .....	61
Every 50 hours of operation (Weekly).....	61
Every 250 hours of operation (Monthly).....	62
Every 500 hours of operation (Every three months) .....	62
Every 1000 hours of operation (Every six months).....	63
Every 2000 hours of operation (Yearly).....	64
<b>Maintenance – 10h .....</b>	<b>65</b>
Diesel engine – Check oil level.....	65
Hydraulic reservoir – Check fluid level .....	66
Coolant level – Check .....	66
Fuel tank – Refueling .....	67
Wheel scrapers – Control .....	68
Removing the scrapers.....	68
Water tank, std – Filling .....	69
Sprinkler system – Check .....	69
Sprinkler system .....	70
Cleaning of sprinkler nozzle .....	70
Sprinkler system - Check.....	70
Sprinkler system – Freeze risk.....	71
Freeze protection .....	71
Brake fluid level – Check .....	72
Tires - Tire pressure .....	72
<b>Maintenance – 50h .....</b>	<b>73</b>
Air cleaner – Cleaning .....	73
Hydraulic fluid cooler – Checking – Cleaning .....	74
Fuel filter – Draining .....	75
Air conditioning (Optional) – Drying filter – Inspection .....	76
Air conditioning (Optional) - Cleaning .....	76
Air conditioning (Optional) - Overhaul.....	77
Air conditioner compressor belt – Check .....	77

Upper/Lower Pivot bearing - Lubrication .....	78
Draining of air reservoir .....	79
Tires – Tire pressure.....	80
Maintenance – 250h .....	81
Fuel filter – Replacing .....	81
Diesel engine – Oil change.....	82
The engine fuel filter – Changing/cleaning.....	83
Diesel engine – Replacing oil filter .....	83
Oil – Water separator – Draining .....	84
Oil – Water separator – Replace .....	84
Battery – Check condition.....	85
Driven chain maintenance .....	86
Driving gear – Check oil level.....	87
Maintenance – 500h .....	89
Hydraulic reservoir – Check.....	89
Maintenance – 1000h.....	91
Air cleaner – Checking – Change the main air filter.....	91
Hydraulic filter – Change .....	92
Cab – Fresh air filter - Replacing .....	93
Wheel gear – Oil change .....	93
Drive gear – Replenishing the oil .....	94
Propulsion pump filter – Replace .....	94
Maintenance – 2000h.....	95
Engine – Replace the coolant.....	95
Hydraulic reservoir – Fluid change.....	96
Water tank – Cleaning.....	97
Cab – Fresh air filter - Replacing .....	98
Hydraulic oil change.....	98
Drive chain – Adjustment.....	99
Additional instruction .....	101

## Contents

---

<b>Oil spray system (Optional) .....</b>	101
<b>Spray volume – Adjustment .....</b>	102
<b>Maintenance – Oil spray system (Optional) .....</b>	102
<b>Temporary cleaning .....</b>	102
<b>Air on the run (Optional) .....</b>	103
<b>Air charge and discharge .....</b>	104
<b>Maintenance – Air on the run (Optional) .....</b>	104
<b>Disposal .....</b>	107

## Introduction

### The machine

Dynapac CP275 is a heavy rubber wheel roller in the 27 tones class, with a working width of 2370 mm.

It has five guide wheels at the front, and four drive wheels at the back. The hydrostatic drives, flexible ballast solution, and a wide range of optional equipment mean that the machine is available in many different configurations.

### Intended use

CP275 is mainly used together with other asphalt rollers for surface sealing. Thanks to its weight, it is also suitable for soil compaction.

The attachment or installation of additional devices, which are used to intervene in the function of the machine or with which its function are supplement, is only permitted with the written approval of the manufacturer.

If necessary, approval should be sought from local authorities.

Consent from the authorities is however no substitute for approval from the manufacturer.

### Warning symbols



***WARNING ! Marks a danger or a hazardous procedure that can result in life threatening or serious injury if the warning is ignored.***



***CAUTION! Marks a danger or hazardous procedure that can result in damage to the machine or property if the warning is ignored.***



## Introduction

### Safety information



***It is recommended to at least train operators in handling and daily maintenance of the machine in accordance with the instruction manual.***

***Passengers are not allowed on the machine, and you must sit in the seat when operating the machine.***



***The safety manual supplied with the machine must be read by all roller operators. Always follow the safety instructions. Do not remove the manual from the machine.***



***We recommend that the operator reads the safety instructions in this manual carefully. Always follow the safety instructions. Ensure that this manual is always easily accessible.***



***Read the entire manual before starting the machine and before carrying out any maintenance.***



***Replace immediately the instruction manuals if lost, damaged or unreadable.***



***Ensure good ventilation (extraction of air by fan) where the engine is run indoors.***



***Prevent persons from entering or remaining in the danger area, i.e. a distance of at least 7 m (23 ft) in all directions from operating machines.***

***The operator may allow a person to remain in the danger area, but should then observe caution and operate the machine only when the person is visible or has given clear indications of where he or she is.***