

# Instruction manual

## Operating & Maintenance

4812161001\_D.pdf

**Vibratory roller  
CC1300**

**Engine  
Kubota V2203**

**Serial number  
10000334x0A012586 -**



Translation of original instruction

*Reservation for changes  
Printed in Sweden*





## Table of Contents

Introduction .....	1
The machine .....	1
Intended use .....	1
Warning symbols.....	1
Safety information .....	1
General .....	2
CE marking and Declaration of conformity.....	3
Safety - General instructions.....	5
Safety - when operating .....	7
Driving near edges .....	7
Slopes .....	8
Special instructions .....	9
Standard lubricants and other recommended oils and fluids .....	9
Higher ambient temperatures, above +40°C (104°F).....	9
Lower ambient temperature - Freeze risk .....	9
Temperatures.....	9
High pressure cleaning .....	9
Fire fighting .....	10
Roll Over Protective Structure (ROPS) .....	10
Battery handling .....	10
Jump starting.....	11
Technical specifications .....	13
Vibrations - Operator station .....	13
Noise level.....	13
Dimensions, top view .....	14
Dimensions, side view.....	15
Weights and volumes .....	16
Working capacity .....	16
General .....	16
Tightening torque .....	17

---

ROPS - bolts .....	18
Hydraulic system .....	18
Machine description .....	19
Diesel engine .....	19
Electrical system .....	19
Propulsion system/Transmission .....	19
Brake system .....	19
Steering system .....	19
FOPS and ROPS .....	19
Identification .....	20
Product identification number on the frame .....	20
Explanation of 17PIN serial number .....	20
Machine plate .....	21
Engine plates .....	21
Location - decals .....	23
Safety decals .....	24
Info decals .....	25
Instruments/Controls .....	27
Locations - Instruments and controls .....	27
Locations - Control panel and controls .....	28
Function description .....	29
Electrical system .....	32
Fuses .....	32
Fuses at battery master disconnect switch .....	33
Operation .....	35
Before starting .....	35
Master switch - Switching on .....	35
Driver seat (Std) - Adjustment .....	35
Driver seat (Option) - Adjustment .....	36
Instruments and lamps - Checking .....	36

Interlock.....	37
Parking brake - Check.....	37
Operator position.....	38
Starting .....	39
Starting the engine .....	39
Driving .....	41
Operating the roller .....	41
Interlock/Emergency stop/Parking brake - Check .....	42
Vibration .....	42
Manual/Automatic vibration.....	42
Braking .....	43
Normal braking.....	43
Emergency braking .....	44
Switching off.....	44
Parking .....	45
Chocking the drums .....	45
Battery disconnecter .....	45
Long-term parking.....	47
Engine .....	47
Battery.....	47
Air cleaner, exhaust pipe.....	47
Fuel tank .....	47
Hydraulic reservoir .....	47
Water tank.....	47
Steering cylinder, hinges, etc. ....	48
Hoods, tarpaulin .....	48
Miscellaneous .....	49
Lifting .....	49
Locking the articulation .....	49
Lifting the roller.....	49

---

Unlocking the articulation .....	50
Towing/Recovering .....	50
Short distance towing with switched off engine.....	50
Release the brakes .....	51
Towing the roller.....	52
Transport .....	52
Securing CC1300 for loading .....	53
Retractable ROPS (Optional).....	54
Operating instructions - Summary .....	57
Preventive maintenance .....	59
Acceptance and delivery inspection.....	59
Warranty.....	59
Maintenance - Lubricants and symbols .....	61
Maintenance symbols .....	62
Maintenance - Maintenance schedule .....	63
Service and maintenance points .....	63
General .....	64
Every 10 hours of operation (Daily).....	64
After the FIRST 50 hours of operation .....	65
Every 50 hours of operation (Weekly).....	65
Every 250 / 750 / 1250 / 1750 hours of operation .....	65
Every 500 / 1500 hours of operation .....	66
Every 1000 hours of operation .....	67
Every 2000 hours of operation .....	68
Service - Checklist.....	69
Maintenance, 10h .....	71
Coolers	
Checking - Cleaning .....	71
Check - Coolant system .....	72
Hydraulic reservoir, Level check - Filling.....	73

Lowering of engine hood.....	74
Air circulation - Check .....	74
Fuel tank - Filling.....	75
Water tank - Filling .....	75
Sprinkler system/Drum Checking - Cleaning.....	76
Scrapers, fixed Checking - Setting.....	77
Scrapers, spring-action (Optional) Checking - Adjustment.....	77
Brakes - Check.....	78
Maintenance - 50h .....	79
Air cleaner indicator .....	79
Air cleaner Check - Replacement of main filter .....	79
Air filter indicator - Resetting .....	80
Backup filter - Change.....	80
Air cleaner - Cleaning.....	81
Steering cylinder and steering joint - Lubrication .....	81
Maintenance - 250 / 750 / 1250 / 1750h .....	83
Coolers Checking - Cleaning.....	83
Battery - Check condition .....	84
Engine oil and oil filter - Change .....	85
Maintenance - 500 / 1500h .....	87
Battery - Check condition .....	87
Engine oil and oil filter - Change .....	88
Drum - oil level Inspection - filling .....	89
Rubber elements and attachment screws Check.....	89

---

Hydraulic reservoir cap - Check .....	89
Controls - Lubrication .....	90
Check - Coolant system .....	90
Replacing the fuel filter.....	91
Controls - Lubrication .....	92
Replacing the pre-filter .....	93
Maintenance - 1000h .....	95
Battery	
- Check condition .....	95
Engine oil and oil filter - Change .....	96
Drum - oil level	
Inspection - filling .....	97
Rubber elements and attachment screws	
Check .....	97
Hydraulic reservoir cap - Check .....	97
Controls - Lubrication .....	98
Check - Coolant system .....	100
Replacing the hydraulic oil filter .....	100
Hydraulic fluid reservoir - Draining .....	101
Replacing the fuel filter.....	102
Replacing the pre-filter .....	103
Maintenance - 2000h .....	105
Battery	
- Check condition .....	105
Engine oil and oil filter - Change .....	106
Drum - oil level	
Inspection - filling .....	107
Rubber elements and attachment screws	
Check .....	107
Hydraulic reservoir cap - Check .....	107
Controls - Lubrication .....	108
Check - Coolant system .....	108



Controls - Lubrication .....	109
Replacing the hydraulic oil filter .....	110
Hydraulic fluid reservoir - Draining .....	111
Replacing the fuel filter.....	112
Replacing the pre-filter .....	113
Hydraulic tank - Changing the fluid .....	114
Drum - Oil change .....	115
Water tank - Draining .....	115
Water pump - Draining .....	116
Fuel tank - Cleaning .....	116
Water tank - Cleaning .....	117
Steering joint - Check.....	117

## Dynapac Vibratory Roller Cc1300 Operation And Maintenance

Full download: <http://manualplace.com/download/dynapac-vibratory-roller-cc1300-operation-and-maintenance/>

*Atlas Copco*

---