

Full download: http://manualplace.com/download/fiat-allis-645m-wheel-loader-parts-catalog-16f17381/


Fiat

# Parts Catalog for 645 M (FSN 3805-051-9359) WHEEL LOADER (S/N 8001-9176)

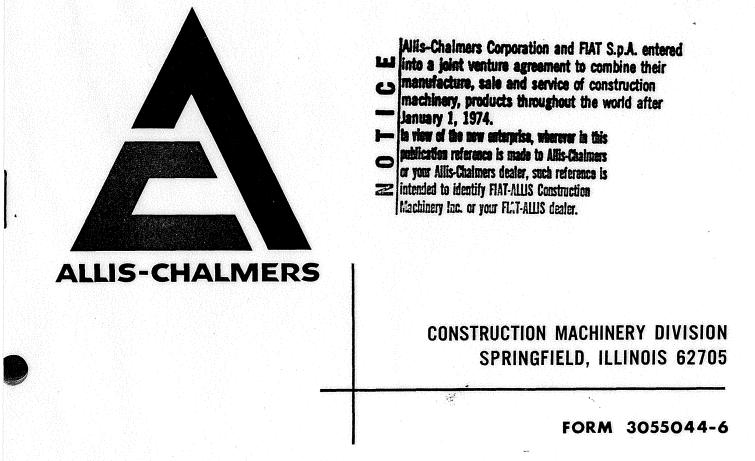

 This is the cut pages sample. Download all 236 page(s) at: ManualPlace.com

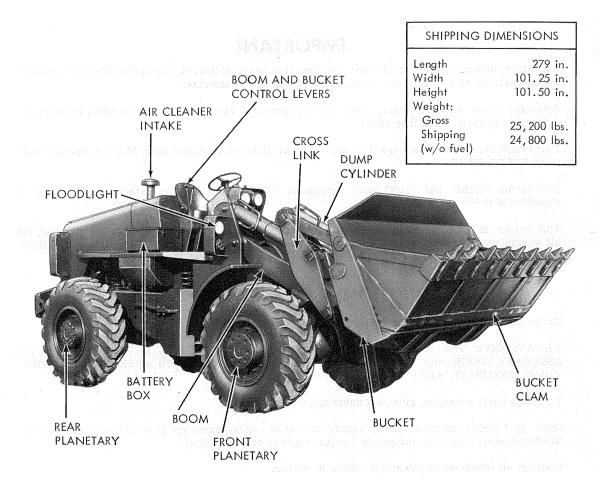



# IMPORTANT

All parts listed herein, which have no specific usage indicated, are applicable to all models. Those parts which are used only on specific models are so indicated.

Attaching parts such as bolts, nuts, rivets, screws, washers, etc., are indented immediately following the parts which they attach.

Parts indicated with a square  $(\Box)$  are also available in packaged sets. Refer to section titled "PACKAGED PARTS".

The terms "right" and "left" used throughout this parts catalog are determined by facing the direction of forward travel.

The engine is mounted unconventionally with the flywheel toward the front of the machine, but all engine parts are designated in respect to the engine as it would be installed in a conventional machine with the flywheel to the rear.

# **INSTRUCTIONS FOR ORDERING PARTS**

Order parts from the dealer covering the local territory.

ALWAYS GIVE THE MODEL AND SERIAL NUMBER OF MACHINE. IF PARTS ARE FOR AN ASSEMBLY WHICH HAS A MODEL AND/OR SERIAL NUMBER (SUCH AS ENGINE ASSEMBLY, PUMP ASSEMBLY), ALSO INCLUDE THIS INFORMATION.

To obtain parts promptly, give part name and part number.

Give post office address, town, county and state where parts are to be shipped. Also specify whether material is to be shipped by freight, express or parcel post.

Confirm all telephone or telegraph orders in writing.

Parts for standard motor accessories such as generators and starting motors should be ordered from authorized Service Stations maintained by manufacturers of these units throughout the country.

No credit will be allowed on parts unless they are returned to the dealer from whom they were purchased; from there they will be returned, at the customer's expense, to the factory for inspection.

Unless claims for shortages or errors are made immediately upon receipt of goods, they will not be considered.

When broken goods are received, a full description of the damage should be made by the carrier agent on the freight bill. If this description is insisted upon, full damage can always be collected from the transportation company.

No responsibility is assumed for delay or damage to merchandise while in transit. Our responsibility ceases upon delivery of shipment to the transportation company from whom a receipt is received showing that shipment was in good condition when delivered to them; therefore, claims (if any) should be filed with the transportation company and not with Allis-Chalmers.

The right is reserved to change the construction or material of any parts where it seems desirable to do so without incurring the obligation of installing such changes on units already delivered.

> The information contained herein is general in nature and is not intended for specific application purposes. Allis-Chalmers reserves the right to make changes in specifications shown herein or add improvements, at any time without notice or obligation.

### MODEL IDENTIFICATION

The symbol listed below is stamped in front of the model serial number on each unit.

MODEL SYMBOL

645

ENGINE MODEL 3500

Turbocharged Diesel powered engine, articulated four wheel drive loader unit of "modular" design, equipped with: power shift transmission, torque converter, planetary axles, power steering and power brakes.

DESCRIPTION

RECORD YOUR SERIAL NUMBERS BELOW

LOADER SERIAL NO. \_\_\_\_\_

ENGINE SERIAL NO. \_\_\_\_\_

TRANSMISSION SERIAL NO.

AXLE SERIAL NO.

SERIAL NUMBER LOCATIONS

LOADER SERIAL NO: On a plate attached to the left side of the bonnet in rear of the operators seat.

ENGINE SERIAL NO: On a plate attached to the right hand side of the engine block above starting motor.

TRANSMISSION SERIAL NO: On plate attached to the right side of the transmission housing.

AXLE SERIAL NO: On plate attached to the axle housing.

# ALPHABETICAL INDEX


Air Application Valve Assy	•	138
Air Brake Lines		132
Air Cleaner		46
Air Compressor		120
Air Tank, Horn & Lines		128
Alcohol Evaporator		119
Alternator Assembly	•	218
Alternator, Voltage Regulator & Hour M	ete	r 216
Axle Housing Assembly (Front Axle) .		95
Axle Housing Assembly (Rear Axle)		103
Axle & Support		90
Batteries, Cables & Box		196
Blackout Light Assy. (Tail Light)		205
Brake Assembly (Front Axle)		110
Brake Assembly (Rear Axle)		112
Bucket Hydraulics		192
Bucket Position Indicator		195
Clutch Cut-Off Valve		118
Cold Weather Primer		48
Compressor Crankcase		124
Compressor Cylinder Block		122
Compressor Cylinder Head		125
Control Valve Assembly		173
Cowl and Platform		180
Crankshaft		14
Cylinder		
Bucket (Multi-Purpose)		194
Dump		166
Lift		168
Power Steering		146
Wheel		114
Cylinder Block		12
Cylinder Head		18
Cylinder Parts		194
Demand Valve Assembly		154
Differential Carrier Assy. (Front Axle) .		92
Differential Carrier Assy. (Rear Axle) .		100
Drive Shaft Assembly		85-88

Drive Shaft Group	84
Dump Cylinder Assembly	166
Elements	
Air Cleaner	46
Fuel Filter	33
Hydraulic Tank	170
Oil Filter	30
Transmission Oil Filter	83
Engine Controls	49
Engine and Mounting	11
Exhaust Manifold	32
Filters	
Engine Oil	30
Fuel	33
Hydraulic Tank	170
Transmission Oil	83
Flex Disk & Converter Drive	56
Flywheel Assembly	23
Flywheel Housing	22
Forward Clutch & Planetary	68
Frame	182
Fuel Filter	33
Fuel Tank and Lines	34
Governor (Compressor)	126
High Range Clutch & Transfer Drive Group	70
Hydraulic Brake Lines	115
Hydraulic Brake Lines (Rear Section)	116
Hydraulic Controls	158
Hydraulic Piping	156
Hydraulic Piping & Cylinders (Front Section)	162
Hydraulic Pump	160
Hydraulic Pump & Piping	165
Hydraulic Tank and Valve	170
Idler Gear Assembly	17
Injection Nozzles and Lines	40
Injection Pump	38
Instrument Panel and Gauges	206
Intake Manifold	31

### ALPHABETICAL INDEX

	A	L	ΡH	ABE
Ladder, Hand Rail and Fenders .	•	•		178
Lift Cylinder Parts			•	168
Light Assembly				204
Light Assembly Parts				203
Linkage Group		•		188
Manifold				
Exhaust		•		32
Intake			•	31
Multi-Purpose Bucket	•	•	•	190
Nozzle Holder Assembly	•	•	•	39
Oil Cooler	•	·	•	28
Oil Filter	•	•	•	30
Oil Pan	•	•	•	25
Oil Pump	•		•	26
Packaged Parts	•		•	8
Parking Brake Assembly Parts .	•		•	107
Parking Brake Control		•	•	108
Pintle		•		186
Piston and Connecting Rod $\ .$ .	•		•	16
Power Cluster Parts	•	•	•	135
Power Steering Cylinder			•	146
Power Steering Pump Assembly .		•	•	151
Power Takeoff			•	75
Primer Pump and Lines $\ldots$ .	•	•	•	36
Pump				
Engine Oil	•	•	•	26
Hydraulic				160
Injection	•	•	•	38
Power Steering			•	151
Primer			•	36
Transmission Charging Oil .	•			74
Water	•			50
Radiator				53
Radiator Support, Hood and Fender:	3		•	179
Rear Output Group				72
Reverse Clutch and Planetary $\cdot$ .		•	•	66
Seat and Mounting	•	•	•	184
Shaft and Hub (Front Axle) $\ldots$		•	•	96

AL INDEX		
Shaft and Hub (Rear Axle)	•	104
Slave Receptacle, Relay, Polarity		
Protector, Resistor and Circuit Breaker		198
Starter, Rotor, Stator and Drive		214
Starter Solenoid and Brush Plate $\ldots$ .		212
Starting Motor and Solenoid		210
Steering Cylinder and Piping		152
Steering Gear Assembly		142
Steering Gear and Linkage		141
Steering Pump, Demand Valve & Lines		148
Thermostat and Housing	•	52
Tie Rod Assembly		145
Timing Gear Housing		24
Tool Box	•	187
Torque Converter		58
Torque Converter Housing		60
Transmission		54
Transmission Charging Oil Pump		74
Transmission Control Group		78
Transmission Control Valve		76
Transmission Cooling Lines & Dipstick		81
Transmission Filter and Mounting		82
Transmission Housing and Covers		64
Transmission Oil Filter		83
Turbine Driven Gears & Freewheel Unit	•	62
Turbocharger		42
Turbocharger Assembly Parts	•	44
Universal Joint Cartridge & Support .	•	89
Valves		
Air Application		138
Clutch Cut-Off	•	118
Control	•	173
Demand		154
Transmission	•	76
Valve Operating Mechanism $\ldots$		20
Water Pump and Fan		50
Wheel Cylinder Assembly		114
Wheel Group (3 Piece Rim)	•	177
Wiring, Lights & Turn-Signal	•	200

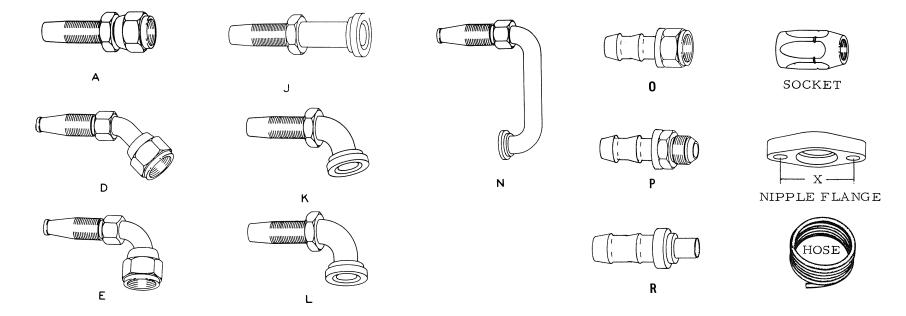

- HOSE PARTS-

**NOTE:** Refer to right hand column for identity of interchangeable crimped-type hose (fittings not re-usable). Assembly number shown in <u>left hand column</u> indicates available replacement hose assembly with re-usable components; where <u>no</u> assembly number is listed, hose assembly is not available from fac-tory but may be constructed in the field from data indicated.

HOSE ASSEMBLY	BULK HOSE	OSE LENGTH				NIPPLE (#2 end)			SOCKET (both ends)	NIPPLE FLANGE		CRIMPED- TYPE HOSE	
NO. (See NOTE)				Including SOCKET	NIPPLE only	Type	Including SOCKE T	NIPPLE only	Type		Part No.	X Dim	(See NOTE) Part No.
654271	919474	22-1/2		921046	A		921046	A	919469				
3050811	925782	22-1/2	925791		J		925791	J					
3050812	925782	58-3/4	925791		J		925791	J					
3050813	925764	33-1/2	920944	920978	A	920962	921564	D	920972				
3050844	925782	46-1/2	925793		L	925792		J					
3050849	925764	31-1/2	920952	923186	E	920944	920978	A	920972				
3050851	925773	77-1/2	920951	921563	E	920961	921302	D	920971				
3050852	920221	56	920852	920344	A	920867	919277	D	919281				
3050853	920221	42	920852	920344	A	920867	919277	D	919281				


3050854	925764	65-1/2	920957		E	920957		E	920972			
3050855	925782	27-1/4	925803		N	925794		L				
	925773	41-1/2	920942	921562	A	920942	921562	А	<u>920971</u>			3050856
3050857	925782	29-3/4	925796		ĸ	925795		L				
3050859	925780	46-5/8	925780		L	925775		A			2-1/2	
	925768	43-3/8	920805		0	925777						3050972
	925768	21-1/2	920805		0	920805		0				3050973
	925769	24-1/4	920389		Р	920806		0				3051032
3051185	925764	14-1/2	920962	921564	D	920952	923186	E	920972			
3051186	925764	14-1/2	920944	920978	A	920952	923186	E	920972			
	925768	38-5/8	920829		R	920805		0				3052029
3052036	925771	31-1/2	925774		A	925774						
3052037	925771	33-1/2	925774		А	925774		A				
					-							
											1	
****											1	
							1					
										·····-		
				-			<u>+</u>					
							<u> </u>	-			+	
											+	
					1						+	
			+			<u> </u>						
							+					
· · · · · · · · · · · · · · · · · · ·							<u> </u>					
				+								
	<u> </u>	<u> </u>		1		l	1			L		

	PACKAGED PARTS
PACKAGE NO.	DESCRIPTION
	REPAIR KIT, cylinder (See DUMP CYLINDER)
	REPAIR KIT, cylinder (See LIFT CYLINDER)
	REPAIR KIT, cylinder (See POWER STEERING CYLINDER)
	REPAIR KIT, master cylinder (See POWER CLUSTER ASSEMBLY)
	REPAIR KIT, power cluster (See POWER CLUSTER ASSEMBLY)
	REPAIR KIT, wheel cylinder (See WHEEL CYLINDER ASSEMBLY)
	REPAIR KIT, valve (See AIR APPLICATION VALVE)
	LINING KIT (See BRAKE ASSEMBLY)
	RING SET, piston (See PISTON AND CONNECTING ROD)
	REPAIR KIT, pump (See WATER PUMP)
3024625	SHIM KIT, pinion bearing cage assembly, rear axle 1 3024624 SHIM (.003" thick) 1 3024626 SHIM (.005" thick) 1 3024627 SHIM (.010" thick)
3046168	<pre>SEAL AND GASKET KIT, transmission (2-speed forward, 1-reverse) 1 3021053 SEAL, oil, shifter shaft 2 3021056 GASKET, strainer and core cover 1 3021058 RING, seal 1 3027012 RING, seal, cover 1 3031847 CUP, cut-off plug 1 3035714 RING, seal, hi-clutch 1 3039422 SEAL, oil, valve 2 3042138 SEAL KIT (Includes expander) 2 3042146 SEAL KIT (Includes expander) 1 3042151 SEAL KIT (Includes expander) 6 3044377 STRIP, locking, pump retainer 1 3044386 GASKET, oil pump 1 3044390 GASKET, housing, transmission 1 3044400 RING, seal, suction tube nut 1 3044402 GASKET, rear cover 1 3044400 GASKET, rear cover 1 3044410 GASKET, rear cover 1 3044410 GASKET, seal, 2 and turbine 6 3044462 SEAL, oil, output shaft 2 3044462 SEAL, oil, output shaft 2 3044462 GASKET, control valve 2 3044423 GASKET, control valve 1 3044409 GASKET, control valve 1 3044409 GASKET, control valve 1 3044474 GASKET 1 3044474 GASKET 1 3044475 GASKET, control valve 1 3044775 GASKET, control valve 1 3051197 DIAPHRAGM AND SEAL ASSEMBLY 1 3054475 GASKET, pump, torque converter 1 RING, seal (Not used-discard) 1 RING, seal (Not used-discard) 1 RING, seal (Not used-discard) 1 RING (Seal (Not used-discard)) </pre>

## PACKAGED PARTS

PACKAGE NO.	DESCRIPTION
4027157	SLEEVE KIT (Not serviced, order parts listed below) 2 4025015 O-RING 1 4026497 PISTON 1 4026505 PIN, piston 1 4026578 SLEEVE, cylinder 1 4026981 RING SET, piston 2 4254608 RETAINER, piston pin
4027283	GASKET KIT, intermediate1 $226012$ GASKET, drain plug2 $923376$ O-RING, rear plate2 $923649$ O-RING, oil cooler4 $923664$ O-RING, oil cooler1 $923844$ O-RING, oil cooler1 $923814$ O-RING, drive housing1 $923822$ O-RING, drive housing1 $923822$ O-RING, rear plate1 $4020879$ O-RING, rear plate1 $4025019$ GASKET, cover plate2 $4025021$ GASKET, front plate1 $4025072$ GASKET, front cover1 $4025074$ GASKET, inlet pipe2 $4025106$ GASKET, cover plate1 $4025343$ GASKET, cover1 $4025343$ GASKET, cover1 $402542$ GASKET, cover1 $402542$ GASKET, cover1 $402543$ GASKET, cover plate2 $402542$ GASKET, cover1 $4025642$ GASKET, cover plate2 $4025642$ GASKET, cover plate1 $4026548$ GASKET, cover plate2 $4025649$ GASKET, water pump1 $4026887$ GASKET, water pump1 $4026847$ GASKET, plug1 $4255661$ O-RING, adapter1 $433676$ GASKET, cover1 $4336740$ GASKET, cover plate1 $4334984$ GASKET, cover plate1 $4349984$ GASKET, cover plate
4027785	GASKET KIT, cylinder head (Also order 1 GASKET 4027024) 2 4025101 GASKET, thermostat housing, lower 1 4025106 GASKET, water inlet 6 4025150 GASKET, injection nozzle 1 4025472 GASKET, cylinder head cover 1 4026579 GASKET, intake manifold 6 4027014 GASKET, exhaust manifold 1 4027598 GASKET ASSEMBLY, cylinder head (Includes 6 fire rings)

>  $\mathbb{A}$  >  $M \in M O$ 

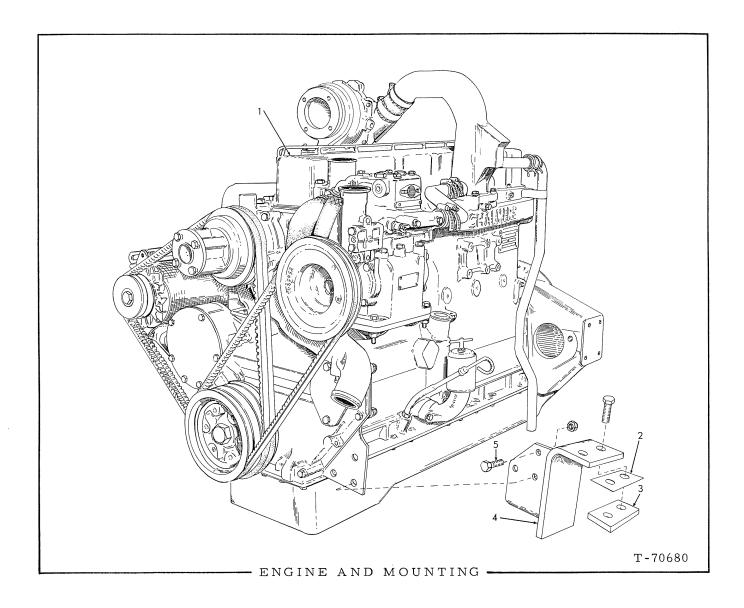


ITEM		PART NO.	QTY.	DESCRIPTION
1		4027155 913105 914487 912415	1 6 6 2	ENGINE ASSY. (Less air cleaner, fan and starter) CAPSCREW, 1/2" NF x 1-1/2" NUT, safety, 1/2" NF COCK, drain
2		3043879	2	SHIM, engine mounting (.0598" thick. Use as req'd)
3		3043878	2	BLOCK, engine mounting
4	5	3044877	1	BRACKET, engine mounting, left
4	ſ	3044878	1	BRACKET, engine mounting, right
5		915790 3026289 916589	4 4 4	CAPSCREW, 5/8" NF x 3" WASHER, plain NUT, safety, 5/8" NF

ı <del></del>			
			$ \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \begin{array}{c} \end{array}\\ \end{array}\\ \end{array}\\ \end{array}\\ \end{array}\\ \end{array}\\ \end{array}\\ \end{array}\\ \end{array}\\ \end{array}$
			CYLINDER BLOCK T-70608
ITEM	PART NO.	QTY.	DESCRIPTION
1	4026943 917542 918887 918888 919134 904223 917536 908944 4025323 4254452	1 2 1 1 2 2 2 1 1	<pre>BLOCK ASSEMBLY, cylinder (Includes PLUGS and items 2, 3, 8, 13, &amp; 23 thru 26) PIN, dowel, 7/16'' x 3/4'' PLUG, pipe, 3/8'' NPT PLUG, pipe, 1'' NPT PLUG, pipe, 1/8'' NPT PLUG, pipe, ctsk., 1/2'' NPTF PIN, dowel, 1/2'' x 1-3/8'' PLUG, pipe, ctsk., 1/2'' NPT PLUG, pipe, oil gallery PLUG, distributor hole</pre>
× .	4255490 4255491 4255363	1 1 1	PLUG, pipe, 1/8" PLUG, pipe, 1/4" COCK, drain
2	<b>∫</b> 4025025	1	BEARING, camshaft, front (Std.)
2	<b>\</b> 4025259	1	BEARING, camshaft, front (.010" undersize)
3	4025392	1	PLUG, pipe, restrictor
4	4510836910847	1 1	SCREW, oil pressure regulating valve NUT, jam, 3/4" NF
5	4025471	1	SPACER, oil pressure regulating valve (Continued)

С	Y	LI	ΝĽ	ΕR	BLOC	K	(Continued)
---	---	----	----	----	------	---	-------------

ITEM	PART NO.	QTY.	DESCRIPTION
6	4500231	1	SPRING, oil pressure regulating valve
7	4507374	1	PISTON, oil pressure regulating valve
8	4507673	1	INSERT, oil pressure regulating valve
9	4026578	6 🗆	SLEEVE, cylinder
ſ	4025298	-	SHIM, cylinder sleeve (.005" thick. Use as req'd)
	4025299	-	SHIM, cylinder sleeve (.010" thick. Use as req'd)
10	4025300	-	SHIM, cylinder sleeve (.015" thick. Use as req'd)
L	4025301	-	SHIM, cylinder sleeve (.020" thick. Use as req'd)
12	4025015	12	O-RING, cylinder sleeve (Lower)
12	4025238	5	BEARING, camshaft (Int. & rear) (Std.)
13 {	4025258	5	BEARING, camshaft (Int. & rear) (.010" undersize)
14	4026592	1	GAUGE, oil level
15	4026849	1	ADAPTER, oil level gauge
18	4025021	1 🗆	GASKET, oil filler plate
19	4026382 916269 904206	1 2 2	PLATE, oil filler hole CAPSCREW, 3/8" NC x 7/8" LOCKWASHER, 3/8"
20	4354449	1	CLOSURE ASSY. (Serviced only as a unit)
21	4025716 914847 904206	1 2 2	ELBOW ASSY., oil filler (Includes item 20) CAPSCREW, 3/8" NC x 1-1/2" LOCKWASHER, 3/8"
22	4025021	1 [	GASKET, elbow oil filler
23	4025247	1	CAP, rear main bearing (See Note)
24	4025245	5	CAP, intermediate & front main bearing (See Note)
25	4025246	1	CAP, center main bearing (See Note)
26	4025062	14	CAPSCREW, main bearing caps
			NOTE: Replacement bearing caps are semi-finished and must be line-bored after installing.

□ (Also see PACKAGED PARTS)

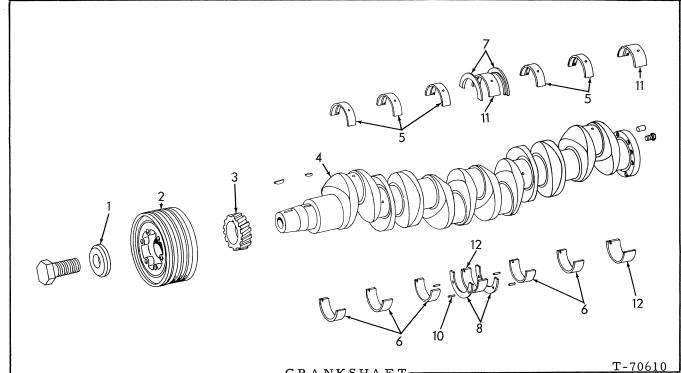

-CRANKSHAFT-

ITEM	PART NO.	QTY.	DESCRIPTION
1	4025115 918297	1 1	WASHER, pulley CAPSCREW, 1" NF x 2"
2	4025589 905845	1 1	PULLEY, crankshaft KEY, woodruff, 1/4" x 7/8"
3	4025041 905845	1 1	GEAR, crankshaft KEY, woodruff, 1/4" x 7/8"
4	4025478 919840	1 1	CRANKSHAFT ASSEMBLY, (Includes PLUG) PLUG, pipe, 1/4" NPT
	4025006	5	BEARING, front & intermediate, upper (Std.)
	4025271	5	BEARING, front & intermediate, upper (.002")
r.	4025272	5	BEARING, front & intermediate, upper (.010")
5	4025273	5	BEARING, front & intermediate, upper (.020")
	4025274	5	BEARING, front & intermediate, upper (.030")
	4025275	5	BEARING, front & intermediate, upper (.040'')
	4025007	5	BEARING, front & intermediate, lower (Std.)
	4025266	5	BEARING, front & intermediate, lower (.002")
6	4025267	5	BEARING, front & intermediate, lower (.010")
	4025268	5	BEARING, front & intermediate, lower (.020")
	4025269	5	BEARING, front & intermediate, lower (.030")
	4025270	5	BEARING, front & intermediate, lower (.040'') (Continued)

CRANKSHAFT	(Continued)
------------	-------------

ITEM	PART NO.	QTY.	DESCRIPTION
7	4025010	2	FLANGE, thrust, upper (Std.)
	4025263	2	FLANGE, thrust, upper (.005")
	4025264	2	FLANGE, thrust, upper (.010")
	4025265	2	FLANGE, thrust, upper (.015")
	4025011	2	FLANGE, thrust, lower (Std.)
0	4025260	2	FLANGE, thrust, lower (.005")
8	4025261	2	FLANGE, thrust, lower (.010")
	4025262	2	FLANGE, thrust, lower (.015")
10	4251746	4	PIN, groove, thrust flange
	4025008	2	BEARING, center rear, upper (Std.)
	4025281	2	BEARING, center rear, upper (.002")
11	4025282	2	BEARING, center rear, upper (.010'')
11	4025283	2	BEARING, center rear, upper (.020")
	4025284	2	BEARING, center rear, upper (.030'')
	4025285	2	BEARING, center rear, upper (.040")
	(4025009	2	BEARING, center rear, lower (Std.)
12	4025276	2	BEARING, center rear, lower (.002")
	4025277	2	BEARING, center rear, lower (.010'')
	4025278	2	BEARING, center rear, lower (.020")
	4025279	2	BEARING, center rear, lower (.030")
	4025280	2	BEARING, center rear, lower (.040")

"ALWAYS GIVE MODEL AND SERIAL NUMBER WHEN ORDERING PARTS"

T-70609						
ITEM		PART NO.	P13 QTY.	<b>у</b> т	ON AND CONNECTING ROD	
1		4026352	12		CAPSCREW, connecting rod	
2		4025070	12		WASHER, flat, connecting rod	
3		4026353	6		ROD ASSY., connecting (Includes items 1, 2 and 7)	
	(	4025030	12		BEARING, connecting rod (Std.)	
		4025253	12		BEARING, connecting rod (.002")	
		4025254	12		BEARING, connecting rod (.010")	
4	ſ	4025255	12		BEARING, connecting rod (.020'')	
		4025256	12		BEARING, connecting rod (.030")	
	L	4025257	12		BEARING, connecting rod (.040'')	
5		4026505	6		PIN, piston	
6		4254608	12		RETAINER, piston pin	
7		4025031	6		BUSHING, connecting rod	
8		4026981	6		RING SET, piston	
9		4026497	6		PISTON	
					(Also see PACKAGED PARTS)	
					(AISO SEE FROMADED FARTS)	

			IDLER GEAR ASSEMBLY	T-70758
ITEM	PART NO.	QTY.	DESCRIPTION	
1	921539	1	CAPSCREW, retaining idler gear	
2	4025461	1	WASHER, idler gear capscrew	
3	4025082	1	BEARING ASSEMBLY, idler gear	
4	4026039	1	GEAR, idler	
5	4020102	1	SHAFT, idler gear	

	8 7 4 2 1~			
	6		CYLINDER HEAD	T-70615
ITEM	PART NO.	QTY.	DESCRIPTION	
1	4027598	1	□ GASKET KIT, cylinder head (Includes item la)	
la	4027013	6	RING, fire	
2	4025182	6	VALVE, exhaust	
3	4025179	6	VALVE, intake	
4	$ \begin{cases} 4025185 \\ 4025585 \end{cases} $	6 -	INSERT, exhaust valve seat INSERT, exhaust valve seat (Use as req'd) Requires remachining of cylinder head.	

(Continued)

# Fiat Allis 645m Wheel Loader Parts Catalog-16f17381

Full download: http://manualplace.com/download/fiat-allis-645m-wheel-loader-parts-catalog-16f17381/

CYLINDER HEAD (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
5	4025186	-	INSERT, intake valve seat (Used as req'd) Requires remachining of cylinder head.
6	4026228	1	HEAD ASSEMBLY, cylinder (Includes items 4, 7, 20 and PLUGS
	920340	5	indented below) PLUG, pipe, ctsk., 3/4" NPT
7	4020682	12	GUIDE, intake and exhaust valve
8	4025242	12	SPRING ASSEMBLY, intake and exhaust (Includes DAMPENER) (Serviced only as a unit)
9	4343799	12	RETAINER, valve spring, intake and exhaust
10	4376497	24	LOCK, half, valve spring retainer
11	4025472	1 0	GASKET, cylinder head cover
12	4025555	1	COVER, cylinder head
13	4153776	10	CAPSCREW, cylinder head cover
14	4025491	10	WASHER, cylinder head cover
15	4650229	1	HOSE, breather tube
16	4253977	2	CLAMP, hose
17	4025164	20	CAPSCREW, cylinder head (short)
18	4025165	26	WASHER, cylinder head capscrew
19	4025166 913544 904206	6 6 6	CAPSCREW, cylinder head (long) WASHER, plain, 13/32" I.D. LOCKWASHER, 3/8"
20	4255107	5	PLUG, core hole
21	4025177	2	EYE, lifting
22	4025621	1	CLAMP, breather tube (upper) (See INTAKE MANIFOLD for fasteners)
23	4025993	1	TUBE, breather
24	4025914 915408 911115 904206 910324	1 1 1 1	CLAMP, breather tube (lower) CAPSCREW, 3/8" NC x 3/4" WASHER, plain, SAE std., 3/8" LOCKWASHER, 3/8" NUT, 3/8" NC
25	4025992	1	BRACKET, breather tube (lower)
		C	] (Also see PACKAGED PARTS)