

# 745-B

wheel loader

parts catalog

Form 73064655 English

### AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason MOST ACCIDENTS CAN BE PREVENTED by recognizing the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are many conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against an accident. The complete observance of one simple rule would prevent many thousand serious injuries each year.

That rule is:

Never attempt to clean, oil or adjust a machine while it is in motion.

NATIONAL SAFETY COUNCIL

# -WARNING-

On machines having hydraulically, mechanically, and/or cable controlled equipment (such as shovels, loaders, dozers, scrapers, etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing. If it is necessary to have the hydraulically, mechanically, and/or cable controlled equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical devices used for controlling the equipment.

#### SECOND PRINTING (9-79)

Includes all information as published in First Printing (4-75), also includes updated and/or revisional information which has not been previously published.

# 745-B

wheel loader

# parts catalog

S/N 45S02901-UP S/N 63C02901-UP

Form 73064655 English



# WARNING

STUDY THE OPERATION AND MAINTENANCE INSTRUCTION MANUAL THROUGH BEFORE STARTING, OPERATING, MAINTAINING, FUELING OR SERVICING THIS MACHINE.

#### ADDITIONAL PUBLICATIONS AVAILABLE

#### FOR

MODEL 745-B WHEEL LOADER (S/N 45S02901 and 63C02901)

Consult your Fiat-Allis Construction Machinery dealer for other publications. See Technical Publications Index (Form 70658800) for all available Publications. Technical Publications Index (Form 70658800) is available FREE from your dealer.

#### **IMPORTANT**

All parts listed herein, which have no specific usage indicated, are applicable to all models. Those parts which are used only on specific models are so indicated.

Attaching parts such as bolts, nuts, rivets, screws, washers, etc., are indented immediately following the parts which they attach.

Parts indicated with a square  $(\Box)$  are also available in packaged sets. Refer to section titled "PACKAGED PARTS".

The terms "right" and "left" used throughout this parts catalog are determined by facing the direction of forward travel.

The engine is mounted unconventionally with the flywheel toward the front of the machine, but all engine parts are designated in respect to the engine as it would be installed in a conventional machine with the flywheel to the rear.

### INSTRUCTIONS FOR ORDERING PARTS

Order parts from the dealer covering the local territory.

ALWAYS GIVE THE MODEL AND SERIAL NUMBER OF MACHINE. IF PARTS ARE FOR AN ASSEMBLY WHICH HAS A MODEL AND/OR SERIAL NUMBER (SUCH AS ENGINE ASSEMBLY, PUMP ASSEMBLY), ALSO INCLUDE THIS INFORMATION.

To obtain parts promptly, give part name and part number.

Give post office address, town, county and state where parts are to be shipped. Also specify whether material is to be shipped by freight, express or parcel post.

Confirm all telephone or telegraph orders in writing.

Parts for standard motor accessories such as generators and starting motors should be ordered from authorized Service Stations maintained by manufacturers of these units throughout the country.

No credit will be allowed on parts unless they are returned to the dealer from whom they were purchased; from there they will be returned, at the customer's expense, to the factory for inspection.

Unless claims for shortages or errors are made immediately upon receipt of goods, they will not be considered.

When broken goods are received, a full description of the damage should be made by the carrier agent on the freight bill. If this description is insisted upon, full damage can always be collected from the transportation company.

No responsibility is assumed for delay or damage to merchandise while in transit. Our responsibility ceases upon delivery of shipment to the transportation company from whom a receipt is received showing that shipment was in good condition when delivered to them; therefore, claims (if any) should be filed with the transportation company,

The right is reserved to change the construction or material of any parts where it seems desirable to do so without incurring the obligation of installing such changes on units already delivered.

The information contained herein is general in nature and is not intended for specific application purposes. FIAT-ALLIS reserves the right to make changes in specifications shown herein, or add improvements, at any time without notice or obligation.

#### MODEL IDENTIFICATION

The symbol listed below is stamped in front of the model serial number on each unit.

MODEL SYMBOL

ENGINE MODEL

DESCRIPTION

745-B

11000

Turbocharged Diesel powered engine, four wheel drive loader equipped with: power shift transmission, torque converter, planetary axles, power steering and power brakes.

### RECORD YOUR SERIAL NUMBERS BELOW

NOTE: Refer to page 7 for pictorial view.
WHEEL LOADER SERIAL NO
ENGINE SERIAL NO.
TRANSMISSION SERIAL NO.
AXLE SERIAL NO.

#### SERIAL NUMBER LOCATION

LOADER SERIAL NO: Stamped on left side of rear frame, under ladder.

ENGINE SERIAL NO: On plate attached to the left hand side of the engine block.

TRANSMISSION SERIAL NO: On plate attached to the left side of the transmission housing.

AXLE SERIAL NO: On plate attached to the axle housing.

#### MODEL SERIAL NUMBER


\*SERIAL NUMBER consisting of all 8 characters <u>must always</u> be submitted for positive identification of your machine. This Point Cannot Be Overemphasized.

LOADER	*SERI	AL NO.	_
MODEL	PRODUCT CODE	UNIT NO.	
745-B	4 5 S	02901	
	6 3 C	02901	

ALPHABETICA	AL INDEX
A	Cylinder Block         .12           Cylinder Head         .20
Accessory Drive	D
Air Application Valve Assy	
Air Cleaner	Dash Light Assy
Air Cleaner Connection70	Demand Valve Assy
Air Compressor	Differential Assy.(Front & Rear)
Air Horn	Differential (No-Spin) 117
Air Horn & Lines	Door Assy. (ROPS CAB)
Air Tank Drain Valve	Drain Valve
Air Tank & Lines	Drive Shaft Group (Front)
Alcohol Injector	Drive Shaft Group (Rear)
Alcohol Injector Assy	Dump Cylinder Assy
Alternator	Dump Cylinder Piping
Alternator & Mounting	E
Axle Housing & Pins(Front)	Ŀ
Axle Housing & Mounting (Rear)	Electrical System
В	Elements
Б	Air Cleaner
Back-up Alarm252	Fuel Filter
Batteries & Cables	Hydraulic Tank
Battery Covers	Oil Filter
Boom Kick Out (Hydraulic)	Transmission Oil Filter
Boom Kick Out (Trydiaunc)	Emergency Brake Control Group
Brake Air Lines	Emergency Brake Control Valve Assy
Brake Assy. (Front)	Emergency Steering Group
Brake Assy. (Rear)	Emergency Steering Motor and Pump 283E
Brake Hydraulic Lines (Front)	Engine Breather
Brake Hydraulic Lines (Rear)	Engine Coolant Heater
Breather, Engine	Engine & Front Mounting10
Bucket	Engine Shut-Off Controls
Bucket Cylinder Assy	Exhaust Manifold40
Bucket Hydraulics (Multi-Purpose Bucket)	
	${f F}$
Bucket Leveler	-
	Fan
Bucket Leveler	-
Bucket Leveler	Fan
Bucket Leveler	Fan
Bucket Leveler	Fan       .80         Fenders       .229, 236         Filters       Engine Oil       .36         Engine Coolant       .73, 75
Bucket Leveler       .204         Bucket Leveler (Single Lever Control)       .208         Bucket Level & Position Indicator       .203         C       C         Cab & Wiper Assy (ROPS)       .270         Canopy Assy. (ROPS)       .275	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .73, 75         Fuel       .41, 42, 44
Bucket Leveler       .204         Bucket Leveler (Single Lever Control)       .208         Bucket Level & Position Indicator       .203         C       .208         Cab & Wiper Assy (ROPS)       .270         Canopy Assy. (ROPS)       .275         Charging Oil Pump       .103	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215
Bucket Leveler       .204         Bucket Leveler (Single Lever Control)       .208         Bucket Level & Position Indicator       .203         C       C         Cab & Wiper Assy (ROPS)       .270         Canopy Assy. (ROPS)       .275         Charging Oil Pump       .103         Clutch Cut-Off Valve       .139	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111
Bucket Leveler       .204         Bucket Leveler (Single Lever Control)       .208         Bucket Level & Position Indicator       .203         C       .270         Canopy Assy. (ROPS)       .275         Charging Oil Pump       .103         Clutch Cut-Off Valve       .139         Compressor, Air       .160	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C       C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164	Fan       .80         Fenders       .229, 236         Filters       .86         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C       C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162	Fan       .80         Fenders       .229, 236         Filters       .86         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C       C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96         Frame       .232
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C       C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls	Fan       .80         Fenders       .229, 236         Filters       .86         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96         Frame       .232         Front Piping       .212
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C       C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       Bucket & Boom       222, 224	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96         Frame       .232         Front Piping       .212         Fuel Filters and Lines       .41, 42, 44
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       Bucket & Boom       222, 224         Engine       52, 53	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       165         Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       165         Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216	Fan       .80         Fenders       .229, 236         Filters       .86         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96         Frame       .232         Front Piping       .212         Fuel Filters and Lines       .41, 42, 44         Fuel Injection Pump       .48, 50         Fuel Injection Return Lines       .58, 60         Fuel Tank & Lines       .46         Fuel Injection Pump Conversion       .50a
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75         Cowl & Platform       230	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96         Frame       .232         Front Piping       .212         Fuel Filters and Lines       .41, 42, 44         Fuel Injection Pump       .48, 50         Fuel Injection Return Lines       .58, 60         Fuel Tank & Lines       .46         Fuel Injection Pump Conversion       .50a         G       G         Gauge Assy. (Sight)       .220
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       3         Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75         Cowl & Platform       230         Counterweight       231	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96         Frame       .232         Front Piping       .212         Fuel Filters and Lines       .41, 42, 44         Fuel Injection Pump       .48, 50         Fuel Injection Return Lines       .58, 60         Fuel Tank & Lines       .46         Fuel Injection Pump Conversion       .50a         G       Gauge Assy. (Sight)
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75         Cowl & Platform       230         Counterweight       231         Crankshaft       16	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Oil       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96         Frame       .232         Front Piping       .212         Fuel Filters and Lines       .41, 42, 44         Fuel Injection Pump       .48, 50         Fuel Injection Return Lines       .58, 60         Fuel Tank & Lines       .46         Fuel Injection Pump Conversion       .50a         G       Gauge Assy. (Sight)
Bucket Leveler       204         Bucket Leveler (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       3         Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75         Cowl & Platform       230         Counterweight       231	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler       204         Bucket Level (Single Lever Control)       208         Bucket Level & Position Indicator       203         C         Cab & Wiper Assy (ROPS)       270         Canopy Assy. (ROPS)       275         Charging Oil Pump       103         Clutch Cut-Off Valve       139         Compressor, Air       160         Compressor Crankcase       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75         Cowl & Platform       230         Counterweight       231         Crankshaft       16         Crankshaft Pulley       15	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler (Single Lever Control).       208         Bucket Level & Position Indicator.       203         C         Cab & Wiper Assy (ROPS).       270         Canopy Assy. (ROPS).       275         Charging Oil Pump.       103         Clutch Cut-Off Valve.       139         Compressor, Air.       160         Compressor Crankcase.       164         Compressor Cylinder Block.       162         Compressor Cylinder Head       165         Controls       30         Bucket & Boom.       222, 224         Engine.       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75         Cowl & Platform       230         Counterweight       231         Crankshaft       16         Crankshaft Pulley       15         Cylinders	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler (Single Lever Control).       208         Bucket Level & Position Indicator.       203         C         Cab & Wiper Assy (ROPS).       270         Canopy Assy. (ROPS).       275         Charging Oil Pump       103         Clutch Cut-Off Valve.       139         Compressor, Air       160         Compressor Crankcase.       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75         Cowl & Platform       230         Counterweight       231         Crankshaft Pulley       15         Cylinders       Bucket (Multi-Purpose)       244	Fan       .80         Fenders       .229, 236         Filters
Bucket Leveler (Single Lever Control)       .208         Bucket Level & Position Indicator       .203         C         Cab & Wiper Assy (ROPS)       .270         Canopy Assy. (ROPS)       .275         Charging Oil Pump       .103         Clutch Cut-Off Valve       .139         Compressor, Air       .160         Compressor Crankcase       .164         Compressor Cylinder Block       .162         Compressor Cylinder Head       .165         Controls       Bucket & Boom       .222, 224         Engine       .52, 53         Parking Brake       .134         Rear Axle Disconnect       .106         Transmission       .108         Control Valve Assy. (Parts)(Hydraulic)       .216         Control Valve Assy. (Transmission)       .104         Coolant Filter       .73, 75         Cowl & Platform       .230         Counterweight       .231         Crankshaft       .16         Crankshaft Pulley       .15         Cylinders       Bucket (Multi-Purpose)       .244         Dump       .190	Fan
Bucket Leveler (Single Lever Control)         208           Bucket Level & Position Indicator         208           Bucket Level & Position Indicator         203           C           Cab & Wiper Assy (ROPS)         270           Canopy Assy. (ROPS)         275           Charging Oil Pump         103           Clutch Cut-Off Valve         139           Compressor, Air         160           Compressor Crankcase         164           Compressor Cylinder Block         162           Compressor Cylinder Head         165           Controls         30           Bucket & Boom         222, 224           Engine         52, 53           Parking Brake         134           Rear Axle Disconnect         106           Transmission         108           Control Valve Assy. (Parts)(Hydraulic)         216           Control Valve Assy. (Transmission)         104           Coolant Filter         73, 75           Cowl & Platform         230           Counterweight         231           Crankshaft         16           Crankshaft Pulley         15           Cylinders         30           Bucket (Multi-Pu	Fan       .80         Fenders       .229, 236         Filters       .36         Engine Coolant       .73, 75         Fuel       .41, 42, 44         Hydraulic Tank       .215         Transmission Oil       .111         Flex Disc & Converter Drive       .85         Flywheel & Housing       .22         Forward Clutch & Planetary       .96         Frame       .232         Front Piping       .212         Fuel Filters and Lines       .41, 42, 44         Fuel Injection Pump       .48, 50         Fuel Injection Return Lines       .58, 60         Fuel Tank & Lines       .46         Fuel Injection Pump Conversion       .50a         G       G         Gauge Assy. (Sight)       .220         Governor (Air Compressor)       .166         H       Heat Exchangers       .38         Heater Cab       .278         High Range Clutch and Transfer Drive Gear       .98         Hood       .236         Hose Parts       .60
Bucket Leveler (Single Lever Control).       208         Bucket Level & Position Indicator.       203         C         Cab & Wiper Assy (ROPS).         Canopy Assy. (ROPS).       275         Charging Oil Pump       103         Clutch Cut-Off Valve.       139         Compressor, Air       160         Compressor Crankcase.       164         Compressor Cylinder Block       162         Compressor Cylinder Head       165         Controls       30         Bucket & Boom       222, 224         Engine       52, 53         Parking Brake       134         Rear Axle Disconnect       106         Transmission       108         Control Valve Assy. (Parts)(Hydraulic)       216         Control Valve Assy. (Transmission)       104         Coolant Filter       73, 75         Cowl & Platform       230         Counterweight       231         Crankshaft Pulley       15         Cylinders       30         Bucket (Multi-Purpose)       244         Dump       190         Master       140, 142         Lift       194	Fan

### ALPHABETICAL INDEX


H	Hydraulic 186
	Injection 48,50
Hydraulic Controls	Power Steering 172
2-Spool	Transmission Charging Oil 103
3-Spool	Water 76
Single Lever 226	R
Hydraulic Tank 214	Radiator Assy 83
Hydraulic Piping (Front) 212	Radiator & Fan Guard 82
Hydraulic Pump Assy 186	Radiator Support, Hood & Fenders 236
Hydraulic Pump & Valve Piping 182	Rear Axle Disconnect Control 106
High Range Clutch & Transfer Drive . 98	Rear Panel Assy. (ROPS CAB) 274
	Reverse Clutch & Planetary 94
Ι	S
Injection Nozzles and Lines 54, 56, 57a	Shaft & Hub (Front Axle) 122
Injection Nozzles and Lines 54, 56, 57a Injection Nozzle Parts 62	Shaft & Hub (Rear Axle) 126
Injection Pump 48,50	Seat & Mounting 240
Instrument Panel Cover	Seat Belts 239
Instrument Panel & Gauges 258	Serial Numbers
Instrument Panel Electrical Components 260	Side Panels 238
Instruments & Wiring (ROPS CAB) 266	Sight Gauge
Intake Manifold 40	Sound Suppression Group 201
	Starter
${f L}$	Starting Primer System 63
	Steering Cylinder 168
Ladder, Handrails & Fenders 229	Steering Gear Assy 180
Lift Cylinder Ass. Parts 194	Steering Gear Linkage 174
Lift Cylinder Piping 192	Steering Hydraulics (Pump and Valve). 170
Light Assy	Steering Hydraulics (Cylinder Section). 167
Linkage Group 242	Steering Valve Assy 176
Lube Oil Filter	Tail Light Assy 256
Lubrication Hose 124, 192	Throttle Pedal 51
$\mathbf{M}$	Timing Gear Housing
Manifolds	Transmission Assy 84
Exhaust 40	Transmission Charging Oil Pump 103
Intake 40	Transmission Control 108
Water Outlet 78	Transmission Control Valve 104
Muffler	Transmission Cooling Lines and Dipstick 113
Multi-Purpose Bucket 244	Transmission Filter 111
Multi-Purpose Bucket Hydraulics 246	Transmission Filter and Mounting 112
,	Transmission Housing & Cover 92
N	Tool 280
	Torque Converter
No-Spin Differential	Torque Converter Housing 88
Nozzle and Holder Assy 62	Turbine Drive Gears & Freewheel Unit 90
	Turbocharger Assy
O	Turbocharger Connections 66
Oil Pump Lines	Undercarriage Guard 234
Oil Pump Lines	V
Oil Pump	Valves
Output Shaft & Axle Disconnect 100	Air Application 148
output bhatt a ratio bibconnect	Air Tank Drain 151
P	Clutch Cut-Off 139
	Control
Packaged Parts 8	Demand 173
Painting & Marking 282	Transmission Control 104
Parking Brake Assy 132	Valve Operating Mechanism 24
Parking Brake Control 134	
Piston & Connecting Rod 18	W
Power Cluster (Front) 140	Water Outlet Marifala
Power Cluster (Rear)	Water Outlet Manifold
Power Steering Pump 172	Water Pump
Pumps Engine Oil 28,31	Wheel
	por oroupo (10010 021D)

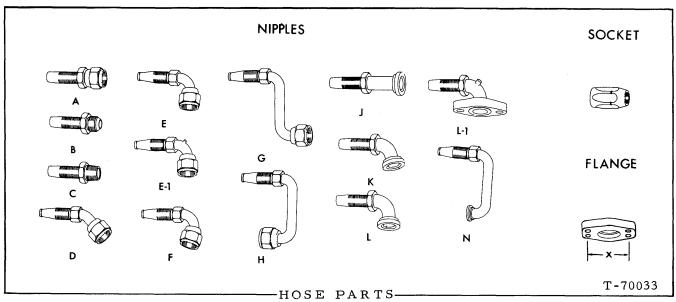

NOTE: Refer to left hand column for identity of original hose. Hose is crimped-type (fitting not re-usable) unless otherwise noted. Equivalent hose assembly may be constructed from data indicated.


ORIGINAL HOSE ASSY	BULK	HOSE	NIPPLE (#1 end)		NIPPLE (#2 end)			SOCKET	
NUMBER	HOSE (25' Roll)	LENGTH (inches)	ASSY. NO. (w/socket)	NIPPLE only		ASSY. NO. (w/socket)	NIPPLE only		(both ends)
* 73045520	70920795	44-1/4	70921855	70923263	L	70921885		L	70920973
73045542	70920795	41-3/4	70921855	70923263	L	70921885	70923263	L	70920973
73045543	70920795	41-3/4	70921855	70923263	L	70921885	70923263	L	70920973
73058700	70922357	32-3/8	70920946	70922832	A	70920946	70922832	Α	70920986
73046772	70922355	34-3/4	70920952	70923186	E	70920944	70920978	Α	70920972
73046776	70922355	46	70920944	70920978	A	70920944	70920978	A	70920972
73048016	70920795	44-1/4	70921855	70923263	L				70920973
73048117	70920795	38-3/4	70920953	70923251	E-1	70920945	70922831	Α	70920973
73050092	70920795	36-3/4	70920946	70922832	A	70920946	70922832	A	70920986
73051704	70920795	47-1/4	70920945	70922831	A	70920945	70922831	A	70920973
73104321	70920221	20-3/4	70920852	70920344	A	70920867	70919277	E	70919281
73104763	70920221	24-3/4	70920852	70920344	Α	70920867	70919277	E	70919281
73104969	70920728	61-1/2	70921033	70921034	A	70920868	70920144	E	70919282
74320656	70928116	9-1/2	70920850	70920303	A	70920865	70919081	E	70919076
74359704	70928123	14	70920850	70920303	A	70920865	70919081	E	70919076
74359714	70928123	5-7/8	70920850	70920303	A	70920865	70919081	E	70919076
74359751	70928121	8-5/8	70920848	70920530	Α	70920863	70920155	E	70919768

<sup>\*</sup> Hose Assy. includes Hose Guard

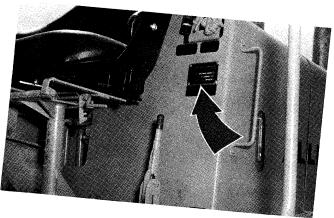


LOADER SERIAL NUMBER


T-74529

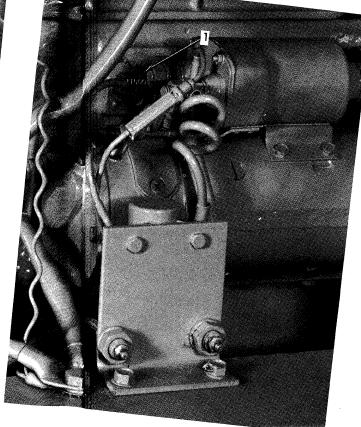


ENGINE SERIAL NUMBER

 T-73447



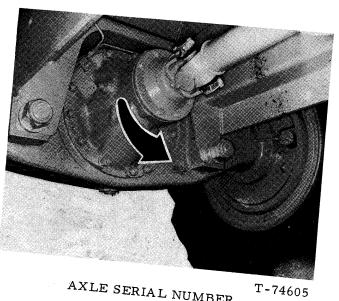

AXLE SERIAL NUMBER

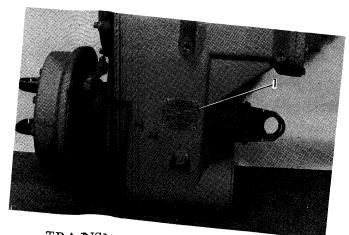

TRA NSMISSION SERIAL NUMBER

1. Serial Number Plate

#### PACKAGED PARTS

REPAIR KI	C, alcohol injector (See ALCOHOL INJECTOR ASSY.) C, cylinder (See DUMP CYLINDER) C, cylinder (See LIFT CYLINDER) C, cylinder (See POWER STEERING CYLINDER)
REPAIR KI	C, cylinder (See LIFT CYLINDER) C, cylinder (See POWER STEERING CYLINDER)
	C, cylinder (See POWER STEERING CYLINDER)
REPAIR KI	
REPAIR KI	T, master cylinder (See POWER CLUSTER ASSY.)
REPAIR KI	G, power cluster (See POWER CLUSTER ASSY.)
REPAIR KI	C, wheel cylinder (See WHEEL CYLINDER ASSY.)
73 06 36 83 REPAIR KI	r, valve (See AIR APPLICATION VALVE)
LINING KIT	(See BRAKE ASSY.)
DECAL KIT	(See PAINTING AND MARKING)
RING SET,	piston (See PISTON AND CONNECTING ROD)
REPAIR KI	r, pump (See WATER PUMP)
73062091  SEAL AND  1 70194585 2 70194679 2 70924944 24 73021041 1 73021053 1 73067517 1 73026156 1 73031847 1 73035745 1 7304376 1 73044485 2 7304447 1 73044485 2 73044486 2 73046026 2 73070598 1 73047741 1 73048782 1 73048782 1 73062026 2 73062026 1 73062033 1 73062034	SEAL NUT NUT SEAL GASKET RING SEAL CUP RING RING SEAL SEAL KIT (Includes expander) GASKET GASKET GASKET GASKET RING GASKET GASKET GASKET GASKET GASKET GASKET GASKET GASKET RING GASKET GASKET GASKET GASKET RING, seal RING, seal RING, seal RING, seal GASKET


# PACKAGED PARTS

PACKAGE NO.	DESCRIPTION	
74321189	ENGINE OIL PIIME	KIT (Adapts integral scavenging and oil
1132110 /	pressure pump to	engines prior to serial No. 11-24134)
	1 70035250	PLUG
	1 70667252	GASKET
	2 70904206	LOCKWASHER, 3/8"
	2 70907863	LOCKWASHER, 7/16"
	4 70910287	LOCKWASHER, 3/8"
	5 70912369	WASHER
	29 70913544	WASHER
	22 70914847	CAPSCREW, $3/8$ ''NC x $1-1/2$ ''
	4 70916271	CAPSCREW, $3/8$ " NC x 1"
	4 70916279	CAPSCREW, $5/16$ 'NC x $1-1/2$ ''
	8 70916543	LOCKWASHER, internal tooth, 3/8"
	2 70916871	NUT, elastic stop, 5/8"NC
	1 70919784	CAPSCREW, $5/16$ 'NC $\times$ 4''
	4 70921076	CAPSCREW, 3/8"NC x 1-1/4"
	1 70921204	PLUG, 1-1/16" straight-thd.
		(Includes O-RING)
	2 70921565	CAPSCREW, 3/8"NC x 1-1/2"
	8 70923193	CAPSCREW, 3/8"NF x 1-1/4"
	2 70928212	NUT, 7/16"NC
	1 70930924	O-RING CARCEREN Nation 3/8UNC v 11
	5 74255916	CAPSCREW, Nylok strip, 3/8"NC x 1" VALVE ASSY., pressure relief
	1 74320597 1 74320838	<del>_</del>
	1 74320838 1 74320839	ELBOW TUBE
	1 74320885	TUBE
	1 74320887	TUBE
	1 74320916	GASKET
	1 74321052	ELBOW
	1 74321052	U-BOLT
	1 74321671	BRACKET
	1 74321954	PAN, oil
	1 74321399	OIL PUMP ASSY., with gear
	1 74337740	GASKET
	74337741	PLATE
	4 74393359	GASKET
	2 74395024	DOWEL
	1 74347573	GASKET
	1	INSTRUCTION SHEET
74321984	GASKET KIT, cyli	
	4 70923574	O-RING, water by-pass tube
	4 70923813	O-RING, water manifold tube
	1 74321437	GASKET ASSY., front cylinder head
	1 74321438	GASKET ASSY., rear cylinder head
	1 74300145	GASKET, water outlet elbow
	2 74321981	GASKET, rocker cover
	4 74336182	GASKET, water manifold
	1 74336263	GASKET, thermostat housing
	1 74336266	GASKET, water elbow
	2 74337764	GASKET, valve lifter cover
	2 74348133	GASKET, breather tube
	12 74359741	GASKET, intake and exhaust manifold
	6 74376749	WASHER, sealing, rocker cover nut GASKET, injection nozzle
	6 74378031	
	(C	Continued) (Revised June 1979)

# PACKAGED PARTS

PACKAGE NO.	DESCR	IPTION	
PACKAGE NO. 74321798	GASKE 1100 2 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		mediate, engine cylinder block (Model ine) GASKET, oil drain plug O-RING, flywheel housing dowel O-RING, fan drive O-RING, oil filter O-RING, hydraulic pump drive O-RING, camshaft hole plug O-RING, flywheel to crankshaft O-RING, fan drive O-RING, injection pump mounting cover GASKET GASKET GASKET GASKET, water pump volute GASKET, oil cooler GASKET, filter head GASKET, oil cooler GASKET, timing hole cover RING, sealing, flywheel housing to crankcase GASKET, oil cooler to block GASKET, oil pipe GASKET, oil pipe GASKET, water pump GASKET, water pump GASKET, timing hole cover GASKET, timing hole cover GASKET, timing pear to block GASKET, water inlet pipe GASKET, water by-pass flange GASKET, timing gear cover GASKET, timing gear cover GASKET, timing gear housing GASKET, timing gear housing GASKET, filter head to block GASKET, timing gear housing GASKET, oil cooler water inlet GASKET, oil pipe
	1	74348185	GASKET, oil cooler water inlet
	1	74348218	GASKET, oil pipe
	1		<del></del> , · · · · - · · · ·
	1	74354163	GASKET, timing gear cover
	1	74354304	GASKET, fan hose bracket
	1	74354415	GASKET
	$\bar{1}$	74362458	GASKET, oil pump cover
	1	74371289	GASKET, clean-out cover
	$\frac{1}{2}$	74373069	GASKET, oil pan cover
	1	74393349	GASKET
	2	74393359	GASKET
	4	14373337	QUOIZE I

### $M \to M O$

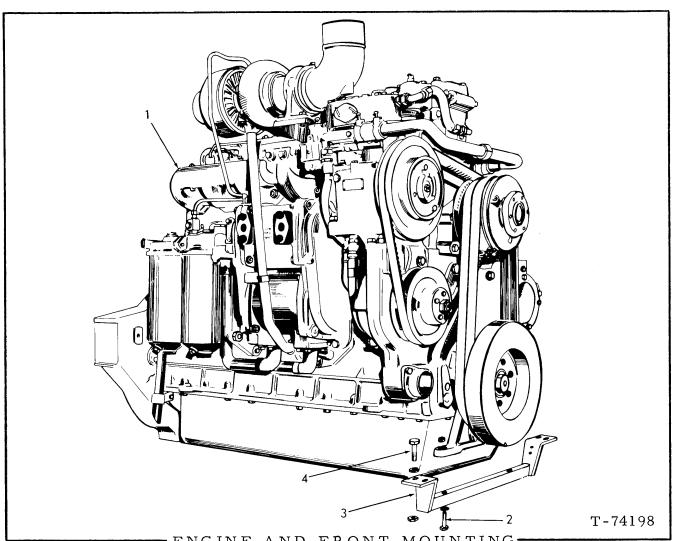


ENGINE	AND	FRONT	MOU	NTING-

ITEM	PART NO.	QTY.	DESCRIPTION
	74359737	1	ENGINE ASSY. (Applies up thru engine s/n 11-24133)
1	74321182	1	ENGINE ASSY. (Used engine s/n's 11-24134 thru 11-25688)
Ĺ	74321427	1	ENGINE ASSY., MARK II (Effective engine s/n 11-25689)
2	70916414	2	CAPSCREW, $5/8$ " NF x $5-3/4$ "
	70916589	2	NUT, elastic stop, 5/8" NF
3	73047510	1	BRACKET
4	70921178	4	CAPSCREW, $5/8$ " NF x 2-3/4"
	73026289	4	WASHER
	70916589	4	NUT, elastic stop, 5/8" NF


NOTE: For rear engine mount, see page 84.

NOTE: Each ENGINE ASSY. includes oil filter, oil cooler and fuel filter, but is less air cleaner, fan, starter and muffler.

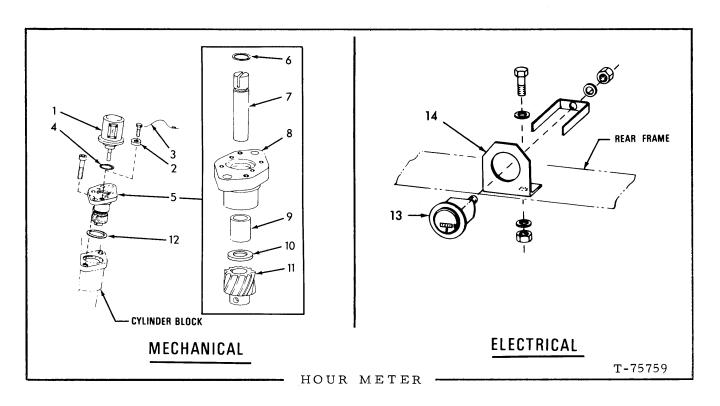

USAGE: \* Prior to engine serial no. 11-24213 LOADER serial no. 45S03186 (Mechanical)
\*\* Effective with engine serial no. 11-24213 LOADER serial no. 45S03186 (Electrical)

ITEM	PART NO.	QTY. * **	DESCRIPTION
1	74359290	1 -	METER (Serviced only as a unit)
2	74359293 74027687 70904204	2 - 2 - 2 -	CLAMP SCREW, 1/4" x 7/8" LOCKWASHER, 1/4"
3	74355843	1 -	SEAL
4	70923934	1 -	O-RING
5	74321117 74359231	1 - 2 -	ADAPTER ASSY. (Consists of items 6 thru 11) SCREW, 3/8" x 2-1/4"
6	{ 74255961 70927782	1 - 1 -	RING (Used prior to engine serial no. 11-23907) RING (Effective with engine serial no. 11-23907)
7	$\left\{\begin{array}{l} 74359271 \\ 74321116 \end{array}\right.$	1 - 1 -	SHAFT (Used prior to engine serial no. 11-23907) SHAFT (Effective with engine serial no. 11-23907)
8		1 -	HOUSING (Order item 5)
9	74255962	1 -	BUSHING
10	74359308	1 -	BEARING
11	74660408	1 -	GEAR
12	74253773	1 -	GASKET
13	70699126	- 1	METER (Serviced only as a unit)
14	73063772	- 1	BRACKET (use with existing hardware 1-70915790 CAPSCREW, 2-73026289 WASHER, 1-70916589 NUT)

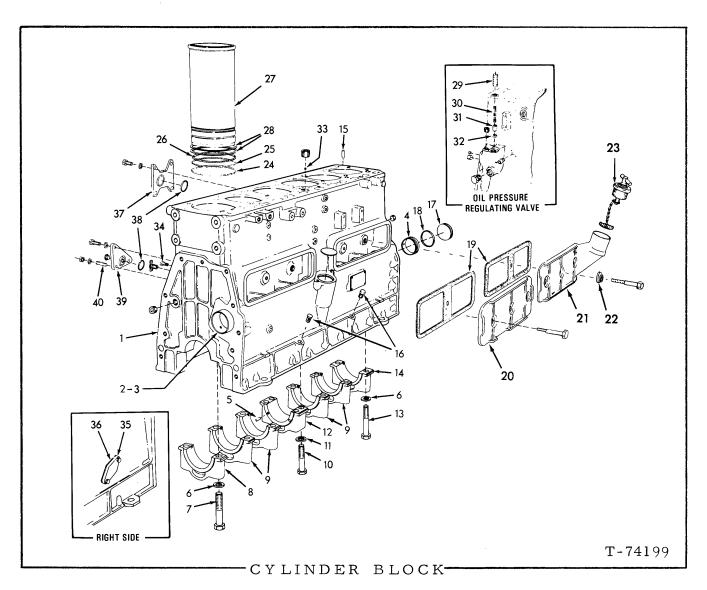

ITEM	PART NO.	QTY.	DESCRIPTION
	74321963	1	BLOCK ASSY. (Engines prior to s/n 11-24134)
1	74320943	1	BLOCK ASSY. (Engines s/n 2 thru 16 and
	<b>└</b> 7 <b>432</b> 1959	1	BLOCK ASSY. (Engines s/n 11-25689 and up)(Requires piston cooling type main  32 thru 40, and hardware in- dented below
	70004333	2	bearings)
	70904223	2	PLUG, pipe, ctskhd., 1/2" NPT
	70910017	1	PLUG, expansion, 2-3/8" diam.
	70917673	1	PLUG, pipe, hex-socket, 1/8" NPT
	70918850	1	PLUG, pipe, hex-socket, 1/4" NPTF
	70918851	4	PLUG, pipe, hex-socket, 3/4" NPT
	70918888	1	PLUG, pipe, ctskhd., 1" NPT
	70919134	2	PLUG, pipe, hex-hd., 1/8" NPT
	70920333	2	PLUG, pipe, hex-hd., 3/8" NPT
		2	PIN, dowel (See item 18 page 26)
		4	PIN (See item 8 page 17)
		2	PIN (See item 6 page 22)
			(Continued) (Revised June 1979)

# CYLINDER BLOCK (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
	70920416	1	PLUG, pipe, hex-hd., 1/2" NPT
	70912415	2	COCK, drain, 1/4" NPT
2	<i>{</i> 74346100	1	BEARING, camshaft, front (Standard size)
2	74347416	1	BEARING, camshaft, front (.010" oversize)
3	<i>{</i> 74320591	2	BEARING, camshaft, intermediate (Standard size)
3	₹ 74347419	2	BEARING, camshaft, intermediate (.010" over- size)
4	<pre>{ 74320592 74347413</pre>	1	BEARING, camshaft, rear (Standard size)
	<b>\</b> 74347413	1	BEARING, camshaft, rear (.010" oversize)
5 6		4	PIN, dowel, thrust flange (See CRANKSHAFT)
6	74354175	12	WASHER
7	74339037	2	CAPSCREW, front main bearing cap
0	∫ 74349630	1	CAP, front main bearing (Used prior to engine
8	74348056	1	s/n 11-25689)(See NOTE B)
	(14348056	1	CAP, front main bearing (Effective with engine
9	74348244	4	s/n 11-25689)(See NOTE B)
7	<b>(</b> 74339038	4	CAP, intermediate main bearing (See NOTE B) CAPSCREW, center main bearing cap (Used
10	1 + 3 3 7 0 3 0	7	prior to engine serial no. 11-25689)
10	74035387	4	CAPSCREW, center main bearing cap (Effective
	• 1200001	-	with engine serial no. 11-25689)
11	74391160	4	WASHER, center main bearing capscrew
	74349629	1	CAP, center main bearing (Used prior to engine
12	74359964		s/n 11-25689)(See NOTE B)
	<b>\</b> 74359964	1	CAP, center main bearing (Effective with engine
			s/n 11-25689)(See NOTE B)
13	74339036	10	CAPSCREW, rear and intermediate main bearing
	# <b>5</b> 4045403	_	cap
1.4	74349631	1	CAP, rear main bearing (Used prior to engine
14	7/2/02/4	1	s/n 11-25689)(See NOTE B)
	(4340240	1	CAP, rear main bearing (Effective with engine s/n 11-25689)(See NOTE B)
15	74336432	4	PIN, dowel, cylinder head
16	74362338	2	PLUG, crankcase
17	74335534	1	PLUG, camshaft hole
18	70923815	ī	□ O-RING, camshaft hole plug
19	74337764	2	□ GASKET
20	74320985	1	COVER, front
	70913730	3	CAPSCREW, $5/16$ " NC x 2-1/4"
21	74320994	1	COVER, rear
	70913599	3	CAPSCREW, $5/16''$ NC x $2-1/2''$
22	74256008	6	WASHER
2.2	√ 74354449	1	CLOSURE ASSY., oil filler (Serviced only as a
23	74354492	7	unit)(First Type)
	<b>\</b> 14334474	1	CLOSURE ASSY., oil filler (Serviced only as a
24	74337972	6	unit)(Second Type) □ O-RING, cylinder sleeve (bottom)(red)
25	74359870	6	□ O-RING, cylinder sleeve (bottom)(led) □ O-RING, cylinder sleeve (center)(black with
	00 ,010	J	blue markings)
26	74359869	6	□ O-RING, cylinder sleeve (top)(black with
			white markings)

(Continued)


# CYLINDER BLOCK (Continued)

ITEM	PART NO.	QTY.	DESCRIPTION
2 <b>7</b>	74061746	6	SLEEVE KIT, cylinder (Includes 1 SLEEVE and 1 each of items 24, 25 and 26)
	74348857	-	SHIM (.005" thick) )
28	74348856 74348859	-	SHIM (.008" thick) Use as required when SHIM (.010" thick) block is remachined to
20	74348858	_	SHIM (.015" thick) correct sinking of sleeve
	√ 74348900     √ 74389058	- 1	SHIM (.020" thick) J SCREW (Used prior to engine s/n 11-25689)
29	74022129	1	SCREW (Effective with engine s/n 11-25689)
	70910847 \$\int 74660358\$	1 1	NUT, jam, 3/4" NF SPRING (Used prior to engine s/n 11-25689)
30	74500231	1	SPRING (Effective with engine s/n 11-25689)
31	\[ 74500230 \\ 74507374 \]	1	PISTON (Used prior to engine s/n 11-25689) PISTON (Effective with engine s/n 11-25689)
32	\ 74507374 ∫ 74347465	1	INSERT (Used prior to engine s/n 11-24251)
	74507673	1	INSERT (Effective with engine s/n 11-24251)
33 34	74347061 70920473	1 2	RESTRICTOR (Used prior to engine s/n 11-25689) CAPSCREW, nylok, 3/8" NC x 3/4"
			NOTE A: Items listed below are furnished only
			only with service replacement cylinder
			block and are notoriginal equipment.
35	74339604	1	PLATE, cover, turbocharger oil drain hole
	70918683	2	CAPSCREW, 1/2" NC x 1-1/8"
36	70912441 74336436	2 1	LOCKWASHER, 1/2"  □ GASKET, cover plate
37	74335369	1	PLATE, cover, oil gallery hole, upper
	70916311 70912441	$\frac{4}{4}$	CAPSCREW, $1/2$ " NC x $1-1/4$ " LOCKWASHER, $1/2$ "
38	70923718	2	O-RING, oil gallery hole cover plates
39	74359104	1	PLATE, cover, oil gallery hole, lower
	70920333 70919230	1 1	PLUG, pipe, hex-hd., 3/8" NPT CAPSCREW, 1/2" NC x 1-3/8"
40	74305073	2	STUD
	70912441 70910195	3 2	LOCKWASHER, 1/2'' NUT, 1/2'' NF
	, , .	_	-·

NOTE B: Replacement bearing caps are semifinished and must be line-bored after installing.

# Fiat Allis 745b Wheel Loader Parts Catalog

Full download: http://manualplace.com/download/fiat-allis-745b-wheel-loader-parts-catalog/

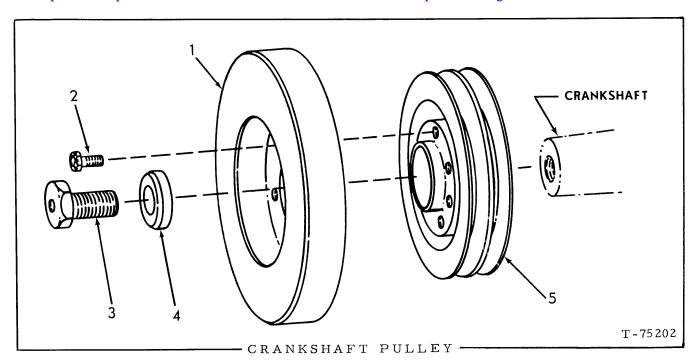

ITEM	PART NO.	QTY.	DESCRIPTION
1	7 4354261	1	DAMPER, vibration
2	74255585	6	BOLT, place, 7/16" NC x 1"
3	74393587	1	CAPSCREW, crankshaft pulley retainer (1-1/4" NF $\times$ 2")
4	74371503	1	WASHER, pulley retainer
5	74359312	1	PULLEY, crankshaft