


FL7B

crawler loader

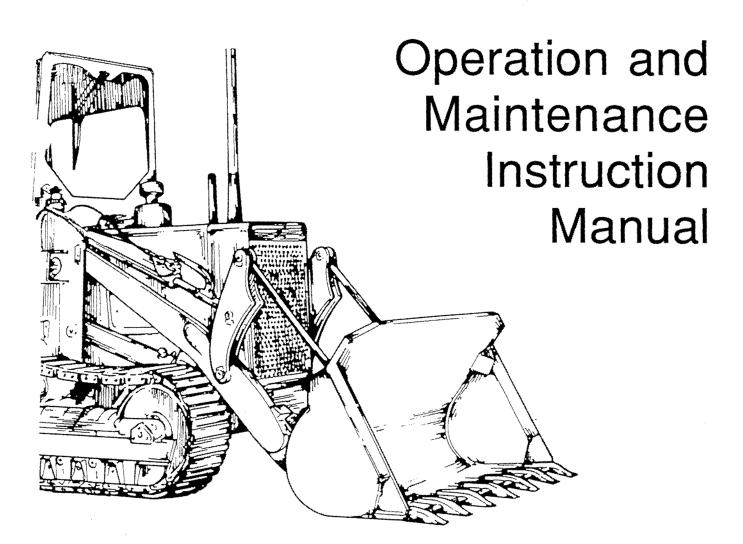

Form 60400354 English 9/88

AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individual to follow simple and fundamental safety rules or precautions. For this reason MOST ACCIDENTS CAN BE PREVENTED by recognizing the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

A careful operator is the best insurance against an accident.

The complete observance of one simple rule would prevent many thousand serious injuries each year.

That rule is:

Never attempt to clean, oil or adjust a machine while it is in motion.

WARNING

On machines having hydraulically, mechanically, and/or cable controlled equipment (such as shovels, loaders, dozers, scrapers, etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing. If it is necessary to have the hydraulically, mechanically, and/or cable controlled equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical devices used for controlling the equipment.

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

COPYRIGHT BY FIATALLIS

•

All rights reserved. Reproduction of text and illustrations in whole or in part, is strictly prohibited.

FL7B

crawler loader

Operation and maintenance instruction manual

Print. No. 604.00.354

A WARNING

STUDY THE OPERATION AND MAINTENANCE INSTRUCTION MANUAL THROUGH BEFORE STARTING, OPERATING, MAINTAINING, FUELING OR SERVICING THIS MACHINE.

This symbol is your safety alert sign. It means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED.

Read and heed all safety instructions carrying the signal words WARNING and DANGER.

Machine mounted safety signs have been color coded yellow with black borders and lettering for warning and red with white borders and lettering for danger points.

TABLE OF CONTENTS

TOPIC	PAGE
Safety Rules	I-VI
Foreword	VIII
Identification Data	
SPECIFICATIONS	3
Preliminary instructions and break-in	6
CONTROLS AND INSTRUMENTS	7
OPERATING INSTRUCTIONS	14
Operator's seat adjustments	14
Engine starting	14
Engine idling	15
Starting the machine	
Stopping the machine	16
Stopping the engine	
Bucket settings	
Carrier transport	
Cold weather precautions	
Preparation for storage	
Operating Tips	
Ripper Instructions	
MAINTENANCE	23
Lubrication and Service Guide	
Every 10 Hours	
Every 100 Hours	
Every 250 Hours	
Every 500 Hours	
Every 1000 Hours	
Every 2000 Hours	
As Required	
CAB AND ROLLOVER PROTECTIVE STRUCTURE	43
ELECTRICAL SYSTEM	47
FLUID CAPACITIES	51

Fiat Fl 7b Om Maint Instr Manual

Full download: http://manualplace.com/download/f**SAF-ET-Y:RULiES**nstr-manual/GENERAL

Study the Operation and Maintenance Instruction Manual before starting, operating, maintaining, fueling, or servicing machine.

Read and heed all machine-mounted safety signs before starting, operating, maintaining, fueling or servicing machine.

Machine-mounted safety signs have been color coded yellow with black border and lettering for WARNING and red with white border and lettering for DANGER points.

Never attempt to operate the machine or its tools from any position other than seated in the operator's seat. Keep head, body, limbs, hands and feet inside operator's compartment at all times to reduce exposure to hazards outside the operator's compartment.

Do not allow unauthorized personnel to operate service or maintain this machine.

Always check work area for dangerous features. The following are examples of dangerous work areas: slopes, overhangs, timber, demolitions, fire, high walls, drop off, back fills, rough terrain, ditches, ridges, excavations, heavy traffic, crowded parking, crowded maintenance and closed areas. Use extreme care when in areas such as these.

An operator must know the machine's capabilities. When working on slopes or near drop offs be alert to avoid loose or soft conditions that could cause sudden tipping or loss of control.

Do not jump on or off machine. Keep two hands and one foot, or two feet and one hand, in contact with steps, grab rails and handles at all times.

Do not use controls or hoses as handholds when climbing on or off machine. Hoses and controls are movable and do not provide a solid support. Controls also may be inadvertently moved causing accidental machine or equipment movement.

Keep operator's compartment, stepping points, grab-=rails and handles clear of foreign objects, oil, grease, mud or snow accumulation to minimize the danger of slipping or stumbling. Clean mud or grease from shoes before attempting to mount or operate the machine.

Be careful of slippery conditions on stepping points, hand rails, and on the ground. Wear safety boots or shoes that have a high slip resistant sole material.

For your personal protection, do not attempt to climb on or off machine while machine is in motion.

Never leave the machine unattended with the engine running.

Always lock up machine when leaving it unattended. Return keys to authorized security. Heed all shutdown procedures of the Operation and Maintenance Instruction Manual. Always set the parking brake when leaving the machine for any reason.

Do not wear rings, wrist watches, jewelry, loose or hanging apparel, such as ties, torn clothing, scarves, unbuttoned or unzipped jackets that can catch on moving parts. Wear proper safety equipment as authorized for the job. Examples: hard hats, safety shoes, heavy gloves, ear protectors, safety glasses or goggles, reflector vests, or respirators. Consult your employer for specific safety equipment requirements.

Do not carry loose objects in pockets that might fall unnoticed into open compartments. Do not use machine to carry loose objects by means other than attachments for carrying such objects.

DO NOT CARRY RIDERS unless the machine is equipped for carrying people to reduce personal exposure to being thrown off.

Do not operate machinery in a condition of extreme fatigue or illness. Be especially careful towards the end of the shift.

Roll Over Protective Structures are requires on wheel loaders, dozer tractors, track type loaders, graders and scrapers by local or national requirements. DO NOT operate this machine without a Roll Over Protective Structure.

Do not operate a machine without a falling object protective structure (FOPS).

Do not operate this machine without a rear canopy screen when machine is equipped with rear mounted towing winch.

Seat belts are required to be provided with roll over protective structures or roll protection cabs by local or national regulations. Keep the safety belt fastened around you during operation.

Where noise exposure exceeds 90 dBA for 8 hours, wear authorized ear protective equipment per local or national requirements that apply.

Keep clutches and brakes on machine and attachments such as power control units, winches and master clutches adjusted according to Operation and Maintenance Instruction Manuals of the manufacturers at all times. DO NOT adjust machine with engine running except as specified.

Do not operate a machine with brakes out of adjustment. See the Operation and Maintenance Instruction manual.

Move carefully when under, in or near machine or implements. Wear required protective equipment, such as hard hat, safety glasses, safety shoes, ear protectors.

To move a disabled machine, use a trailer or low boy truck if available. If towing is necessary, provide warning signals as required by local rules and regulations and follow Operation and Maintenance Instruction Manual recommendations. Load and unload on a level area that gives full support to the trailer wheels. Use ramps of adequate strength, low angle and proper height. Keep trailer bed clean of clay, oil and all materials that become slippery. Tie machine down securely to truck or trailer bed and block tracks (or wheels) as required by the carrier.

To prevent entrapment in cabs or mounted enclosures, observe and know the mechanics of alternate exit routes.

On machines equipped with suction radiator fans, be sure to periodically check all engine exhaust parts for leaks as exhaust gases are dangerous to the operator. Keep a vent open to outside air at all times when operating within a closed cab.

STARTING FLUID IS FLAMMABLE. Follow the recommendations as outlined in the Operation and Maintenance Instruction Manual and as marked on the containers. Store containers in cool, well-ventilated place secure from unauthorized personnel. DO NOT PUNCTURE OR BURN CONTAINERS.

Ĭ