

# COMPACT LOADER WITH ACCESSORIES

## SL45B - SL55BH

### WORKSHOP MANUAL

---

**IMPORTANT:** *The information contained in this manual are valid at printing time. As the Manufacturer continuously improves his products, some information may not be updated. In case of discrepancies, apply to Sales and Service Department.*

---

**FIAT KOBELCO CONSTRUCTION MACHINERY S.p.A. - ENGINEERING**  
**PRINT 604.06.923.01**  
Edition July 2002 - Printed in Italy



## TO THE READER

- This manual has been written for a skilled technician, in order to give him the information necessary to repair this machine.
- Read this manual carefully for correct information about repair procedures.
- For any question or comment, or in case you notice a mistake in this manual

**content, please contact:**

FIAT KOBELCO CONSTRUCTION  
MACHINERY S.p.A.  
Strada Settimo, 323  
San Mauro Torinese (TO)  
10099 ITALIA  
PRODUCT SUPPORT  
DOCUMENTATION CENTER  
Fax. ++39 011 6877357

---

---

## ADDITIONAL REFERENCE MANUALS

- In addition to this Workshop Manual, refer also to the following:
  - Operation and maintenance instruction manual
  - Spare parts catalog

---

---

## DESCRIPTION OF THE COMPLETE WORKSHOP MANUAL

- The complete repair manual consists of one volume:  
**SL45B-SL55BH - Workshop Manual "Compact loader with accessories"**
- "Compact loader with accessories" Workshop Manual contains the technical information necessary for machine/engine service and repair, service equipment, information on

maintenance standards, remove and install procedures, disassembly and assembly procedures.

- The complete Workshop Manual for the compact loader with accessories model SL45B-SL55BH consists of the following volume identified by print number as shown herebelow:

VOLUME	MACHINE TYPE	PRINT No.
- Workshop Manual "Compact loader with accessories"	SL45B-SL55BH	604.06.923.01

## AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individuals to follow simple and fundamental safety rules or precautions. For this reason **MOST ACCIDENTS CAN BE PREVENTED** by recognising the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

Carefully read indications, cautions and safety warning quoted in the "SAFETY RULES" section.

A careful operator is the best insurance against an accident.

The complete observance of one simple rule would prevent many thousand serious injuries each year.

That rule is:

**Never attempt to clean, oil or adjust a machine while it is in motion.**



### ATTENTION

**On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.**

**If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.**

---

**COPYRIGHT BY FIAT KOBELCO CONSTRUCTION MACHINERY S.p.A.**

**Product Support - Documentation Centre**

**Strada di Settimo, 323 - S. Mauro T.SE (TO) ITALY**

All rights reserved. Reproduction of text and illustrations in whole or in part, is strictly prohibited.

---

# SECTION 00 – GENERAL INFORMATION

## CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Introduction .....	00-2
	About Improvements .....	00-2
	Company Policy .....	00-3
	Parts and Accessories .....	00-3
	Model Codes .....	00-3
	Precautionary Statements .....	00-4
	Safety Precaution Information .....	00-5
	General Safety Information .....	00-7
	Machine Model and Serial Number Location .....	00-9
	Engine Model and Serial Number Location .....	00-9
	Hardware Torque Specifications .....	00-10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses .....	00-12
	Standard Torque Data for Hydraulic Tubes and Fittings .....	00-12
	Pipe Thread Fitting Torque .....	00-13
	Lubricants and Coolants .....	00-13
	Sealants .....	00-13
	Properly Support a Raised Machine .....	00-14
	Properly Support Boom on Boom Lock Pins .....	00-14
	Raising Boom Without Hydraulic Oil Flow .....	00-14
	Raising Boom Without Battery Voltage (12V) .....	00-16
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins .....	00-17
	Major Unit Overhaul .....	00-18
	Cab and Boom Tilt Procedure .....	00-19
	Craning the Skid Steer .....	00-25
	Special Tools .....	00-28
	Specifications .....	00-29
	Dimensions .....	00-35

## SECTION 10 – ENGINE

### Chapter 1 – SL45B - N844, SL55BH - N844T

#### CONTENT

<b>Section</b>	<b>Description</b>	<b>Page</b>
10 000	General Engine Information .....	10-3
	General Description .....	10-3
	Engine Component Descriptions .....	10-3
	Engine Model and Serial Number Location .....	10-5
	Turbocharger Lubrication .....	10-5
	Safety Precautions .....	10-6
	General Engine Specifications .....	10-7
	Troubleshooting .....	10-11
	SL55BH - Excessive Oil Consumption .....	10-15
	Specifications - Service Standards .....	10-17
	Torque Specifications .....	10-21
	Engine Components Electrical Diagram .....	10-22
10 001 10	Engine Removal .....	10-23
10 001 53	Engine Disassembly Sequence .....	10-28
	Engine Component Maintenance .....	10-36
10 101 55	Valve Seat .....	10-39
10 101 56	Cylinder Block .....	10-41
10 105 22	Piston and Piston Rings .....	10-42
	Connecting Rod .....	10-45
10 103 10	Bearing Holder .....	10-47
	Front Crankshaft Bearing (Bushing) .....	10-48
10 103 30	Crankshaft .....	10-50
10 103 76	Flywheel and Ring Gear .....	10-52
10 106 40	Camshaft Assembly .....	10-52
10 106 66	Camshaft Gear and Bearing Assembly .....	10-53
	Timing Gear .....	10-54
10 304 41	Oil Pump .....	10-54
10 304 10	Oil Filter .....	10-55
10 402 28	Water Pump Assembly and Thermostat Housing .....	10-55
10 402 30	Thermostat .....	10-55
10 230 24	Governor .....	10-57
	Governor Operation .....	10-59

---

10 304 38	Engine Reassembly Sequence .....	10-61
	Crankshaft and Bearing Holder Assembly .....	10-62
	Rear Oil Seal .....	10-63
	Backplate/Flywheel Housing .....	10-63
	Flywheel .....	10-63
	Piston and Connecting Rod .....	10-64
	Oil Intake and Oil Strainer .....	10-64
	Oil Sump .....	10-64
	Dipstick and Tube .....	10-64
	Front Plate .....	10-64
	Idler Gear and Oil Pump Assembly .....	10-66
	Timing Gear Case Installation .....	10-66
	Crankshaft Pulley .....	10-66
	Injection Pump Installation .....	10-66
	Adjusting the Fuel Injection Timing .....	10-67
	Spill Timing Procedure .....	10-68
29 100 50	Reinstallation of Engine into Skid Steer Frame .....	10-75
	How to Operate the Engine After Overhaul .....	10-77
	Cooling System .....	10-78
	Cooling System Operation .....	10-78
	Water Pump Assembly and Thermostat Housing .....	10-79
	Radiator .....	10-80
	Fuel System .....	10-82
	Fuel Specifications .....	10-82
	Diesel Fuel .....	10-82
	Diesel Fuel Storage .....	10-82
	Fuel System Components .....	10-83
	Fuel Guage .....	10-84
	Cold Start Aid .....	10-85
	Fuel Filter System .....	10-85
	Priming the Fuel System .....	10-86
	Fuel System Testing .....	10-87
	Fuel System Components .....	10-90
10 236 08	Fuel Injection Timing .....	10-96
	Turbocharger - SL55BH N844T Engine .....	10-101
10 250 30	Turbocharger Removal .....	10-103
	Miscellaneous Engine Electrical .....	10-116
10 223 10	Shut-off Solenoid .....	10-117
	Special Tools .....	10-119

## SECTION 27 – REAR DRIVE AXLE (GEARBOXES)

### Chapter 1 – Gearboxes

#### CONTENT

Section	Description	Page
27 000	General Information .....	27-2
	Specifications .....	27-4
	Troubleshooting .....	27-5
	Testing .....	27-7
27 126	Gearboxes .....	27-8
27 126 40	Gearbox Removal and Inspection .....	27-8
27 126 48	Gearbox Disassembly .....	27-12
	Gearbox Parts Inspection .....	27-13
	Gearbox Resassembly .....	27-14
27 126 40	Gearbox Resinstallation .....	27-16

## SECTION 29 - HYDROSTATIC TRANSMISSION

### Chapter 1 - Neutralizer, Pumps, Motors

#### CONTENT

Section	Description	Page
29 100	General Information .....	29-3
	Operation .....	29-3
	Specifications .....	29-5
29 100 01	Troubleshooting .....	29-6
	Hydrostatic Drive System Testing .....	29-8
	Hydrostatic System Oil Flow .....	29-11
	Hydrostatic Charge System Pressure Test .....	29-14
	Hydrostatic Pump Case Drain Test .....	29-15
	Hydrostatic Pump High Pressure Test .....	29-18



	Hydrostatic Pump Efficiency Test .....	29-20
	Hydrostatic Motor Case Drain Test .....	29-22
	Hydrostatic Motor Efficiency Test .....	29-23
	Hydraulic, Hydrostatic System Air Ingress Test .....	29-25
	Hydrostatic Pumps .....	29-27
29 100 40	Hydrostatic Pump Removal .....	29-27
29 100 46	Hydrostatic Pump Disassembly .....	29-31
	Hydrostatic Pump Parts Inspection .....	29-36
	Hydrostatic Pump Reassembly .....	29-41
	Hydraulic System Pump Installation (Without High Flow) .....	29-47
	Hydraulic System Pump/High Flow Pump Installation .....	29-49
	Hydrostatic Pump Reinstallation .....	29-54
	Hydrostatic Motor .....	29-58
29 100 60	Hydrostatic Motor Removal .....	29-58
29 100 66	Hydrostatic Motor Disassembly .....	29-62
	Hydrostatic Motor Parts Inspection .....	29-67
	Hydrostatic Motor Reassembly .....	29-70
	Hydrostatic Motor Reinstallation .....	29-79
	Hydraulic System Cleaning Procedure .....	29-85
	Start-up Procedure After Rebuild (After Pump or Motor Replacement) .....	29-88
	Charge Check Valve .....	29-90
29 100 36	Charge Check Valve Removal and Replacement .....	29-90
29 100	Steering System .....	29-91
	Hydrostatic System Controls .....	29-91
29 130 30	Neutralizer Assembly .....	29-93
	Left Control Handle With No Boom Hand Control .....	29-97
29 100 10	Left Control Handle With No Boom Hand Control Removal .....	29-97
29 100 10	Left Control Handle With No Boom Hand Control Disassembly .....	29-97
	Left Control Handle With No Boom Hand Control Inspection .....	29-98
	Left Control Handle With No Boom Hand Control Reassembly .....	29-98
	Left Control Handle With No Boom Hand Control Reinstallation .....	29-98
29 100 11	Left Control Handle With Boom Hand Control .....	29-100
	Left Control Handle With Boom Hand Control Removal .....	29-100
29 100 10	Left Control Handle With Boom Hand Control Disassembly .....	29-101
	Left Control Handle With Boom Hand Control Inspection .....	29-102
	Left Control Handle With Boom Hand Control Reassembly .....	29-103
	Left Control Handle With Boom Hand Control Reinstallation .....	29-104
	Right Control Handle With Auxiliary or Bucket Control .....	29-106
29 100 15	Right Control Handle With Auxiliary or Bucket Control Removal .....	29-106

29 100 15	Right Control Handle With Auxiliary or Bucket Control Disassembly .....	29-107
	Right Control Handle With Auxiliary or Bucket Control Inspection .....	29-109
	Right Control Handle With Auxiliary or Bucket Control Reassembly .....	29-110
	Right Control Handle With Auxiliary or Bucket Control Reinstallation .....	29-113
29 130 06	Drive Control Adjustment Procedure .....	29-115
29 130 06	Neutral Adjustment .....	29-116

## SECTION 33 – BRAKES AND CONTROLS

### Chapter 1 – Parking Brake

#### CONTENT

Section	Description	Page
33 000	General Information .....	33-2
	Specifications .....	33-4
	Troubleshooting .....	33-5
	Testing .....	33-7
33 110	Parking Brake .....	33-8
	Parking Brake Removal and Inspection .....	33-9

## SECTION 35 - HYDRAULIC SYSTEM

### Chapter 1 - Valves, Gear Pump, Cylinders, and Pedal Controls

#### CONTENT

Section	Description	Page
35 000	General Information .....	35-3
	Hydraulic System Compatibility .....	35-4
	Boom Cylinder Pivot Pins .....	35-6
	Boom Cylinder Pivot Pin Location and Machine Usage .....	35-6
	Control Valve Power Beyond .....	35-7
	Specifications .....	35-8
	Troubleshooting .....	35-12
	Auxiliary Boom Hydraulics Troubleshooting .....	35-16
	Hydraulic System Testing .....	35-18
	Hydraulic System Oil Flow .....	35-24
	Control Valve - Bucket Spool Shifted .....	35-25
	Control Valve - Boom Spool Shifted .....	35-26
	Control Valve - Auxiliary Spool Shifted .....	35-27
35 710 02	Main System Pressure Tests .....	35-28
	Checking Main System Pressure at Boom Cylinders .....	35-30
	Checking Main System Pressure at Bucket Cylinders .....	35-31
	Checking Main System Pressure at Auxiliary Boom Hydraulic Quick Couplers .....	35-32
	Boom Circuit Relief Valve Test .....	35-33
	Gear Pump Flow Efficiency Test .....	35-35
	Boom and Bucket Spool Lock Solenoid Test .....	35-39
	Hydraulic, Hydrostatic System Air Ingress Test .....	35-41
	Control Valve Specifications .....	35-43
35 724 50	Control Valve Removal .....	35-44
35 724 54	Control Valve Disassembly and Inspection .....	35-45
	Control Valve Parts Inspection .....	35-49
	Control Valve Reassembly .....	35-50
	Control Valve Reinstallation .....	35-53
	Hydraulic Pump Specifications .....	35-54
35 710 10	Hydraulic Pump Removal .....	35-55

35 710 20	Hydraulic System Pump Removal/Disassembly (Without High Flow) . . . . .	35-56
35 710 20	Hydraulic System Pump and High Flow Removal/Disassembly . . . . .	35-56
	High Flow Pump Parts Inspection . . . . .	35-58
	Hydraulic System Pump Parts Inspection . . . . .	35-59
	Hydraulic System Pump Reassembly/Installation (Without High Flow) . . . . .	35-61
	Hydraulic System Pump and High Flow Pump Reassembly/Installation . . . . .	35-64
	New Hydraulic System Pump Installation (Without High Flow) . . . . .	35-70
	New Hydraulic System Pump/High Flow Pump Installation . . . . .	35-72
	Gear Pump Start-Up Procedure . . . . .	35-78
	Cylinders, Boom and Bucket . . . . .	35-79
35 710 10	Boom Cylinder Removal . . . . .	35-81
35 730 18	Boom Cylinder Disassembly . . . . .	35-83
	Boom Cylinder Parts Inspection . . . . .	35-84
	Boom Cylinder Reassembly . . . . .	35-85
	Boom Cylinder Reinstallation . . . . .	35-87
35 730 10	Bucket Cylinder Removal . . . . .	35-87
35 730 13	Bucket Cylinder Disassembly . . . . .	35-88
	Bucket Cylinder Parts Inspection . . . . .	35-89
	Bucket Cylinder Reassembly . . . . .	35-90
	Bucket Cylinder Reinstallation . . . . .	35-92
	Pedal Controls . . . . .	35-93
35 724 16	Pedal Removal (With Boom and Bucket Pedal Controls) . . . . .	35-93
	Pedal Inspection (With Boom and Bucket Pedal Controls) . . . . .	35-93
	Pedal Reinstallation (With Boom and Bucket Pedal Controls) . . . . .	35-95
35 724 16	Pedal Removal (With Boom and Bucket Hand Controls) . . . . .	35-98
	Pedal Inspection (With Boom and Bucket Hand Controls) . . . . .	35-99
	Pedal Reinstallation (With Boom and Bucket Hand Controls) . . . . .	35-100
35 300	Hydraulic Cooling, Filter, Reservoir System . . . . .	35-103
35 705	Filter System . . . . .	35-104
35 705 04	Filter Removal . . . . .	35-104
35 705 05	Base Removal . . . . .	35-104
	Reassembly . . . . .	35-105
	Oil Cooler . . . . .	35-105
35 300 10	Oil Cooler Removal . . . . .	35-105
	Oil Cooler Reassembly . . . . .	35-106
35 300	Oil Reservoir . . . . .	35-106
35 300 10	Oil Reservoir Removal . . . . .	35-107
	Oil Reservoir Reinstallation . . . . .	35-108
	Adapting Attachments . . . . .	35-109

## SECTION 37 – TOWING HOOKS AND BALLASTING

### Chapter 1 – Rear Counterweights

#### CONTENT

Section	Description	Page
37 140 10	Rear Counterweights .....	37-2
37 140 12	Rear Counterweight Support Removal .....	37-2

## SECTION 39 – FRAMES

### Chapter 1 – Lower Main, ROPS

#### CONTENT

Section	Description	Page
	General Information .....	39-2
	ROPS .....	39-2
	ROPS Frame .....	39-2
90 152 46	ROPS Removal .....	39-2
	ROPS Reinstallation .....	39-8

## SECTION 44 – AXLES AND WHEELS

### Chapter 1 – Axles

#### CONTENT

Section	Description	Page
44 100	General Information .....	44-2
	Specifications .....	44-4
	Troubleshooting .....	44-5
	Testing .....	44-7
44 106	Axles .....	44-8
44 106 10	Axle Housing Assembly Removal .....	44-8
44 106 16	Axle Disassembly .....	44-9
	Axle Parts Inspection .....	44-11
	Axle Reassembly .....	44-12
	Axle Housing Reinstallation .....	44-14
	Final Drive .....	44-15
44 106 48	Drive Chain and Sprocket Removal .....	44-15
	Final Drive Parts Inspection .....	44-19
	Final Drive Reassembly .....	44-20
44 511	Tyres/Wheels .....	44-22
	Tyre and Track Installation .....	44-23

## SECTION 50 – CAB CLIMATE CONTROL

### Chapter 1 – Heater/Defroster

#### CONTENT

Section	Description	Page
50 100	Heater/Defroster (Cab) .....	50-2

## SECTION 55 – ELECTRICAL SYSTEM

### Chapter 1 – Advanced Warning System, Circuits, Alternator, and Starter

#### CONTENT

Section	Description	Page
55 000	General Electrical Information .....	55-6
	Definition of Terms .....	55-7
	Adapting Attachments Requiring 12V Electrical Power .....	55-9
	Specifications .....	55-12
	Electrical Diagram .....	55-15
55 418	Advanced Warning System .....	55-19
	Electronic Instrument Cluster (EIC) .....	55-19
	(EIC) Electronic Instrument Cluster Front Panel .....	55-20
	EIC Functional Groups .....	55-21
	Engine Preheat .....	55-26
	Automatic Shutdown .....	55-26
	Operating Mode .....	55-27
	Broken Alternator/Water Pump Belt Warning .....	55-29
	Fuel Level .....	55-30
	EIC Interlocks .....	55-30
	EIC Lock Mode .....	55-31
	EIC Engine Preheat .....	55-32
	Troubleshooting .....	55-33
	Advanced Warning System (AWS) .....	55-36
	EIC Board Self Test .....	55-37
	Diagnostic and Setup Modes .....	55-38
	Arrow, Open Book, and Audible Alarm Test .....	55-40
	Diagnostic Mode EIC Circuit Tests .....	55-40
	EIC Setup Mode .....	55-44
	Electronic Instrument Cluster (EIC) and Starter Circuits .....	55-52
	Blown Fuse Symptom and Testing .....	55-52
	Testing Other EIC Functions .....	55-54
	EIC Board Reading Accuracy .....	55-57
	EIC Board Claims Warranty .....	55-59

	Electrical Circuits . . . . .	55-60
	Seat Switch Circuit to EIC Board . . . . .	55-61
	Seat Belt Switch Circuit to EIC Board . . . . .	55-62
	Ignition Switch Circuit to EIC Board . . . . .	55-63
	Cranking Circuit (Starter Motor) . . . . .	55-64
	“Service/Run” Switch in the “Run” Position . . . . .	55-65
	Cranking Circuit Ground . . . . .	55-66
	Operating Conditions “Service/Run” Switch in the “Service” position . . . . .	55-66
	Service/Run” Switch in the “Service” position . . . . .	55-67
	Cranking Circuit Ground . . . . .	55-68
	Start Relay Operation . . . . .	55-68
	Start Relay Circuit . . . . .	55-69
	Start Relay Ground Circuit . . . . .	55-70
	Start Interlock Relay Operation . . . . .	55-70
	Start Interlock Circuit . . . . .	55-71
	Start Interlock Ground Circuit . . . . .	55-72
	Start Circuit . . . . .	55-72
55 100	Removal, Installation and Wiring of Electrical Components . . . . .	55-73
	Battery . . . . .	55-74
55 301 40	Battery Removal . . . . .	55-74
	Battery Installation . . . . .	55-74
55 418 10	EIC (Electronic Instrument Cluster) Board Removal . . . . .	55-75
	EIC (Electronic Instrument Cluster) Wiring . . . . .	55-76
	EIC (Electronic Instrument Cluster) Board Installation . . . . .	55-77
	Ignition (Key) Switch Wiring . . . . .	55-78
55 201 10	Ignition (Key) Switch Removal . . . . .	55-78
	Ignition (Key) Switch Installation . . . . .	55-78
	Cab Fuse Panel Wiring . . . . .	55-79
	Cab Fuse Block and Panel Removal . . . . .	55-80
	Cab Fuse Block and Panel Installation . . . . .	55-80
	Service/Run Switch Wiring . . . . .	55-81
	Service/Run Switch - Service Position . . . . .	55-81
	Service/Run Switch - Run Position . . . . .	55-81
55 418 30	Service/Run Switch Removal . . . . .	55-82
	Service/Run Switch Installation . . . . .	55-82
	Seat and Seat Belt Switch Wiring . . . . .	55-83
55 201 15	Seat Switch Removal . . . . .	55-83
	Seat Switch Installation . . . . .	55-84
	Seat Belt Buckle and Switch Assembly Removal . . . . .	55-84



	Seat Belt Buckle Installation .....	55-84
	Road Light and Work Light Switch Wiring .....	55-85
55 404 20	Road Light and Work Light Switch Removal .....	55-86
	Road Light and Work Light Switch Installation .....	55-86
	Engine Fuse and Relay Panel .....	55-87
	Accessory Relay Wiring .....	55-88
	Accessory Relay Removal .....	55-88
	Accessory Relay Installation .....	55-88
	Preheat Circuit Breaker Wiring .....	55-89
55 100 24	Preheat Circuit Breaker Removal .....	55-89
	Preheat Circuit Breaker Installation .....	55-89
	Start Interlock Relay Wiring .....	55-90
55 100 34	Start Interlock Relay Removal .....	55-91
	Start Interlock Relay Installation .....	55-91
	Engine Fuse Panel Wiring .....	55-92
	Engine Fuse Block Removal .....	55-93
	Engine Fuse Block Installation .....	55-93
	Alternator Excite Resistor Wiring .....	55-94
55 301 16	Alternator Excite Resistor Removal .....	55-94
	Alternator Excite Resistor Installation .....	55-94
	Start Relay Wiring .....	55-95
55 100 34	Start Relay Removal .....	55-95
	Start Relay Installation .....	55-95
	Preheat Relay Wiring .....	55-96
55 100 34	Preheat Relay Removal .....	55-97
	Preheat Relay Installation .....	55-97
	Preheat Glow Plug Removal .....	55-98
	Preheat Glow Plug Installation .....	55-98
	Fuel System Components .....	55-99
	Electric Fuel Pump .....	55-101
10 210 21	Electric Fuel Pump Removal .....	55-102
10 223	Fuel Shutoff Solenoid .....	55-102
	Fuel Shutoff Solenoid Testing .....	55-102
10 223 10	Replacement of Fuel Shutoff Solenoid .....	55-103
55 414 14	Air Filter Restriction Indicator Switch Removal .....	55-104
	Air Filter Restriction Indicator Switch Installation .....	55-104
55 414 10	Engine Coolant Temperature Sender Removal .....	55-104
	Engine Coolant Temperature Sender Installation .....	55-104
55 414 12	Engine Oil Pressure Switch Removal .....	55-105

	Engine Oil Pressure Switch Installation .....	55-105
55 414 28	Hydrostatic Charge Pressure Switch Removal .....	55-105
	Hydrostatic Charge Pressure Switch Installation .....	55-105
55 414 24	Hydraulic Oil Filter Restriction Switch Removal .....	55-106
	Hydraulic Oil Filter Restriction Switch Installation .....	55-106
55 414 20	Hydraulic Oil Temperature Sender Removal .....	55-106
	Hydraulic Oil Temperature Sender Installation .....	55-107
	Boom/Bucket Control Valve Spool Lock Solenoids .....	55-108
35 724 90	Boom/Bucket Control Valve Spool Lock Solenoids Removal .....	55-108
	Boom/Bucket Control Valve Spool Lock Solenoids Installation .....	55-109
	Wire Harness .....	55-110
55 100 74	Main Wire Harness Removal .....	55-110
	Main Wire Harness Installation .....	55-115
55 404	Road/Work Lights .....	55-119
55 301	Alternator (40 Amp Version) .....	55-123
	Charging Circuit .....	55-123
	Alternator Service Specifications .....	55-125
	Alternator System Testing and Troubleshooting .....	55-126
55 301 10	Alternator Removal .....	55-130
55 301 12	Alternator Disassembly .....	55-131
	Alternator Reinstallation .....	55-138
55 201	Starter .....	55-139
	Starter Motor Troubleshooting .....	55-139
55 201 50	Starter Motor Removal .....	55-141
	Starter Motor Disassembly .....	55-146
	Starter Inspection and Repair .....	55-150
	Starter Reassembly .....	55-155
	Starter Reinstallation .....	55-159

## SECTION 82 – FRONT LOADER (BOOM AND MOUNTING PLATE)

### Chapter 1 – Buckets

#### CONTENT

Section	Description	Page
82 100	General Information .....	82-2
	Buckets .....	82-2
82 100 77	Boom Lock Pins and Linkage .....	82-3
	Boom .....	82-3
82 100 70	Attachment Mounting Plate .....	82-4
	Boom and Cylinder Pivot Pins .....	82-4
	Boom and Cylinder Pivot Pin Location and Machine Usage .....	82-4
	Boom and Cylinder Pivot Pins Size .....	82-5
82 100 30	Pallet Fork .....	82-6
82 100 20	Utility Fork .....	82-7
82 100 12	Bucket Cutting Edge (Replacement) .....	82-8
82 100	Bucket Latch Plate Installation Procedure .....	82-9
82 100	Dirt Tooth Kit Installation .....	82-11
	Bucket Tooth Spacing .....	82-13
	Boom Lock Pin/Linkage .....	82-15
82 100 77	Boom Lock Pin/Linkage Removal .....	82-15
	Boom Lock Pin/Linkage Reinstallation .....	82-16
	Boom, Upper and Lower Link .....	82-18
	Boom, Upper and Lower Link Removal .....	82-18
82 100 70	Front Boom Mounting Plate Pivot Hub Replacement .....	82-24
	Boom, Upper and Lower Link Reinstallation .....	82-25
	Attachment Mounting Plate .....	82-29
82 100 70	Attachment Mounting Plate Removal .....	82-29
	Repair/Rebuild Mounting Plate .....	82-30
82 100 74	Latch Lever and Pin Removal/Repair .....	82-30
	Attachment Mounting Plate Parts Inspection .....	82-32
	Checking Procedure for Buckets and Attachments .....	82-36
	Checking Procedure .....	82-38
	Checking the Loader Faceplate .....	82-39

**SECTION 88 – ACCESSORIES****Chapter 1 – Dealer Installed Options****CONTENT**

<b>Section</b>	<b>Description</b>	<b>Page</b>
88 100	General Information .....	88-2
	Adapting Attachments Requiring 12V Electrical Power .....	88-2
	Hydraulic System Compatibility .....	88-5
90 000	Arm Pads For Cab Side Panels .....	88-7
90 000	Armrests for Deluxe Seat .....	88-7
90 000	Forearm Rests .....	88-8
55 000	Back-up Alarm .....	88-9
10 300	Block Heater (Engine) .....	88-10
55 000	Electric Power Supply (12 Volt, 15 Amp) .....	88-11
10 254	Exhaust (Engine) .....	88-12
10 254	Aspirator Precleaner Muffler .....	88-12
35 000	High Flow Hydraulics .....	88-14
	High Flow Hydraulics Troubleshooting .....	88-16
	High Flow Hydraulics Component Replacement .....	88-18
55 000	Horn .....	88-25
90 000	Shoulder Belt (Seat) .....	88-26
88 000	Slow-moving Vehicle (SMV) Sign Kit .....	88-27
55 000	Warning Light (Rotary Beacon) .....	88-28
55 000	Warning Lights (Four-way Flashers/Turn Signal/Horn) .....	88-31