

# COMPACT LOADER WITH ACCESSORIES

## SL65B

### WORKSHOP MANUAL

12602

---

**IMPORTANT:** *The information contained in this manual are valid at printing time. As the Manufacturer continuously improves his products, some information may not be updated. In case of discrepancies, apply to Sales and Service Department.*

---

**FIAT KOBELCO CONSTRUCTION MACHINERY S.p.A. - ENGINEERING -  
PRINT 604.06.948.01  
Edition 07-2002 - Printed in Italy**



## TO THE READER

- This manual has been written for a skilled technician, in order to give him the information necessary to repair this machine.
- Read this manual carefully for correct information about repair procedures.
- For any question or comment, or in case you notice a mistake in this manual

**content, please contact:**

FIAT KOBELCO CONSTRUCTOR  
MACHINERY S.p.A.  
Strada Settimo, 323  
San Mauro Torinese (TO)  
10099 ITALIA  
PRODUCT SUPPORT  
DOCUMENTATION CENTER  
Fax. ++39 011 6877357

---

---

## ADDITIONAL REFERENCE MANUALS

- In addition to this Workshop Manual, refer also to the following:
  - Operation and maintenance instruction manual
  - Spare parts catalog

---

---

## DESCRIPTION OF THE COMPLETE WORKSHOP MANUAL

- The complete repair manual consists of one volume:  
**SL65B - Workshop Manual "Compact loader with accessories"**
- "Compact loader with accessories" Workshop Manual contains the technical information necessary for machine/engine service and repair, service equipment, information on

maintenance standards, remove and install procedures, disassembly and assembly procedures.

- The complete Workshop Manual for the compact loader with accessories model SL65B consist of the following volume identified by print number as shown herebelow:

VOLUME	MACHINE TYPE	PRINT No.
- Workshop Manual "Compact loader with accessories"	SL65B	604.06.948.01

## AVOID ACCIDENTS

Most accidents, whether they occur in industry, on the farm, at home or on the highway, are caused by the failure of some individuals to follow simple and fundamental safety rules or precautions. For this reason **MOST ACCIDENTS CAN BE PREVENTED** by recognising the real cause and doing something about it before the accident occurs.

Regardless of the care used in the design and construction of any type of equipment there are conditions that cannot be completely safeguarded against without interfering with reasonable accessibility and efficient operation.

Carefully read indications, cautions and safety warning quoted in the "SAFETY RULES" section.

A careful operator is the best insurance against an accident.

The complete observance of one simple rule would prevent many thousand serious injuries each year.

That rule is:

**Never attempt to clean, oil or adjust a machine while it is in motion.**



### ATTENTION

**On machines having hydraulically, mechanically and/or cable controlled equipment (such as showels, loaders, dozers, scrapers etc.) be certain the equipment is lowered to the ground before servicing, adjusting and/or repairing.**

**If it is necessary to have the equipment partially or fully raised to gain access to certain items, be sure the equipment is suitably supported by means other than the hydraulic lift cylinders, cable and/or mechanical device used for controlling the equipment.**

---

**COPYRIGHT BY FIAT KOBELCO CONSTRUCTOR MACHINERY S.p.A.**

**Product Support - Documentation Centre**

**Strada di Settimo, 323 - S. Mauro T.SE (TO) ITALY**

All rights reserved. Reproduction of text and illustrations in whole or in part, is strictly prohibited.

---

## SECTION 00 – GENERAL INFORMATION

### CONTENT

Section	Description	Page
	Introduction .....	00-2
	About Improvements .....	00-2
	Company Policy .....	00-3
	Parts and Accessories .....	00-3
	Model Codes .....	00-3
	Precautionary Statements .....	00-4
	Safety Precaution Information .....	00-5
	General Safety Information .....	00-7
	Machine Model and Serial Number Location .....	00-9
	Engine Model and Serial Number Location .....	00-9
	Hardware Torque Specifications .....	00-10
	Installation of Adjustable Fittings in Straight Thread O Ring Bosses .....	00-12
	Standard Torque Data for Hydraulic Tubes and Fittings .....	00-12
	Pipe Thread Fitting Torque .....	00-13
	Lubricants and Coolants .....	00-13
	Sealants .....	00-13
	Properly Support a Raised Machine .....	00-14
	Properly Support Boom on Boom Lock Pins .....	00-14
	Raising Boom Without Hydraulic Oil Flow .....	00-14
	Raising Boom Without Battery Voltage (12V) .....	00-15
	Reattaching Cylinders After Repair with Boom Resting on Boom Lock Pins .....	00-17
	Major Unit Overhaul .....	00-18
	Cab and Boom Tilt Procedure .....	00-19
	Craning the Skid Steer .....	00-25
	Special Tools .....	00-28
	Specifications (Model SL65B) .....	00-29
	Dimensions (Model SL65B) .....	00-32

## SECTION 10 – ENGINE

### Chapter 1 – SL65B - 332T/JF

#### CONTENT

<b>Section</b>	<b>Description</b>	<b>Page</b>
10 000	Introduction .....	10-3
	Safety Precautions .....	10-3
	SL65B Engine Services .....	10-4
	Engine Model and Serial Number Location .....	10-4
	General Engine Information .....	10-4
	General Engine Specifications .....	10-8
	Troubleshooting .....	10-10
	Specifications Service Standards .....	10-19
	Hardware Torque Chart .....	10-26
	Torque Specifications .....	10-27
	Turbocharger Torque Specifications .....	10-28
	Engine Electrical Components - SL65B .....	10-29
10 001 10	Engine Removal By Tilting Cab and Boom Forward .....	10-30
10 001 20	Mounting the Engine for Maintenance .....	10-35
10 001 53	Engine Disassembly Sequence .....	10-35
	Engine Component Maintenance .....	10-36
	Cylinder Block, Pistons, Rings, Rods and Bearings .....	10-45
	Crankshaft, Main Bearings, and Flywheel .....	10-53
	Camshaft and Timing Gear Train .....	10-59
	Timing Gear .....	10-62
	Engine Timing .....	10-66
10 400	Cooling System .....	10-70
10 402 30	Thermostat Removal .....	10-71
10 402 10	Water Pump Removal .....	10-72
10 304	Lubrication System .....	10-77
10 102 10	Oil Pan Removal .....	10-77
10 304 34	Oil Pump Removal .....	10-78
10 304 06	Oil Level Dipstick .....	10-81
	Fuel System .....	10-82
10 210 21	Electric Lift Pump .....	10-82
10 218 34	Injectors .....	10-90
10 218 34	Fuel Injector Overhaul .....	10-92
10 210 21	Electric Lift Pump .....	10-95
10 216 10	Fuel Tank .....	10-97

---

Air Intake and Exhaust System .....	10-100
Exhaust Muffler .....	10-102
Turbocharger .....	10-103
Starting a Turbocharged Engine After Installation of a Turbocharger .....	10-112
Engine Installation .....	10-113
Operating the Engine After Overhaul .....	10-116
Electrical Component Maintenance .....	10-117
Adjust Belt Tension .....	10-118
Special Tools .....	10-119

## SECTION 27 – REAR DRIVE AXLE (GEARBOXES)

### Chapter 1 – Gearboxes

#### CONTENT

Section	Description	Page
27 000	General Information .....	27-2
	Specifications .....	27-4
	Troubleshooting .....	27-5
	Testing .....	27-7
27 126	Gearboxes .....	27-8
	Final Drive and Gearbox Fill/Check Plug (2) .....	27-8
27 126 40	Gearbox Removal .....	27-9
27 126 48	Gearbox Disassembly .....	27-10
	Gearbox Parts Inspection .....	27-14
	Gearbox Reassembly .....	27-15
27 126 40	Gearbox Reinstallation .....	27-18
	Engine-to-Transmission Gearbox .....	27-23
	Engine-to-Transmission Gearbox Removal - Disassembly .....	27-23
	Engine-to-Transmission Gearbox Parts Inspection .....	27-28
	Engine-to-Transmission Gearbox Reassembly - Installation .....	27-29
	Start-Up Procedure .....	27-32



## SECTION 29 – HYDROSTATIC TRANSMISSION

### Chapter 1 – Neutralizer, Pumps, Motors, Two-Speed

#### CONTENT

<b>Section</b>	<b>Description</b>	<b>Page</b>
29 100	General Information .....	29-4
	Operation .....	29-4
	Specifications .....	29-6
29 100 01	Troubleshooting .....	29-8
	Low Power Through the Engine/Transmission System .....	29-10
	Hydrostatic Drive System Testing .....	29-13
	Hydrostatic System Oil Flow .....	29-16
	Hydrostatic Charge System Pressure Test .....	29-19
	Hydrostatic Pump Case Drain Test .....	29-21
	Hydrostatic Pump High Pressure Test .....	29-23
	Hydrostatic Motor Case Drain Test .....	29-25
	Hydraulic, Hydrostatic System Air Ingress Test .....	29-27
	Hydrostatic and Charge Pumps .....	29-29
	Hydrostatic Pumps .....	29-29
29 100 40	Hydrostatic Pump Removal .....	29-29
29 100 46	Hydrostatic and Charge Pump Disassembly .....	29-35
	Hydrostatic Charge Pump .....	29-36
	Hydrostatic Charge Pump Disassembly .....	29-36
	Hydrostatic Charge Pump Parts Inspection .....	29-37
	Hydrostatic Charge Pump Reassembly .....	29-38
	Hydrostatic Pump .....	29-39
	Hydrostatic Pump Disassembly .....	29-39
	Hydrostatic Pump Parts Inspection .....	29-44
	Hydrostatic Pump Reassembly .....	29-50
	Hydrostatic Pump Reinstallation .....	29-57
	Motors .....	29-60
	Hydrostatic Motor - Single Speed .....	29-60
29 100 60	Hydrostatic Motor - Single Speed Removal .....	29-60
29 100 66	Hydrostatic Motor - Single Speed Disassembly .....	29-64
	Hydrostatic Motor - Single Speed Parts Inspection .....	29-67
	Hydrostatic Motor - Single Speed Reassembly .....	29-71
	Hydrostatic Motor - Single Speed Reinstallation .....	29-75

	Hydrostatic Motor - Two Speed .....	29-77
29 100 60	Hydrostatic Motor - Two Speed Removal .....	29-77
29 100 66	Hydrostatic Motor - Two Speed Disassembly .....	29-82
	Hydrostatic Motor - Two Speed Parts Inspection .....	29-86
	Hydrostatic Motor - Two Speed Reassembly .....	29-90
	Hydrostatic Motor - Two Speed Reinstallation .....	29-96
29 134	Two Speed High/Low Range Components .....	29-99
29 134 20	Two Speed High/Low Control Valve .....	29-101
	Two Speed High/Low Control Valve Removal .....	29-102
29 134 24	Two Speed High/Low Control Valve Disassembly .....	29-103
	Two Speed High/Low Control Valve Inspection .....	29-103
	Two Speed High/Low Control Valve Reassembly .....	29-104
29 134	Control Valve Reinstallation .....	29-105
29 134 30	Two Speed High/Low Slave Cylinder .....	29-106
	Two Speed High/Low Slave Cylinder Removal .....	29-107
	Two Speed High/Low Slave Cylinder Disassembly .....	29-107
	Two Speed High/Low Slave Cylinder Inspection .....	29-108
	Two Speed High/Low Slave Cylinder Reassembly .....	29-108
	Two Speed High/Low Slave Cylinder Reinstallation .....	29-108
29 134 40	Two Speed High/Low Motor Control Linkage .....	29-109
	Two Speed High/Low Motor Control Linkage Removal .....	29-110
	Two Speed High/Low Motor Control Linkage Inspection .....	29-111
	Two Speed High/Low Motor Control Linkage Reinstallation .....	29-112
	Two Speed Control Switch .....	29-113
	Hydraulic System Cleaning Procedure .....	29-114
	Start-up Procedure After Rebuild (After Pump or Motor Replacement) .....	29-117
29 100	Steering System .....	29-120
	Hydrostatic System Controls .....	29-120
	Neutralizer Assembly .....	29-122
29 130 10	Neutralizer Assembly Removal .....	29-122
	Neutralizer Assembly Disassembly .....	29-122
	Neutralizer Assembly Inspection .....	29-123
	Neutralizer Assembly Reassembly .....	29-125
29 130 30	Control Linkage .....	29-127
	Control Linkage Removal .....	29-127
	Control Linkage Disassembly .....	29-127
	Control Linkage Inspection .....	29-127
	Control Linkage Reassembly .....	29-128
	Left Control Handle With No Boom Control .....	29-129

---

29 100 10	Left Control Handle With No Boom Control Removal .....	29-129
	Left Control Handle With No Boom Control Disassembly .....	29-129
	Left Control Handle With No Boom Control Inspection .....	29-130
	Left Control Handle With No Boom Control Reassembly .....	29-130
	Left Control Handle With No Boom Control Reinstallation .....	29-130
	Left Control Handle With Boom Control .....	29-132
29 100 11	Left Control Handle With Boom Control Removal .....	29-132
	Left Control Handle With Boom Control Disassembly .....	29-133
	Left Control Handle With Boom Control Inspection .....	29-134
	Left Control Handle With Boom Control Reassembly .....	29-135
	Left Control Handle With Boom Control Reinstallation .....	29-136
	Right Control Handle With Auxiliary or Bucket Control .....	29-138
29 100 15	Right Control Handle With Auxiliary or Bucket Control Removal .....	29-138
29 100 15	Right Control Handle With Auxiliary or Bucket Control Disassembly .....	29-139
	Right Control Handle With Auxiliary or Bucket Control Inspection .....	29-141
	Right Control Handle With Auxiliary or Bucket Control Reassembly .....	29-142
	Right Control Handle With Auxiliary or Bucket Control Reinstallation .....	29-145
	Control Linkage and Neutralizer .....	29-147
	Control Linkage and Neutralizer Reinstallation .....	29-147
29 130 06	Drive Control Adjustment Procedure .....	29-148
	SL65B Links and Arms .....	29-149
29 130 06	SL65B Neutralizer Adjustment .....	29-150
	Control Lever Parallel Adjustment .....	29-151
	SL65B Linkage and Control Lever Equal Movement .....	29-151
	Left Control Linkage Adjustment .....	29-152
	SL65B Straight Travel and Forward/Reverse Stop Adjustment .....	29-152
	SL65 BHigh/Low Range Adjustment .....	29-155

**SECTION 33 – BRAKES AND CONTROLS****Chapter 1 – Parking Brake****CONTENT**

<b>Section</b>	<b>Description</b>	<b>Page</b>
33 000	General Information .....	33-2
	Specifications .....	33-3
	Troubleshooting .....	33-4
	Testing .....	33-6
33 110	Parking Brake .....	33-7
	Parking Brake Removal and Inspection .....	33-8
33 110	Parking Brake Adjustment .....	33-13

## SECTION 35 – HYDRAULIC SYSTEM

### Chapter 1 – Valves, Gear Pump, Cylinders, and Pedal Controls

#### CONTENT

Section	Description	Page
35 000	General Information .....	35-3
	Hydraulic System Compatibility .....	35-4
	Boom Cylinder Pivot Pins .....	35-6
	Boom Cylinder Pivot Pin Location and Machine Usage .....	35-6
	Control Valve Power Beyond .....	35-7
	Specifications .....	35-8
	Troubleshooting .....	35-11
	Auxiliary Boom Hydraulics Troubleshooting .....	35-15
	Hydraulic System Testing .....	35-17
	Hydraulic System Oil Flow (Neutral Position) .....	35-23
	Control Valve - Bucket Spool Shifted .....	35-24
	Control Valve - Boom Spool Shifted .....	35-25
	Control Valve - Auxiliary Spool Shifted .....	35-26
	Hydraulic System Oil Flow .....	35-27
35 710 02	Main System Pressure Tests .....	35-29
	Checking Main System Pressure at Boom Cylinders .....	35-32
	Checking Main System Pressure at Bucket Cylinders .....	35-33
	Checking Main System Pressure at Auxiliary Boom Hydraulic Quick Couplers .....	35-34
	Boom Circuit Relief Valve Test .....	35-35
	Gear Pump Flow Efficiency Test .....	35-37
	Boom and Bucket Spool Lock Solenoid Test .....	35-40
	Hydraulic, Hydrostatic System Air Ingress Test .....	35-42
	Control Valve Specifications .....	35-44
35 724 50	Control Valve Removal .....	35-45
35 724 54	Control Valve Disassembly and Inspection .....	35-47
	Control Valve Parts Inspection .....	35-51
	Control Valve Reassembly .....	35-52
	Control Valve Reinstallation .....	35-56
	Hydraulic Pump Specifications .....	35-57

---

35 710 10	Hydraulic Pump Removal .....	35-58
35 710 20	Hydraulic Pump Disassembly .....	35-60
	Hydraulic Pump Parts Inspection .....	35-61
	Hydraulic Pump Reassembly .....	35-63
	Hydraulic Pump Installation .....	35-66
	Cylinders, Boom and Bucket .....	35-69
35 710 10	Boom Cylinder Removal .....	35-70
35 730 18	Boom Cylinder Disassembly .....	35-71
	Boom Cylinder Parts Inspection .....	35-73
	Boom Cylinder Reassembly .....	35-74
	Boom Cylinder Reinstallation .....	35-76
35 730 10	Bucket Cylinder Removal .....	35-77
35 730 13	Bucket Cylinder Disassembly .....	35-77
	Bucket Cylinder Parts Inspection .....	35-78
	Bucket Cylinder Reassembly .....	35-80
	Bucket Cylinder Reinstallation .....	35-82
	Pedal Controls .....	35-83
35 724 16	Pedal Removal (With Boom and Bucket Pedal Controls) .....	35-83
	Pedal Inspection (With Boom and Bucket Pedal Controls) .....	35-83
	Pedal Reinstallation (With Boom and Bucket Pedal Controls) .....	35-85
35 724 16	Pedal Removal (With Boom and Bucket Hand Controls) .....	35-88
	Pedal Inspection (With Boom and Bucket Hand Controls) .....	35-89
	Pedal Reinstallation (With Boom and Bucket Hand Controls) .....	35-90
35 300	Hydraulic Cooling, Filter, Reservoir System .....	35-93
35 705	Filter System .....	35-94
35 705 04	Filter Removal .....	35-94
35 705 05	Base Removal .....	35-94
	Reassembly .....	35-95
	Oil Cooler .....	35-96
35 300 10	Oil Cooler Removal .....	35-96
	Oil Cooler Reassembly .....	35-96
35 300	Oil Reservoir .....	35-97
35 300 10	Oil Reservoir Removal .....	35-98
	Oil Reservoir Inspection .....	35-99
	Oil Reservoir Reinstallation .....	35-100
	Adapting Attachments .....	35-101

## SECTION 37 – TOWING HOOKS AND BALLASTING

### Chapter 1 – Rear Counter Weights

#### CONTENT

Section	Description	Page
37 140 10	Rear Counterweights .....	37-2
37 140 12	Rear Counterweight Support Removal .....	37-2

## SECTION 39 – FRAMES

### Chapter 1 – Lower Main, ROPS

#### CONTENT

Section	Description	Page
	General Information .....	39-2
	ROPS .....	39-2
	ROPS Frame .....	39-2
90 152 46	ROPS Removal .....	39-2
	ROPS Reinstallation .....	39-9

## SECTION 44 – AXLES AND WHEELS

### Chapter 1 – Axles

#### CONTENT

Section	Description	Page
44 100	General Information .....	44-2
	Specifications .....	44-4
	Troubleshooting .....	44-5
	Testing .....	44-7
44 106	Axles .....	44-8
44 106 10	Axle Housing Assembly Removal .....	44-8
44 106 16	Axle Disassembly .....	44-9
	Axle Parts Inspection .....	44-11
	Axle Reassembly .....	44-12
	Axle Housing Reinstallation .....	44-14
	Final Drive .....	44-16
44 106 48	Drive Chain and Sprocket Removal .....	44-16
	Final Drive Parts Inspection .....	44-18
	Final Drive Reassembly .....	44-19
44 511	Tyres/Wheels .....	44-22
	Tyre and Track Installation .....	44-23

## SECTION 50 – CAB CLIMATE CONTROL

### Chapter 1 – Heater/Defroster

#### CONTENT

Section	Description	Page
50 100	Heater/Defroster (Cab) .....	50-2



## SECTION 55 – ELECTRICAL SYSTEM

### Chapter 1 – Advanced Warning System, Circuits, Alternator, and Starter

#### CONTENT

Section	Description	Page
55 000	General Electrical Information .....	55-6
	Definition of Terms .....	55-7
	Adapting Attachments Requiring 12V Electrical Power .....	55-9
	Specifications .....	55-14
	Electrical Diagram .....	55-17
55 418	Advanced Warning System .....	55-21
	Electronic Instrument Cluster (EIC) .....	55-21
	(EIC) Electronic Instrument Cluster Front Panel .....	55-22
	EIC Functional Groups .....	55-23
	Engine Preheat .....	55-28
	Automatic Shutdown .....	55-28
	Operating Mode .....	55-29
	Broken Alternator/Water Pump Belt Warning .....	55-31
	Fuel Level .....	55-32
	EIC Interlocks .....	55-32
	EIC Lock Mode .....	55-33
	EIC Engine Preheat .....	55-34
	Troubleshooting .....	55-35
	Advanced Warning System (AWS) .....	55-38
	EIC Board Self Test .....	55-39
	Diagnostic and Setup Modes .....	55-40
	Arrow, Open Book, and Audible Alarm Test .....	55-42
	Diagnostic Mode EIC Circuit Tests .....	55-42
	EIC Setup Mode .....	55-46
	Electronic Instrument Cluster (EIC) and Starter Circuits .....	55-54
	Blown Fuse Symptom and Testing .....	55-54
	Testing Other EIC Functions .....	55-56
	EIC Board Reading Accuracy .....	55-59
EIC Board Claims Warranty .....	55-62	

	Electrical Circuits .....	55-63
	Seat Switch Circuit to EIC Board .....	55-64
	Seat Belt Switch Circuit to EIC Board .....	55-65
	Ignition Switch Circuit to EIC Board .....	55-67
	Cranking Circuit (Starter Motor) .....	55-68
	“Service/Run” Switch in the “Run” Position .....	55-69
	Cranking Circuit Ground .....	55-70
	Service/Run” Switch in the “Service” position .....	55-71
	Cranking Circuit Ground .....	55-72
	Start Relay Operation .....	55-72
	Start Relay Circuit .....	55-73
	Start Relay Ground Circuit .....	55-74
	Start Interlock Relay Operation .....	55-74
	Start Interlock Circuit .....	55-75
	Start Interlock Ground Circuit .....	55-76
	Start Circuit .....	55-76
55 100	Removal, Installation and Wiring of Electrical Components .....	55-77
	Battery - SL65B .....	55-78
55 301 40	Battery Removal - SL65B .....	55-78
	Battery Installation - SL65B .....	55-78
55 418 10	EIC (Electronic Instrument Cluster) Board Removal .....	55-79
	EIC (Electronic Instrument Cluster) Wiring .....	55-80
	EIC (Electronic Instrument Cluster) Board Installation .....	55-81
	Ignition (Key) Switch Wiring .....	55-81
55 201 10	Ignition (Key) Switch Removal .....	55-82
	Ignition (Key) Switch Installation .....	55-82
	Cab Fuse Panel Wiring .....	55-83
	Cab Fuse Block and Panel Removal .....	55-84
	Cab Fuse Block and Panel Installation .....	55-84
	Service/Run Switch Wiring .....	55-85
	Service/Run Switch - Service Position .....	55-85
	Service/Run Switch - Run Position .....	55-85
55 418 30	Service/Run Switch Removal .....	55-86
	Service/Run Switch Installation .....	55-86
	Seat and Seat Belt Switch Wiring .....	55-86
55 201 15	Seat Switch Removal .....	55-87
	Seat Switch Installation .....	55-87
	Seat Belt Buckle and Switch Assembly Removal .....	55-88

	Seat Belt Buckle Installation . . . . .	55-88
	Road Light and Work Light Switch Wiring . . . . .	55-88
55 404 20	Road Light and Work Light Switch Removal . . . . .	55-89
	Road Light and Work Light Switch Installation . . . . .	55-89
	Engine Fuse and Relay Panel . . . . .	55-90
	Accessory Relay Wiring . . . . .	55-91
	Accessory Relay Removal . . . . .	55-91
	Accessory Relay Installation . . . . .	55-91
	Preheat Circuit Breaker Wiring . . . . .	55-91
55 100 24	Preheat Circuit Breaker Removal . . . . .	55-91
	Preheat Circuit Breaker Installation . . . . .	55-91
	Start Interlock Relay Wiring . . . . .	55-91
55 100 34	Start Interlock Relay Removal . . . . .	55-93
	Start Interlock Relay Installation . . . . .	55-93
	Engine Fuse Panel Wiring . . . . .	55-93
	Engine Fuse Block Removal . . . . .	55-94
	Engine Fuse Block Installation . . . . .	55-94
	Alternator Excite Resistor Wiring . . . . .	55-95
55 301 16	Alternator Excite Resistor Removal . . . . .	55-96
	Alternator Excite Resistor Installation . . . . .	55-95
	Start Relay Wiring . . . . .	55-96
55 100 34	Start Relay Removal . . . . .	55-96
	Start Relay Installation . . . . .	55-97
	Preheat Relay Wiring . . . . .	55-97
55 100 34	Preheat Relay Removal . . . . .	55-98
	Preheat Relay Installation . . . . .	55-98
	Preheat Manifold Heater Removal . . . . .	55-98
	Preheat Manifold Heater Installation . . . . .	55-98
	Fuel System Components . . . . .	55-99
10 223	Fuel Shutoff Solenoid . . . . .	55-101
	Fuel Shutoff Solenoid Testing . . . . .	55-101
10 223 10	Replacement of Fuel Shutoff Solenoid . . . . .	55-102
	Electric Lift Pump . . . . .	55-102
	Electric Lift Pump Removal . . . . .	55-103
	Cold Advance Switch Removal . . . . .	55-103
	Cold Advance Switch Installation . . . . .	55-103
55 414 14	Air Filter Restriction Indicator Switch Removal . . . . .	55-104
	Air Filter Restriction Indicator Switch Installation . . . . .	55-104
55 414 10	Engine Coolant Temperature Sender Removal . . . . .	55-104

	Engine Coolant Temperature Sender Installation . . . . .	55-104
55 414 12	Engine Oil Pressure Switch Removal . . . . .	55-105
	Engine Oil Pressure Switch Installation . . . . .	55-105
55 414 28	Hydrostatic Charge Pressure Switch Removal . . . . .	55-105
	Hydrostatic Charge Pressure Switch Installation . . . . .	55-105
55 414 24	Hydraulic Oil Filter Restriction Switch Removal . . . . .	55-106
	Hydraulic Oil Filter Restriction Switch Installation . . . . .	55-106
55 414 20	Hydraulic Oil Temperature Sender Removal . . . . .	55-106
	Hydraulic Oil Temperature Sender Installation . . . . .	55-108
	Boom/Bucket Control Valve Spool Lock Solenoids . . . . .	55-108
35 724 90	Boom/Bucket Control Valve Spool Lock Solenoids Removal . . . . .	55-108
	Boom/Bucket Control Valve Spool Lock Solenoids Installation . . . . .	55-109
	Wire Harness . . . . .	55-110
55 100 74	Main Wire Harness Removal . . . . .	55-110
	Main Wire Harness Installation . . . . .	55-115
55 404	Road/Work Lights . . . . .	55-119
55 301	Alternator (40 Amp Version) . . . . .	55-123
	Charging Circuit . . . . .	55-123
	Alternator Service Specifications . . . . .	55-125
	Alternator System Testing and Troubleshooting . . . . .	55-125
	Alternator Component Tests . . . . .	55-129
	Alternator Overhaul Component Testing . . . . .	55-131
55 301 10	Alternator Removal . . . . .	55-131
55 301 12	Alternator Disassembly . . . . .	55-132
55 301 14	Alternator Component Test . . . . .	55-133
	Alternator Inspection and Repair . . . . .	55-135
	Alternator Resassembly . . . . .	55-136
	Alternator Reinstallation . . . . .	55-136
55 201	Starter . . . . .	55-137
	Starter Motor Troubleshooting . . . . .	55-139
55 201 50	Starter Motor Removal . . . . .	55-140
	Starter Maintenance . . . . .	55-141
	System Testing . . . . .	55-141
	System Motor Current Draw . . . . .	55-142
	Starter Motor Disassembly . . . . .	55-144
	Starter Reassembly . . . . .	55-145
	Starter Inspection and Repair . . . . .	55-145